



**VEHICLE APPLICATION  
APLICACIONES POR VEHÍCULOS  
APPLICATIONS POUR VÉHICULES**



## DEFINITIONS / DEFINICIONES / DEFINITIONS

G.B.

E

F

Brake light switch	Interruptor luz de stop	Contacteurs de feu stop
Fan switch	Termocontacto ventilador	Thermocontact pour ventilateur
Hydraulic stop switch	Interruptor stop hidráulico	Contacteur Hydraulique de feu stop
Oil press. switch	Manocontacto presión aceite	Manocontacts pression d'huile
Oil press. transmitter	Transmisor presión aceite	Transmetteurs pression d'huile
On clutch pedal	Interruptor pedal embrague	Interrupteur en pedale d'embrayage
Pneumatic stop switch	Interruptor stop neumático	Contacteur pneumatique de feu stop
Pneumatic switch	Interruptor neumático	Manocontact pneumatique
Rev. light switch	Interruptor de luz marcha atrás	Contacteur de phare de recul
Stop light switch	Interruptor luz stop	Contacteur de feu stop
Temp. s. warning lamp	Termocontacto temperatura	Thermocontacts temperature
Temp. sending unit	Termo-Resistencia	Thermistances
Thermistor-Thermocont.	Termo-Resistencia - Termocontacto	Thermistance - Thermocontact

## SYMBOLS / SIMBOLOS / SYMBOLES



VEHICLE APPLICATION  
APLICACIONES POR VEHICULOS  
APPLICATIONS POUR VEHICULES



ENGINE  
MOTOR  
MOTEUR



YEAR  
AÑO  
ANNÉE



KILOWATTS / HORSE POWER  
KILOVATIOS / CABALLOS DE VAPOR  
KILOWATTS / CHEVAL - VAPEUR



INFORMATION  
INFORMACIÓN  
INFORMATION



CROSS REFERENCES  
CRUCE DE REFERENCIAS  
TABLEAU DES EQUIVALENCES

## INFORMATION / INFORMACIÓN / INFORMATION

This Vehicle Application Catalog contains the data from vehicles, engines and Industrial Vehicles for the European market from year of manufacture 1988 up to and including the year 2011.

On some engines, two or more References the same product can be fitted, indicate may have one or more at the same time. Example: Volkswagen fits two oil pressure switch in the same engine, but it's possible that it may have various, we see Applications. To identificate the correct switch by matching the colour of plastic, to that of the unit you are replacing. Example: one to be fitted on the upper part of the engine block (cylinder head) and another on the coolant temperature the engine mounting.

Some componenets for Tractors and Heavy Duty Vehicles are not listed in the Vehicle Application, but can be found in the Cross Reference List and/or Illustrated section of the Catalogue.

Los datos recogidos en este Catálogo de Aplicaciones, para vehículos, motores y vehiculo industrial del mercado Europeo, abarcan los años de fabricación entre 1988 y 2011, inclusive.

Algunos motores pueden montar dos o más Referencias del mismo producto, independientemente cualquiera de ellas o varias a la vez. Por ejemplo, Volkswagen monta dos o mas interruptores presión de aceite en el mismo motor, pero vemos que puede llevar varios, como indicamos en las Aplicaciones. La identificación se realiza a través del color del conector, mismo color, misma ubicación de montaje. Algunos componentes para Tractores y Vehículos Industriales no están incluidos en la Lista de Aplicaciones, pero se encuentran en el Cruce de Referencias y/o en la parte Ilustrada del Catálogo.

Le present Catalogue Applications mentionne les données spécifiques de véhicules, moteurs et Véhicules Industrielles pour le marché européen depuis l'année de fabrication 1988 jusqu'au millésime 2011 inclus.

Certains moteurs sont équipés par deux ou plusieurs Références dans la même produit, indépendamment l'une ou plusieurs de ces Références. Exemple: Volkswagen est équipé avec deux interrupteur pression d'huile dans la même moteur, mais peut avoir incorporé plusieurs, voir Applications pour Véhicules. L'identification est faite grâce à la couleur de la partie en plastique. Exemple: un est montée sur la partie haute du moteur (culasse) et l'autre sur l'ensemble du liquide de Refroidissement du compartiment moteur.

Certains composants pour Tracteurs et Véhicules Industriels ne sont pas inclus dans les Applications pour Véhicules, mais sont repérés dans le Tableau des Equivalences et/ou partie illustrée du Catalogue.

For further applications see  
Para más aplicaciones consulte también  
Pour déterminer les autres affectations veuillez vous référer à





## INDEX OF MAKERS / ÍNDICE DE FABRICANTES / INDEX DES CONSTRUCTEURS

MAKER / FABRICANTE / CONSTRUCTEUR	PÁGS.
ACURA	5
ALFA ROMEO	5 - 11
ALPINE	11
AUDI	11 - 26
AUSTIN	26
BEDFORD	26
BMW	26 - 36
CHEVROLET	36 - 37
CHRYSLER	37
CITROËN	37 - 52
DACIA	52 - 53
DAEWOO	53 - 54
DAF	54
DAIHATSU	55 - 56
DAIMLER	56
FIAT	56 - 72
FORD	72 - 86
FORD USA	86
FSO	86 - 87
HOLDEN	87
HONDA	87 - 91
HYUNDAI	91 - 94
INFINITI	94 - 95
INNOCENTI	95
ISUZU	95
JAGUAR	95 - 96
KIA	96 - 97
LADA	97 - 98
LANCIA	98 - 102
LAND ROVER	102 - 103
LEXUS	103
MARUTI	103

MAKER / FABRICANTE / CONSTRUCTEUR	PÁGS.
MAZDA	103 - 108
MERCEDES BENZ	108 - 124
MG	124 - 125
MINI	125
MITSUBISHI	125 - 130
NISSAN	130 - 135
OPEL	135 - 151
PAYKAN	151
PEUGEOT	151 - 169
PIAGGIO	169
PONTIAC	169
PORSCHE	169 - 170
PROTON	170
PUCH	170 - 171
RELIANT	171
RENAULT	171 - 192
ROVER	192 - 196
SAAB	196 - 198
SEAT	198 - 210
SKODA	210 - 214
SMART	214
SSANGYONG	214
SUBARU	214 - 216
SUZUKI	216 - 218
TOYOTA	218 - 224
VAUXHALL	224 - 230
VOLKSWAGEN	230 - 256
VOLVO	256 - 264
YUGO - ZASTAVA	264

## INDUSTRIAL VEHICLES / VEHÍCULOS INDUSTRIALES / LES VÉHICULES INDUSTRIELS

MAKER / FABRICANTE / CONSTRUCTEUR	PÁGS.
DAF	266
IVECO	266 - 267
JOHN DEERE	267
MAGIRUS DEUTZ	267
MAN	267
MASSEY FERGUSON	267
MERCEDES TRUCKS	267 - 269
NEOPLAN	269

MAKER / FABRICANTE / CONSTRUCTEUR	PÁGS.
NISSAN - MOTOR IBERICA	269 - 270
PEGASO	270 - 271
PERKINS	271
RVI - RENAULT TRUCKS	271
SAVIEM	271
SCANIA	271 - 272
STEYR	272
VOLVO	272

## EXAMPLES / EJEMPLOS / EXEMPLES



### ALFA ROMEO

145 1.9 JTD  
AR 32302  
Oil press. switch/Int. pres. aceite  
Stop light switch/Int. luz stop  
Rev. light switch/Int. luz marcha atrás

1999-01  
77 105  
12430  
24660  
40940

### MAKER / FABRICANTE / CONSTRUCTEUR

MODEL / MODELO / MODELE  
ENGINE / MOTOR / MOTEUR  
Date / Fecha / Date  
KW/HP  
REF.FAE  
REF.FAE  
REF.FAE

### G.B.

In this Catalog have been considered the vehicles with:

- Left Hand Drive (L.H.D.)
- Manual Gear, 5 speed.
- Without Air Conditioning
- Without Check Control
- Without Cruise Control
- Without ABS

As the Standard vehicle ( generic ).

The rest of vehicles with other features (criteria) are treated in a specific way in the information column.

### E

En este Catálogo se han considerado los vehículos con:

- Conducción a la izquierda ( L.H.D. )
- Cambio Manual, 5 velocidades.
- Sin Aire Acondicionado
- Sin Check Control
- Sin Cruise Control
- Sin ABS

como el vehículo Standard ( genérico ).

El resto de vehículos con otras características ( criterios ) se tratan de forma específica en la columna de información.

### F

Dans ce Catalogue sont considérés les véhicules avec:

- Conduction à gauche (L.H.D.)
- Avec boîte de vitesses manuelle, 5 vitesses
- Sans air conditionné/climatisation
- Sans tableau de contrôle
- Sans vitesse de croisière
- Sans antiblocage (ABS)

comme le véhicule standard (générique).

Le reste des véhicules avec d'autres caractéristiques (critères) sont abordés d'une façon spécifique dans la colonne d'information.



(A)	AUSTRIA
(ARG)	ARGENTINA
(AUS)	AUSTRALIA
(BR)	BRASIL
(CH)	SUIZA
(CHINA)	CHINA
(CND)	CANADÁ
(CS)	REPÚBLICA CHECA
(D)	ALEMANIA
(E)	ESPAÑA
(EU)	EUROPA
(F)	FRANCIA
(GB)	GRAN BRETAÑA
(GR)	GRECIA
(I)	ITALIA
(IND)	INDIA
(J)	JAPON
(PL)	POLONIA
(RUS)	RUSIA
(S)	SUECIA
(TR)	TURQUIA
(USA)	USA
(ZA)	SUDAFRICA
---	No disponible
... ->	Desde ...->
-> ...	->... Hasta
-> N°	Hasta el número
N° ->	Desde el número
-> Ch. ->	Desde/Hasta Chasis
A.	Amperio
A.A	Aire acondicionado
Adatt. Universal	Adaptable a Universal
After the catalytic converter	Después del catalizador
Antipollution Standars	Norma antipolución
Bus	Autobús
Before catalytic converter	Antes del catalizador
Camión/Truck	Camión
Check Control	Tabla de controles
Cil.	Cilindros
Com.	Comercial
Con/With	Con
Cont.	Continuación
East Europe	Europa Este
Except.	Excepto
Fitted on the right side	Montado a la derecha
Fitted on the left side	Montado a la izquierda
Front	Frontal
Front exhaust pipe	Tubo de escape delantero
i.e.	Inyección electrónica
Leaded fuel	Gasolina con plomo
L.H.D.	Conducción a la izquierda
Monopoint	Inyección Monopunto
Motor	Motor
Multipoint	Inyección Multipunto
On the exhaust manifold	En el colector de escape
Rear	Posterior
Replaces	Reemplaza
R.H.D.	Conducción a la derecha
See	Ver
See also	Ver también
Sin/Without	Sin
Solo/Only	Solo
Ti	Titanio
Unleaded fuel	Gasolina sin plomo
V.	Voltios
With air conditioning	Con aire acondicionado
With automatic gear	Cambio automático
With electronic key	Con llave electrónica
With manual gear	Con cambio manual
Without catalytic converter	Sin catalizador
Zr	Circonio
4WD	4 Ruedas motrices



AUSTRIA	AUSTRIA
ARGENTINE	ARGENTINE
AUSTRALIA	AUSTRALIA
BRAZIL	BRAZIL
SWITZERLAND	SWITZERLAND
CHINA	CHINA
CANADA	CANADA
CZECH REPUBLIC	CZECH REPUBLIC
GERMANY	GERMANY
SPAIN	SPAIN
EUROPE	EUROPE
FRANCE	FRANCE
GREAT BRITAIN	GREAT BRITAIN
GREECE	GREECE
ITALY	ITALY
INDIA	INDIA
JAPAN	JAPAN
POLAND	POLAND
RUSSIA	RUSSIA
SWEDEN	SWEDEN
TURKEY	TURKEY
USA	USA
SOUTH AFRICA	SOUTH AFRICA
Not available	Not available
From to ...->	From to ...->
-> ... Up to	-> ... Up to
Up to number	Up to number
From to number	From to number
Up/From Chassis	Up/From Chassis
Ampere	Ampere
Air conditioning	Air conditioning
Suitable to Universal	Suitable to Universal
After the catalytic converter	After the catalytic converter
Antipollution Standars	Antipollution Standars
Bus	Bus
Before catalytic converter	Before catalytic converter
Truck	Truck
Check Control	Check Control
Cylinders	Cylinders
Commercial	Commercial
With	With
Continued	Continued
East Europe	East Europe
Except	Except
Fitted on the right side	Fitted on the right side
Fitted on the left side	Fitted on the left side
Front	Front
Front exhaust pipe	Front exhaust pipe
Electronic Injection	Electronic Injection
Leaded fuel	Leaded fuel
Left hand drive	Left hand drive
Single-point Injection	Single-point Injection
Engine	Engine
Multi-point Injection	Multi-point Injection
On the exhaust manifold	On the exhaust manifold
Rear	Rear
Replaces	Replaces
Right hand drive	Right hand drive
See	See
See also	See also
Without	Without
Only	Only
Titania	Titania
Unleaded fuel	Unleaded fuel
Volts	Volts
With air conditioning	With air conditioning
With automatic gear	With automatic gear
With electronic key	With electronic key
With manual gear	With manual gear
Without catalytic converter	Without catalytic converter
Zirconio	Zirconio
4 Wheel drive	4 Wheel drive



AUTRICHE	AUTRICHE
ARGENTINE	ARGENTINE
AUSTRALIE	AUSTRALIE
BRESIL	BRESIL
SUISSE	SUISSE
CHINE	CHINE
CANADA	CANADA
RÉPUBLIQUE TCHÉQUE	RÉPUBLIQUE TCHÉQUE
ALLEMAGNE	ALLEMAGNE
ESPAGNE	ESPAGNE
EUROPE	EUROPE
FRANCE	FRANCE
GRANDE BRETAGNE	GRANDE BRETAGNE
GRÈCE	GRÈCE
ITALIE	ITALIE
INDE	INDE
JAPON	JAPON
POLOGNE	POLOGNE
RUSSIE	RUSSIE
SUÈDE	SUÈDE
TURQUIE	TURQUIE
USA	USA
AFRIQUE DU SUD	AFRIQUE DU SUD
Non disponible	Non disponible
Depuis ... ->	Depuis ... ->
->... Jusqu'à	->... Jusqu'à
Jusqu'à numéro	Jusqu'à numéro
Depuis numéro	Depuis numéro
Jusqu'à/Depuis Chassis	Jusqu'à/Depuis Chassis
Ampère	Ampère
Air conditionné / climatisation	Air conditionné / climatisation
Remplace à Universelle	Remplace à Universelle
Après le catalyseur	Après le catalyseur
Norme antipollution	Norme antipollution
Autobus	Autobus
Depuis le catalyseur	Depuis le catalyseur
Camion	Camion
Tableau de contrôle	Tableau de contrôle
Cylindres	Cylindres
Commercial	Commercial
Avec	Avec
Continuation / Suite	Continuation / Suite
Europe de l'Est	Europe de l'Est
Sauf	Sauf
Monté à droite	Monté à droite
Monté à gauche	Monté à gauche
Frontale	Frontale
Tube d'échappement Avant	Tube d'échappement Avant
Injection électronique	Injection électronique
Essence avec plomb	Essence avec plomb
Conduire à gauche	Conduire à gauche
Injection Monopoint	Injection Monopoint
Moteur	Moteur
Injection Multipoint	Injection Multipoint
Sur le collecteur d'échappement	Sur le collecteur d'échappement
Postérieur	Postérieur
Remplace	Remplace
Conduire à droite	Conduire à droite
Voir	Voir
Voir aussi	Voir aussi
Sans	Sans
Seulement	Seulement
Titane	Titane
Essence sans plomb	Essence sans plomb
Volts	Volts
Avec climatisation	Avec climatisation
Avec boîte vitesse automatique	Avec boîte vitesse automatique
Avec clé électronique	Avec clé électronique
Avec boîte vitesse manuelle	Avec boîte vitesse manuelle
Sans catalyseur	Sans catalyseur
Zirconium	Zirconium
Traction 4 roues	Traction 4 roues



ACURA	
<b>Integra 1.6 i, Coupe, Fastback, Sedan</b>	<b>1985-90</b>
	88 120
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32310</b>
Fan switch/Termocontacto ventilador	<b>37450</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Integra 1.6, Coupe, Fastback, Sedan D16A3</b>	<b>1985-90</b>
	74 100
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>Integra 1.8, Fastback, Sedan F18A2</b>	<b>1990-93</b>
	77 105
Fan switch/Termocontacto ventilador	<b>36430</b>
<b>NSX 3.0 C30A3</b>	<b>1990-97</b>
	201 274
Oil press. switch/Int. pres. aceite	<b>10610</b>

ALFA ROMEO	
<b>145 1.4 i.e. AR 33501</b>	<b>1994-96</b>
	66 90
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Temp. sending unit/Termo-Resistencia	<b>31460</b>
Temp. s. warning lamp/Termocont. temp.	<b>35500</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	-> 11.1995, Climat
Fan switch/Termocontacto ventilador	11.1995 ->, Climat
Rev. light switch/Int. luz marcha atrás	03.1995 ->
Rev. light switch/Int. luz marcha atrás	-> 03.1995
<b>145 1.4 i.e. 16V T. S. AR 33503/AR 38501</b>	<b>1996-01</b>
	76 103
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> N° 3174687
Rev. light switch/Int. luz marcha atrás	<b>34060</b>
	<b>40520</b>
<b>145 1.6 i.e. AR 33201</b>	<b>1994-96</b>
	76 103
Oil press. switch/Int. pres. aceite	<b>12430</b>
Temp. sending unit/Termo-Resistencia	<b>31460</b>
Temp. s. warning lamp/Termocont. temp.	<b>35500</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	-> 11.1995, Climat
Fan switch/Termocontacto ventilador	11.1995 ->, Climat
Rev. light switch/Int. luz marcha atrás	03.1995 ->
Rev. light switch/Int. luz marcha atrás	-> 03.1995
<b>145 1.6 i.e. 16V T. S. AR 67601/AR 38201</b>	<b>1996-01</b>
	88 120
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> N° 3174687
Rev. light switch/Int. luz marcha atrás	<b>34060</b>
	<b>40520</b>
<b>145 1.7 i.e. 16V AR 33401</b>	<b>1994-96</b>
	95 129
Oil press. switch/Int. pres. aceite	<b>12430</b>
Temp. sending unit/Termo-Resistencia	<b>31750</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	-> 11.1995, Climat
Fan switch/Termocontacto ventilador	11.1995 ->, Climat
Rev. light switch/Int. luz marcha atrás	03.1995 ->
Rev. light switch/Int. luz marcha atrás	-> 03.1995
<b>145 1.8 i.e. 16V AR 32201</b>	<b>1998-01</b>
	106 144
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> 05.1998
Rev. light switch/Int. luz marcha atrás	<b>34060</b>
	<b>40520</b>
<b>145 1.8 i.e. 16V T. S. AR 38401/AR 67106</b>	<b>1996-98</b>
	103 140
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	<b>34060</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>145 1.9 JTD AR 32302</b>	<b>1999-01</b>
	77 105
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Rev. light switch/Int. luz marcha atrás	<b>40940</b>
<b>145 1.9 TD AR 33601/AR 67501</b>	<b>1994-99</b>
	66 90
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Temp. sending unit/Termo-Resistencia	<b>32540</b>
Temp. sending unit/Termo-Resistencia	-> N° 2111692, Use with/con 32540
Thermistor-Thermocont./Doble función	-> N° 2111692
Temp. s. warning lamp/Termocont. temp.	-> 09.1996, Climat
Temp. s. warning lamp/Termocont. temp.	10.1996 ->, Climat
Temp. s. warning lamp/Termocont. temp.	-> N° 1761923
Fan switch/Termocontacto ventilador	<b>35910</b>
Fan switch/Termocontacto ventilador	Without/sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
<b>145 2.0 16V Quadrifoglio AR 32301</b>	<b>1998-01</b>
	114 155
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> 05.1998
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>145 2.0 16V T. S. AR 67204</b>	<b>1995-01</b>
	110 150
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> 05.1998
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>145 2.0 16V T. S. AR 32104</b>	<b>2001 -&gt;</b>
	88 120
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24411</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24412</b>
Rev. light switch/Int. luz marcha atrás	<b>24413</b>
	<b>40520</b>
<b>147 1.6 16V T. S. Eco AR 37203</b>	<b>2001 -&gt;</b>
	77 105
Oil press. switch/Int. pres. aceite	<b>12430</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>147 1.9 JTD 937 A2.000</b>	<b>2001 -&gt;</b>
	85 115
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24411</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24412</b>
Rev. light switch/Int. luz marcha atrás	<b>24413</b>
	<b>40940</b>

ALFA ROMEO Cont.	
<b>146 1.4 i.e. AR 33501</b>	<b>1994-96</b>
	66 90
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Temp. sending unit/Termo-Resistencia	<b>31460</b>
Temp. s. warning lamp/Termocont. temp.	<b>35500</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	-> 11.1995, Climat
Fan switch/Termocontacto ventilador	11.1995 ->, Climat
Rev. light switch/Int. luz marcha atrás	03.1995 ->
Rev. light switch/Int. luz marcha atrás	-> 03.1995
<b>146 1.4 i.e. 16V T. S. AR 33503/AR 38501</b>	<b>1996-01</b>
	76 103
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> N° 0165088
Rev. light switch/Int. luz marcha atrás	<b>34060</b>
	<b>40520</b>
<b>146 1.6 i.e. AR 33201</b>	<b>1994-96</b>
	76 103
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Temp. sending unit/Termo-Resistencia	<b>31460</b>
Temp. s. warning lamp/Termocont. temp.	<b>35500</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	-> 11.1995, Climat
Fan switch/Termocontacto ventilador	11.1995 ->, Climat
Rev. light switch/Int. luz marcha atrás	03.1995 ->
Rev. light switch/Int. luz marcha atrás	-> 03.1995
<b>146 1.6 i.e. 16V T. S. AR 67601/AR 38201</b>	<b>1996-01</b>
	88 120
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> N° 0165088
Rev. light switch/Int. luz marcha atrás	<b>34060</b>
	<b>40520</b>
<b>146 1.7 i.e. 16V AR 33401</b>	<b>1994-96</b>
	95 129
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Temp. sending unit/Termo-Resistencia	<b>31750</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	-> 11.1995, Climat
Fan switch/Termocontacto ventilador	11.1995 ->, Climat
Rev. light switch/Int. luz marcha atrás	03.1995 ->
Rev. light switch/Int. luz marcha atrás	-> 03.1995
<b>146 1.8 i.e. 16V T. S. AR 38401/AR 67106</b>	<b>1996-01</b>
	103 140
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	<b>34060</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>146 1.8 i.e. 16V T. S. AR 32201</b>	<b>1998-01</b>
	106 144
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>146 1.9 JTD AR 32302</b>	<b>1999-01</b>
	77 105
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Rev. light switch/Int. luz marcha atrás	<b>40940</b>
<b>146 1.9 TD AR 33601/AR 67501</b>	<b>1994-99</b>
	66 90
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Temp. sending unit/Termo-Resistencia	Use with/con 32670
Temp. sending unit/Termo-Resistencia	-> N° 2111692, Use with/con 32540
Thermistor-Thermocont./Doble función	-> N° 2111692
Temp. s. warning lamp/Termocont. temp.	-> 09.1996, Climat
Temp. s. warning lamp/Termocont. temp.	10.1996 ->, Climat
Temp. s. warning lamp/Termocont. temp.	-> N° 1761923
Fan switch/Termocontacto ventilador	<b>37900</b>
Fan switch/Termocontacto ventilador	Without/sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
<b>146 2.0 16V Quadrifoglio AR 32301</b>	<b>1998-01</b>
	114 155
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	<b>34060</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>146 2.0 16V T. S. AR 67204</b>	<b>1995-01</b>
	110 150
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24660</b>
Thermistor-Thermocont./Doble función	-> 06.1996
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>147 1.6 16V T. S. Eco AR 37203</b>	<b>2001 -&gt;</b>
	77 105
Oil press. switch/Int. pres. aceite	<b>12430</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>147 1.9 JTD 937 A2.000</b>	<b>2001 -&gt;</b>
	85 115
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24411</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24412</b>
Rev. light switch/Int. luz marcha atrás	<b>24413</b>
	<b>40940</b>

**ALFA ROMEO Cont.**

<b>147 1.9 JTD</b>		2003 ->
182 B9.000		74 101
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>147 1.9 JTD 16V</b>		2002 ->
192 A5.000		103 140
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>147 1.9 JTD 16V</b>		2003-04
937 A4.000		93 126
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>147 1.9 JTD 16V</b>		2004 ->
192 B1.000		100 136
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>147 1.9 JTD 16V</b>		2005 ->
937 A5.000		110 150
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>147 1.9 JTD 16V</b>		2004 ->
939 A7.000		85 115
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>147 1.9 JTD 16V</b>		2005 ->
937 A3.000		88 120
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>147 2.0 16V T. S.</b>		2001 ->
AR 32310		110 150
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>147 3.2 GTA</b>		2003 ->
932 A.000		184 250
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40940
<b>155 1.6 16V T. S.</b>		1996-97
AR 67601		88 120
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> 11.1996	24410
Stop light switch/Int. luz stop	11.1996 ->	24660
Thermistor-Thermocont./Doble función		34060
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>155 1.7 T. S.</b>		1993-96
AR 67103		83 113
Oil press. switch/Int. pres. aceite	-> 10.1993	11060
Oil press. switch/Int. pres. aceite	10.1993 ->, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	Open/Conecta	12960
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop		24410
Temp. sending unit/Termo-Resistencia		31460
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
<b>155 1.7 T. S. 16V</b>		1996-97
AR 67106		103 140
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24410
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>155 1.7 T.S.</b>		1993-96
AR 67105		85 115
Oil press. switch/Int. pres. aceite	-> 10.1993	11060
Oil press. switch/Int. pres. aceite	10.1993 ->, 0.35 bar	11410
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop		24410
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38090
Rev. light switch/Int. luz marcha atrás		40520
<b>155 1.8 T. S.</b>		1992-97
AR 67402		77 105
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> 11.1996	24410
Stop light switch/Int. luz stop	11.1996 ->	24660
Temp. sending unit/Termo-Resistencia	-> 04.1996	31460
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31600
Thermistor-Thermocont./Doble función	05.1996 ->	34060
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás		40520

**ALFA ROMEO Cont.**

<b>155 1.8 T. S.</b>		1992-93
AR 67101		95 129
Oil press. switch/Int. pres. aceite		11060
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop		24410
Temp. sending unit/Termo-Resistencia		31460
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás		40520
<b>155 1.8 T. S. Sport</b>		1992-96
AR 67101/AR 67102		93 127
Oil press. switch/Int. pres. aceite	-> 10.1993	11060
Oil press. switch/Int. pres. aceite	10.1993-04.1996, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	04.1996 ->	12430
Oil press. transmitter/Transm. pres. aceite	-> 04.1996	14500
Stop light switch/Int. luz stop	-> 11.1996	24410
Stop light switch/Int. luz stop	11.1996 ->	24660
Temp. sending unit/Termo-Resistencia		31460
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás		40520
<b>155 1.9 TD</b>		1993-97
AR 67501		66 90
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> 11.1996	24410
Stop light switch/Int. luz stop	11.1996 ->	24660
Temp. sending unit/Termo-Resistencia	-> Nº 1761923	32540
Temp. sending unit/Termo-Resistencia	Nº 2111692 ->	32670
Thermistor-Thermocont./Doble función		34380
Temp. s. warning lamp/Termocont. temp.	Climat	35840
Temp. s. warning lamp/Termocont. temp.	05.1996 ->	35842
Temp. s. warning lamp/Termocont. temp.	-> Nº 1761923	35910
Fan switch/Termocontacto ventilador	Climat	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>155 2.0 16V Turbo Q4</b>		1992-97
AR 67203		137 186
Oil press. switch/Int. pres. aceite		12430
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38090
Rev. light switch/Int. luz marcha atrás	Nº 0122367 ->	40540
Rev. light switch/Int. luz marcha atrás	-> Nº 0122367	41220
<b>155 2.0 16V Turbo Q4</b>		1992-97
AR 67203		140 190
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24410
Thermistor-Thermocont./Doble función		34060
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38090
Rev. light switch/Int. luz marcha atrás	Nº 0122367 ->	40540
Rev. light switch/Int. luz marcha atrás	-> Nº 0122367	41220
<b>155 2.0 T. S.</b>		1992-93
AR 67201		106 144
Oil press. switch/Int. pres. aceite		11060
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop		24410
Temp. sending unit/Termo-Resistencia		31460
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás		40520
<b>155 2.0 T. S. 16V</b>		1995-97
AR 67204		110 150
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> 11.1996	24410
Stop light switch/Int. luz stop	11.1996 ->	24660
Thermistor-Thermocont./Doble función		34060
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás		40520
<b>155 2.0 T.S.</b>		1992-95
AR 67202		104 141
Oil press. switch/Int. pres. aceite	-> 10.1993	11060
Oil press. switch/Int. pres. aceite	10.1993 ->, 0.35 bar	11410
Oil press. switch/Int. pres. aceite		12430
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop		24410
Temp. sending unit/Termo-Resistencia		31460
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás		40520
<b>155 2.5 TD</b>		1993-97
VM 07 B/VM 31 B		92 125
Oil press. switch/Int. pres. aceite		11060
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop		24410
Thermistor-Thermocont./Doble función		34270
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37910
Rev. light switch/Int. luz marcha atrás	Nº 0122367 ->	40540
Rev. light switch/Int. luz marcha atrás	-> Nº 0122367	41220
<b>155 2.5 V6</b>		1992-97
AR 67302/AR 67303		120 163
Oil press. switch/Int. pres. aceite		12430
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop	-> 11.1996	24410
Stop light switch/Int. luz stop	11.1996 ->	24660
Thermistor-Thermocont./Doble función		34265
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Nº 0136807 ->, Climat	37910
Fan switch/Termocontacto ventilador	-> Nº 0136807, Climat	38090
Rev. light switch/Int. luz marcha atrás	Nº 0122367 ->	40540
Rev. light switch/Int. luz marcha atrás	-> Nº 0122367	41220

**ALFA ROMEO Cont.**

<b>155 2.5 V6</b>		<b>1992-96</b>
AR 67301		121 165
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24410</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38090</b>
Rev. light switch/Int. luz marcha atrás	Nº 0122367 ->	<b>40540</b>
Rev. light switch/Int. luz marcha atrás	-> Nº 0122367	<b>41220</b>
<b>156 1.6 16V T. S., Sportwagon</b>		<b>1997-06</b>
AR 32102/AR 32103/AR 32104/AR 67601		88 120
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24412</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24413</b>
Stop light switch/Int. luz stop		<b>24660</b>
Thermistor-Thermocont./Doble función	-> Nº 0084340	<b>34060</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>156 1.8 16V T. S., Sportwagon</b>		<b>1997-00</b>
AR 32201		106 144
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24660</b>
Thermistor-Thermocont./Doble función	-> Nº 1045141	<b>34060</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>156 1.8 16V T. S., Sportwagon</b>		<b>2000-06</b>
AR 32205		103 140
Oil press. switch/Int. pres. aceite		<b>12430</b>
<b>156 1.9 JTD 16V, Sport Wagon</b>		<b>2002-05</b>
192 A5.000		103 140
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 1.9 JTD, Sport Wagon</b>		<b>1997-00</b>
AR 32302		77 105
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	01.1998 ->	<b>24413</b>
Stop light switch/Int. luz stop		<b>24660</b>
Temp. sending unit/Termo-Resistencia	-> Nº 1415541	<b>31140</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 1.9 JTD, Sport Wagon</b>		<b>2000-01</b>
AR 37101		81 110
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24411</b>
Stop light switch/Int. luz stop		<b>24660</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 1.9 JTD, Sport Wagon</b>		<b>2001-05</b>
937 A2.000		85 115
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24412</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24413</b>
Stop light switch/Int. luz stop		<b>24660</b>
Temp. sending unit/Termo-Resistencia	-> Nº 1415541	<b>31140</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 1.9 JTD, Sport Wagon, 16V Q4</b>		<b>2004-06</b>
937 A5.000		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 2.0 16V T. S., Sport Wagon</b>		<b>1997-00</b>
AR 32301		114 155
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24660</b>
Thermistor-Thermocont./Doble función	-> Nº 1045141	<b>34060</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>156 2.0 16V T. S., Sportwagon</b>		<b>2000-02</b>
AR 32310		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>156 2.0 JTS, Sport Wagon</b>		<b>2002-05</b>
937 A1.000		122 166
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>156 2.4 JTD, Sport Wagon</b>		<b>1997-00</b>
AR 32501		100 136
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24660</b>
Temp. sending unit/Termo-Resistencia	-> Nº 1283805	<b>31140</b>
Rev. light switch/Int. luz marcha atrás	-> 09.2000	<b>40940</b>
<b>156 2.4 JTD, Sport Wagon</b>		<b>2000-05</b>
839 A6.000		103 140
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24411</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 2.4 JTD, Sport Wagon</b>		<b>2002-05</b>
841 C000		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 2.4 JTD, Sport Wagon</b>		<b>2003-05</b>
841 G.000		129 175
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40830</b>
<b>156 2.5 V6 24V, Sport Wagon</b>		<b>1997-00</b>
AR 32401		140 190
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24660</b>
Thermistor-Thermocont./Doble función		<b>34060</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>

**ALFA ROMEO Cont.**

<b>156 2.5 V6 24V, Sport Wagon</b>		<b>2000-05</b>
AR 32405		141 192
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24411</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>156 3.2 GTA, Sport Wagon</b>		<b>2002-05</b>
932 A.000		184 250
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24411</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>159 1.8 MPI, Sport Wagon</b>		<b>2007 -&gt;</b>
939 A4.000		103 140
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 1.9 JTDM 16V Sport Wagon</b>		<b>2006 -&gt;</b>
937 A8.000		100 136
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 1.9 JTDM 16V, Sport Wagon</b>		<b>2005 -&gt;</b>
939 A2.000		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 1.9 JTDM 16V, Sportwagon</b>		<b>2005 -&gt;</b>
939 A8.000/937 A8.000		100 136
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 1.9 JTDM 8V, Sport Wagon</b>		<b>2005 -&gt;</b>
939 A1.000		88 120
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 1.9 JTS, Sport Wagon</b>		<b>2005 -&gt;</b>
939 A6.000		118 160
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 2.2 JTS, Sport Wagon</b>		<b>2005 -&gt;</b>
939 A5.000		136 185
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 2.4 JTDM, Q4, Sport Wagon</b>		<b>2007 -&gt;</b>
939 A9.000		154 210
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 2.4 JTDM, Sport Wagon</b>		<b>2005 -&gt;</b>
939 A3.000		147 200
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>159 3.2 JTS Q4, Sport Wagon</b>		<b>2005 -&gt;</b>
939 A.000		191 260
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>164 2.0 T. S.</b>		<b>1987-92</b>
AR 06416		105 143
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Fan switch/Termocontacto ventilador	Ch. 06210070 ->	<b>37320</b>
Fan switch/Termocontacto ventilador	-> Ch. 06210070	<b>37420</b>
Rev. light switch/Int. luz marcha atrás	10.1991 ->	<b>41220</b>
<b>164 2.0 T. S.</b>		<b>1987-90</b>
AR 06420		109 148
Temp. sending unit/Termo-Resistencia		<b>31460</b>
<b>164 2.0 T. S.</b>		<b>1992-98</b>
AR 64103		106 144
Oil press. switch/Int. pres. aceite	-> 10.1993	<b>11060</b>
Oil press. switch/Int. pres. aceite	10.1993-04.1996, 0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Fan switch/Termocontacto ventilador	Ch. 06210070 ->	<b>37320</b>
Fan switch/Termocontacto ventilador	-> Ch. 06210070	<b>37420</b>
Rev. light switch/Int. luz marcha atrás	11.1992 ->	<b>40540</b>
Rev. light switch/Int. luz marcha atrás	-> 11.1992	<b>41220</b>
<b>164 2.0 Turbo</b>		<b>1987-98</b>
AR 06476		128 174
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Fan switch/Termocontacto ventilador	-> 07.1990	<b>37310</b>
<b>164 2.0 V6 Turbo</b>		<b>1992-98</b>
AR 64102		148 201
Oil press. switch/Int. pres. aceite		<b>11060</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38280</b>
Rev. light switch/Int. luz marcha atrás		<b>40540</b>

**ALFA ROMEO Cont.**

<b>164 2.5 TD</b>		<b>1992-98</b>
VM 32 B/VM 08 B		92 125
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Thermistor-Thermocont./Doble función		<b>34270</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40540</b>
<b>164 2.5 TD</b>		<b>1987-92</b>
VM 84 A		84 114
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Fan switch/Termocontacto ventilador	Ch. 06210070 ->	<b>37320</b>
Fan switch/Termocontacto ventilador	-> Ch. 06210070	<b>37420</b>
Rev. light switch/Int. luz marcha atrás	10.1991 ->	<b>41220</b>
<b>164 3.0</b>		<b>1987-91</b>
AR 06410		138 188
Rev. light switch/Int. luz marcha atrás		<b>41220</b>
<b>164 3.0</b>		<b>1993-95</b>
AR 64304		168 228
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38090</b>
Rev. light switch/Int. luz marcha atrás		<b>40485</b>
<b>164 3.0</b>		<b>1995-97</b>
AR 66302		154 209
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38090</b>
Rev. light switch/Int. luz marcha atrás		<b>40540</b>
<b>164 3.0 24V</b>		<b>1992-98</b>
AR 66301/AR 66302		155 211
Oil press. switch/Int. pres. aceite		<b>12430</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38280</b>
Rev. light switch/Int. luz marcha atrás		<b>40540</b>
<b>164 3.0 24V Q4</b>		<b>1994-98</b>
AR 64308/AR 64307		170 231
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Thermistor-Thermocont./Doble función		<b>34265</b>
Fan switch/Termocontacto ventilador	-> N° 0009746	<b>38090</b>
Fan switch/Termocontacto ventilador	N° 0009746 ->	<b>38280</b>
Rev. light switch/Int. luz marcha atrás		<b>40485</b>
<b>164 3.0 24V QV</b>		<b>1992-98</b>
AR 64304		171 233
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38280</b>
Rev. light switch/Int. luz marcha atrás		<b>40485</b>
<b>164 3.0 Allrad</b>		<b>1992-97</b>
		171 233
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38090</b>
Rev. light switch/Int. luz marcha atrás		<b>40485</b>
<b>164 3.0 i.e. QV</b>		<b>1990-92</b>
AR 64301/AR 06430		147 200
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Fan switch/Termocontacto ventilador	Ch. 06210070 ->	<b>37320</b>
Fan switch/Termocontacto ventilador	-> Ch. 06210070	<b>37420</b>
Fan switch/Termocontacto ventilador	Climat	<b>38090</b>
Rev. light switch/Int. luz marcha atrás		<b>40485</b>
<b>164 3.0 V6</b>		<b>1987-92</b>
AR 06410		141 192
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Fan switch/Termocontacto ventilador	Ch. 06210070 ->	<b>37320</b>
Fan switch/Termocontacto ventilador	-> Ch. 06210070	<b>37420</b>
Fan switch/Termocontacto ventilador	Climat	<b>38090</b>
Rev. light switch/Int. luz marcha atrás	10.1991 ->	<b>41220</b>
<b>164 3.0 V6</b>		<b>1992-98</b>
AR 66303/AR 64305		132 180
Oil press. switch/Int. pres. aceite		<b>12430</b>
Thermistor-Thermocont./Doble función		<b>34265</b>
Fan switch/Termocontacto ventilador	-> N° 0009746	<b>38090</b>
Fan switch/Termocontacto ventilador	N° 0009746 ->	<b>38280</b>
Rev. light switch/Int. luz marcha atrás		<b>40485</b>
<b>164 3.0 V6</b>		<b>1987-92</b>
AR 06412		135 184
Oil press. switch/Int. pres. aceite		<b>12430</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12960</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Fan switch/Termocontacto ventilador	Ch. 06210070 ->	<b>37320</b>
Fan switch/Termocontacto ventilador	-> Ch. 06210070	<b>37420</b>
Rev. light switch/Int. luz marcha atrás	10.1991 ->	<b>41220</b>
<b>166 2.0 T. S.</b>		<b>1998-00</b>
AR 34103		114 155
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	Without/Sin check control	<b>24400</b>
Stop light switch/Int. luz stop	Check control	<b>24410</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.0 T. S.</b>		<b>2000 -&gt;</b>
AR 36301		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.0 V6</b>		<b>1998 -&gt;</b>
AR 34102		151 205
Oil press. switch/Int. pres. aceite		<b>11060</b>
Stop light switch/Int. luz stop	Without/Sin check control	<b>24400</b>
Stop light switch/Int. luz stop	Check control	<b>24410</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.4 JTD</b>		<b>1998-00</b>
AR 34202		100 136
Oil press. switch/Int. pres. aceite		<b>12430</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.4 JTD</b>		<b>2000 -&gt;</b>
839 A6.000		103 140
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>

**ALFA ROMEO Cont.**

<b>166 2.4 JTD</b>		<b>2002 -&gt;</b>
841 C000		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	Without/Sin check control	<b>24400</b>
Stop light switch/Int. luz stop	Check control	<b>24410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.4 JTD</b>		<b>2003 -&gt;</b>
841 G.000/841 H.000		129 175
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	Without/Sin check control	<b>24400</b>
Stop light switch/Int. luz stop	Check control	<b>24410</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.4 JTD</b>		<b>2006 -&gt;</b>
841 M.000		132 180
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40830</b>
<b>166 2.4 JTD</b>		<b>2005 -&gt;</b>
936 B.000/841 M.000		136 185
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40830</b>
<b>166 2.5 V6 24V</b>		<b>1998-00</b>
AR 34201		140 190
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	Without/Sin check control	<b>24400</b>
Stop light switch/Int. luz stop	Check control	<b>24410</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 2.5 V6 24V</b>		<b>2000 -&gt;</b>
AR 36201		138 188
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 3.0 V6 24V</b>		<b>1998-00</b>
AR 34301		166 226
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	Without/Sin check control	<b>24400</b>
Stop light switch/Int. luz stop	Check control	<b>24410</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 3.0 V6 24V</b>		<b>2000 -&gt;</b>
AR 36101		162 220
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>166 3.2 V6 24V</b>		<b>2003 -&gt;</b>
936 A.000		176 240
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>33 1.2</b>		<b>1983-89</b>
AR 30585		50 68
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.3</b>		<b>1983-89</b>
AR 30586/AR 30502		55 75
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.3</b>		<b>1984-89</b>
AR 30168/AR 30587		63 86
Oil press. switch/Int. pres. aceite		<b>11250</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
<b>33 1.3</b>		<b>1983-89</b>
AR 30502		58 79
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
<b>33 1.3 i.e.</b>		<b>1983-89</b>
AR 30168		66 90
Oil press. switch/Int. pres. aceite		<b>11250</b>
Oil press. switch/Int. pres. aceite		<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.4 i.e. Sport Wagon</b>		<b>1991-94</b>
AR 30755		65 88
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	04.1994 ->	<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.4 i.e., Sport Wagon</b>		<b>1991-94</b>
AR 30755/AR 30753		65 88
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	05.1994 ->	<b>12430</b>
Temp. sending unit/Termo-Resistencia	AR 30755	<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Fan switch/Termocontacto ventilador	AR 30753	<b>37220</b>
Fan switch/Termocontacto ventilador	AR 30755	<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>



**ALFA ROMEO Cont.**

<b>33 1.4 i.e., Sport Wagon</b>		<b>1991-94</b>
AR 30587/AR 30755		66 90
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	05.1994 ->	<b>12430</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia	AR30755	<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Fan switch/Termocontacto ventilador	AR 30755	<b>37220</b>
Fan switch/Termocontacto ventilador	AR 30587	<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.4 i.e., Sport Wagon, 4x4</b>		<b>1990-94</b>
AR 30755		66 90
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	04.1994 ->	<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5</b>		<b>1990-93</b>
AR 30734		77 105
Oil press. switch/Int. pres. aceite		<b>11250</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5 4x4</b>		<b>1986-89</b>
AR 30588/AR 30146		77 105
Oil press. switch/Int. pres. aceite		<b>11250</b>
Oil press. transmitter/Transm. pres. aceite		<b>14530</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5 i.e.</b>		<b>1990-91</b>
AR 30750		74 101
Oil press. switch/Int. pres. aceite		<b>11250</b>
Oil press. switch/Int. pres. aceite	Connector	<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Fan switch/Termocontacto ventilador	Ch. 8L-W-200001 ->	<b>37220</b>
Fan switch/Termocontacto ventilador	-> Ch. 8L-W-200000	<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5 i.e., Sport Wagon</b>		<b>1990-94</b>
AR 30751		71 97
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	05.1994 ->	<b>12430</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5 QV</b>		<b>1984-89</b>
AR 30588/AR 30508/AR 30146		77 105
Oil press. switch/Int. pres. aceite		<b>11250</b>
Oil press. transmitter/Transm. pres. aceite		<b>14530</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5 Sport Wagon, 4x4</b>		<b>1986-89</b>
AR 30588/AR 30508/AR 30146		77 105
Oil press. switch/Int. pres. aceite		<b>11250</b>
Oil press. transmitter/Transm. pres. aceite		<b>14530</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5, Sport Wagon 4x4</b>		<b>1983-93</b>
AR 30182		70 95
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop	-> 06.1990	<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5, Sport Wagon, 4x4</b>		<b>1986-89</b>
AR 30588		75 102
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.5, Sport Wagon, 4x4</b>		<b>1984-89</b>
AR 30514		70 95
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
<b>33 1.7</b>		<b>1986-89</b>
AR 30550		95 129
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
<b>33 1.7 16V, Sport Wagon, 4x4</b>		<b>1990-94</b>
AR 30747		95 129
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	04.1994 ->	<b>12430</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Fan switch/Termocontacto ventilador	N° 0009746 ->	<b>37220</b>
Fan switch/Termocontacto ventilador	-> N° 0009746	<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7 16V, Sport Wagon, 4x4</b>		<b>1990-94</b>
AR 30747		97 132
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	04.1994 ->	<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>

**ALFA ROMEO Cont.**

<b>33 1.7 16V, Sport Wagon, 4x4</b>		<b>1990-92</b>
AR 30746		101 137
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	05.1994 ->	<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Fan switch/Termocontacto ventilador	N° 0009746 ->	<b>37220</b>
Fan switch/Termocontacto ventilador	-> N° 0009746	<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7 i.e. Sport Wagon</b>		<b>1992-94</b>
AR 30737		77 105
Oil press. switch/Int. pres. aceite	-> 04.1994	<b>11250</b>
Oil press. switch/Int. pres. aceite	04.1994 ->	<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7 i.e., Sport Wagon</b>		<b>1992-94</b>
AR 30737 A		77 105
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7 i.e., Sport Wagon, 4x4</b>		<b>1988-89</b>
AR 30558		77 105
Oil press. switch/Int. pres. aceite		<b>11250</b>
Oil press. transmitter/Transm. pres. aceite		<b>14530</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31600</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7 i.e., Sport Wagon, 4x4</b>		<b>1990-92</b>
AR 30736/AR 30737		79 107
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. s. warning lamp/Termocont. temp.		<b>35500</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7 QV</b>		<b>1988-89</b>
AR 30550		84 114
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.7, Sport Wagon</b>		<b>1986-89</b>
AR 30550		87 118
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24390</b>
Temp. sending unit/Termo-Resistencia		<b>31460</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31700</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.8 TD</b>		<b>1986-90</b>
VM 82 A		54 73
Oil press. switch/Int. pres. aceite	-> 12.1989	<b>11060</b>
Stop light switch/Int. luz stop		<b>24390</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37810</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>33 1.8 TD, Sport Wagon</b>		<b>1986-89</b>
VM 96 A		62 84
Oil press. switch/Int. pres. aceite	03.1988 ->	<b>11060</b>
Stop light switch/Int. luz stop		<b>24390</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37810</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>75 1.6</b>		<b>1989-92</b>
AR 61101		81 110
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>75 1.6</b>		<b>1985-89</b>
AR 06100		81 110
Oil press. switch/Int. pres. aceite	09.1988 ->	<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>75 1.6</b>		<b>1985-89</b>
AR 06202		85 116
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24380</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
<b>75 1.8</b>		<b>1985-89</b>
AR 06100		81 110
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24380</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31600</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>75 1.8</b>		<b>1988-92</b>
AR 06168/AR 61102		88 120
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24380</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>

**ALFA ROMEO Cont.**

<b>75 1.8</b>	<b>1989-92</b>	
AR 61201	90 122	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Temp. sending unit/Termo-Resistencia	<b>31050</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 1.8</b>	<b>1989-92</b>	
AR 67101	95 129	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
<b>75 1.8 Turbo</b>	<b>1986-92</b>	
AR 06134	110 150	
Oil press. switch/Int. pres. aceite	<b>11060</b>	-> 01.1990
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Temp. sending unit/Termo-Resistencia	<b>31050</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 1.8 Turbo i.e.</b>	<b>1986-90</b>	
AR 06158	114 155	
Oil press. switch/Int. pres. aceite	<b>11060</b>	12.1986-12.1987
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
<b>75 2.0 T. S.</b>	<b>1987-92</b>	
AR 06166/AR 06224	107 146	
Oil press. switch/Int. pres. aceite	<b>11060</b>	-> 09.1987
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Temp. sending unit/Termo-Resistencia	<b>31460</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 2.0 T. S.</b>	<b>1985-92</b>	
AR 06224	109 148	
Oil press. switch/Int. pres. aceite	<b>11060</b>	01.1987 ->
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Temp. sending unit/Termo-Resistencia	<b>31460</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 2.0 TD</b>	<b>1985-92</b>	
VM 80 A	70 95	
Oil press. switch/Int. pres. aceite	<b>11060</b>	-> 02.1992
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 2.4 TD</b>	<b>1989-92</b>	
VM 81 A	82 112	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 2.5 V6 Kat</b>	<b>1986-89</b>	
AR 01648	113 154	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 3.0 V6</b>	<b>1987-90</b>	
AR 06120	136 185	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Thermistor-Thermocont./Doble función	<b>34265</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 3.0 V6</b>	<b>1987-92</b>	
AR 06124	136 185	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>75 3.0 V6</b>	<b>1990-92</b>	
AR 61503	141 192	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14500</b>	
Stop light switch/Int. luz stop	<b>24380</b>	
Fan switch/Termocontacto ventilador	<b>37420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>Alfasud Sprint 1.4</b>	<b>1979-89</b>	
AR 30168	63 85	
Oil press. switch/Int. pres. aceite	<b>11250</b>	
Fan switch/Termocontacto ventilador	<b>37320</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>Alfasud Sprint 1.7</b>	<b>1987-89</b>	
AR 30550	87 118	
Oil press. switch/Int. pres. aceite	<b>11250</b>	
Fan switch/Termocontacto ventilador	<b>37320</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>Alfasud Sprint 1.7 i.e.</b>	<b>1987-89</b>	
AR 30558	77 105	
Oil press. switch/Int. pres. aceite	<b>11250</b>	
Fan switch/Termocontacto ventilador	<b>37320</b>	
Rev. light switch/Int. luz marcha atrás	<b>40500</b>	
<b>Brera 2.2 JTS</b>	<b>2006 -&gt;</b>	
939 A5.000	136 185	
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	

**ALFA ROMEO Cont.**

<b>Brera 2.4 JTDM 20V</b>	<b>2006 -&gt;</b>	
939 A3.000	147 200	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Brera 2.4 JTDM 20V</b>	<b>2007 -&gt;</b>	
939 A9.000	154 210	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Brera 3.2 JTS, Q4</b>	<b>2006 -&gt;</b>	
939 A.000	191 260	
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>GT 1.8 TS</b>	<b>2003 -&gt;</b>	
AR 32205	103 140	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24411</b>	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	
<b>GT 1.9 JTD</b>	<b>2003 -&gt;</b>	
937 A5.000	110 150	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24411</b>	
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40940</b>	
<b>GT 2.0 JTS</b>	<b>2003 -&gt;</b>	
932 A2.000/937 A1.000	121 165	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24411</b>	
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	
<b>GT 3.2 GTA</b>	<b>2003 -&gt;</b>	
936 A.000	176 240	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24411</b>	
On clutch pedal/Int. pedal embrague	<b>24412</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40940</b>	
<b>GTV 1.8 16V</b>	<b>1998 -&gt;</b>	
AR 32201	106 144	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24410</b>	
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	
<b>GTV 2.0 JTS</b>	<b>2003 -&gt;</b>	
937 A1.000	121 165	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	
<b>GTV 2.0 T. S. 16V</b>	<b>1995 -&gt;</b>	
AR 16201/AR 32310	110 150	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24410</b>	AR 32310
Stop light switch/Int. luz stop	<b>24413</b>	AR 16201
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	
<b>GTV 2.0 T. S. 16V</b>	<b>1998-00</b>	
AR 32301	114 155	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24410</b>	
On clutch pedal/Int. pedal embrague	<b>24413</b>	Engine control/Gestión motor
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	
<b>GTV 2.0 V6 Turbo</b>	<b>1995 -&gt;</b>	
AR 16202	148 202	
Oil press. switch/Int. pres. aceite	<b>11060</b>	
Stop light switch/Int. luz stop	<b>24410</b>	
Rev. light switch/Int. luz marcha atrás	<b>40540</b>	
Rev. light switch/Int. luz marcha atrás	<b>40940</b>	09.1997 ->
<b>GTV 3.0 V6 24V</b>	<b>1996-00</b>	
AR 16102	162 220	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24410</b>	
On clutch pedal/Int. pedal embrague	<b>24413</b>	Engine control/Gestión motor
Rev. light switch/Int. luz marcha atrás	<b>40540</b>	-> 08.1997
Rev. light switch/Int. luz marcha atrás	<b>40940</b>	09.1997 ->
<b>GTV 3.0 V6 24V</b>	<b>2000 -&gt;</b>	
AR 16105	160 218	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24410</b>	
On clutch pedal/Int. pedal embrague	<b>24413</b>	Engine control/Gestión motor
Rev. light switch/Int. luz marcha atrás	<b>40940</b>	
<b>GTV 3.2 V6 24V</b>	<b>2003 -&gt;</b>	
936 A6.000	176 240	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24413</b>	
Rev. light switch/Int. luz marcha atrás	<b>40940</b>	
<b>Mito 1.4 TB</b>	<b>2008 -&gt;</b>	
199 A8.000	114 155	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Mito 1.6 JTDM</b>	<b>2008 -&gt;</b>	
198 A2.000/955 A3.000	88 120	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>RZ 3.0 V6 Zagato</b>	<b>1992-94</b>	
AR 61501	152 207	
Thermistor-Thermocont./Doble función	<b>34260</b>	
<b>Spider 1.8 16V</b>	<b>1998-05</b>	
AR 32201	106 144	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24400</b>	
On clutch pedal/Int. pedal embrague	<b>24410</b>	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	<b>40520</b>	

**ALFA ROMEO Cont.**

<b>Spider 1600</b>		<b>1976-90</b>
AR 00526		76 103
Oil press. switch/Int. pres. aceite	01.1987 ->	<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop	-> 01.1987	<b>24010</b>
Stop light switch/Int. luz stop	01.1987 ->	<b>24410</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Fan switch/Termocontacto ventilador	01.1987 ->	<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>Spider 1600</b>		<b>1990-93</b>
AR 01563		79 107
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24410</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>Spider 2.0 JTS</b>		<b>2003-05</b>
937 A1.000		121 165
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Spider 2.0 T. S. 16V</b>		<b>1995-05</b>
AR 16201/AR 32310		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24400</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24410</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Spider 2.0 T. S. 16V</b>		<b>1998-00</b>
AR 32301		114 155
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24400</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24413</b>
Thermistor-Thermocont./Doble función		<b>34060</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Spider 2.0 V6 Turbo</b>		<b>1998-05</b>
AR 16202		148 202
Oil press. switch/Int. pres. aceite		<b>11060</b>
Stop light switch/Int. luz stop		<b>24400</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24410</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>Spider 2.2 JTS</b>		<b>2006 -&gt;</b>
939 A5.000		136 185
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Spider 2.4 JTDM</b>		<b>2007 -&gt;</b>
939 A3.000		147 200
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Spider 2000</b>		<b>1986-90</b>
AR 01544		85 116
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>Spider 2000</b>		<b>1986-90</b>
AR 00515		92 125
Oil press. switch/Int. pres. aceite	-> 12.1989	<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
<b>Spider 2000</b>		<b>1990-93</b>
AR 01588		88 120
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24410</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>Spider 2000 Veloce</b>		<b>1977-93</b>
AR 00515/AR 01590		93 126
Oil press. switch/Int. pres. aceite		<b>11060</b>
Stop light switch/Int. luz stop		<b>24410</b>
Temp. sending unit/Termo-Resistencia		<b>31050</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>Spider 3.0 V6</b>		<b>1995-05</b>
AR 16101		141 192
Oil press. switch/Int. pres. aceite	-> 09.1997	<b>11260</b>
Oil press. switch/Int. pres. aceite	09.1997 ->	<b>12430</b>
Stop light switch/Int. luz stop		<b>24400</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24410</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24413</b>
Thermistor-Thermocont./Doble función		<b>34265</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1997	<b>40540</b>
Rev. light switch/Int. luz marcha atrás	09.1997 ->	<b>40940</b>
<b>Spider 3.0 V6</b>		<b>2000-05</b>
AR 16105		160 218
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24410</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>Spider 3.2 JTS, Q4</b>		<b>2006 -&gt;</b>
939 A.000		191 260
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Spider 3.2 V6 24V</b>		<b>2003-05</b>
936 A6.000		176 240
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>

**ALFA ROMEO Cont.**

<b>SZ 3.0 V6 Zagato</b>		<b>1988-94</b>
AR 61501		152 207
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24380</b>
Fan switch/Termocontacto ventilador		<b>37420</b>
Rev. light switch/Int. luz marcha atrás		<b>40500</b>
<b>ALPINE</b>		
<b>V6 2.5 Turbo</b>		<b>1988-90</b>
Z7U		147 200
Rev. light switch/Int. luz marcha atrás		<b>41080</b>
<b>V6 2.9 GT</b>		<b>1985-90</b>
Z6W		116 160
Rev. light switch/Int. luz marcha atrás		<b>41080</b>
<b>AUDI</b>		
<b>100 1.8 Kat, Avant, Quattro</b>		<b>1985-90</b>
PH/4B		66 90
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	-> 12.1987	<b>24320</b>
Stop light switch/Int. luz stop	01.1988 ->, 2 terminals/bornes	<b>24560</b>
Temp. sending unit/Termo-Resistencia		<b>32110</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>32200</b>
Temp. s. warning lamp/Termocont. temp.		<b>35420</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.		<b>35660</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	-> 12.1987	<b>37400</b>
Fan switch/Termocontacto ventilador	01.1988 ->	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40310</b>
<b>100 1.8, Avant</b>		<b>1983-89</b>
JW /NP/DS		66 90
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Fan switch/Termocontacto ventilador	01.1988 ->	<b>37820</b>
<b>100 1.8, Avant, Quattro</b>		<b>1986-90</b>
SH		65 88
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	-> 12.1987	<b>24320</b>
Stop light switch/Int. luz stop	01.1988 ->, 2 terminals/bornes	<b>24560</b>
Temp. s. warning lamp/Termocont. temp.		<b>35420</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.		<b>35660</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	-> 12.1987	<b>37400</b>
Fan switch/Termocontacto ventilador	01.1988 ->	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40310</b>
<b>100 2.0 D, Avant</b>		<b>1982-90</b>
CN		51 70
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	-> 12.1987	<b>24320</b>
Stop light switch/Int. luz stop	01.1988 ->, 2 terminals/bornes	<b>24560</b>
Temp. sending unit/Termo-Resistencia		<b>32200</b>
Temp. s. warning lamp/Termocont. temp.		<b>35420</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.	120 °C	<b>35520</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	-> 12.1987	<b>37400</b>
Rev. light switch/Int. luz marcha atrás		<b>40310</b>
<b>100 2.0 E 16V, Avant, Quattro</b>		<b>1992-94</b>
ACE		103 140
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Temp. s. warning lamp/Termocont. temp.		<b>35470</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>100 2.0 E Quattro, Avant</b>		<b>1990-92</b>
AAD		85 115
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>100 2.0 E, Avant</b>		<b>1990-94</b>
ABK/AAD		85 115
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>100 2.0 E, Avant</b>		<b>1991-94</b>
AAE		74 100
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Temp. sending unit/Termo-Resistencia		<b>31390</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>

















**AUDI Cont.**

<b>A4 2.0 TDI, Avant</b>		<b>2008 -&gt;</b>
CAGC		88 120
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
<b>A4 2.0 TDI, Avant</b>		<b>2008 -&gt;</b>
CAHB		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
<b>A4 2.0 TDI, Avant, Cabrio, Quattro</b>		<b>2006 -&gt;</b>
BPW		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0 TDI, Avant, Quattro</b>		<b>2006 -&gt;</b>
BRD		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0 TFSI</b>		<b>2008 -&gt;</b>
CDNB/CAEA/CDZA		132 180
Oil press. switch/Int. pres. aceite		<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI 16V Cabrio</b>		<b>2006 -&gt;</b>
BWT/BWE		147 200
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0 TFSI Avant</b>		<b>2008 -&gt;</b>
CDNB/CDZA		132 180
Oil press. switch/Int. pres. aceite		<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI Avant, Quattro</b>		<b>2004 -&gt;</b>
BGB/BWE		147 200
Oil press. switch/Int. pres. aceite	Ch. 8E-5-533001 ->	<b>12850</b>
Oil press. switch/Int. pres. aceite	BGB, -> Ch. 8E5533000, Black/Negro	<b>12895</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0 TFSI Cabrio Quattro</b>		<b>2005 -&gt;</b>
		147 200
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0 TFSI flexible fuel, Avant, Quattro</b>		<b>2009 -&gt;</b>
CFKA		132 180
Oil press. switch/Int. pres. aceite		<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI Quattro</b>		<b>2008 -&gt;</b>
CAEB/CDNC		155 211
Oil press. switch/Int. pres. aceite		<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI Quattro Allroad</b>		<b>2009 -&gt;</b>
CDNC		155 211
Oil press. switch/Int. pres. aceite		<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI Quattro Avant</b>		<b>2008 -&gt;</b>
CDNC		155 211
Oil press. switch/Int. pres. aceite		<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI, Avant</b>		<b>2006 -&gt;</b>
BPJ/BYK		125 170
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A4 2.0 TFSI, Avant</b>		<b>2008 -&gt;</b>
CDNC/CADA		155 211
Oil press. switch/Int. pres. aceite	CADA, 2.80 bar	<b>12855</b>
Oil press. switch/Int. pres. aceite	CDNC	<b>12875</b>
Oil press. switch/Int. pres. aceite	CDNC, 0.70 bar	<b>12890</b>
<b>A4 2.0 TFSI, Avant, Quattro</b>		<b>2005 -&gt;</b>
BUL		162 220
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0 TFSI, Quattro</b>		<b>2004 -&gt;</b>
BPG/BWT/BGB/BWE		147 200
Oil press. switch/Int. pres. aceite	Ch. 8E-5-533001 ->	<b>12850</b>
Oil press. switch/Int. pres. aceite	BGB, BPG, -> Ch. 8E-5-533000, Black/Negro	<b>12895</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.0, Avant, Cabrio</b>		<b>2000 -&gt;</b>
ALT		96 130
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40715</b>
<b>A4 2.4 Quattro, Avant</b>		<b>1997-00</b>
APZ		120 163
Oil press. switch/Int. pres. aceite	Ch. 8D-Y-000001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8D-X-500000, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A4 2.4, Avant</b>		<b>1997-00</b>
AMM/APZ/AJG		120 163
Oil press. switch/Int. pres. aceite	Ch. 8D-Y-000001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8D-X-500000, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>

**AUDI Cont.**

<b>A4 2.4, Avant, Cabrio</b>		<b>2002-05</b>
AMM		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.4, Avant, Cabrio, Quattro</b>		<b>2001-04</b>
BDV		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.4, Avant, Quattro</b>		<b>1997-00</b>
AML/ARJ/ALF/AGA/APS		121 165
Oil press. switch/Int. pres. aceite	Ch. 8D-Y-000001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8D-X-500000, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A4 2.5 TDI Quattro, Avant</b>		<b>2000-04</b>
BAU/AKE/BDH		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.5 TDI, Avant</b>		<b>2001-02</b>
AYM		114 155
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.5 TDI, Avant</b>		<b>2004-06</b>
BDG		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.5 TDI, Avant, Cabrio</b>		<b>2002-04</b>
BCZ/BDG/BFC		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.5 TDI, Avant, Quattro</b>		<b>1997-00</b>
AFB/AKN		110 150
Oil press. switch/Int. pres. aceite	Ch. 8D-Y-000001 ->	<b>12882</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8D-X-500000	<b>12930</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	<b>40570</b>
<b>A4 2.6, Avant, Quattro</b>		<b>1995-01</b>
ABC		110 150
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>A4 2.7 TDI, Avant</b>		<b>2005-08</b>
BSG		120 163
Oil press. switch/Int. pres. aceite	Ch. 8E-6-180001 ->	<b>12865</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8E-6-180000	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A4 2.7 TDI, Avant, Cabrio</b>		<b>2006 -&gt;</b>
BPP		132 180
Oil press. switch/Int. pres. aceite	Ch. 8E-6-180001 ->	<b>12865</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8E-6-180000	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A4 2.8, Avant, Quattro</b>		<b>1995-97</b>
AAH		128 174
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>A4 2.8, Avant, Quattro</b>		<b>1996-01</b>
APR/ACK/ALG/AQD/AMX		142 193
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	AMX, APR, AQD, Ch. 8D-Y-000001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8D-Y-000000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>

**AUDI Cont.**

<b>A4 3.0 TDI Quattro, Avant, Cabrio</b>		2004 ->	
BKN		150 204	
Oil press. switch/Int. pres. aceite	Ch. 8E-6-180001 ->	12865	
Oil press. switch/Int. pres. aceite	-> Ch. 8E-6-180000	12882	
Stop light switch/Int. luz stop		24761	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.0 TDI Quattro, Avant, Cabrio</b>		2006 ->	
ASB		171 233	
Oil press. switch/Int. pres. aceite	Ch. 8E-6-180001 ->	12865	
Oil press. switch/Int. pres. aceite	-> Ch. 8E-6-180000	12882	
Stop light switch/Int. luz stop		24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.0, Avant, Cabrio, Quattro</b>		2001-05	
ASN		162 220	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
<b>A4 3.0, Avant, Cabrio, Quattro</b>		2001-05	
ASN		162 220	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop		24761	
Fan switch/Termocontacto ventilador		36370	
Rev. light switch/Int. luz marcha atrás		40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.0, Avant, Quattro</b>		2000-04	
ASN/AVK		162 220	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop		24761	
Fan switch/Termocontacto ventilador		36370	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.0, Avant, Quattro</b>		2001-06	
BBJ		160 218	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop		24761	
Fan switch/Termocontacto ventilador		36370	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.2 FSI Quattro</b>		2005 ->	
AUK/BKH		188 255	
Oil press. switch/Int. pres. aceite	Ch. 8E-5-533001 ->	12850	
Oil press. switch/Int. pres. aceite	-> Ch. 8E 5 581000	12896	
Stop light switch/Int. luz stop		24761	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.2 FSI, Avant, Cabrio, Quattro</b>		2005 ->	
AUK		188 255	
Oil press. switch/Int. pres. aceite	Ch. 8E-5-533001 ->	12850	
Oil press. switch/Int. pres. aceite	-> Ch. 8E 5 581000	12896	
Stop light switch/Int. luz stop		24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 3.2 FSI, Avant, Quattro</b>		2007 ->	
CALA		195 265	
Oil press. switch/Int. pres. aceite	2.80 bar	12855	
<b>A4 RS4 Quattro Avant</b>		2000-01	
AZR/ASJ		280 380	
Oil press. switch/Int. pres. aceite	Ch. 8D-Y-000001 ->	12880	
Oil press. switch/Int. pres. aceite	-> Ch. 8D-X-500000, 1.40 bar	12900	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Fan switch/Termocontacto ventilador		36370	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Rev. light switch/Int. luz marcha atrás		40715	
<b>A4 RS4 Quattro, Avant, Cabrio</b>		2005 ->	
BNS		309 420	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Oil press. switch/Int. pres. aceite	Ch. 8E-7-904001 ->	12885	
<b>A4 S4 Quattro</b>		2004 ->	
BHF/BBK		253 344	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop		24761	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A4 S4 Quattro</b>		2008 ->	
CAKA/CCBA		245 333	
Oil press. switch/Int. pres. aceite	2.80 bar	12855	
<b>A4 S4 Quattro Avant</b>		2008 ->	
CAKA		245 333	
Oil press. switch/Int. pres. aceite	2.80 bar	12855	
<b>A4 S4 Quattro, Avant</b>		1997-00	
AGB/AZB		195 265	
Oil press. switch/Int. pres. aceite	Ch. 8D-Y-000001 ->	12880	
Oil press. switch/Int. pres. aceite	-> Ch. 8D-X-500000, 1.40 bar	12900	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Fan switch/Termocontacto ventilador		36370	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40570	
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40715	
<b>A4 S4 Quattro, Avant, Cabrio</b>		2003 ->	
BBK		253 344	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop		24761	
Fan switch/Termocontacto ventilador		36370	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
Rev. light switch/Int. luz marcha atrás		40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>A5 1.8 TFSI</b>		2007 ->	
CABD		125 170	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
<b>A5 1.8 TFSI, Cabrio, Sportback</b>		2009 ->	
CDHB		118 160	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	

**AUDI Cont.**

<b>A5 2.0 TDI, Cabrio, Quattro, Sportback</b>		2008 ->	
CAHA		125 170	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
<b>A5 2.0 TFSI Cabrio</b>		2009 ->	
CDNB/CAEA		132 180	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
<b>A5 2.0 TFSI, Cabrio, Quattro</b>		2008 ->	
CAEB/CDNC		155 211	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
<b>A5 2.0 TFSI, Sportback</b>		2008 ->	
CDNB		132 180	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
<b>A5 2.0 TFSI, Sportback, Quattro</b>		2008 ->	
CDNC		155 211	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
<b>A5 3.2 FSI, Cabrio, Quattro, Sportback</b>		2007 ->	
CALA		195 265	
Oil press. switch/Int. pres. aceite	2.80 bar	12855	
Oil press. switch/Int. pres. aceite		12865	
<b>A5 S5 Cabrio Quattro</b>		2009 ->	
CAKA/CCBA		245 333	
Oil press. switch/Int. pres. aceite	2.80 bar	12855	
<b>A5 S5 Quattro</b>		2007 ->	
CAUA		260 354	
Oil press. switch/Int. pres. aceite		12885	
<b>A5 S5 Quattro Sportback</b>		2010 ->	
CAKA		245 333	
Oil press. switch/Int. pres. aceite	2.80 bar	12855	
<b>A6 1.8</b>		1997-05	
ANQ/ARH/AJP/AQE		92 125	
Oil press. switch/Int. pres. aceite	AQE, AJP, Ch. 4B-Y-000001 ->	12880	
Oil press. switch/Int. pres. aceite	AJP, AQE, -> Ch. 4B-X-200000	12900	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>A6 1.8 Avant</b>		1997-05	
ARH/AJP/AQE		92 125	
Oil press. switch/Int. pres. aceite	01.2001 ->	12880	
Oil press. switch/Int. pres. aceite	-> 12.2000, 1.40 bar	12900	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>A6 1.8 T</b>		1997-05	
ARK/AEB/ANB/APU/AWT/AWL		110 150	
Oil press. switch/Int. pres. aceite	AEB, AWT, ARK, ANB, APU, Ch. 4B-Y-000001	12880	
Oil press. switch/Int. pres. aceite	ARK, ANB, APU, AEB, -> Ch. 4B-X-200000	12900	
Oil press. switch/Int. pres. aceite	Ch. 4B-Y-000001 ->	12930	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals	24565	
Stop light switch/Int. luz stop	AWT, -> Ch. 4B-2-129476, 4 terminals	24761	
Stop light switch/Int. luz stop	AWT, Ch. 4B-2-129477 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	40715	
<b>A6 1.8 T, Avant, Quattro</b>		1997-05	
ARK/AEB/ANB/APU/AWT		110 150	
Oil press. switch/Int. pres. aceite	Ch. 4B-Y-000001 ->	12880	
Oil press. switch/Int. pres. aceite	APU, ANB, ARK, AEB, -> Ch. 4B-X-200000	12900	
Oil press. switch/Int. pres. aceite	Ch. 4B-Y-000001 ->	12930	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	AWT, -> Ch. 4B-2-129476, 4 terminals	24565	
Stop light switch/Int. luz stop	AWT, Ch. 4B-2-129477 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	40715	
<b>A6 1.8 T, Avant, Quattro</b>		1997-05	
AJL		132 180	
Oil press. switch/Int. pres. aceite	Ch. 4B-Y-000001 ->	12880	
Oil press. switch/Int. pres. aceite	-> Ch. 4B-X-200000, 1.40 bar	12900	
Oil press. switch/Int. pres. aceite	Ch. 4B-Y-000001 ->	12930	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	40715	
<b>A6 1.8, Avant</b>		1997-05	
AFY		85 116	
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>A6 1.8, Avant, Quattro</b>		1995-97	
ADR		92 125	
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Thermistor-Thermocont./Doble función		34220	
Temp. s. warning lamp/Thermocont. temp.		35470	
Temp. s. warning lamp/Thermocont. temp.	110 °C	35480	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820	
<b>A6 1.9 TDI</b>		1997-00	
AVG/AFN		81 110	
Oil press. switch/Int. pres. aceite	Ch. 4B-Y-000001 ->	12880	
Oil press. switch/Int. pres. aceite	Ch. 4B-X-000001 ->	12882	
Oil press. switch/Int. pres. aceite	Open/Conecta	12930	
Stop light switch/Int. luz stop	2 terminals/bornes	24560	
Stop light switch/Int. luz stop	-> Ch. 4B-W-220000, 4 terminals	24565	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	40715	





**AUDI Cont.**

<b>A6 3.0 TDI Quattro, Avant</b>		<b>2004-06</b>
BMK		165 225
Oil press. switch/Int. pres. aceite	Ch. 4F-6-123001 ->	<b>12865</b>
Oil press. switch/Int. pres. aceite	-> Ch. 4F-6-123000	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.0 TDI Quattro, Avant</b>		<b>2004 -&gt;</b>
BNG/CDYB		155 211
Oil press. switch/Int. pres. aceite	BNG, Ch. 4F-6-123001 ->	<b>12865</b>
Oil press. switch/Int. pres. aceite	BNG, -> Ch. 4F-6-123000	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.0 TDI Quattro, Avant</b>		<b>2008 -&gt;</b>
CDYA/CDYC		176 240
Oil press. switch/Int. pres. aceite	CDYA	<b>12865</b>
Stop light switch/Int. luz stop	CDYA	<b>24761</b>
<b>A6 3.0 TDI, Quattro, Avant, Allroad</b>		<b>2006 -&gt;</b>
ASB		171 233
Oil press. switch/Int. pres. aceite		<b>12865</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.0 TFSI Quattro, Avant, Allroad</b>		<b>2008 -&gt;</b>
CAJA		213 290
Oil press. switch/Int. pres. aceite	2.80 bar	<b>12855</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A6 3.0, Avant, Quattro</b>		<b>2001-05</b>
ASN		162 220
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	-> Ch. 4B-2-129476, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	Ch. 4B-2-129477 ->	<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.0, Avant, Quattro</b>		<b>2004-06</b>
BBJ		160 218
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.2 FSI Avant, Quattro</b>		<b>2005-08</b>
AUK		188 255
Oil press. switch/Int. pres. aceite	Ch. 4F-5-168001 ->	<b>12850</b>
Oil press. switch/Int. pres. aceite	-> Ch. 4F-5-168000	<b>12896</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.2 FSI Quattro Allroad</b>		<b>2006 -&gt;</b>
AUK		188 255
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.2 FSI, Quattro</b>		<b>2004-08</b>
AUK/BKH		188 255
Oil press. switch/Int. pres. aceite	Ch. 4F-5-168001 ->	<b>12850</b>
Oil press. switch/Int. pres. aceite	-> Ch. 4F-5-168000	<b>12896</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 3.7, Avant, Quattro</b>		<b>1999-05</b>
AQG		191 260
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A6 4.2 FSI Quattro, Avant, Allroad</b>		<b>2006 -&gt;</b>
BJV		257 350
Oil press. switch/Int. pres. aceite	-> Ch. 4F-7-073000	<b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 4F-7-073001 ->	<b>12885</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 4.2 Quattro, Avant</b>		<b>1998-05</b>
AWN/ARS/ASG		220 299
Oil press. switch/Int. pres. aceite	01.2001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> 12.2000, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	ASG, -> Ch. 4B-2-129476, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	ASG, Ch. 4B-2-129477 ->	<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A6 4.2 Quattro, Avant</b>		<b>2004-06</b>
BAT		246 335
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 RS6 Plus Quattro Avant</b>		<b>2004-05</b>
BRV		353 480
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Stop light switch/Int. luz stop	2 fans or speeds/Ventil. o veloc.	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A6 RS6 Quattro, Avant</b>		<b>2002-05</b>
BCY		331 450
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A6 RS6 Quattro, Avant</b>		<b>2008 -&gt;</b>
BUH		426 580
Oil press. switch/Int. pres. aceite		<b>12885</b>

**AUDI Cont.**

<b>A6 S6 4.2 Quattro, Avant</b>		<b>1994-97</b>
AEC		213 290
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.		<b>35470</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>A6 S6 Plus Quattro, Avant</b>		<b>1996-97</b>
AHK		240 326
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.		<b>35470</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>A6 S6 Quattro, Avant</b>		<b>1999-05</b>
AQJ/ANK		250 340
Oil press. switch/Int. pres. aceite	01.2001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> 12.2000, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	ANK, -> Ch. 4B-2-129476, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	ANK, Ch. 4B-2-129477 ->	<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A6 S6 Quattro, Avant</b>		<b>2006 -&gt;</b>
BXA		320 435
Oil press. switch/Int. pres. aceite	-> Ch. 4F-7-073000	<b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 4F-7-073001 ->	<b>12885</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A6 S6 Turbo Quattro, Avant</b>		<b>1994-97</b>
AAN		169 230
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	<b>12900</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.		<b>35470</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>A8 2.5 TDI, Quattro</b>		<b>1997-00</b>
AFB/AKN		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	10.1998 ->, -> Ch. 8-E-200000	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1998, -> Ch. 8-E-200000	<b>40715</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A8 2.5 TDI, Quattro, Avant</b>		<b>2000-03</b>
AKE		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 8-E-200000	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>A8 2.8</b>		<b>1996-02</b>
APR/ACK/ALG/AQD/AMX		142 193
Oil press. switch/Int. pres. aceite	ALG, ACK	<b>11690</b>
Oil press. switch/Int. pres. aceite	AMX, APR, AQD	<b>12880</b>
Oil press. switch/Int. pres. aceite	ACK, ALG	<b>12950</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A8 2.8 FSI</b>		<b>2007-10</b>
BDX		154 210
Oil press. switch/Int. pres. aceite	2.80 bar	<b>12855</b>
Oil press. switch/Int. pres. aceite		<b>12865</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 2.8 Quattro</b>		<b>1996-02</b>
APR/ACK/AQD/AMX		142 193
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	AQD, APR, AMX	<b>12880</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12950</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A8 2.8, Quattro</b>		<b>1994-96</b>
AAH		128 174
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12950</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A8 3.0</b>		<b>2003-10</b>
ASN		162 220
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 3.0</b>		<b>2003-10</b>
BBJ		160 218
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 3.0 TDI Quattro</b>		<b>2003-10</b>
ASB		171 233
Oil press. switch/Int. pres. aceite	Ch. 4E-6-020401 ->	<b>12865</b>
Oil press. switch/Int. pres. aceite	-> Ch. 4E-6-020400	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 3.0 TDI Quattro</b>		<b>2003-10</b>
BNG		155 211
Oil press. switch/Int. pres. aceite	Ch. 4E-6-020401 ->	<b>12865</b>
Oil press. switch/Int. pres. aceite	-> Ch. 4E-6-020400	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>

**AUDI Cont.**

<b>A8 3.2 FSI Quattro</b>		<b>2005-10</b>
BPK		191 260
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 3.3 TDI Quattro</b>		<b>2000-02</b>
AKF		165 224
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>A8 3.7</b>		<b>1995-98</b>
AEW		169 230
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	10.1998 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1998	<b>40715</b>
<b>A8 3.7 Quattro</b>		<b>1995-98</b>
AKJ/AEW		169 230
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	10.1998 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1998	<b>40715</b>
<b>A8 3.7 Quattro</b>		<b>2002-10</b>
BFL		206 280
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 3.7 Quattro</b>		<b>1998-02</b>
AKC/AQG		191 260
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>A8 4.0 TDI Quattro</b>		<b>2003-10</b>
ASE		202 275
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 4.2 FSI Quattro</b>		<b>2006-10</b>
BJV		257 350
Oil press. switch/Int. pres. aceite	Ch. 4E-7-000001-4E-7-010000	<b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 4F-7-010001 ->	<b>12885</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 4.2 Quattro</b>		<b>1994-98</b>
AKG/ABZ		220 299
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	10.1998 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1998	<b>40715</b>
<b>A8 4.2 Quattro</b>		<b>1994-96</b>
AEM		180 245
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>A8 4.2 Quattro</b>		<b>1998-02</b>
AUW/AQF/AUX		228 310
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>A8 4.2 Quattro</b>		<b>1999-00</b>
ARU		175 238
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>A8 4.2 Quattro</b>		<b>2002-10</b>
BFM		246 335
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 4.2 TDI Quattro</b>		<b>2005-10</b>
BMC		235 320
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 4.2 TDI Quattro</b>		<b>2005-10</b>
BVN		240 326
Oil press. switch/Int. pres. aceite		<b>12865</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 6.0 W12 Quattro</b>		<b>2001-02</b>
AZC		309 420
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
<b>A8 6.0 W12 Quattro</b>		<b>2003-10</b>
BTE/BSB/BHT		331 450
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>A8 S 8 Quattro</b>		<b>1996-99</b>
AHC/AKH		250 340
Oil press. switch/Int. pres. aceite		<b>11690</b>
<b>A8 S 8 Quattro</b>		<b>1999-02</b>
AQH/AVP		265 360
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
<b>A8 S8 Quattro</b>		<b>2006-10</b>
BSM		331 450
Oil press. switch/Int. pres. aceite	-> Ch. 4E-7-010000	<b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 4E-7-010001 ->	<b>12885</b>
Stop light switch/Int. luz stop		<b>24761</b>

**AUDI Cont.**

<b>Allroad 2.5 TDI Quattro</b>		<b>2000-05</b>
BAU/AKE		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop	-> Ch. 4B-2-150000, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	Ch. 4B-2-150001 ->	<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>Allroad 2.5 TDI Quattro</b>		<b>2003-05</b>
BCZ		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop	-> Ch. 4B-2-150000, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	Ch. 4B-2-150001 ->	<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>Allroad 2.7 T Quattro</b>		<b>2000-05</b>
BES/ARE		184 250
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	-> Ch. 4B-2-150000, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	Ch. 4B-2-150001 ->	<b>24761</b>
Temp. s. warning lamp/Termocont. temp.		<b>35640</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>Allroad 4.2 V8 Quattro</b>		<b>2002-05</b>
BAS		220 299
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	-> Ch. 4B-2-150000, 4 terminals	<b>24565</b>
Stop light switch/Int. luz stop	Ch. 4B-2-150001 ->	<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>Cabriolet 1.8</b>		<b>1997-00</b>
ADR		92 125
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 1.9 TDI</b>		<b>1995-00</b>
1Z/AHU		66 90
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12882</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>12930</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 2.0 16V</b>		<b>1995-96</b>
ACE		103 140
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.		<b>35470</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 2.0 E</b>		<b>1993-98</b>
ABK		85 115
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Temp. s. warning lamp/Termocont. temp.	110 °C	<b>35480</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 2.3 E</b>		<b>1991-94</b>
NG		98 133
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 2.6</b>		<b>1993-00</b>
ABC		110 150
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->, White/blanco	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 2.6</b>		<b>1995-00</b>
ACZ		102 139
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>
<b>Cabriolet 2.6</b>		<b>1995-00</b>
ACZ		102 139
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar	<b>12910</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24560</b>
Thermistor-Thermocont./Doble función		<b>34220</b>
Fan switch/Termocontacto ventilador		<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37820</b>



**AUDI Cont.**

<b>Cabriolet 2.8</b>	<b>1992-00</b>
AAH	128 174
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000 <b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 -> <b>12870</b>
Oil press. switch/Int. pres. aceite	Ch. 8G-X-001001 -> <b>12883</b>
Oil press. switch/Int. pres. aceite	-> Ch. 8G-X-001000, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Thermistor-Thermocont./Doble función	<b>34220</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 1.8, GT, Quattro</b>	<b>1989-91</b>
DZ	82 112
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.0</b>	<b>1989-96</b>
ABK/AAD	85 115
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Thermistor-Thermocont./Doble función	<b>34220</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.0</b>	<b>1990-90</b>
3A	83 112
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.0 16V</b>	<b>1992-96</b>
ACE	103 140
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.0 16V</b>	<b>1992-92</b>
6A	101 137
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.0 20V, Quattro</b>	<b>1989-91</b>
NM	118 160
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.2 Quattro</b>	<b>1984-91</b>
KV	100 136
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.3 20V, Quattro</b>	<b>1990-96</b>
7A	123 167
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	Gray/gris <b>35460</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.3 20V, Quattro</b>	<b>1988-91</b>
7A	125 170
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	<b>35460</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.3, Quattro</b>	<b>1988-94</b>
NG	100 136
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>

**AUDI Cont.**

<b>Coupe 2.3, Quattro</b>	<b>1990-96</b>
NG	98 133
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe 2.6, Quattro</b>	<b>1992-96</b>
ABC	110 150
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML <b>40570</b>
<b>Coupe 2.8, Quattro</b>	<b>1991-96</b>
AAH	128 174
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML <b>40570</b>
<b>Coupe S2 Quattro</b>	<b>1990-92</b>
3B	162 220
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Coupe S2 Quattro</b>	<b>1992-96</b>
ABY	169 230
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar <b>12910</b>
Oil press. transmitter/Transm. pres. aceite	<b>14740</b>
Stop light switch/Int. luz stop	2 terminals/bornes <b>24560</b>
Temp. s. warning lamp/Termocont. temp.	110 °C <b>35480</b>
Fan switch/Termocontacto ventilador	<b>36370</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37820</b>
<b>Q5 2.0 TDI</b>	<b>2008 -&gt;</b>
CAHA/CGLB	125 170
Oil press. switch/Int. pres. aceite	Open/Conecta <b>12890</b>
<b>Q5 2.0 TDI</b>	<b>2009 -&gt;</b>
CJCA/CAGA	105 143
Oil press. switch/Int. pres. aceite	Open/Conecta <b>12890</b>
<b>Q5 2.0 TFSI</b>	<b>2008 -&gt;</b>
CDNC	155 211
Oil press. switch/Int. pres. aceite	<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar <b>12890</b>
<b>Q5 2.0 TFSI</b>	<b>2009 -&gt;</b>
CDNB	132 180
Oil press. switch/Int. pres. aceite	<b>12875</b>
Oil press. switch/Int. pres. aceite	0.70 bar <b>12890</b>
<b>Q5 3.2 FSI</b>	<b>2008 -&gt;</b>
CALB	199 270
Oil press. switch/Int. pres. aceite	<b>12855</b>
<b>Q7 3.0 TDI</b>	<b>2006 -&gt;</b>
BUG	171 233
Oil press. switch/Int. pres. aceite	<b>12865</b>
Stop light switch/Int. luz stop	-> Ch. 4L-8-150000 <b>24761</b>
<b>Q7 3.0 TDI</b>	<b>2006 -&gt;</b>
CASB/BUN	155 211
Oil press. switch/Int. pres. aceite	<b>12865</b>
Stop light switch/Int. luz stop	BUN, -> Ch. 4L-8-150000 <b>24761</b>
<b>Q7 3.0 TDI</b>	<b>2007 -&gt;</b>
CASA/CJGA/CCMA	176 240
Oil press. switch/Int. pres. aceite	<b>12865</b>
Stop light switch/Int. luz stop	CASA, -> Ch. 4L-8-150000 <b>24761</b>
<b>Q7 3.6 FSI</b>	<b>2006 -&gt;</b>
BHK	206 280
Oil press. switch/Int. pres. aceite	-> 12.2009 <b>12880</b>
Oil press. switch/Int. pres. aceite	01.2010 -> <b>12885</b>
Stop light switch/Int. luz stop	-> Ch. 4L-8-150000 <b>24761</b>
<b>Q7 4.2 FSI</b>	<b>2006 -&gt;</b>
BAR	257 350
Oil press. switch/Int. pres. aceite	-> Ch. 4L-7-057000 <b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 4L-7-057001 -> <b>12885</b>
Stop light switch/Int. luz stop	<b>24761</b>
<b>Q7 4.2 TDI</b>	<b>2007 -&gt;</b>
BTR	240 326
Stop light switch/Int. luz stop	-> Ch. 4L-8-150000 <b>24761</b>
<b>Quattro 2.2 20V</b>	<b>1989-91</b>
RR	162 220
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
Temp. s. warning lamp/Termocont. temp.	120 °C <b>35520</b>
<b>Quattro 2.2 Turbo</b>	<b>1987-89</b>
MB/1B	147 200
Oil press. switch/Int. pres. aceite	0.40 bar <b>11070</b>
<b>R8 4.2 FSI Quattro, Spyder</b>	<b>2007 -&gt;</b>
BYH	309 420
Oil press. switch/Int. pres. aceite	<b>12885</b>
Stop light switch/Int. luz stop	-> Ch. 42-8-004200 <b>24761</b>
Stop light switch/Int. luz stop	<b>24763</b>
<b>R8 5.2 FSI Quattro, Spyder</b>	<b>2009 -&gt;</b>
BUJ	386 525
Oil press. switch/Int. pres. aceite	<b>12885</b>

**AUDI Cont.**

<b>TT 1.8 T</b>		1998-06
AWP/AJQ/APP/ARY/AUQ/ATC		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T Quattro</b>		2005-06
BFV		176 240
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T Quattro, Roadster</b>		1998-06
AWP/AJQ/ARY/ATC		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T Quattro, Roadster</b>		1998-06
BAM/APX/AMU		165 224
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T Roadster</b>		1999-06
AWP/AJQ/APP/AUQ/ATC		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T, Roadster</b>		2001-06
AUM		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T, Roadster</b>		2005-06
BVP		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 T, Roadster, Quattro</b>		2005-06
BVR		140 190
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>TT 1.8 TFSI, Roadster</b>		2008 ->
CDAA		118 160
Oil press. switch/Int. pres. aceite		12875
Oil press. switch/Int. pres. aceite	0.70 bar	12890
<b>TT 2.0 TDI Quattro, Roadster</b>		2008 ->
CFGB/CBBB		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Rev. light switch/Int. luz marcha atrás		40675
<b>TT 2.0 TFSI Quattro, Roadster</b>		2008 ->
CDLB		200 272
Oil press. switch/Int. pres. aceite		12850
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
<b>TT 2.0 TFSI Quattro, Roadster</b>		2008 ->
CCZA		147 200
Oil press. switch/Int. pres. aceite		12875
Oil press. switch/Int. pres. aceite	0.70 bar	12890
<b>TT 2.0 TFSI, Roadster</b>		2006 ->
BWA/BPY/CCZA/CCTA		147 200
Oil press. switch/Int. pres. aceite	BWA, BPY	12850
Oil press. switch/Int. pres. aceite	CCZA	12875
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Oil press. switch/Int. pres. aceite	CCZA, 0.70 bar	12890
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
<b>TT 2.5 TFSI Quattro, Roadster</b>		2009 ->
CEPA		250 340
Oil press. switch/Int. pres. aceite		12875
<b>TT 3.2 V6 Quattro, Roadster</b>		2006 ->
BUB		184 250
Oil press. switch/Int. pres. aceite		12865
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Rev. light switch/Int. luz marcha atrás		40675

**AUDI Cont.**

<b>TT 3.2 VR6 Quattro, Roadster</b>		2003-06
BPB/BHE		184 250
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.		35310
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 8N-X-001000	40665
Rev. light switch/Int. luz marcha atrás	Ch. 8N-X-001001 ->	40675
<b>V8 3.6 Quattro</b>		1993-94
PT		180 245
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Stop light switch/Int. luz stop	2 terminals/bornes	24560
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40310
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40570
<b>V8 3.6 Quattro</b>		1988-94
PT		184 250
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Stop light switch/Int. luz stop	2 terminals/bornes	24560
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40310
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40570
<b>V8 4.2 Quattro</b>		1991-94
ABH		206 280
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Stop light switch/Int. luz stop	2 terminals/bornes	24560
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40310
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40570
<b>AUSTIN</b>		
<b>Allegro 1.5 Kombi</b>		1975 ->
14 H		56 76
Oil press. switch/Int. pres. aceite		11290
<b>Allegro 1.7 Kombi</b>		1979 ->
		50 68
Oil press. switch/Int. pres. aceite		11290
<b>Ambassador 2.0</b>		1982 ->
		75 102
Oil press. switch/Int. pres. aceite		11290
<b>Maestro 1.3 LS</b>		1983-90
12 H		49 67
Oil press. switch/Int. pres. aceite		11420
<b>Maestro 2.0 Efi</b>		1984-90
20 HA50AA/20 HC51AA/20 HC81		83 113
Oil press. switch/Int. pres. aceite		11420
Rev. light switch/Int. luz marcha atrás		40580
<b>Metro 1.0</b>		1980-90
99 H		30 41
Oil press. switch/Int. pres. aceite		11420
<b>Metro 1.0 Surf HLE</b>		1980-90
99 HA65P		35 48
Oil press. switch/Int. pres. aceite		11420
<b>Metro 1.3</b>		1980-90
12 HA83AA		51 69
Oil press. switch/Int. pres. aceite		11420
<b>Metro 1.3 L,HLE,S</b>		1980-90
12 H		44 60
Oil press. switch/Int. pres. aceite		11420
<b>Metro 1.3 Turbo</b>		1983-90
12 HA85AA		66 90
Oil press. switch/Int. pres. aceite		11420
<b>Mini MK I 1000 Mayfair</b>		1982-93
99 HC20P/99 HA53P/99 H997P		31 42
Oil press. switch/Int. pres. aceite		11420
<b>Montego 2.0, Kombi</b>		1984-91
20 HSC/20 H		74 101
Oil press. switch/Int. pres. aceite		11280
Rev. light switch/Int. luz marcha atrás		40580
<b>BEDFORD</b>		
<b>Midi 2.2 D, 4WD</b>		1988-92
22DIE		45 61
Oil press. switch/Int. pres. aceite		12540
<b>Rascal 1.0, Pick-up</b>		1986-90
FA10A		34 46
Oil press. switch/Int. pres. aceite		12540
<b>BMW</b>		
<b>116 d</b>		2009 ->
N47 D20 A/N47 D20 C		85 116
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>116 i</b>		2004 ->
N45 B16/N45 B16 TU2/N45 B16 A		85 115
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>116 i</b>		2007 ->
N45 B16 TU2		90 122
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>118 d</b>		2004 ->
M47N 204 D4		90 122
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640

**BMW Cont.**

<b>118 d, Cabrio</b>		2007 ->	
N47 D20 A/N47 D20 C		105 143	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>118 i</b>		2004 ->	
N46 B20/N42 B20 B		95 129	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>118 i, Cabrio</b>		2007 ->	
N43 B20 A		105 143	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>120 d</b>		2004 ->	
M47N 204 D4/N47 D20 A		120 163	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>120 d, Cabrio, Coupe</b>		2007 ->	
N47 D20 A/N47 D20 C		130 177	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>120 i</b>		2004 ->	
N42 B20 A/N46 B20		110 150	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>120 i, Cabrio</b>		2007 ->	
N46 B20 B/N43 B20 A		125 170	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>123 d, Cabrio, Coupe</b>		2007 ->	
N47 D20 B		150 204	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>125 i, Cabrio, Coupe</b>		2007 ->	
N52 B30 A		160 218	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>130 i</b>		2005 ->	
N52 B30 A/N52 B30		195 265	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>135 i Cabrio, Coupe</b>		2007 ->	
N54 B30 A		225 306	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>316</b>		1980-90	
M10 B18		66 90	
Oil press. switch/Int. pres. aceite		11200	
Stop light switch/Int. luz stop		24150	
Temp. sending unit/Termo-Resistencia		31290	
Rev. light switch/Int. luz marcha atrás		40370	
<b>316 Ci Coupe</b>		2000 ->	
M43 B16 (16 4 E3)		77 105	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>316 Ci Coupe</b>		2002 ->	
N45 B16 A		85 115	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>316 g Compact</b>		1995-00	
		75 102	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465	
Stop light switch/Int. luz stop		24530	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38382	
Rev. light switch/Int. luz marcha atrás		40640	
<b>316 i</b>		1990-93	
M43 B16/M40 B16		75 102	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Temp. sending unit/Termo-Resistencia		32560	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40370	
<b>316 i</b>		2000-05	
M43 B16/M43 B16 (16 4 E3)		77 105	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>316 i</b>		2006 ->	
N45 B16/N45 B16 TU2/N45 B16 A		85 116	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	

**BMW Cont.**

<b>316 i, Compact</b>			1998-05
M43 B19 TU/M43 164 E3			77 105
Oil press. switch/Int. pres. aceite			12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>316 i, Compact, Coupe, Touring</b>			1993-00
M43 B16			75 102
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop			24460
On clutch pedal/Int. pedal embrague	With/Con cruise control		24465
Stop light switch/Int. luz stop			24530
Temp. sending unit/Termo-Resistencia	-> 09.1995		32560
Fan switch/Termocontacto ventilador			36690
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc., Climat		38340
Fan switch/Termocontacto ventilador	Climat		38381
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.		38382
Rev. light switch/Int. luz marcha atrás			40640
<b>316 i, Touring</b>			1987-94
M40 B16 (Kat.)			73 100
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop			24460
On clutch pedal/Int. pedal embrague	With/Con cruise control		24465
Stop light switch/Int. luz stop			24530
Temp. sending unit/Termo-Resistencia			32560
Fan switch/Termocontacto ventilador			36690
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.		38100
Fan switch/Termocontacto ventilador	Climat		38381
Rev. light switch/Int. luz marcha atrás			40370
<b>316 i, Touring</b>			1988-94
M40 B16			75 102
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop			24460
Temp. sending unit/Termo-Resistencia			32270
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.		38100
Rev. light switch/Int. luz marcha atrás			40370
<b>316 i, Touring</b>			2002-05
N46 B18/N46 B18 A/N42 B18			85 115
Oil press. switch/Int. pres. aceite			12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>316 i, Touring</b>			2002-05
N45 B16/N45 B16 A			85 115
Oil press. switch/Int. pres. aceite			12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>316 i, Touring</b>			2007 ->
N43 B16 A			90 122
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>316 ti Compact</b>			2001-05
N46 B18 A/N42 B18			85 115
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop			24460
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>316 ti Compact</b>			2002-05
N45 B16 A/N40 B16 A			85 115
Stop light switch/Int. luz stop	Hall		24999
<b>318 Ci Cabrio</b>			2005 ->
N46 B20 B			110 150
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 Ci Cabrio, Coupe</b>			2001 ->
N42 B20/N46 B20			105 143
Oil press. switch/Int. pres. aceite			12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 Ci Coupe</b>			1999-01
M43 B19			87 118
Oil press. switch/Int. pres. aceite			12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 Ci Coupe</b>			2005 ->
N46 B20 A			110 150
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 d, Touring</b>			2001-03
M47 D20/M47 204 D1			85 116
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 d, Touring</b>			2003-05
M47N 204 D4			85 116
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.		24465
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 d, Touring</b>			2005 ->
M47N 204 D4			90 122
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640
<b>318 d, Touring</b>			2005 ->
N47 D20 A/N47 D20 C			105 143
Oil press. switch/Int. pres. aceite			12410
Stop light switch/Int. luz stop	Hall		24999
Rev. light switch/Int. luz marcha atrás			40640

**BMW Cont.**

<b>318 i, Cabrio, Touring</b>	1987-94
M40 B18	83 113
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
Temp. sending unit/Termo-Resistencia	32270
Fan switch/Termocontacto ventilador	38100
Fan switch/Termocontacto ventilador	38381
Rev. light switch/Int. luz marcha atrás	40370
<b>318 i, Cabrio, Touring</b>	1993-99
M43 B18	85 115
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	24465
Stop light switch/Int. luz stop	24530
Temp. sending unit/Termo-Resistencia	-> 09.1995
Fan switch/Termocontacto ventilador	32560
Fan switch/Termocontacto ventilador	36690
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	38381
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.
<b>318 i, Touring</b>	1987-91
M40 B18	85 115
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
Temp. sending unit/Termo-Resistencia	32270
Fan switch/Termocontacto ventilador	38100
Rev. light switch/Int. luz marcha atrás	40370
<b>318 i, Touring</b>	1998-01
M43 B19/M43 B19 TU	87 118
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	24465
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>318 i, Touring</b>	2001-05
N42 B20/N46 B20 A/N46 B20	105 143
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>318 i, Touring</b>	2005-07
N46 B20 B/N46 B20	95 129
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>318 i, Touring</b>	2007 ->
N43 B20 A/N46 B20 TU2	105 143
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>318 is</b>	1989-91
M42 B18	100 136
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
Temp. sending unit/Termo-Resistencia	32270
Fan switch/Termocontacto ventilador	38100
Rev. light switch/Int. luz marcha atrás	40370
<b>318 is, Coupe</b>	1992-97
M42 B18	103 140
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	24465
Stop light switch/Int. luz stop	24530
Temp. sending unit/Termo-Resistencia	-> 09.1995
Fan switch/Termocontacto ventilador	32560
Fan switch/Termocontacto ventilador	36690
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	38381
<b>318 is, Coupe</b>	1995-99
M44 B19	103 140
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	24465
Stop light switch/Int. luz stop	24530
Temp. sending unit/Termo-Resistencia	-> 09.1995
Fan switch/Termocontacto ventilador	32560
Fan switch/Termocontacto ventilador	36690
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	38381
<b>318 td Compact</b>	2003-05
M47N 204 D4	85 115
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>318 tds, Compact, Touring</b>	1995-00
M41 D18 (Inter.)	66 90
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24465
Temp. s. warning lamp/Termocont. temp.	24530
Rev. light switch/Int. luz marcha atrás	Climat
<b>318 ti Compact</b>	1994-95
M42 B18	103 140
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	24465
Fan switch/Termocontacto ventilador	With/Con cruise control
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc., Climat
<b>318 ti Compact</b>	1995-00
M44 B19	103 140
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	24465
Fan switch/Termocontacto ventilador	With/Con cruise control
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc., Climat
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	38382
	40640

**BMW Cont.**

<b>318 ti Compact</b>	2001-05
N42 B20/N46 B20 A	105 143
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 Cd Cabrio, Compact</b>	2003 ->
M47N 204 D4	110 150
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Temp. s. warning lamp/Termocont. temp.	24465
Rev. light switch/Int. luz marcha atrás	24999
<b>320 Ci Cabrio, Coupe</b>	2000 ->
M54 226 S1/M54 B22	125 170
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Temp. s. warning lamp/Termocont. temp.	24465
Rev. light switch/Int. luz marcha atrás	24999
<b>320 Ci Coupe</b>	1999-00
M52 B(20 6 S4)/M52 B20	110 150
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Temp. s. warning lamp/Termocont. temp.	24465
Rev. light switch/Int. luz marcha atrás	24999
<b>320 d</b>	2005 ->
M47N 204 D4/N47 D20 C	120 163
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 d</b>	2005 ->
M47N 204 D4	110 150
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 d Touring</b>	2005 ->
M47N 204 D5/N47 D20 A	120 163
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 d Touring</b>	2005 ->
M47N 204 D4/M47 D20 TU	110 150
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 d xDrive</b>	2008 ->
N47 D20 C	130 177
Stop light switch/Int. luz stop	Hall
<b>320 d, Cabrio, Coupe, Touring</b>	2007 ->
N47 D20 A	130 177
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	Hall
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 d, Touring</b>	1998-01
M47 D20/M47 204 D1	100 136
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Temp. s. warning lamp/Termocont. temp.	35871
Rev. light switch/Int. luz marcha atrás	40640
<b>320 d, Touring</b>	2001-05
M47N 204 D4	110 150
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	Hall
Temp. s. warning lamp/Termocont. temp.	35871
Rev. light switch/Int. luz marcha atrás	40640
<b>320 i</b>	1985-90
110 150	24460
Stop light switch/Int. luz stop	32270
Temp. sending unit/Termo-Resistencia	40370
Rev. light switch/Int. luz marcha atrás	40640
<b>320 i Cabrio</b>	1993-99
M50 B20/M52 B20/M50 B20 TU. (Vanos)	110 150
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	24465
Temp. sending unit/Termo-Resistencia	-> 09.1995
Fan switch/Termocontacto ventilador	32560
Fan switch/Termocontacto ventilador	36690
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	38381
<b>320 i Cabrio</b>	2007-07
N46N B20 B/N46 B20	110 149
Oil press. switch/Int. pres. aceite	12410
<b>320 i Coupe</b>	2006-07
N46 B20 A/N46N B20 B	110 150
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
<b>320 i Touring</b>	1995-99
M52 B(20 6 S3) Vanos/M50 B20/M52 B20, TU	110 150
Oil press. switch/Int. pres. aceite	12410
Stop light switch/Int. luz stop	24460
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	24465
Temp. sending unit/Termo-Resistencia	-> 09.1995
Fan switch/Termocontacto ventilador	32560
Fan switch/Termocontacto ventilador	36690
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	38381
<b>320 i, Cabrio, Coupe, Touring</b>	2007 ->
N43 B20 A	125 170
Stop light switch/Int. luz stop	Hall
Rev. light switch/Int. luz marcha atrás	24999
	40640

**BMW Cont.**

<b>320 i, Cabrio, Touring</b>	<b>1985-93</b>
M20 B20	95 129
Oil press. switch/Int. pres. aceite	-> 12.1986 <b>11200</b>
Oil press. switch/Int. pres. aceite	01.1987 -> <b>12410</b>
Stop light switch/Int. luz stop	<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Temp. sending unit/Termo-Resistencia	<b>32270</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc., Climat <b>38100</b>
Rev. light switch/Int. luz marcha atrás	<b>40370</b>
<b>320 i, Coupe</b>	<b>1990-99</b>
M50 B20/M52 B20/M50 B20 TU. (Vanos)	110 150
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Stop light switch/Int. luz stop	<b>24530</b>
Temp. sending unit/Termo-Resistencia	-> 09.1995 <b>32560</b>
Fan switch/Termocontacto ventilador	<b>36690</b>
Fan switch/Termocontacto ventilador	09.1995 -> <b>38100</b>
Fan switch/Termocontacto ventilador	-> 09.1995, Climat <b>38381</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 i, Touring</b>	<b>1998-00</b>
M52 B(20 6 S3) Vanos/M52 B20	110 150
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. <b>24465</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Temp. s. warning lamp/Termocont. temp.	<b>35871</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 i, Touring</b>	<b>2000-05</b>
M54 226 S1/M54 B22	125 170
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. <b>24465</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 i, Touring</b>	<b>2005-07</b>
N46 B20 A/N46 B20/N46 B20 C	110 150
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 is</b>	<b>1988-90</b>
S14 204 EA	141 192
Stop light switch/Int. luz stop	<b>24460</b>
Temp. sending unit/Termo-Resistencia	<b>32270</b>
Rev. light switch/Int. luz marcha atrás	<b>40370</b>
<b>320 si</b>	<b>2006 -&gt;</b>
N45 B20 A	127 173
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 td Compact</b>	<b>2001-05</b>
M47N 204 D4	110 150
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. <b>24465</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Temp. s. warning lamp/Termocont. temp.	<b>35871</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 xd</b>	<b>2007 -&gt;</b>
N47 D20 C	130 177
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>320 xd Coupe, Touring</b>	<b>2007 -&gt;</b>
N47 D20 A	130 177
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>323 Ci Cabrio, Coupe</b>	<b>1999-00</b>
M52 B25 (Vanos)	125 170
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. <b>24465</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Temp. s. warning lamp/Termocont. temp.	<b>35871</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>323 i</b>	<b>1998-00</b>
M52 B25 TU/M52 B25 (Vanos)	125 170
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. <b>24465</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Temp. s. warning lamp/Termocont. temp.	<b>35871</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>323 i</b>	<b>2006-07</b>
N52 B25 A/N52N B25 A	130 177
Oil press. switch/Int. pres. aceite	<b>12410</b>
<b>323 i 2.5, Cabrio, Coupe, Touring</b>	<b>1995-99</b>
M52 B25 (Vanos)	125 170
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Stop light switch/Int. luz stop	<b>24530</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>38100</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>323 i, Cabrio, Coupe, Touring</b>	<b>2006-07</b>
N52N B25 A	130 177
Oil press. switch/Int. pres. aceite	<b>12410</b>
<b>323 ti Compact</b>	<b>1997-00</b>
M52 B25 (Vanos)	125 170
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Stop light switch/Int. luz stop	<b>24530</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>38100</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc., Climat <b>38340</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>

**BMW Cont.**

<b>324 d</b>	<b>1985-91</b>
M21 D24 W	63 86
Oil press. switch/Int. pres. aceite	-> 12.1988 <b>10200</b>
Oil press. switch/Int. pres. aceite	01.1989 -> <b>12410</b>
Stop light switch/Int. luz stop	-> 12.1988 <b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Stop light switch/Int. luz stop	01.1989 -> <b>24530</b>
Temp. sending unit/Termo-Resistencia	<b>32270</b>
Fan switch/Termocontacto ventilador	<b>36010</b>
Fan switch/Termocontacto ventilador	<b>36020</b>
Fan switch/Termocontacto ventilador	Climat <b>36030</b>
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc. <b>38100</b>
<b>324 td, Touring</b>	<b>1987-93</b>
M21 D24/M21 D24 WA	85 115
Oil press. switch/Int. pres. aceite	-> 12.1988 <b>10200</b>
Oil press. switch/Int. pres. aceite	01.1989 -> <b>12410</b>
Stop light switch/Int. luz stop	-> 12.1988 <b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Stop light switch/Int. luz stop	01.1989 -> <b>24530</b>
Temp. sending unit/Termo-Resistencia	<b>32270</b>
Fan switch/Termocontacto ventilador	<b>36010</b>
Fan switch/Termocontacto ventilador	<b>36020</b>
Fan switch/Termocontacto ventilador	Climat <b>36030</b>
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc. <b>38100</b>
<b>325 Ci Cabrio, Coupe</b>	<b>2000 -&gt;</b>
M54 256 S5	141 192
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. <b>24465</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Temp. s. warning lamp/Termocont. temp.	<b>35871</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 d</b>	<b>2006 -&gt;</b>
M57 306 D3	145 197
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 d</b>	<b>2010 -&gt;</b>
N57 D30 A	150 204
Oil press. switch/Int. pres. aceite	<b>12410</b>
<b>325 d Cabrio</b>	<b>2007 -&gt;</b>
N57 306 D3/M57 D30 TU2	145 197
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 d Coupe</b>	<b>2007 -&gt;</b>
M57 D30 TU2/N57N 306 D3	145 197
Stop light switch/Int. luz stop	Hall <b>24999</b>
<b>325 d Touring</b>	<b>2006 -&gt;</b>
M57 D30 TU2/M57 306 D3	145 197
Stop light switch/Int. luz stop	Hall <b>24999</b>
<b>325 d, Coupe, Touring</b>	<b>2006 -&gt;</b>
M57 D30 TU2/M57 306 D3	145 197
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 i Cabrio</b>	<b>1993-95</b>
M50 B25/M50 B25 TU	141 192
Oil press. switch/Int. pres. aceite	<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Stop light switch/Int. luz stop	<b>24530</b>
Temp. sending unit/Termo-Resistencia	M 14x1,5 <b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>38100</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 i Coupe, Touring</b>	<b>2005 -&gt;</b>
N52 B25/N52 B25 C/N52 B25 A	160 218
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 i X, Touring</b>	<b>1986-93</b>
M20 B25	125 170
Oil press. switch/Int. pres. aceite	-> 12.1986 <b>11200</b>
Oil press. switch/Int. pres. aceite	01.1987 -> <b>12410</b>
Stop light switch/Int. luz stop	-> 12.1986 <b>24150</b>
Stop light switch/Int. luz stop	01.1987 -> <b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Temp. sending unit/Termo-Resistencia	-> 12.1986 <b>31290</b>
Temp. sending unit/Termo-Resistencia	01.1987 -> <b>32270</b>
Fan switch/Termocontacto ventilador	<b>36010</b>
Fan switch/Termocontacto ventilador	<b>36020</b>
Fan switch/Termocontacto ventilador	Climat <b>38100</b>
Rev. light switch/Int. luz marcha atrás	<b>40370</b>
<b>325 i, Cabrio</b>	<b>2005 -&gt;</b>
N52 B25/N52 B25 A	160 218
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 i, Cabrio, Coupe, Touring</b>	<b>2007 -&gt;</b>
N53 B30/N53 B30 A	160 218
Stop light switch/Int. luz stop	Hall <b>24999</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>325 i, Cabrio, Touring</b>	<b>1983-89</b>
M20 B25	126 171
Oil press. switch/Int. pres. aceite	-> 12.1986 <b>11200</b>
Oil press. switch/Int. pres. aceite	01.1987 -> <b>12410</b>
Stop light switch/Int. luz stop	-> 12.1986 <b>24150</b>
Stop light switch/Int. luz stop	01.1987 -> <b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control <b>24465</b>
Temp. sending unit/Termo-Resistencia	-> 12.1986 <b>31290</b>
Temp. sending unit/Termo-Resistencia	01.1987 -> <b>32270</b>
Fan switch/Termocontacto ventilador	<b>36010</b>
Fan switch/Termocontacto ventilador	<b>36020</b>
Fan switch/Termocontacto ventilador	Climat <b>38100</b>
Rev. light switch/Int. luz marcha atrás	<b>40370</b>

**BMW Cont.**

<b>325 i, Coupe</b>		1990-99
M50 B25/M50 B25 TU/M50 B25 (Vanos)		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Temp. sending unit/Termo-Resistencia	-> 09.1992	32560
Rev. light switch/Int. luz marcha atrás		40640
<b>325 i, Touring</b>		2000-05
M54 256 S5/M54 B25		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>325 td</b>		1991-98
M51 D25		85 115
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24530
Temp. sending unit/Termo-Resistencia		32560
Temp. s. warning lamp/Termocont. temp.	Climat	35570
Temp. s. warning lamp/Termocont. temp.		35870
Rev. light switch/Int. luz marcha atrás		40640
<b>325 tds, Touring</b>		1993-99
M51 D25 (Inter.)		105 143
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24530
Temp. sending unit/Termo-Resistencia		32560
Temp. s. warning lamp/Termocont. temp.	Climat	35570
Temp. s. warning lamp/Termocont. temp.		35870
Rev. light switch/Int. luz marcha atrás		40640
<b>325 ti Compact</b>		2001-05
M54 256 S5/M54 B25		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>325 xi</b>		2005 ->
N52 B25 A		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>325 xi Coupe</b>		2006 ->
N52 B25 C/N52 B25 A		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>325 xi Touring</b>		2005 ->
N52 B25 C		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>325 xi, Coupe, Touring</b>		2007 ->
N53 B30 A		160 218
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>325 xi, Touring</b>		2000-05
M54 256 S5		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>328 Ci Coupe</b>		1999-00
M52 B28		142 193
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>328 i, Cabrio, Coupe, Touring</b>		1995-99
M52 B28/M52 B28 TU		142 193
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>328 i, Touring</b>		1998-00
M52 B28		142 193
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 Cd, Cabrio, Coupe</b>		2003 ->
M57N 306 D2		150 204
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 Ci Cabrio, Coupe</b>		2000 ->
M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 d</b>		2009 ->
M57N2 306 D3/N57 D30 A		180 245
Rev. light switch/Int. luz marcha atrás		40640
<b>330 d Touring</b>		2005 ->
M57 306 D3		170 231
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640

**BMW Cont.**

<b>330 d xDrive</b>		2009 ->
N57 D30 A		180 245
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 d, Cabrio, Coupe</b>		2005 ->
M57 D30 TU2/M57 306 D3		170 231
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 d, Touring</b>		1999-05
M57 D30/M57 306 D1		135 184
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 d, Touring</b>		2003-05
M57N 306 D2		150 204
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 d, Touring</b>		2009 ->
M57N2 306 D3/N57 D30 A		180 245
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
<b>330 i Touring</b>		2007 ->
N52 B30 A/N53 B30		200 272
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 i, Cabrio, Coupe</b>		2006 ->
N52 B30 A/N53 B30/N53 B30 A		200 272
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 i, Touring</b>		2000-05
M54 B30 /M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 i, Touring</b>		2005 ->
N52 B30 A/N52 B30		190 258
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xd, Coupe, Touring</b>		2005 ->
M57 D30 TU2/M57 306 D3		170 231
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xd, Touring</b>		2000-05
M57 D30		135 184
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xd, Touring</b>		2003-05
M57N 306 D2		150 204
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xd, Touring</b>		2009 ->
M57N2 306 D3/N57 D30 A		180 245
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xi, Coupe, Touring</b>		2000-05
M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xi, Coupe, Touring</b>		2005 ->
N52 B30 A		200 258
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>330 xi, Touring</b>		2007 ->
N53 B30 A		200 272
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>335 d, Coupe, Touring</b>		2006 ->
M57N 306 D5		210 286
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
<b>335 i Cabrio</b>		2007 ->
N54 B30 B/N54 B30 A		225 306
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>335 i, Coupe, Touring</b>		2006 ->
N54 B30 A		225 306
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640

**BMW Cont.**

<b>335 xi, Coupe, Touring</b>		2007 ->	
N54 B30 A		225 306	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>518 g Touring</b>		1995-96	
M43 B18		85 115	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia		32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás		40640	
<b>518 i, Touring</b>		1989-97	
M43 B18		85 115	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
Temp. sending unit/Termo-Resistencia	-> 09.1991	32270	
Temp. sending unit/Termo-Resistencia	09.1991 ->	32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás	-> 09.1991	40370	
Rev. light switch/Int. luz marcha atrás	09.1991 ->	40640	
<b>518 i, Touring</b>		1989-95	
M40 B18		83 113	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia	-> 09.1991	32270	
Temp. sending unit/Termo-Resistencia	09.1991 ->	32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás	-> 09.1991	40370	
Rev. light switch/Int. luz marcha atrás	09.1991 ->	40640	
<b>520 d</b>		2007 ->	
M47N 204 D4/N47 D20 A/N47 D20 C		130 177	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 d Touring</b>		2007 ->	
N47 D20 A/N47 D20 C		130 177	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 d, Touring</b>		2000-03	
M47 D20/M47 204 D1		100 136	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465	
Stop light switch/Int. luz stop		24530	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.	Climat	35570	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 d, Touring</b>		2005 ->	
M47N 204 D5/N47 D20 A		120 163	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 d, Touring</b>		2005 ->	
M47N 204 D4		110 150	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 i</b>		1985-91	
M20 B20		95 129	
Oil press. switch/Int. pres. aceite		11200	
Stop light switch/Int. luz stop		24460	
Temp. sending unit/Termo-Resistencia		32270	
Fan switch/Termocontacto ventilador		36010	
Fan switch/Termocontacto ventilador		36020	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás		40370	
<b>520 i</b>		1986-90	
		110 150	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
Fan switch/Termocontacto ventilador		36010	
Fan switch/Termocontacto ventilador		36020	
Rev. light switch/Int. luz marcha atrás		40370	
<b>520 i</b>		2003 ->	
M54 226 S1/M54 B22		125 170	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 i 24V, Touring</b>		1989-97	
M50 B(20 6 S2) Vanos/M50 B20, TU/M50 B(20 6 S1)		110 150	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Temp. sending unit/Termo-Resistencia	-> 09.1991	32270	
Temp. sending unit/Termo-Resistencia	09.1991 ->	32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás	-> 09.1991	40370	
Rev. light switch/Int. luz marcha atrás	09.1991 ->	40640	
<b>520 i Touring</b>		2004 ->	
M54 226 S1		125 170	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 i, Touring</b>		1996-00	
M52 B(20 6 S3) Vanos/M52 B(20 6 S4)/M52 B20		110 150	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	

**BMW Cont.**

<b>520 i, Touring</b>		1999-03	
M52 B(20 6 S3) Vanos		100 136	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 i, Touring</b>		2000-03	
M54 B22		125 170	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>520 i, Touring</b>		2007 ->	
N43 B20 A		125 170	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>523 i, Touring</b>		1995-00	
M52 B25 TU/M52 B25 (Vanos)		125 170	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>523 i, Touring</b>		2005 ->	
N52 B25/N52 B25 A		130 177	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>523 i, Touring</b>		2007 ->	
N52 B25 A		140 190	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>524 td</b>		1983-95	
M21 D24/M21 D24 WA		85 115	
Oil press. switch/Int. pres. aceite	0.50 bar	10200	
Oil press. switch/Int. pres. aceite	M 12x1,5	12410	
Stop light switch/Int. luz stop		24460	
Temp. sending unit/Termo-Resistencia		32270	
Fan switch/Termocontacto ventilador		36010	
Fan switch/Termocontacto ventilador		36020	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás		40370	
<b>525 d</b>		2004 ->	
M57 256 D1		120 163	
Oil press. switch/Int. pres. aceite		12410	
Rev. light switch/Int. luz marcha atrás		40640	
<b>525 d Touring</b>		2004 ->	
M57N 256 D4		120 163	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>525 d xDrive, Touring</b>		2008 ->	
N57 306 D3		145 197	
Rev. light switch/Int. luz marcha atrás		40640	
<b>525 d, Touring</b>		2000-03	
M57 D25/M57 256 D1		120 163	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.	Climat	35570	
Temp. s. warning lamp/Termocont. temp.		35871	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>525 d, Touring</b>		2004 ->	
M57 D25 TU/M57N 256 D4		130 177	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>525 d, Touring</b>		2007 ->	
M57 306 D3		145 197	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>525 i</b>		1988-91	
M20 B25		125 170	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia		32270	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás		40370	
<b>525 i 24V</b>		1989-95	
M50 B25/M52 B25 (Vanos)/M50 B25 TU		141 192	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia	-> 09.1991	32270	
Temp. sending unit/Termo-Resistencia	09.1991 ->	32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás	-> 09.1991	40370	
Rev. light switch/Int. luz marcha atrás	09.1991 ->	40640	
<b>525 i Touring</b>		1991-97	
M50 B25/M50 B25 TU		141 192	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia		32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás		40370	
Rev. light switch/Int. luz marcha atrás		40640	

**BMW Cont.**

<b>525 i X 24V</b>		1991-95
M52 B25 (Vanos)		141 192
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>525 i X Touring</b>		1992-97
M50 B25/M52 B25 (Vanos)		141 192
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>525 i xDrive, Touring</b>		2008 ->
N53 B30 A		160 218
Rev. light switch/Int. luz marcha atrás		40640
<b>525 i, Touring</b>		2000 ->
M54 256 S5/M54 B25		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>525 i, Touring</b>		2005 ->
N52 B25/N52 B25 A		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>525 i, Touring</b>		2007 ->
N53 B30/N53 B30 A		160 218
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>525 td, Touring</b>		1993-97
M51 D25		85 115
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24530
Temp. s. warning lamp/Termocont. temp.		35870
Fan switch/Termocontacto ventilador		36030
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>525 td, Touring</b>		1997-03
M51 D25		85 116
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24530
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.	Climat	35570
Temp. s. warning lamp/Termocont. temp.		35870
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>525 tds, Touring</b>		1991-04
M51 D25 (Inter.)		105 143
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24530
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.	Climat	35570
Temp. s. warning lamp/Termocont. temp.		35870
Fan switch/Termocontacto ventilador		36030
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>525 xd, Touring</b>		2007 ->
M57 306 D3		145 197
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>525 xi, Touring</b>		2005 ->
N52 B25 A		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>525 xi, Touring</b>		2007 ->
N53 B30 A		160 218
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>528 i, Touring</b>		1995-00
M52 B28/M52 B28 TU		142 193
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>530 d xDrive, Touring</b>		2008 ->
M57N2 306 D3		173 235
Rev. light switch/Int. luz marcha atrás		40640
<b>530 d, Touring</b>		1998-00
M57 D30		135 184
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.	Climat	35570
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640

**BMW Cont.**

<b>530 d, Touring</b>		2000-03
M57 D30		142 193
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.	Climat	35570
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>530 d, Touring</b>		2003 ->
N57 306 D2		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 d, Touring</b>		2003 ->
M57 306 D3		170 231
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 d, Touring</b>		2007 ->
M57 306 D3		173 235
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 i</b>		1988-91
M30 B30		138 188
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32270
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40370
<b>530 i</b>		2005 ->
N52 B30 A		187 254
Rev. light switch/Int. luz marcha atrás		40640
<b>530 i Touring</b>		2005 ->
N52 B30 A/N52 B30		190 258
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 i V8, Touring</b>		1992-97
M60 B30		160 218
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>530 i xDrive, Touring</b>		2008 ->
N53 B30 A		200 272
Rev. light switch/Int. luz marcha atrás		40640
<b>530 i, Touring</b>		2000 ->
M54 B30 /M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador		36690
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>530 i, Touring</b>		2007 ->
N52 B30 A/N53 B30/N53 B30 A		200 272
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 xd, Touring</b>		2005 ->
M57 306 D3		170 231
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 xd, Touring</b>		2007 ->
M57 306 D3		173 235
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 xi</b>		2007 ->
N52 B30 A/N53 B30 A		200 272
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 xi Touring</b>		2007 ->
N53 B30 A		200 272
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>530 xi, Touring</b>		2005 ->
N52 B30 A		190 258
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>535 d, Touring</b>		2004 ->
M57 306 D4		200 272
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>535 d, Touring</b>		2007 ->
M57N 306 D5		210 286
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640



**BMW Cont.**

<b>535 i</b>		<b>1988-95</b>
<b>M30 B35</b>		155 211
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop		<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Temp. sending unit/Termo-Resistencia	-> 09.1991	<b>32270</b>
Temp. sending unit/Termo-Resistencia	09.1991 ->	<b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38100</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1991	<b>40370</b>
Rev. light switch/Int. luz marcha atrás	09.1991 ->	<b>40640</b>
<b>535 i</b>		<b>1996-99</b>
<b>M62 B(35 8 S1)/M62 B35</b>		173 235
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
Fan switch/Termocontacto ventilador		<b>36690</b>
Fan switch/Termocontacto ventilador	Climat	<b>38381</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>535 i</b>		<b>1999-03</b>
<b>M62 B(35 8 S2)/M62 B35 TU</b>		180 245
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Fan switch/Termocontacto ventilador		<b>36690</b>
Fan switch/Termocontacto ventilador	Climat	<b>38381</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>540 i</b>		<b>2005 -&gt;</b>
<b>N62 B40 A</b>		225 306
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>540 i V8, Touring</b>		<b>1992-97</b>
<b>M60 B40</b>		210 286
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop		<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38100</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>540 i, Touring</b>		<b>1996-04</b>
<b>M62 B44/M62 B44 TU/M62 448 S2</b>		210 286
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
Fan switch/Termocontacto ventilador		<b>36690</b>
Fan switch/Termocontacto ventilador	Climat	<b>38381</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>545 i, Touring</b>		<b>2003 -&gt;</b>
<b>N62 B44</b>		245 333
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>550 i</b>		<b>2005 -&gt;</b>
<b>N62 B48 B</b>		270 367
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>550 i Touring</b>		<b>2005 -&gt;</b>
<b>N62 B48 A/N62 B48 B</b>		270 367
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>630 i, Cabrio</b>		<b>2004 -&gt;</b>
<b>N52 B30 A/N52 B30</b>		190 258
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>630 i, Cabrio</b>		<b>2007 -&gt;</b>
<b>N52 B30 A/N53 B30</b>		200 272
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>635 Csi</b>		<b>1987-89</b>
<b>M30 B35</b>		155 211
Oil press. switch/Int. pres. aceite		<b>11600</b>
Stop light switch/Int. luz stop		<b>24150</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Thermistor-Thermocont./Doble función		<b>34160</b>
Rev. light switch/Int. luz marcha atrás		<b>40370</b>
<b>635 Csi</b>		<b>1985-89</b>
<b>M30 B35 (Motronic, 8-1, Kat.)</b>		136 185
Oil press. switch/Int. pres. aceite		<b>11600</b>
Stop light switch/Int. luz stop		<b>24150</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Thermistor-Thermocont./Doble función		<b>34160</b>
Rev. light switch/Int. luz marcha atrás		<b>40370</b>
<b>635 Csi</b>		<b>1985-90</b>
<b>M30 B35</b>		141 192
Oil press. switch/Int. pres. aceite		<b>11600</b>
Stop light switch/Int. luz stop		<b>24150</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Thermistor-Thermocont./Doble función		<b>34160</b>
Rev. light switch/Int. luz marcha atrás		<b>40370</b>
<b>635 d, Cabrio</b>		<b>2007 -&gt;</b>
<b>M57N 306 D5</b>		210 286
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>645 Ci, Cabrio</b>		<b>2004 -&gt;</b>
<b>N62 B44/N62 B44 A</b>		245 333
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>

**BMW Cont.**

<b>650 i, Cabrio</b>		<b>2005 -&gt;</b>
<b>N62 B48 B</b>		270 367
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>725 tds</b>		<b>1996-01</b>
<b>M51 D25 (Inter.)</b>		105 143
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24465</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes, Black/Negro	<b>35570</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes, White/Bianco	<b>35870</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>728 i, iL</b>		<b>1995-01</b>
<b>M52 B28/M52 B28 TU</b>		142 193
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 d</b>		<b>1998-00</b>
<b>M57 D30</b>		135 184
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 d</b>		<b>2000-01</b>
<b>M57 306 D1</b>		142 193
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 d</b>		<b>2002 -&gt;</b>
<b>M57N2 306 D2</b>		160 218
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 d</b>		<b>2008 -&gt;</b>
<b>N57 D30 A</b>		180 245
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
<b>730 i, Li</b>		<b>2005 -&gt;</b>
<b>N52 B30 A/N52 B30</b>		190 258
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
<b>730 i, iL</b>		<b>1986-94</b>
<b>M30 B30</b>		145 197
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Thermistor-Thermocont./Doble función		<b>34160</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38100</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 i, iL</b>		<b>1986-94</b>
<b>M30 B30</b>		138 188
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop		<b>24460</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Stop light switch/Int. luz stop		<b>24530</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Fan switch/Termocontacto ventilador		<b>36020</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38100</b>
Rev. light switch/Int. luz marcha atrás	-> 09.1991	<b>40370</b>
Rev. light switch/Int. luz marcha atrás	09.1991 ->	<b>40640</b>
<b>730 i, iL</b>		<b>1994-01</b>
<b>M60 B30</b>		155 211
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
<b>730 i, iL</b>		<b>1994-01</b>
<b>M60 B30</b>		160 218
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Temp. s. warning lamp/Termocont. temp.		<b>35871</b>
<b>730 i, iL V8</b>		<b>1992-94</b>
<b>M60 B30</b>		160 218
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Thermistor-Thermocont./Doble función		<b>34160</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38100</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 i, Li</b>		<b>2003 -&gt;</b>
<b>M54 B30 /M54 306 S3</b>		170 231
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>730 Ld</b>		<b>2005 -&gt;</b>
<b>M57 306 D3/N57N 306 D2</b>		170 231
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Hall	<b>24999</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38380</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>735 i, iL</b>		<b>1986-92</b>
<b>M30 B35</b>		155 211
Oil press. switch/Int. pres. aceite		<b>12410</b>
On clutch pedal/Int. pedal embrague	With/Con cruise control	<b>24465</b>
Temp. sending unit/Termo-Resistencia		<b>32560</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38100</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>

**BMW Cont.**

<b>735 i,iL</b>		<b>1996-01</b>
<b>M62 B(35 8 S1)/M62 B35</b>		173 235
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>735 i,Li</b>		<b>2001 -&gt;</b>
<b>N62 B36</b>		200 272
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>740 d</b>		<b>1999-01</b>
<b>M67 D39</b>		180 245
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>740 d</b>		<b>2002 -&gt;</b>
<b>N67 398 D1</b>		190 258
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>740 i</b>		<b>2008 -&gt;</b>
<b>N54 B30 A</b>		240 326
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
<b>740 i,iL</b>		<b>1994-01</b>
<b>M60 B40</b>		210 286
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32560
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>740 i,iL</b>		<b>1996-01</b>
<b>M62 B44/M62 B44 TU/M62 448 S2</b>		210 286
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>740 i,iL V8</b>		<b>1992-94</b>
<b>M60 B40</b>		210 286
Oil press. switch/Int. pres. aceite		12410
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
<b>740 i,Li</b>		<b>2005 -&gt;</b>
<b>N62 B40 A</b>		225 306
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>745 d</b>		<b>2005 -&gt;</b>
<b>N67N 448 D2</b>		242 329
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>745 d</b>		<b>2005-05</b>
<b>N67N 448 D1</b>		220 300
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
<b>745 i,Li</b>		<b>2001 -&gt;</b>
<b>N62 B44/N62 B44 A</b>		245 333
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>750 i</b>		<b>2008 -&gt;</b>
<b>N63 B44 A</b>		300 408
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
<b>750 i,iL</b>		<b>1994-01</b>
<b>M73 B54</b>		240 326
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>750 i,iL V12</b>		<b>1987-94</b>
<b>M70 B50</b>		220 300
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
<b>750 i,Li</b>		<b>2005 -&gt;</b>
<b>N62 B48 B</b>		270 367
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640
<b>760 i,Li</b>		<b>2003 -&gt;</b>
<b>N73 B60</b>		327 445
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38380
Rev. light switch/Int. luz marcha atrás		40640

**BMW Cont.**

<b>840 Ci</b>		<b>1996-99</b>
<b>M62 B44/M62 B44 TU</b>		210 286
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	Climat	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>840 i</b>		<b>1993-96</b>
<b>M60 B40</b>		210 286
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	Climat	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>850 Ci</b>		<b>1994-99</b>
<b>M73 B54</b>		240 326
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	Climat	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>850 Csi</b>		<b>1993-96</b>
<b>M70 B56</b>		280 380
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	Climat	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>850 i,Ci</b>		<b>1990-94</b>
<b>M70 B50</b>		220 300
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	Climat	38100
Rev. light switch/Int. luz marcha atrás		40640
<b>M 635 Csi</b>		<b>1984-89</b>
<b>S38 B35</b>		211 286
Oil press. switch/Int. pres. aceite		11600
Stop light switch/Int. luz stop		24150
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Rev. light switch/Int. luz marcha atrás		40370
<b>M3 2.3</b>		<b>1987-89</b>
<b>S14 B23</b>		147 200
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32270
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40370
<b>M3 2.3</b>		<b>1989-91</b>
<b>S14 B23</b>		158 215
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32270
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40370
<b>M3 2.3, Cabrio</b>		<b>1986-91</b>
<b>S14 B23</b>		143 195
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32270
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
Rev. light switch/Int. luz marcha atrás		40370
<b>M3 3.0 Coupe</b>		<b>1995-95</b>
<b>S50 B30</b>		217 295
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32560
<b>M3 3.0, Cabrio, Coupe</b>		<b>1992-95</b>
<b>S50 B30</b>		210 286
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Temp. sending unit/Termo-Resistencia		32560
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100
<b>M3 3.2 Cabrio, Coupe</b>		<b>2000 -&gt;</b>
<b>S54 326 S4/S54 B32</b>		252 343
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>M3 3.2, Cabrio, Coupe</b>		<b>1995-99</b>
<b>S50 B32</b>		236 321
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>M3 CSL Coupe</b>		<b>2003 -&gt;</b>
<b>S54N 326 S4/S54 B32</b>		265 360
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>M3 EVO I 2.3</b>		<b>1988-90</b>
<b>S14 B23 (EVO I)</b>		162 220
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
Temp. sending unit/Termo-Resistencia		32270
Rev. light switch/Int. luz marcha atrás		40370
<b>M3 EVO II 2.5</b>		<b>1990-92</b>
<b>S14 B25 (EVO II)</b>		175 238
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop		24460
Temp. sending unit/Termo-Resistencia		32270
Rev. light switch/Int. luz marcha atrás		40370

**BMW Cont.**

<b>M3, Cabrio, Coupe</b>		2007 ->	
S65 B40		309 420	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>M5</b>		1998-03	
S62 B50/S38 B49		294 400	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
Fan switch/Termocontacto ventilador		36690	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>M5 3.6, Kat</b>		1988-92	
S38 B36		232 315	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia	-> 09.1991	32270	
Temp. sending unit/Termo-Resistencia	09.1991 ->	32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás	-> 09.1991	40370	
Rev. light switch/Int. luz marcha atrás	09.1991 ->	40640	
<b>M5 3.8, Touring</b>		1992-97	
S38 B38		250 340	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Temp. sending unit/Termo-Resistencia		32560	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38100	
Rev. light switch/Int. luz marcha atrás		40640	
<b>M5, Touring</b>		2004 ->	
S85 B50 A		373 507	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>M6, Cabrio</b>		2005 ->	
S85 B50 A		373 507	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 1.8 d xDrive</b>		2008 ->	
M47N 204 D4		105 143	
Oil press. switch/Int. pres. aceite		12410	
<b>X3 2.0 d</b>		2004 ->	
M47N 204 D4		110 150	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 2.0 d</b>		2007 ->	
N47 D20 A		130 177	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 2.0 i, xDrive</b>		2005 ->	
		110 150	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 2.5 i</b>		2004 ->	
M54 256 S5/M54 B25		141 192	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 2.5 si</b>		2006 ->	
N52 B25 A		160 218	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 3.0 d</b>		2004 ->	
M54N 306 D2		150 204	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 3.0 d, xDrive</b>		2004 ->	
M57N2 306 D3		160 218	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 3.0 i</b>		2004 ->	
M54 B30 /M54 306 S3		170 231	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X3 3.0 sd</b>		2006 ->	
M57 306 D5		210 286	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X3 3.0 si</b>		2006 ->	
N52 B30 A		200 272	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X5 3.0 d</b>		2001 ->	
M57 306 D1		135 184	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X5 3.0 d</b>		2003 ->	
M57N 306 D4		160 218	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X5 3.0 d</b>		2007 ->	
M57 306 D3		173 235	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	

**BMW Cont.**

<b>X5 3.0 i</b>		2000 ->	
M54 306 S3		163 222	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X5 3.0 i</b>		2000 ->	
M54 B30 /M54 306 S3		170 231	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Rev. light switch/Int. luz marcha atrás		40640	
<b>X5 3.0 sd</b>		2007 ->	
M57N 306 D5		210 286	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X5 3.0 si</b>		2007 ->	
N52 B30 A/N52 B30		200 272	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X5 4.4 i</b>		2000 ->	
M62 B44/M62 B44 TU		210 286	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
<b>X5 4.4 i</b>		2003 ->	
N62 B44/N62 B44 A		235 320	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X5 4.6 is</b>		2002 ->	
M67 468 S1/M62 B46		255 347	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
Temp. s. warning lamp/Termocont. temp.		35871	
<b>X5 4.8 i, xDrive</b>		2007 ->	
N62 B48 B		261 355	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X5 4.8 is</b>		2004 ->	
N62 B48 A		265 360	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X6 3.0 d, xDrive</b>		2008 ->	
N57 D30 A		173 235	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X6 3.5 d, xDrive</b>		2008 ->	
N57N 306 D5		210 286	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X6 3.5 i, xDrive</b>		2008 ->	
N54 B30 A		225 306	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>X6 5.0 i, xDrive</b>		2008 ->	
N63 B44 A		300 408	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop	Hall	24999	
<b>Z1 2.5</b>		1988-91	
M20 B25		125 170	
Oil press. switch/Int. pres. aceite		12410	
Stop light switch/Int. luz stop		24460	
Temp. sending unit/Termo-Resistencia		32270	
Rev. light switch/Int. luz marcha atrás		40370	
<b>Z3 1.8</b>		1995-98	
M43 B18		85 116	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc., Climat	38340	
Fan switch/Termocontacto ventilador	03.1997 ->	38382	
Rev. light switch/Int. luz marcha atrás		40640	
<b>Z3 1.9</b>		1995-99	
M44 B19		103 140	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc., Climat	38340	
Fan switch/Termocontacto ventilador	03.1997 ->	38382	
Rev. light switch/Int. luz marcha atrás		40640	
<b>Z3 1.9</b>		1998-03	
M43 B19/M43 B19 TU/M43 194 E1		87 118	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Rev. light switch/Int. luz marcha atrás		40640	
<b>Z3 1.9</b>		1999-03	
M43 194 E1		85 116	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Rev. light switch/Int. luz marcha atrás		40640	
<b>Z3 2.0</b>		1999-03	
M52 B(20 6 S4)/M52 B20		110 150	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Fan switch/Termocontacto ventilador	Climat	38381	
Rev. light switch/Int. luz marcha atrás		40640	
<b>Z3 2.2</b>		2000-03	
M54 226 S1/M54 B22		125 170	
Oil press. switch/Int. pres. aceite		12410	
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465	
Stop light switch/Int. luz stop		24530	
Temp. s. warning lamp/Termocont. temp.		35871	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38381	
Rev. light switch/Int. luz marcha atrás		40640	

**BMW Cont.**

<b>Z3 2.8</b>		1997-00
M52 B28/M52 B28 TU		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z3 2.8 Coupe</b>		1997-00
M52 B28		141 192
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z3 3.0</b>		2000-03
M54 B30 /M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Temp. s. warning lamp/Termocont. temp.		35871
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z3 3.0 Coupe</b>		2000-03
M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z3 M 3.2</b>		2001-03
S54 B32/S54 B32 (32 6 S4)		239 325
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Temp. sending unit/Termo-Resistencia		32275
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z3 M 3.2 Coupe</b>		2001-03
S54 326 S4/S54 B32		239 325
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z3 M 3.2, Coupe</b>		1997-01
S50 B32		236 321
Oil press. switch/Int. pres. aceite		12410
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24530
Fan switch/Termocontacto ventilador	Climat	38381
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 2.0 i</b>		2005 ->
N46 B20 A/N46 B20		110 150
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 2.2 i</b>		2003 ->
M54 226 S1/M54 B22		125 170
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 2.3 i sDrive</b>		2009 ->
N52 B25 A		150 204
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 2.5 i</b>		2003 ->
M54 256 S5/M54 B25		141 192
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 2.5 i, si</b>		2006 ->
N52 B25 A		160 177
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 3.0 i</b>		2003 ->
M54 B30 /M54 306 S3		170 231
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Temp. s. warning lamp/Termocont. temp.		35871
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 3.0 i sDrive</b>		2009 ->
N52 B30 A		190 258
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 3.0 si, Coupe</b>		2006 ->
N52 B30 A/N52 B30		195 265
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 3.2 M, Coupe</b>		2006 ->
S54 326 S4/S54 B32		252 343
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 3.5 i sDrive</b>		2009 ->
N54 B30 A		225 306
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640
<b>Z4 3.5 is sDrive</b>		2010 ->
N54 B30 A		250 340
Rev. light switch/Int. luz marcha atrás		40640

**BMW Cont.**

<b>Z8 4.9</b>		2000-03
S62 B50/S38 B49		294 400
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	Hall	24999
Rev. light switch/Int. luz marcha atrás		40640

**CHEVROLET**

<b>Astro 4.3</b>		1994-95
LF6		127 173
Temp. sending unit/Termo-Resistencia	-> 01.1995	32711
<b>Astro 4.3, AWD</b>		1994 ->
LB4		142 193
Temp. sending unit/Termo-Resistencia	-> 01.1995	32711
<b>Aveo 1.4 Sedan</b>		2006 ->
F14D3		69 94
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Aveo 1.4, Sedan</b>		2008 ->
F14D4		74 101
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Camaro '81 5.0</b>		1981-92
LG4		112 152
Fan switch/Termocontacto ventilador	-> 01.1986	37601
<b>Caprice '83 5.0</b>		1986-89
		104 141
Fan switch/Termocontacto ventilador		37601
<b>Captiva 2.0 D, 4WD</b>		2006 ->
Z 20 S		110 150
Oil press. switch/Int. pres. aceite		12430
<b>Captiva 2.4, 4WD</b>		2006 ->
Z 24 SED		100 136
Oil press. switch/Int. pres. aceite		12430
<b>Captiva 2.4, 4WD</b>		2006 ->
Z 24 SED		103 140
Oil press. switch/Int. pres. aceite		12430
<b>Corvette '83 5.6 Cabrio</b>		1985-97
		179 243
Temp. sending unit/Termo-Resistencia	01.1992 ->	32711
<b>Corvette '83 5.7 Cabrio</b>		1989-97
L98		182 248
Temp. sending unit/Termo-Resistencia	01.1992 ->	32711
<b>Cruze 1.8</b>		2009 ->
2H0/F18D4		104 141
Oil press. switch/Int. pres. aceite		12436
<b>Cruze 2.0 CDI</b>		2009 ->
Z 20 S1		110 150
Oil press. switch/Int. pres. aceite		12430
<b>Epica 2.0</b>		2006 ->
X 20 D1		105 144
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Epica 2.0</b>		2005-06
T20SED		98 133
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Epica 2.0</b>		2005-06
		94 128
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Epica 2.0 D</b>		2007 ->
Z 20 S		110 150
Oil press. switch/Int. pres. aceite		12430
<b>Epica 2.5</b>		2006 ->
X 25 D1		115 156
Oil press. switch/Int. pres. aceite		12430
<b>Evanda 2.0</b>		2005 ->
X 20 SED		96 131
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40830
<b>Kalos 1.2</b>		2005 ->
B12S1		53 72
Oil press. switch/Int. pres. aceite		11610
<b>Kalos 1.4 16V, Sedan</b>		2005 ->
F14D3		69 94
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Kalos 1.4, Sedan</b>		2005 ->
F14S3		61 83
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Lacetti 1.4 16V</b>		2005 ->
F14D3		70 95
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Lacetti 1.6</b>		2005 ->
F16D3		80 109
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Lacetti 1.8</b>		2005 ->
T18SED		90 122
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40830
<b>Lacetti 1.8</b>		2005 ->
F18D3		89 121
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830
<b>Lacetti 2.0 D</b>		2007 ->
Z 20 DM		89 121
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40830

**CHEVROLET Cont.**

<b>Matiz 0.8</b>	2005 ->	
F8CV	38 52	
Oil press. switch/Int. pres. aceite	<b>11610</b>	
<b>Matiz 1.0</b>	2005 ->	
B10S	47 64	
Oil press. switch/Int. pres. aceite	<b>11610</b>	
<b>Matiz 1.0</b>	2005 ->	
B10S1	49 67	
Oil press. switch/Int. pres. aceite	<b>11610</b>	
<b>Nubira 1.6 Kombi, Sedan</b>	2005 ->	
F16D3	80 109	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Nubira 1.8 Kombi</b>	2005 ->	
F18D3	89 121	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Nubira 1.8 Kombi, Sedan</b>	2005 ->	
T18SED	90 122	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Temp. sending unit/Termo-Resistencia	<b>32070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Nubira 2.0 D Kombi</b>	2007 ->	
Z 20 DM/Z 20 S	89 121	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Suburban 5.7, AWD</b>	1991-96	
L05	157 214	
Temp. sending unit/Termo-Resistencia	<b>32711</b>	
<b>Suburban 6.5 D, AWD</b>	1993-96	
L56	135 184	
Temp. sending unit/Termo-Resistencia	<b>32711</b>	
<b>Tacuma 1.6</b>	2005 ->	
A16DMS	77 105	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Tacuma 1.6</b>	2005 ->	
A16DMS	79 107	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Tacuma 2.0</b>	2005 ->	
T20SED	89 121	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Temp. sending unit/Termo-Resistencia	<b>32070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Tahoe 5.7 AWD</b>	1994-95	
	147 200	
Temp. sending unit/Termo-Resistencia	<b>32711</b>	
<b>Tahoe 6.5 TDiC, AWD</b>	1994-96	
L56	135 184	
Temp. sending unit/Termo-Resistencia	<b>32711</b>	

**CHRYSLER**

<b>Voyager I 2.5 i</b>	1984-95	
K00	72 98	
Fan switch/Termocontacto ventilador	<b>36499</b>	
<b>Voyager I 3.0 i</b>	1984-95	
300/6G72	108 147	
Fan switch/Termocontacto ventilador	<b>36499</b>	

**CITROËN**

<b>2 CV 6</b>	1979-90	
A06/664	20 27	
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
<b>AX 1.0</b>	1986-98	
CDY (TU9M)	33 45	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.0</b>	1987-98	
CDZ (TU9M)	37 50	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.0</b>	1986-92	
C1A	32 44	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>

**CITROËN Cont.**

<b>AX 1.1</b>	1986-94	
H1A/H1B	40 54	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.1</b>	1986-97	
HDZ (TU1M)/H1B	44 60	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.1 4x4</b>	1991-92	
H1A	40 54	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
<b>AX 1.1 Kat</b>	1988-89	
HAZ (TU1CP)	40 54	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4</b>	1988-92	
K2B/K2A	62 85	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4</b>	1988-89	
K1F	49 67	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4 D</b>	1991-97	
K9Y (TUD3Y)	37 50	
Oil press. switch/Int. pres. aceite	-> 11.1991, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	01.1992 ->	<b>12460</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34050</b>
Temp. s. warning lamp/Termocont. temp.	-> 11.1991	<b>35260</b>
Temp. s. warning lamp/Termocont. temp.	01.1992 ->	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4 D, 4x4</b>	1988-92	
K9A (TUD3)	38 52	
Oil press. switch/Int. pres. aceite	-> 11.1991, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	01.1992 ->	<b>12460</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34050</b>
Temp. s. warning lamp/Termocont. temp.	-> 11.1991	<b>35260</b>
Temp. s. warning lamp/Termocont. temp.	01.1992 ->	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4 GTI</b>	1991-96	
KFY (TU3FJ2)	66 90	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>

**CITROËN Cont.**

<b>AX 1.4 GTI</b>		<b>1991-96</b>
KFZ (TU3FJ2)		69 94
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4 GTI</b>		<b>1991-92</b>
KFZ (TU3FJ2)		74 100
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.4, 4x4</b>		<b>1987-97</b>
KDY (TU3FM)/KDX, KDZ (TU3MZ)/KDY (TU3M)		55 75
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	N° Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	-> N° Vet 03828	<b>37400</b>
Fan switch/Termocontacto ventilador	N° Vet 05226 ->	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.5 D</b>		<b>1994-97</b>
VJY (TUD5)		40 54
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37930</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>AX 1.5 D</b>		<b>1994-97</b>
VJZ (TUD5)		43 58
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop	L.H.D., -> N° Vet 05047, No servofreno	<b>24080</b>
Stop light switch/Int. luz stop	L.H.D., N° Vet 05048 ->, Servofreno	<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37930</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 04711	<b>41090</b>
<b>Axel 0.7</b>		<b>1981-91</b>
V06 644		25 34
Oil press. switch/Int. pres. aceite		<b>12170</b>
Stop light switch/Int. luz stop		<b>24080</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>
<b>Axel 1.1</b>		<b>1984-91</b>
G11/631		42 57
Oil press. switch/Int. pres. aceite		<b>12170</b>
Stop light switch/Int. luz stop		<b>24080</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>
<b>Axel 1.1</b>		<b>1984-91</b>
		45 61
Oil press. switch/Int. pres. aceite		<b>12170</b>
Stop light switch/Int. luz stop		<b>24080</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>
<b>Berlingo 1.1 i</b>		<b>1996 -&gt;</b>
HDZ (TU1M)		44 60
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	<b>24897</b>
Thermistor-Thermocont./Doble función	-> N° Vet 07449	<b>34110</b>
Thermistor-Thermocont./Doble función	N° Vet 07450 ->	<b>34440</b>
Fan switch/Termocontacto ventilador		<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	<b>40492</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	<b>40570</b>
<b>Berlingo 1.1 i</b>		<b>1996 -&gt;</b>
HDZ (TU1M)/HFV (TU1JP)		44 60
Oil press. switch/Int. pres. aceite	HDZ (TU1M), 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	HFV (TU1JP)	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	<b>24897</b>
Thermistor-Thermocont./Doble función	-> N° Vet 07449	<b>34110</b>
Thermistor-Thermocont./Doble función	N° Vet 07450 ->	<b>34440</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador		<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	<b>40492</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	<b>40570</b>
<b>Berlingo 1.4 Bivalent</b>		<b>2002 -&gt;</b>
		48 65
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	<b>24897</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Thermistor-Thermocont./Doble función		<b>34440</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador		<b>37580</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>

**CITROËN Cont.**

<b>Berlingo 1.4 i</b>		<b>1996 -&gt;</b>
KFX (TU3JP)/KFW (TU3JP)		55 75
Oil press. switch/Int. pres. aceite	-> 05.2000, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	06.2000 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	<b>24897</b>
Stop light switch/Int. luz stop	KFW (TU3JP), 11.2002 ->, 4 terminals/bornes	<b>24898</b>
Thermistor-Thermocont./Doble función	-> N° Vet 07449	<b>34110</b>
Thermistor-Thermocont./Doble función	N° Vet 07450 ->	<b>34440</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador		<b>37580</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	<b>40492</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	<b>40570</b>
<b>Berlingo 1.4 i, Bivalent</b>		<b>2003 -&gt;</b>
KFW (TU3JP)		55 75
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24897</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Thermistor-Thermocont./Doble función		<b>34440</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Fan switch/Termocontacto ventilador		<b>37580</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>Berlingo 1.6</b>		<b>2008 -&gt;</b>
NFR (TU5JP4B)		66 90
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6</b>		<b>2008 -&gt;</b>
NFU (TU5JP4)		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 16V</b>		<b>2000 -&gt;</b>
NFU (TU5JP4)		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	<b>24897</b>
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	<b>24898</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 HDi 110</b>		<b>2008 -&gt;</b>
9HZ-DV6TED4		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 HDi 75</b>		<b>2005 -&gt;</b>
DV6B		55 75
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24897</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 HDi 75</b>		<b>2008 -&gt;</b>
9HT (DV6BTED4)		55 75
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 HDi 75</b>		<b>2008 -&gt;</b>
9HT (DV6BUTED4)		55 75
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 HDi 90</b>		<b>2005 -&gt;</b>
DV6ATED4		66 90
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24897</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 HDi 90</b>		<b>2008 -&gt;</b>
9HX (DV6ATED4)		66 90
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Berlingo 1.6 VDi 110</b>		<b>2010 -&gt;</b>
		82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
<b>Berlingo 1.6 Vti 120</b>		<b>2009 -&gt;</b>
		88 120
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
<b>Berlingo 1.6 Vti 95</b>		<b>2010 -&gt;</b>
		72 98
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
<b>Berlingo 1.8 D</b>		<b>1996 -&gt;</b>
A9A (XUD7)		43 59
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	<b>24897</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Fan switch/Termocontacto ventilador	N° Vet 07267 ->, Without/Sin A.A.	<b>37680</b>
Fan switch/Termocontacto ventilador	N° Vet 07266 ->, Climat	<b>37930</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	<b>40650</b>







**CITROËN Cont.**

<b>BX 19, Break</b>		<b>1986-94</b>
D2A (XU92C)		77 102
Oil press. switch/Int. pres. aceite	Nº Vet 04193 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	-> Nº Vet 04192	<b>12260</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	Nº Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> Nº Vet 04192	<b>35210</b>
Fan switch/Termocontacto ventilador		<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04711	<b>41090</b>
<b>BX TRD Turbo, Break</b>		<b>1988-94</b>
AJZ (XUD7TE)/A8A (XUD7TE)		66 90
Oil press. switch/Int. pres. aceite	Nº Vet 04193 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	-> Nº Vet 04192	<b>12260</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	Nº Vet 04193 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> Nº Vet 04192	<b>35210</b>
Fan switch/Termocontacto ventilador		<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04712 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04711	<b>41090</b>
<b>C1 1.0</b>		<b>2005 -&gt;</b>
1KR-FE		50 68
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás	Manual sequential/Secuencial, With control	<b>40847</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40848</b>
<b>C1 1.4 HDi</b>		<b>2005 -&gt;</b>
DV4D		40 54
Oil press. switch/Int. pres. aceite		<b>12640</b>
Rev. light switch/Int. luz marcha atrás		<b>40848</b>
<b>C15 1.0</b>		<b>1984-97</b>
XV8/TU9		33 45
Oil press. switch/Int. pres. aceite	07.1988 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	-> 07.1988	<b>12260</b>
Stop light switch/Int. luz stop	-> 07.1988	<b>24070</b>
Stop light switch/Int. luz stop	07.1988 ->	<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	07.1988 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> 07.1988	<b>35210</b>
Fan switch/Termocontacto ventilador	07.1988 ->	<b>37310</b>
Fan switch/Termocontacto ventilador	-> 07.1988	<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04720 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04719	<b>41090</b>
<b>C15 1.1</b>		<b>1984-96</b>
109K/E1A		35 48
Oil press. switch/Int. pres. aceite	07.1988 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
Oil press. switch/Int. pres. aceite	-> 07.1988	<b>12260</b>
Stop light switch/Int. luz stop	-> 07.1988	<b>24070</b>
Stop light switch/Int. luz stop	07.1988 ->	<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	07.1988 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> 07.1988	<b>35210</b>
Fan switch/Termocontacto ventilador	07.1988 ->	<b>37310</b>
Fan switch/Termocontacto ventilador	-> 07.1988	<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04720 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04719	<b>41090</b>
<b>C15 1.1 i</b>		<b>1988-96</b>
HDZ (TU1M)		44 60
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
Stop light switch/Int. luz stop		<b>24080</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>
<b>C15 1.4</b>		<b>1987-96</b>
K1H (TU3A)		49 67
Oil press. switch/Int. pres. aceite	07.1988 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
Oil press. switch/Int. pres. aceite	-> 07.1988	<b>12260</b>
Stop light switch/Int. luz stop	-> 07.1988	<b>24070</b>
Stop light switch/Int. luz stop	07.1988 ->	<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	07.1988 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> 07.1988	<b>35210</b>
Fan switch/Termocontacto ventilador	07.1988 ->	<b>37310</b>
Fan switch/Termocontacto ventilador	-> 07.1988	<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04720 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04719	<b>41090</b>
<b>C15 1.4 E</b>		<b>1987-96</b>
150D (XY7)		44 60
Oil press. switch/Int. pres. aceite	07.1988 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
Oil press. switch/Int. pres. aceite	-> 07.1988	<b>12260</b>
Stop light switch/Int. luz stop	-> 07.1988	<b>24070</b>
Stop light switch/Int. luz stop	07.1988 ->	<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	07.1988 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> 07.1988	<b>35210</b>
Fan switch/Termocontacto ventilador	07.1988 ->	<b>37310</b>
Fan switch/Termocontacto ventilador	-> 07.1988	<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04720 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04719	<b>41090</b>
<b>C15 1.4 E</b>		<b>1987-96</b>
K3A		40 55
Oil press. switch/Int. pres. aceite	07.1988 ->, 0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
Oil press. switch/Int. pres. aceite	-> 07.1988	<b>12260</b>
Stop light switch/Int. luz stop	-> 07.1988	<b>24070</b>
Stop light switch/Int. luz stop	07.1988 ->	<b>24080</b>
Temp. s. warning lamp/Termocont. temp.	07.1988 ->	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	-> 07.1988	<b>35210</b>
Fan switch/Termocontacto ventilador	07.1988 ->	<b>37310</b>
Fan switch/Termocontacto ventilador	-> 07.1988	<b>37340</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04720 ->	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04719	<b>41090</b>

**CITROËN Cont.**

<b>C15 1.4 i</b>		<b>1991-96</b>
KDY (TU3FM)/KDY (TU3M)		55 75
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop		<b>24080</b>
Fan switch/Termocontacto ventilador		<b>37310</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>
<b>C15 1.8 D, Kombi</b>		<b>1986-00</b>
		44 60
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop	07.1988 ->	<b>24070</b>
Thermistor-Thermocont./Doble función	07.1988 ->	<b>34400</b>
Temp. s. warning lamp/Termocont. temp.		<b>35170</b>
Temp. s. warning lamp/Termocont. temp.	Nº Vet 07053 ->	<b>35180</b>
Fan switch/Termocontacto ventilador	-> Nº Vet 03128	<b>37800</b>
Fan switch/Termocontacto ventilador	Nº Vet 03129->04193	<b>37810</b>
Fan switch/Termocontacto ventilador	Nº Vet 04194 ->	<b>37850</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04497->08420	<b>40650</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 04496	<b>41090</b>
<b>C15 1.9 D</b>		<b>2000-05</b>
		44 60
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24070</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37800</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 04497->08420	<b>40650</b>
<b>C2 1.1</b>		<b>2003 -&gt;</b>
HFX (TU1JP)		44 60
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Stop light switch/Int. luz stop		<b>24899</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>C2 1.4</b>		<b>2003 -&gt;</b>
KFV (TU3JP)		54 73
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>C2 1.4 16V</b>		<b>2006 -&gt;</b>
KFU (ET3J4)		65 90
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>C2 1.4 HDi</b>		<b>2003 -&gt;</b>
8HX (DV4TD)		50 68
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>C2 1.6</b>		<b>2003 -&gt;</b>
NFU (TU5JP4)		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>C2 1.6 HDi</b>		<b>2005 -&gt;</b>
9HZ-DV6TED4		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24898</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>C2 1.6 VTS</b>		<b>2005 -&gt;</b>
NFS (TU5JP4S)		90 122
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24898</b>
Stop light switch/Int. luz stop		<b>24899</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24907</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	<b>35290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40492</b>
<b>C25 1.8 E</b>		<b>1987-94</b>
169 (XM7T)		51 69
Oil press. switch/Int. pres. aceite		<b>11250</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Fan switch/Termocontacto ventilador		<b>37460</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1988	<b>41070</b>
Rev. light switch/Int. luz marcha atrás	01.1989 ->	<b>41090</b>
<b>C25 1.9 D</b>		<b>1987-94</b>
D9B (XUD9A/U)		51 69
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Temp. s. warning lamp/Termocont. temp.		<b>35170</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37890</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1988	<b>41070</b>
Rev. light switch/Int. luz marcha atrás	01.1989 ->	<b>41090</b>
<b>C25 1.9 TD</b>		<b>1992-94</b>
M705		60 82
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31370</b>
Temp. s. warning lamp/Termocont. temp.		<b>35170</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37890</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>

**CITROËN Cont.**

<b>C25 2.0 E</b>	1981-94
170B (XN1T)/170A (XN1T)	58 79
Oil press. switch/Int. pres. aceite	11250
Oil press. switch/Int. pres. aceite	12260
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	30260
Temp. sending unit/Termo-Resistencia	31370
Temp. s. warning lamp/Termocont. temp.	35210
Fan switch/Termocontacto ventilador	37460
Rev. light switch/Int. luz marcha atrás	41070
Rev. light switch/Int. luz marcha atrás	41090
<b>C25 2.0, 4x4</b>	1987-94
170C (XN1T)	62 84
Oil press. switch/Int. pres. aceite	11250
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31370
Fan switch/Termocontacto ventilador	37460
Rev. light switch/Int. luz marcha atrás	41090
<b>C25 2.5 D, 4x4</b>	1981-94
CRD93L (U25-661)	54 73
Oil press. switch/Int. pres. aceite	12250
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31020
Temp. sending unit/Termo-Resistencia	31370
Temp. s. warning lamp/Termocont. temp.	35150
Fan switch/Termocontacto ventilador	37890
Rev. light switch/Int. luz marcha atrás	41070
Rev. light switch/Int. luz marcha atrás	41090
<b>C25 2.5 DT, 4x4</b>	1987-94
CRD93LS (U25-673)	70 95
Oil press. switch/Int. pres. aceite	12250
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31370
Temp. s. warning lamp/Termocont. temp.	35150
Fan switch/Termocontacto ventilador	37890
Rev. light switch/Int. luz marcha atrás	41070
Rev. light switch/Int. luz marcha atrás	41090
<b>C3 1.1</b>	2009 ->
On clutch pedal/Int. pedal embrague	44 60
Cruise control/Control veloc.	24907
<b>C3 1.1 i</b>	2002 ->
HFX (TU1JP)	44 60
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
Temp. s. warning lamp/Termocont. temp.	35290
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.4</b>	2009 ->
On clutch pedal/Int. pedal embrague	54 73
Cruise control/Control veloc.	24907
<b>C3 1.4 16V</b>	2003 ->
KFU (ET3J4)	65 88
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24906
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	24907
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.4 16V HDi</b>	2002 ->
8HY (DV4TED4)	66 90
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24906
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	24907
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.4 HDi, Pluriel</b>	2002 ->
8HX (DV4TD)	50 68
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24906
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	24907
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.4 i, Bivalent</b>	2002 ->
KFV (TU3JP)	54 73
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24906
On clutch pedal/Int. pedal embrague	24907
Temp. s. warning lamp/Termocont. temp.	24907
Temp. s. warning lamp/Termocont. temp.	35290
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.4 Pluriel</b>	2003 ->
KFV (TU3JP)	54 73
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Temp. s. warning lamp/Termocont. temp.	35290
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.4 VTI 95</b>	2009 ->
On clutch pedal/Int. pedal embrague	70 95
Cruise control/Control veloc.	24907

**CITROËN Cont.**

<b>C3 1.6 16V</b>	2002 ->
NFU (TU5JP4)	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24906
On clutch pedal/Int. pedal embrague	24907
Temp. s. warning lamp/Termocont. temp.	35290
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.6 16V HDi</b>	2005 ->
DV6TED4	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.6 16V HDi</b>	2005 ->
9HX (DV6ATED4)	66 90
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40491
<b>C3 1.6 HDi</b>	2009 ->
On clutch pedal/Int. pedal embrague	68 92
Cruise control/Control veloc.	24907
<b>C3 1.6 HDi 110</b>	2009 ->
On clutch pedal/Int. pedal embrague	82 112
Cruise control/Control veloc.	24907
<b>C3 1.6 Pluriel</b>	2003 ->
NFU (TU5JP4)	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
Temp. s. warning lamp/Termocont. temp.	35290
Rev. light switch/Int. luz marcha atrás	40492
<b>C3 1.6 VTI 120</b>	2009 ->
On clutch pedal/Int. pedal embrague	88 120
Cruise control/Control veloc.	24907
<b>C3 Picasso 1.4</b>	2009 ->
8FS (EP3)	70 95
On clutch pedal/Int. pedal embrague	24907
<b>C3 Picasso 1.6</b>	2009 ->
5FS (EP6C)/5FW (EP6)	88 120
On clutch pedal/Int. pedal embrague	24907
<b>C3 Picasso 1.6 HDi</b>	2009 ->
9HZ-DV6TED4	80 109
On clutch pedal/Int. pedal embrague	24907
<b>C3 Picasso 1.6 HDi</b>	2009 ->
9HX (DV6ATED4)	66 90
On clutch pedal/Int. pedal embrague	24907
<b>C3 Picasso 1.6 HDi 90</b>	2010 ->
On clutch pedal/Int. pedal embrague	68 92
Cruise control/Control veloc.	24907
<b>C4 1.4 16V, Coupe</b>	2004 ->
KFU (ET3J4)	65 88
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40492
<b>C4 1.6 16V, Coupe, Bio-Flex</b>	2004 ->
NFU (TU5JP4)	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Temp. s. warning lamp/Termocont. temp.	35290
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C4 1.6 HDi Sedan</b>	2006 ->
DV6TED4	80 109
On clutch pedal/Int. pedal embrague	24907
<b>C4 1.6 HDi, Coupe</b>	2004 ->
9HX (DV6ATED4)	66 90
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40491
<b>C4 1.6 HDi, Coupe</b>	2004 ->
9HY (DV6TED4)/9HZ-DV6TED4/DV6TED4	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40491
<b>C4 1.6 THP 140</b>	2008 ->
On clutch pedal/Int. pedal embrague	103 140
Cruise control/Control veloc.	24907
<b>C4 1.6 THP 150, Coupe</b>	2008 ->
5FX (EP6DT)	110 150
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
<b>C4 1.6 VTI 120, Coupe</b>	2008 ->
Oil press. switch/Int. pres. aceite	88 120
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40491
<b>C4 2.0 16V</b>	2004 ->
RFJ (EW10A)/EW10A	103 140
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40491



**CITROËN Cont.**

<b>C5 2.0 HDi, Break</b>	2001-04
RHZ (DW10ATED)/RHS (DW10ATED)	79 107
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24898
On clutch pedal/Int. pedal embrague	24905
On clutch pedal/Int. pedal embrague	24906
Rev. light switch/Int. luz marcha atrás	40492
<b>C5 2.0 HDi, Break</b>	2001-04
RHY (DW10TD)	66 90
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
On clutch pedal/Int. pedal embrague	24905
On clutch pedal/Int. pedal embrague	24906
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C5 2.2 HDi, Break</b>	2001-04
4HX (DW12TED4/FAP)	98 133
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
On clutch pedal/Int. pedal embrague	24905
On clutch pedal/Int. pedal embrague	24906
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C5 2.2 HDi, Break</b>	2004 ->
4HX (DW12TED4/FAP)	98 133
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
<b>C5 2.2 HDi, Break</b>	2008 ->
4HT (DW12BTED4)	125 170
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40492
<b>C5 2.7 HDi</b>	2008 ->
DT17ED4	150 204
Stop light switch/Int. luz stop	24899
<b>C5 2.7 HDi Break</b>	2008 ->
UHZ (DT17BTED4)/DT17ED4	150 204
Stop light switch/Int. luz stop	24899
<b>C5 3.0 Carlsson Break</b>	2003-04
	173 235
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C5 3.0 V6</b>	2004 ->
XFV (ES9A)/XFV (ES9J4S)	152 207
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
<b>C5 3.0 V6 Break</b>	2004 ->
XFV (ES9A)	152 207
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
<b>C5 3.0 V6, Break</b>	2001-04
XFV (ES9J4S)	152 207
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24898
On clutch pedal/Int. pedal embrague	24905
On clutch pedal/Int. pedal embrague	24906
Rev. light switch/Int. luz marcha atrás	40491
Rev. light switch/Int. luz marcha atrás	40492
<b>C5 3.0 V6, Break</b>	2008 ->
XFU (ES9A)	155 211
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
<b>C6 2.2 HDi</b>	2006 ->
4HT (DW12BTED4)	125 170
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	24907
Rev. light switch/Int. luz marcha atrás	40492
<b>C6 2.7 HDi</b>	2005 ->
UHZ (DT17BTED4)/DT17ED4	150 204
Stop light switch/Int. luz stop	24899
<b>C6 3.0 V6</b>	2005 ->
ES9J4S/XFV (ES9A)	155 211
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
<b>C8 2.0</b>	2002 ->
RFN (EW10J4)	100 136
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40491
<b>C8 2.0 16V</b>	2005 ->
RFJ (EW10A)	103 140
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492

**CITROËN Cont.**

<b>C8 2.0 HDi</b>	2002 ->
RHT, RHM, RHW. (DW10ATED4)	79 107
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C8 2.0 HDi</b>	2006 ->
RHR (DW10BTED4)	100 136
Oil press. switch/Int. pres. aceite	12640
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C8 2.0 HDi</b>	2007 ->
RHK (DW10UTED4)	88 120
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24885
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C8 2.2</b>	2002 ->
3FZ (EW12J4)	116 158
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C8 2.2 HDi</b>	2002 ->
4HW (DW12TED4)	94 128
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C8 2.2 HDi</b>	2006 ->
4HT (DW12BTED4)	125 170
Oil press. switch/Int. pres. aceite	12640
On clutch pedal/Int. pedal embrague	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C8 3.0 V6</b>	2002 ->
XFV (ES9J4S)	150 204
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Stop light switch/Int. luz stop	24896
Stop light switch/Int. luz stop	24899
Rev. light switch/Int. luz marcha atrás	40492
<b>C-Crosser 2.2 HDi</b>	2007 ->
4HN (DW12MTED4)	115 156
Oil press. switch/Int. pres. aceite	12640
On clutch pedal/Int. pedal embrague	24720
Rev. light switch/Int. luz marcha atrás	40900
<b>C-Crosser 2.4 16V</b>	2008 ->
	125 170
Oil press. switch/Int. pres. aceite	12830
Rev. light switch/Int. luz marcha atrás	40900
<b>CX II 25 D Turbo, Break 2</b>	1987-92
M25-669	88 120
Oil press. switch/Int. pres. aceite	11250
<b>CX II 25 D, Break</b>	1985-92
M25-660	54 73
Oil press. switch/Int. pres. aceite	11250
<b>CX II 25 GTi Turbo 2</b>	1985-92
M25-662	122 166
Oil press. transmitter/Transm. pres. aceite	14500
<b>DS3 1.4 Vti 95</b>	2010 ->
	70 95
On clutch pedal/Int. pedal embrague	24907
<b>DS3 1.6 HDi 110</b>	2009 ->
	82 112
On clutch pedal/Int. pedal embrague	24907
<b>DS3 1.6 HDi 90</b>	2009 ->
	68 92
On clutch pedal/Int. pedal embrague	24907
<b>DS3 1.6 THP 150</b>	2010 ->
5FR (EP6DT)	115 156
On clutch pedal/Int. pedal embrague	24907
<b>DS3 1.6 Vti 120</b>	2010 ->
	88 120
On clutch pedal/Int. pedal embrague	24907
<b>Evasion 1.8</b>	1997-02
LFZ (XU7JP)	73 99
Oil press. switch/Int. pres. aceite	12460
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Temp. sending unit/Termo-Resistencia	Climat
Thermistor-Thermocont./Doble función	Without/Sin A.A.
Fan switch/Termocontacto ventilador	
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420
<b>Evasion 1.9 TD</b>	1994-02
DHX (XUD9TF/BTF/D8B (XUD9TF)	66 90
Oil press. switch/Int. pres. aceite	12460
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	24885
Temp. sending unit/Termo-Resistencia	Climat
Thermistor-Thermocont./Doble función	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	US 87
Temp. s. warning lamp/Termocont. temp.	CEE 19-5
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420



**CITROËN Cont.**

<b>Jumper 2.2 HDi</b>	2002 ->	
DW12TED	74 101	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Fan switch/Termocontacto ventilador	37900	Without/sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Jumper 2.2 HDi</b>	2002-06	
	74 101	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Jumper 2.2 HDi 100</b>	2006 ->	
4HV	74 101	
Oil press. switch/Int. pres. aceite	12610	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Jumper 2.2 HDi 120</b>	2006 ->	
4HU	88 120	
Oil press. switch/Int. pres. aceite	12610	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Jumper 2.5 D, 4x4</b>	1994-02	
T9A (DJ5)	63 86	
Oil press. switch/Int. pres. aceite	12460	-> 12.1997
Oil press. switch/Int. pres. aceite	12640	01.1998 ->
Stop light switch/Int. luz stop	24365	-> 05.2000, R.H.D.
Stop light switch/Int. luz stop	24400	-> 02.1998, L.H.D.
Stop light switch/Int. luz stop	24410	05.2000 ->, R.H.D.
Stop light switch/Int. luz stop	24660	02.1998 ->, L.H.D.
Thermistor-Thermocont./Doble función	34110	
Temp. s. warning lamp/Termocont. temp.	35600	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	35610	CEE 19-5
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40492	05.2000 ->
Rev. light switch/Int. luz marcha atrás	40570	-> 04.2000
<b>Jumper 2.5 TD, 4x4</b>	1994-02	
T8A (DJ5T)	76 103	
Oil press. switch/Int. pres. aceite	12460	-> 12.1997
Oil press. switch/Int. pres. aceite	12640	01.1998 ->
Stop light switch/Int. luz stop	24365	-> 05.2000, R.H.D.
Stop light switch/Int. luz stop	24400	-> 02.1998, L.H.D.
Stop light switch/Int. luz stop	24410	05.2000 ->, R.H.D.
Stop light switch/Int. luz stop	24660	02.1998 ->, L.H.D.
Thermistor-Thermocont./Doble función	34110	
Thermistor-Thermocont./Doble función	34425	
Temp. s. warning lamp/Termocont. temp.	35295	
Temp. s. warning lamp/Termocont. temp.	35600	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	35610	CEE 19-5
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40492	05.2000 ->
Rev. light switch/Int. luz marcha atrás	40570	-> 04.2000
<b>Jumper 2.5 Tdi, 4x4</b>	1996-00	
THX (DJ5TD)	79 107	
Oil press. switch/Int. pres. aceite	12460	-> 12.1997
Oil press. switch/Int. pres. aceite	12640	01.1998 ->
Stop light switch/Int. luz stop	24365	-> 05.2000, R.H.D.
Stop light switch/Int. luz stop	24400	-> 02.1998, L.H.D.
Stop light switch/Int. luz stop	24410	05.2000 ->, R.H.D.
Stop light switch/Int. luz stop	24660	02.1998 ->, L.H.D.
Thermistor-Thermocont./Doble función	34110	
Temp. s. warning lamp/Termocont. temp.	35600	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40492	05.2000 ->
Rev. light switch/Int. luz marcha atrás	40570	-> 04.2000
<b>Jumper 2.8 HDi</b>	2004 ->	
8140.43N	107 146	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Thermistor-Thermocont./Doble función	34080	
Fan switch/Termocontacto ventilador	37900	Without/sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Jumper 2.8 HDi</b>	2000-02	
8140.43S	93 126	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24411	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24412	
<b>Jumper 2.8 HDi 4x4</b>	2002-06	
F28TDCR	94 128	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Jumper 2.8 HDi, 4x4</b>	2000 ->	
8140.43S	94 128	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24410	R.H.D.
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Stop light switch/Int. luz stop	24415	
Stop light switch/Int. luz stop	24660	L.H.D.
Thermistor-Thermocont./Doble función	34080	
Thermistor-Thermocont./Doble función	34110	
Fan switch/Termocontacto ventilador	37900	Without/sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML

**CITROËN Cont.**

<b>Jumper 3.0 HDi 145</b>	2010 ->	
	107 146	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Jumper 3.0 HDi 155</b>	2010 ->	
	115 156	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Jumper 3.0 HDi 160</b>	2006 ->	
F1CE0481D (F30DT)	116 157	
Oil press. switch/Int. pres. aceite	12431	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Rev. light switch/Int. luz marcha atrás	40510	
<b>Jumpy 1.6 HDi 90</b>	2007 ->	
9HU (DV6UTED4)	66 90	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	
Rev. light switch/Int. luz marcha atrás	40491	Gear box/Cambio BE3
<b>Jumpy 1.6, 1.6 i</b>	1995 ->	
220 A2.000/1580 SPI	58 79	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control
Fan switch/Termocontacto ventilador	37580	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	40491	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40650	-> Nº Vet 08420
<b>Jumpy 1.9 D</b>	1995-98	
D9B (XUD9A/U)	51 69	
Oil press. switch/Int. pres. aceite	12460	-> Nº Vet 07846
Oil press. switch/Int. pres. aceite	12640	Nº Vet 07847 ->
Stop light switch/Int. luz stop	24440	
Temp. sending unit/Termo-Resistencia	32290	Climat
Thermistor-Thermocont./Doble función	34110	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37920	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40650	Gear box/Cambio BE3
<b>Jumpy 1.9 D 70</b>	1998 ->	
WJZ (DW8)	51 69	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control
Thermistor-Thermocont./Doble función	34430	
Thermistor-Thermocont./Doble función	34460	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37920	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40491	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40650	-> Nº Vet 08420
<b>Jumpy 1.9 TD</b>	1996 ->	
D8B (XUD9TF)	68 92	
Oil press. switch/Int. pres. aceite	12460	-> Nº Vet 07846
Oil press. switch/Int. pres. aceite	12640	Nº Vet 07847 ->
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control
Temp. sending unit/Termo-Resistencia	32290	Climat
Thermistor-Thermocont./Doble función	34110	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	35610	
Fan switch/Termocontacto ventilador	37920	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Nº Vet 08420
<b>Jumpy 1.9 TD</b>	1995 ->	
DHX (XUD9TF/BTF)	66 90	
Oil press. switch/Int. pres. aceite	12460	-> Nº Vet 07846
Oil press. switch/Int. pres. aceite	12640	Nº Vet 07847 ->
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control
Temp. sending unit/Termo-Resistencia	32290	Climat
Thermistor-Thermocont./Doble función	34110	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	35610	
Fan switch/Termocontacto ventilador	37920	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Nº Vet 08420
<b>Jumpy 2.0</b>	2000-06	
RFN (EW10J4)	100 136	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
On clutch pedal/Int. pedal embrague	24880	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24885	With/Con cruise control
Rev. light switch/Int. luz marcha atrás	40491	Gear box/Cambio BE3
<b>Jumpy 2.0 HDi 110</b>	2000 ->	
RHZ (DW10ATED)	80 109	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
On clutch pedal/Int. pedal embrague	24880	Engine control/Gestión motor
Stop light switch/Int. luz stop	24885	With/Con cruise control
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Jumpy 2.0 HDi 120</b>	2007 ->	
RHK (DW10UTED4)	88 120	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	
<b>Jumpy 2.0 HDi 140</b>	2007 ->	
RHR (DW10BTED4)	100 136	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	
<b>Jumpy 2.0 HDi 95</b>	1999 ->	
RHX	69 94	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
On clutch pedal/Int. pedal embrague	24880	Engine control/Gestión motor
Stop light switch/Int. luz stop	24885	With/Con cruise control
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML

**CITROËN Cont.**

<b>Jumpy 2.0 HDi 95</b>	1999 ->	
RHX (DW10BTD)	69 94	
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24440
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24880
Stop light switch/Int. luz stop	With/Con cruise control	24885
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Jumpy 2.0 i</b>	2007 ->	
RFH (EW10A)	103 140	
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop		24899
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Jumpy 2.0 i 16V, Furgón</b>	2000 ->	
	102 138	
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24440
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24880
Stop light switch/Int. luz stop	With/Con cruise control	24885
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Nemo 1.4 Furgón</b>	2008 ->	
KFV (TU3A)	54 73	
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24792
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Nemo 1.4 HDi, Furgón, Kombi</b>	2008 ->	
8HS (DV4TD)	50 68	
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24792
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Nemo 1.4 Kombi</b>	2009 ->	
KFV (TU3A)	54 73	
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24792
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Saxo 1.0 X</b>	1996-98	
CDZ (TU9M)	33 45	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.0 X</b>	1998-03	
CDZ (TU9M)	37 50	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.1 X, SX</b>	1996-03	
HDZ (TU1M)/HFX (TU1JP)	44 60	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.1 X, SX</b>	1996-03	
HDZ (TU1M)	40 54	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.4 VTS</b>	1996-03	
KFX (TU3JP)/KFW (TU3JP)	55 75	
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->, 0.50 bar	11270
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.5 D</b>	1996-03	
VJY (TUD5)	40 54	
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12640
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	N° Vet 08330 ->	37930
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570

**CITROËN Cont.**

<b>Saxo 1.5 D</b>	1996-01	
VJZ (TUD5)	42 57	
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12640
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	N° Vet 08330 ->	37930
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.5 D</b>	2001-04	
	43 58	
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, Blue/Azul	35290
<b>Saxo 1.6</b>	1996-03	
NFZ (TU5JP)	66 90	
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
<b>Saxo 1.6</b>	2001-04	
NFT	74 101	
Oil press. switch/Int. pres. aceite		12640
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
<b>Saxo 1.6</b>	1996-04	
NFX (TU5JP4)	88 120	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37930
<b>Saxo 1.6 VTL,VTR</b>	1996-03	
NFZ (TU5JP)	65 88	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.6 VTS</b>	1996-03	
NFX (TU5JP4)	87 118	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Climat	37930
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Saxo 1.6 VTS</b>	2000-03	
NFT	72 98	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> N° Vet 07251	24080
Stop light switch/Int. luz stop	-> 12.2001, N° Vet 07252 ->	24440
Thermistor-Thermocont./Doble función		34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40570
<b>Visa 0.6</b>	1982-91	
V06/665	24 33	
Oil press. switch/Int. pres. aceite		12260
Oil press. switch/Int. pres. aceite		12290
Stop light switch/Int. luz stop		24070
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador		37390
Rev. light switch/Int. luz marcha atrás		41090
<b>Visa 11 E</b>	1982-91	
109/5F	37 50	
Oil press. switch/Int. pres. aceite		12260
Stop light switch/Int. luz stop		24070
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador		37390
Rev. light switch/Int. luz marcha atrás		41090
<b>Visa 11 E</b>	1978-91	
109/5	42 57	
Oil press. switch/Int. pres. aceite		12260
Stop light switch/Int. luz stop		24070
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador		37390
Rev. light switch/Int. luz marcha atrás		41090
<b>Visa 14</b>	1984-91	
150D (XY7)	44 60	
Oil press. switch/Int. pres. aceite		12260
Stop light switch/Int. luz stop	Powerbrake/Servofreno	24070
Stop light switch/Int. luz stop	No powerbrake/Servofreno	24081
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador		37390
Rev. light switch/Int. luz marcha atrás		41090
<b>Visa 14 GT</b>	1982-91	
150B (XY8)	58 79	
Oil press. switch/Int. pres. aceite		12260
Stop light switch/Int. luz stop		24070
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador		37390
Rev. light switch/Int. luz marcha atrás		41090
<b>Visa 16 GTI</b>	1986-91	
B6D	83 113	
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Oil press. transmitter/Transm. pres. aceite		14500
Stop light switch/Int. luz stop	Powerbrake/Servofreno	24070
Stop light switch/Int. luz stop	No powerbrake/Servofreno	24081
Temp. s. warning lamp/Termocont. temp.		35170
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37810
Rev. light switch/Int. luz marcha atrás		41090











**CITROËN Cont.**

<b>Xsara Picasso 1.6 HDi</b>		2005 -> 66 90
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->	12640
Stop light switch/Int. luz stop		24440
Stop light switch/Int. luz stop	4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Temp. sending unit/Termo-Resistencia	Climat	32290
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	40491
<b>Xsara Picasso 1.8 16V</b>		2000 -> 85 115
<b>LFY (XU7JP4/6FZ (EW7J4))</b>		
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->	12640
Stop light switch/Int. luz stop	-> 12.2001, Climat	24440
Stop light switch/Int. luz stop	6FZ (EW7J4), 11.2002 ->, 4 terminals	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24907
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	40491
<b>Xsara Picasso 2.0 16V</b>		2003 -> 100 136
<b>RFN (EW10J4)</b>		
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->	12640
Stop light switch/Int. luz stop	Without/Sin A.A.	24440
Stop light switch/Int. luz stop	4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24907
Temp. sending unit/Termo-Resistencia	Climat	32290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	40491
<b>Xsara Picasso 2.0 HDi</b>		1999 -> 66 90
<b>RHY (DW10TD)</b>		
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor, Brown/Marrón	24906
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor, Gray/gris	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>ZX 1.1</b>		1991-97 44 60
<b>HDZ (TU1M)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>ZX 1.1</b>		1991-93 40 54
<b>H1A/H1B</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>ZX 1.4</b>		1991-97 55 75
<b>KDZ (TU3M/Z)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>ZX 1.4 i</b>		1991-97 55 75
<b>KDZ/KDX. (TU3M/Z)/KFX (TU3JP)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>ZX 1.4 i Break</b>		1993-97 55 75
<b>KFX (TU3JP)/KDX (TU3M/Z)/KDY (TU3M)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>ZX 1.6 i Break</b>		1991-97 65 88
<b>BFZ (XU5JP)/BDY (XU5M)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 1.8 D Break</b>		1993-97 44 60
<b>161A (XUD7)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37680
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650

**CITROËN Cont.**

<b>ZX 1.8 i 16V, Break</b>		1996-97 81 110
<b>LFY (XU7JP4)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	-> Nº Vet 06366	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 1.8 i, Break</b>		1992-97 74 101
<b>LFZ (XU7JP)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	-> Nº Vet 06366	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 1.9 D, Break</b>		1991-97 47 64
<b>DJZ (XUD9Y)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función		34110
Thermistor-Thermocont./Doble función	Climat	34400
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37680
Fan switch/Termocontacto ventilador	Nº Vet 06367 ->	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 1.9 D, Break</b>		1994-97 50 68
<b>D9B (XUD9A/U)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Thermistor-Thermocont./Doble función	-> Nº Vet 06366	34400
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37680
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 1.9 i</b>		1991-97 88 120
<b>DKZ (XU9JA)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34090
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 1.9 TD, Break</b>		1992-97 66 90
<b>DHY (XUD9TE/Y)</b>		
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.	-> Nº Vet 06366	35610
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Nº Vet 06367 ->	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 2.0 i</b>		1992-97 89 121
<b>RFX (XU10J2C)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	-> Nº Vet 06366	37930
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 2.0 i 16V</b>		1992-94 112 152
<b>RFT (XU10J4/Z)/RFY (XU10J4/Z)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 2.0 i 16V</b>		1994-97 110 150
<b>RFT (XU10J4/Z)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.		35550
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>ZX 2.0 i 16V</b>		1996-97 120 163
<b>RFS (XU10J4RS)</b>		
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Fan switch/Termocontacto ventilador		37580
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37920
Fan switch/Termocontacto ventilador	Only hot countries/Para países calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650

**DACIA**

<b>1310 1.3 Sedan</b>		1983 -> 40 54
<b>810-02/-99</b>		
Rev. light switch/Int. luz marcha atrás		41080

**DACIA Cont.**

<b>Duster 1.5 dCi</b>		2010 ->	
K9K 796		63 86	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Duster 1.5 dCi, 4x4</b>		2010 ->	
K9K 898		79 107	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Duster 1.6 16V</b>		2010 ->	
K4M 696/K4M 690		77 105	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
<b>Duster 1.6 16V 4x4</b>		2010 ->	
K4M 606		77 105	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
<b>Logan 1.4, Express, MCV</b>		2004 ->	
K7J 710		55 75	
Oil press. switch/Int. pres. aceite		12702	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Logan 1.5 dCi</b>		2005 ->	
K9K 790		48 65	
Oil press. switch/Int. pres. aceite		12703	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Logan 1.5 dCi, Express, MCV, Pick-up</b>		2007 ->	
K9K 792		50 68	
Oil press. switch/Int. pres. aceite		12703	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Logan 1.5 dCi, Express, MCV, Pick-up</b>		2007 ->	
K9K 796		63 86	
Oil press. switch/Int. pres. aceite		12703	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Logan 1.6 16V, MCV</b>		2006 ->	
K4M 696/K4M 690		77 105	
Oil press. switch/Int. pres. aceite		12703	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	K4M 690, 4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Logan 1.6, Express, MCV, Pick-up</b>		2004 ->	
K7M 710		64 87	
Oil press. switch/Int. pres. aceite		12702	
Oil press. switch/Int. pres. aceite		12703	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	K7M 710, 4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Sandero 1.2 16V</b>		2008 ->	
D4F 732		55 75	
Oil press. switch/Int. pres. aceite		12635	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
<b>Sandero 1.4</b>		2008 ->	
K7J 710		55 75	
Oil press. switch/Int. pres. aceite		12702	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Sandero 1.5 dCi</b>		2008 ->	
K9K 792		50 68	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Sandero 1.5 dCi</b>		2008 ->	
K9K 796		63 86	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
<b>Sandero 1.6</b>		2008 ->	
K7M 710		64 87	
Oil press. switch/Int. pres. aceite		12702	
Oil press. switch/Int. pres. aceite		12703	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24903	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	

**DAEWOO**

<b>Espero 1.5</b>		1997-99	
		55 75	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Espero 1.5 16V</b>		1995-99	
A15MF		66 90	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Espero 1.5 16V</b>		1993-94	
		65 88	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	

**DAEWOO Cont.**

<b>Espero 1.8</b>		1995-99	
C18LE		66 90	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Espero 1.8</b>		1995-99	
C18LE		70 95	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Espero 2.0</b>		1995-99	
C20LE		77 105	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Espero 2.0</b>		1991-93	
C20LZ		74 101	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Espero 2.0</b>		1993-94	
C20LE		81 110	
Stop light switch/Int. luz stop		24310	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Evanda 2.0</b>		2002 ->	
L88/X 20 SED		96 131	
Oil press. switch/Int. pres. aceite		12430	
Temp. sending unit/Termo-Resistencia		32070	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Kalos 1.2</b>		2003 ->	
B12S1		53 72	
Oil press. switch/Int. pres. aceite		11610	
<b>Kalos 1.4 16V, Sedan</b>		2003 ->	
F14D3		69 94	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Kalos 1.4, Sedan</b>		2002 ->	
		61 83	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Korando 2.0 16V Cabrio</b>		1999 ->	
		94 128	
Oil press. switch/Int. pres. aceite		10200	
Stop light switch/Int. luz stop		24600	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 2.3, Cabrio</b>		1999 ->	
		105 143	
Oil press. switch/Int. pres. aceite		10200	
Stop light switch/Int. luz stop		24600	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 2.9 D, Cabrio</b>		1999 ->	
MB-OM 662		72 98	
Oil press. switch/Int. pres. aceite		10200	
Stop light switch/Int. luz stop		24600	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 2.9 TD, Cabrio</b>		1999 ->	
MB-OM 601 29TD		88 120	
Oil press. switch/Int. pres. aceite		10200	
Stop light switch/Int. luz stop		24600	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 3.2 4x4</b>		1999 ->	
M 104.995		156 212	
Oil press. switch/Int. pres. aceite		10200	
Stop light switch/Int. luz stop		24600	
Temp. sending unit/Termo-Resistencia		32220	
<b>Lacetti 1.4 Fastback</b>		2004 ->	
F14D3		70 95	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Lacetti 1.6 Fastback</b>		2004 ->	
F16D3		80 109	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Lacetti 1.8 Fastback</b>		2004 ->	
T18SED		90 122	
Oil press. switch/Int. pres. aceite		12430	
Temp. sending unit/Termo-Resistencia		32070	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Lanos 1.4</b>		1997 ->	
A14SMS		55 75	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24500	
Temp. sending unit/Termo-Resistencia		32070	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Lanos 1.5</b>		1997 ->	
A15SMS		63 86	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24500	
Temp. sending unit/Termo-Resistencia		32070	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Lanos 1.5 Sedan</b>		1997 ->	
A15SMS/Y15L		63 86	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24500	
Temp. sending unit/Termo-Resistencia		32070	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Lanos 1.6 16V</b>		1997 ->	
A16DMS		78 106	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24500	
Temp. sending unit/Termo-Resistencia		32070	
Rev. light switch/Int. luz marcha atrás		40510	

**DAEWOO Cont.**

<b>Leganza 2.0 16V</b>		1997-02
X 20 SED		98 133
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Without/Sin cruise control	24500
Stop light switch/Int. luz stop	With/Con cruise control	24510
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Leganza 2.0 16V</b>		2000 ->
T20SED		93 126
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Without/Sin cruise control	24500
Stop light switch/Int. luz stop	With/Con cruise control	24510
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Leganza 2.2 16V</b>		1999-02
T22SED		100 136
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Without/Sin cruise control	24500
Stop light switch/Int. luz stop	With/Con cruise control	24510
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Matiz 0.8</b>		1998 ->
F8CV		38 52
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	Manual	24310
Stop light switch/Int. luz stop	Automatic	24510
Temp. sending unit/Termo-Resistencia		32070
<b>Matiz 1.0</b>		2003 ->
		47 64
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24310
<b>Musso 2.2 TD</b>		1999 ->
MB OM 601		74 101
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32220
<b>Musso 2.3</b>		1999 ->
M 111.970		103 140
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32220
<b>Musso 2.9 D 4x4</b>		1999-99
MB-OM 662		73 99
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32220
<b>Musso 2.9 TD 4x4</b>		1999 ->
MB-OM 601 29TD		88 120
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32220
<b>Musso 3.2 4x4</b>		1999 ->
M 104.992		162 220
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32220
<b>Nexia 1.5</b>		1995-97
G15MF		52 71
Stop light switch/Int. luz stop		24310
Temp. sending unit/Termo-Resistencia		32070
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40510
<b>Nexia 1.5</b>		1995-97
G15MF		55 75
Stop light switch/Int. luz stop		24310
Temp. sending unit/Termo-Resistencia		32070
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40510
<b>Nexia 1.5</b>		1996-97
G15MF		44 60
Stop light switch/Int. luz stop		24310
Temp. sending unit/Termo-Resistencia		32070
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40510
<b>Nexia 1.5 16V</b>		1995-97
A15MF		66 90
Stop light switch/Int. luz stop		24310
Temp. sending unit/Termo-Resistencia		32070
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40510
<b>Nubira 1.6 16V, Sedan, Wagon</b>		1997 ->
A16DMS		78 106
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Without/Sin cruise control	24500
Stop light switch/Int. luz stop	With/Con cruise control	24510
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Nubira 1.6 16V, Sedan, Wagon</b>		2000 ->
A16DMS		76 103
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40510
<b>Nubira 1.6 Sedan, Wagon</b>		2003 ->
F16D3		80 109
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40510
<b>Nubira 1.8 Kombi, Wagon</b>		2003 ->
T18SED		90 122
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40510
<b>Nubira 2.0 16V, Sedan, Wagon</b>		1997 ->
X 20 SED		98 133
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Without/Sin cruise control	24500
Stop light switch/Int. luz stop	With/Con cruise control	24510
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510

**DAEWOO Cont.**

<b>Nubira 2.0 16V, Sedan, Wagon</b>		2000 ->
T20SED		93 126
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40510
<b>Tacuma 1.6</b>		2000 ->
A16DMS		77 105
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Tacuma 1.8</b>		2000 ->
		74 101
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Tacuma 1.8</b>		2000 ->
A18DMS		72 98
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Tacuma 1.8</b>		2000 ->
		66 90
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
<b>Tacuma 1.8</b>		2000 ->
F18D2		67 91
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		40510
<b>Tacuma 2.0</b>		2000 ->
		94 128
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510
<b>Tacuma 2.0</b>		2001 ->
X 20 SED		89 121
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		32070
Rev. light switch/Int. luz marcha atrás		40510

**DAF**

<b>428-435 2.5 TD</b>		1989-93
ET 70		71 97
Oil press. switch/Int. pres. aceite	0.80 bar	11630

**DAIHATSU**

<b>Applause I 1.6 16V</b>		1989-97
HD		66 90
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Fan switch/Termocontacto ventilador	07.1992 ->	36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Applause I 1.6 16V, 4WD</b>		1989-97
HD-E		77 105
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Fan switch/Termocontacto ventilador	07.1992 ->	36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Applause II 1.6 16V</b>		1997-00
HD-E		73 99
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.0</b>		1987-92
CB 23		38 52
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Temp. s. warning lamp/Termocont. temp.	04.1991 ->	35960
Fan switch/Termocontacto ventilador	04.1991 ->	37650
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.0</b>		1990-92
CB 90		40 54
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.0</b>		1989-92
CB 90		41 56
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.0 D</b>		1987-92
CL 11		27 37
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.0 Gti</b>		1987-92
CB 80 T		74 101
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.0 TD</b>		1987-92
CL/CL 61		35 48
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980

**DAIHATSU Cont.**

<b>Charade III 1.0 Turbo</b>		1987-90
CB 61		50 68
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.3 i, 4WD</b>		1988-93
HCE		66 90
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade III 1.3 Sedan</b>		1990-93
HCE		66 90
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia	07.1992 ->	31570
Temp. sending unit/Termo-Resistencia	-> 06.1992	32350
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.0</b>		1994-96
CB 22		38 52
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.3</b>		1996-99
HC		44 60
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.3 16V</b>		1996-99
		55 75
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.3 i 16V</b>		1993-99
HC		62 84
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.5 i 16V</b>		1997-99
HEE/HEEG		66 90
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.5 i 16V Sedan</b>		1994 ->
HEE		66 90
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.5 Sedan</b>		1994 ->
HE		55 75
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Charade IV 1.6 GTi</b>		1993-99
HD-E		77 105
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Temp. s. warning lamp/Termocont. temp.		35960
Fan switch/Termocontacto ventilador		36565
Rev. light switch/Int. luz marcha atrás		40980
<b>Cuore II 0.8, 4WD</b>		1989-90
ED 10		29 39
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>Cuore II 0.8, 4WD</b>		1985-90
ED 10		32 44
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>Cuore III 0.8</b>		1990-94
ED 10 K		30 41
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador	-> 05.1994	37651
Fan switch/Termocontacto ventilador	05.1994 ->	37652
Rev. light switch/Int. luz marcha atrás		40980
<b>Cuore IV 0.8</b>		1995-96
ED 20		32 43
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador		37652
Rev. light switch/Int. luz marcha atrás		40980
<b>Cuore V 0.8</b>		1996-98
EF-EL		31 42
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador		37652
Rev. light switch/Int. luz marcha atrás		40980
<b>Cuore VI 1.0 i</b>		1998-03
EJDE		41 56
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40980

**DAIHATSU Cont.**

<b>Cuore VII 1.0</b>		2003 ->
EJ-VE		43 58
Rev. light switch/Int. luz marcha atrás		40980
<b>Feroza 1.6 16V</b>		1988 ->
HDC		63 86
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40981
<b>Feroza 1.6 i 16V</b>		1988 ->
HD-E		70 95
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40981
<b>Gran Move 1.5 16V</b>		1996-98
HEEG		66 90
Rev. light switch/Int. luz marcha atrás		40980
<b>Hijet I 0.8</b>		1986-89
CD		29 39
Stop light switch/Int. luz stop		24330
<b>Hijet I 1.0</b>		1986-89
CB		33 45
Stop light switch/Int. luz stop		24330
<b>Move 0.8</b>		1996 ->
ED 20		31 42
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		37652
Rev. light switch/Int. luz marcha atrás		40981
<b>Move 1.0 i</b>		1998 ->
EJDE		41 55
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		37652
Rev. light switch/Int. luz marcha atrás		40981
<b>Rocky 2.0, Hard Top, Soft Top</b>		1985-93
3Y		65 88
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24330
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		37652
Rev. light switch/Int. luz marcha atrás		40981
<b>Rocky 2.8 D, Soft Top, Hard Top</b>		1985 ->
DL		54 73
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40981
<b>Rocky 2.8 TD Hard Top</b>		1993 ->
DL 52		72 98
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40981
<b>Rocky 2.8 TD Hard Top, Soft Top</b>		1991 ->
DL 52		75 102
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40981
<b>Rocky 2.8 TD, Hard Top, Soft Top</b>		1987-93
DL 51		67 91
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40981
<b>Sirion 0.7 Turbo 4WD</b>		1998-05
		88 120
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>Sirion 1.0 i, 4WD</b>		1998-00
EJDE		41 56
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>Sirion 1.0 i, 4WD</b>		2000-05
EJ-VE		43 58
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>Sirion 1.3 Sport, 4WD</b>		2000-05
K3-VE2		75 102
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>Terios 1.3, 4WD</b>		1997-00
HE-EJ		61 83
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
<b>Terios 1.3, 4WD</b>		2000-05
K3-VE		63 86
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
<b>YRV 1.0</b>		2001 ->
EJ-VE		43 58
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36711
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980
<b>YRV 1.3 Gtti</b>		2002 ->
K3-VET		95 129
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36711
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980

**DAIHATSU Cont.**

<b>YRV 1.3, 4WD</b>		2001 ->
K3-VE		64 87
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36711
Fan switch/Termocontacto ventilador		37651
Rev. light switch/Int. luz marcha atrás		40980

**DAIMLER**

<b>Double Six 5.3</b>		1986-93
7P		194 264
Oil press. transmitter/Transm. pres. aceite		14040
<b>Double Six 5.3</b>		1981-93
V 12 (90-93)		197 268
Oil press. transmitter/Transm. pres. aceite		14040
<b>Limousine 4.2</b>		1988-91
		131 178
Oil press. switch/Int. pres. aceite		11420
<b>Six 4.0</b>		1994 ->
9JPF8B		177 241
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38250

**FIAT**

<b>126 650</b>		1981-00
126 A1.048		18 24
Rev. light switch/Int. luz marcha atrás		40500
<b>126 700</b>		1987-96
126 A2.000/126 A2.048		19 26
Oil press. switch/Int. pres. aceite	0.35 bar	11410
Rev. light switch/Int. luz marcha atrás		41215
<b>500 1.2</b>		2007 ->
169 A4.000		51 69
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>500 1.3 D Multijet</b>		2007 ->
169 A1.000		55 75
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>500 1.3 D Multijet</b>		2009 ->
199 B1.000		70 95
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>500 1.4</b>		2007 ->
169 A3.000		74 100
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>500 1.4 Abarth</b>		2008 ->
312 A1.000		99 135
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>500 C 1.2</b>		2009 ->
169 A4.000		51 69
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>500 C 1.3 D Multijet</b>		2009 ->
169 A1.000		55 75
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>500 C 1.3 D Multijet</b>		2009 ->
199 B1.000		70 95
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>500 C 1.4</b>		2009 ->
169 A3.000		74 100
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Barchetta 1.8 16V</b>		1995 ->
183 A1.000/188 A6.000		96 130
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24660
Temp. sending unit/Termo-Resistencia	-> 05.1998	31140
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.2 16V 80</b>		1998-00
182 B2.000		60 82
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Rev. light switch/Int. luz marcha atrás		40490
<b>Brava 1.2 16V 80</b>		2000-01
188 A5.000		59 80
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop		24660
Rev. light switch/Int. luz marcha atrás		40490

**FIAT Cont.**

<b>Brava 1.4</b>		1995-01
182 A5.000		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24400
Stop light switch/Int. luz stop	R.H.D.	24660
Stop light switch/Int. luz stop	07.2000 ->	24675
Temp. sending unit/Termo-Resistencia	-> 07.2000	31140
Fan switch/Termocontacto ventilador		37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.4 12V</b>		1995-98
182 A3.000		59 80
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.1998 ->	24660
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador		37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.6 16V</b>		1995-01
182 A6.000		66 90
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador		37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.6 16V</b>		1995-01
182 A6.000		66 90
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador		37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.6 16V</b>		1996-01
182 A4.000		76 103
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Fan switch/Termocontacto ventilador		37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.8 GT 16V</b>		1995-01
182 A2.000		83 113
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Rev. light switch/Int. luz marcha atrás	-> 07.1999	40520
<b>Brava 1.9 D</b>		1995-01
160 A7.000		48 65
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.	Climat	35840
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.9 JTD</b>		2000-01
182 B9.000		74 100
Oil press. switch/Int. pres. aceite		12430
<b>Brava 1.9 JTD 105</b>		1998-01
182 B4.000		77 105
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.9 TD 100 S</b>		1996-01
182 A7.000		74 100
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Brava 1.9 TD 75 S</b>		1996-01
182 A8.000		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.	Climat	35840
Temp. s. warning lamp/Termocont. temp.		35855
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Bravo 1.2 16V 80</b>		1998-00
182 B2.000		60 82
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop	07.2000 ->	24660
Stop light switch/Int. luz stop	-> 07.2000	24675
Rev. light switch/Int. luz marcha atrás		40490
<b>Bravo 1.2 16V 80</b>		2000-01
188 A5.000		59 80
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	R.H.D.	24400
Stop light switch/Int. luz stop		24660
Rev. light switch/Int. luz marcha atrás		40490



**FIAT Cont.**

<b>Bravo 1.4</b>		<b>1995-01</b>
182 A5.000		55 75
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 1.4</b>		<b>1995-01</b>
182 A3.000		59 80
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 1.4</b>		<b>2007 -&gt;</b>
192 B2.000		66 90
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Bravo 1.4 T-Jet</b>		<b>2007 -&gt;</b>
198 A4.000		88 120
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
<b>Bravo 1.4 T-Jet</b>		<b>2007 -&gt;</b>
198 A1.000		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Bravo 1.6 16V</b>		<b>1995-01</b>
182 A6.000		66 90
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 1.6 16V</b>		<b>1996-01</b>
182 A4.000		76 103
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 1.6 D Multijet</b>		<b>2008 -&gt;</b>
198 A3.000		77 105
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>Bravo 1.6 D Multijet</b>		<b>2008 -&gt;</b>
198 A2.000		88 120
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>Bravo 1.8 GT</b>		<b>1995-01</b>
182 A2.000		83 113
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 1.9 D</b>		<b>1995-01</b>
160 A7.000		48 65
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Temp. s. warning lamp/Termocont. temp.		<b>35840</b>
Fan switch/Termocontacto ventilador	Climat	<b>37900</b>
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	<b>40520</b>
<b>Bravo 1.9 D Multijet</b>		<b>2007 -&gt;</b>
192 A8.000		88 120
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>Bravo 1.9 D Multijet</b>		<b>2007 -&gt;</b>
937 A5.000		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40940</b>
<b>Bravo 1.9 JTD</b>		<b>2000-01</b>
182 B9.000		74 100
Oil press. switch/Int. pres. aceite		<b>12430</b>
<b>Bravo 1.9 JTD 105</b>		<b>1998-01</b>
182 B4.000		77 105
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>

**FIAT Cont.**

<b>Bravo 1.9 TD 100 S</b>		<b>1996-01</b>
182 A7.000		74 100
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 1.9 TD 75 S</b>		<b>1996-01</b>
182 A8.000		55 75
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35841</b>
Temp. s. warning lamp/Termocont. temp.		<b>35855</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 2.0 D Multijet</b>		<b>2008 -&gt;</b>
844 A2.000/198 A5.000		121 165
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
<b>Bravo 2.0 HGT 20V</b>		<b>1995-98</b>
182 A1.000		108 147
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop		<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador	Climat	<b>37220</b>
Fan switch/Termocontacto ventilador		<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Bravo 2.0 HGT 20V</b>		<b>1998-01</b>
182 B7.000		113 154
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24400</b>
Stop light switch/Int. luz stop	07.2000 ->	<b>24660</b>
Stop light switch/Int. luz stop	-> 07.2000	<b>24675</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37220</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Campagnola 2.0</b>		<b>1974-89</b>
6132 AZ 2.000		59 80
Oil press. switch/Int. pres. aceite		<b>11260</b>
<b>Campagnola 2.4 D</b>		<b>1974-89</b>
8144.61.200		53 72
Oil press. switch/Int. pres. aceite		<b>11260</b>
<b>Cinquecento 0.7</b>		<b>1991-96</b>
170 A.000		23 31
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37710</b>
Rev. light switch/Int. luz marcha atrás		<b>41215</b>
<b>Cinquecento 0.7 i</b>		<b>1994-98</b>
170 A.046		22 30
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37710</b>
Rev. light switch/Int. luz marcha atrás		<b>41215</b>
<b>Cinquecento 0.9</b>		<b>1991-93</b>
170 A1.000		30 41
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37710</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Cinquecento 0.9 i.e.</b>		<b>1991-93</b>
170 A1.046		30 41
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37710</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Cinquecento 0.9 i.e. S</b>		<b>1991-99</b>
1170 A1.000/1170 A1.046		29 40
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37710</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Cinquecento 1.1 Sporting</b>		<b>1994-98</b>
176 B2.000		40 54
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24010</b>
Temp. sending unit/Termo-Resistencia		<b>31140</b>
Fan switch/Termocontacto ventilador		<b>37710</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Coupe 1.8 16V</b>		<b>1996-00</b>
183 A1.000		96 131
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop	-> 08.1996	<b>24410</b>
Stop light switch/Int. luz stop	09.1996 ->	<b>24660</b>
Temp. sending unit/Termo-Resistencia	-> 05.1998	<b>31140</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31600</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37220</b>
Fan switch/Termocontacto ventilador	Climat	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>



**FIAT Cont.**

<b>Croma 2500 TD</b> 8144.91.2000		1985-89 74 101
Oil press. switch/Int. pres. aceite	-> N° 1015858	11260
Oil press. switch/Int. pres. aceite	N° 1015858 ->	12430
Stop light switch/Int. luz stop	-> Ch. 0111371	24380
Stop light switch/Int. luz stop	Ch. 0111371 ->	24390
Thermistor-Thermocont./Doble función		34060
Fan switch/Termocontacto ventilador	01.1989 ->, Climat	36230
Fan switch/Termocontacto ventilador	-> 12.1988, Ch. 0111371 ->	37220
Fan switch/Termocontacto ventilador	-> Ch. 0111371	37490
<b>Croma 2500 TD</b> 8144.97/8144.97 Y/8144.97.2400		1989-96 85 115
Oil press. switch/Int. pres. aceite	-> N° 1015858	11260
Oil press. switch/Int. pres. aceite	N° 1015858 ->	12430
Stop light switch/Int. luz stop	-> Ch. 0111371	24380
Stop light switch/Int. luz stop	Ch. 0111371 ->	24390
Thermistor-Thermocont./Doble función		24650
Fan switch/Termocontacto ventilador	Climat	34060
Fan switch/Termocontacto ventilador	-> Ch. 0111371	36230
Rev. light switch/Int. luz marcha atrás	10.1991 ->	37490
		41220
<b>Croma 2500 TDE</b> 8144.97 S		1991-96 77 105
Oil press. switch/Int. pres. aceite	-> N° 1015858	11260
Oil press. switch/Int. pres. aceite	N° 1015858 ->	12430
Stop light switch/Int. luz stop	-> Ch. 0111371	24380
Stop light switch/Int. luz stop	Ch. 0111371 ->	24390
Thermistor-Thermocont./Doble función		24650
Fan switch/Termocontacto ventilador	Climat	34060
Fan switch/Termocontacto ventilador	-> Ch. 0111371	36230
Rev. light switch/Int. luz marcha atrás		37490
		41220
<b>Croma 2500 V6</b> 834 G.000		1993-96 119 162
Oil press. switch/Int. pres. aceite	-> N° 1015858	11260
Oil press. switch/Int. pres. aceite	N° 1015858 ->	12430
Stop light switch/Int. luz stop	-> Ch. 0111371	24380
Stop light switch/Int. luz stop	Ch. 0111371 ->	24390
Thermistor-Thermocont./Doble función		24650
Fan switch/Termocontacto ventilador	Climat	34060
Fan switch/Termocontacto ventilador	-> Ch. 0111371	36230
Rev. light switch/Int. luz marcha atrás		37490
		41220
<b>Doblo 1.2</b> 223 A5.000		2001 -> 48 65
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.3 D Multijet</b> 223 A9.000		2005 -> 62 84
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.3 D Multijet Cargo</b> 199 A2.000		2005 -> 55 75
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.3 JTD 16V Cargo</b> 188 A9.000		2004 -> 51 70
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.4</b> 350 A1.000		2005 -> 57 77
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Rev. light switch/Int. luz marcha atrás		40490
<b>Doblo 1.6 16V</b> 182 B6.000		2001 -> 76 103
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.6 Natural Power</b> 182 B6.000		2002 -> 76 103
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Rev. light switch/Int. luz marcha atrás		40490
<b>Doblo 1.9 D</b> 223 A6.000		2001 -> 46 63
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.9 D Multijet</b> 186 A9.000		2005 -> 88 120
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.9 JTD</b> 182 B9.000/223 B2.000		2001 -> 74 100
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24412
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Rev. light switch/Int. luz marcha atrás		40520

**FIAT Cont.**

<b>Doblo 1.9 JTD</b> 223 B1.000/223 A7.000		2003 -> 77 105
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24412
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Doblo 1.9 JTD Cargo</b> 182 B9.000		2001 -> 74 100
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24411
Stop light switch/Int. luz stop		24412
Rev. light switch/Int. luz marcha atrás		40520
<b>Ducato 1.9 D</b> D9B/DJY/D9B (XUD9A)		1998-02 50 68
Oil press. switch/Int. pres. aceite	-> 10.1998, -> Ch. 5619178	12460
Oil press. switch/Int. pres. aceite	10.1998 ->, Ch. 5619178 ->	12640
Stop light switch/Int. luz stop	-> Ch. 5017795	24365
Stop light switch/Int. luz stop	Ch. 5029100 ->	24410
Thermistor-Thermocont./Doble función		34400
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 D</b> DJY		1998-02 50 68
Oil press. switch/Int. pres. aceite	-> Ch. 5619178	12460
Oil press. switch/Int. pres. aceite	Ch. 5619178 ->	12640
Stop light switch/Int. luz stop	Ch. 5741637 ->	24365
Stop light switch/Int. luz stop	-> Ch. 5741636	24410
Thermistor-Thermocont./Doble función		34400
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 D</b> DHX		1998-01 59 80
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 D, Combinato</b> 230 A2.000		1994-02 51 69
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. 5029100	24370
Stop light switch/Int. luz stop	Ch. 5029101 ->	24410
Temp. s. warning lamp/Termocont. temp.		35910
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 D, Panorama</b> 149 B1.000		1987-90 52 71
Oil press. switch/Int. pres. aceite	-> N° 0963133, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	N° 0963133 ->	12430
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38200
Rev. light switch/Int. luz marcha atrás		41070
<b>Ducato 1.9 D, Panorama</b> 149 B1.000		1990-94 52 71
Oil press. switch/Int. pres. aceite	-> N° 0963133, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	N° 0963133 ->	12430
<b>Ducato 1.9 TD</b> DHX (XUD9TF/L)		1998-02 66 90
Oil press. switch/Int. pres. aceite	-> 10.1998	12460
Oil press. switch/Int. pres. aceite	10.1998 ->	12640
Stop light switch/Int. luz stop		24410
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	35610
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 TD</b> DHX		1998-01 59 80
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 TD CAT</b> 230 A4.000		1994-02 59 80
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. 5017795	24365
Stop light switch/Int. luz stop	Ch. 5029100 ->	24410
Temp. s. warning lamp/Termocont. temp.		35910
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 1.9 TD, Panorama</b> 280 A1.000		1989-94 60 82
Oil press. switch/Int. pres. aceite	0.35 bar	11410
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38200
Rev. light switch/Int. luz marcha atrás		41070
<b>Ducato 1.9 TD, Panorama/Combinato</b> 230 A3.000		1994-02 60 82
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. 5017795	24365
Stop light switch/Int. luz stop	Ch. 5029100 ->	24410
Temp. s. warning lamp/Termocont. temp.		35910
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37900
Rev. light switch/Int. luz marcha atrás	Ch. 5960456 ->	40492
Rev. light switch/Int. luz marcha atrás	-> Ch. 5960455	40570
<b>Ducato 100 2.2 D Multijet</b> 4HV		2006 -> 74 100
Oil press. switch/Int. pres. aceite		12610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Ducato 120 2.3 D Multijet</b> F1AE0481D		2006 -> 88 120
Oil press. switch/Int. pres. aceite		12570
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40510

**FIAT Cont.**

<b>Ducato 130 Multijet 2.3 D</b>	2007 ->	
F1AE0481N/F1AE3481D	96 131	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Ducato 160 3.0 D Multijet Power</b>	2006 ->	
F1CE0481D	116 158	
Oil press. switch/Int. pres. aceite	12570	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Ducato 2.0</b>	1988-94	
170 D	62 84	
Temp. s. warning lamp/Termocont. temp.	35210	
<b>Ducato 2.0</b>	1982-90	
XN 1T	58 79	
Rev. light switch/Int. luz marcha atrás	41070	
<b>Ducato 2.0</b>	1994-95	
	74 101	
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.0 4x4</b>	1990-94	
170 D	63 86	
Temp. s. warning lamp/Termocont. temp.	35210	
<b>Ducato 2.0 JTD</b>	2001 ->	
RHV (DW10)	62 84	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24411	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24412	
On clutch pedal/Int. pedal embrague	24413	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->, Gear box/Cambio MA, ME,
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.0, Bipower</b>	2002 ->	
RFL	81 110	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Ducato 2.0, Panorama/Combinato, 4x4</b>	1994-02	
RFW	80 109	
Oil press. switch/Int. pres. aceite	-> 10.1998	
Oil press. switch/Int. pres. aceite	12640	
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.3 JTD</b>	2002 ->	
F1AE0481C	81 110	
Oil press. switch/Int. pres. aceite	12570	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Rev. light switch/Int. luz marcha atrás	40510	
<b>Ducato 2.4 TD Panorama</b>	1987-90	
8144.21.220/8144.21	68 92	
Fan switch/Termocontacto ventilador	38200	2 fans or speeds/Ventil. o veloc.
<b>Ducato 2.4 TD, Panorama 4x4</b>	1986-90	
8144.21	68 92	
Fan switch/Termocontacto ventilador	38200	2 fans or speeds/Ventil. o veloc.
<b>Ducato 2.5 D, Combinato, 4x4</b>	1994-02	
8140.67	62 84	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24365	-> Ch. 5029100
Stop light switch/Int. luz stop	24410	Ch. 5029100 ->
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.5 D, Panorama</b>	1982-90	
CRD93L (U25-661)/8144.67	55 75	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	38200	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	41070	
<b>Ducato 2.5 D, Panorama, 4x4</b>	1987-90	
8144.67	55 75	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	38200	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	41070	
<b>Ducato 2.5 D, Panorama, 4x4</b>	1990-94	
8144.67	55 75	
Oil press. switch/Int. pres. aceite	11410	-> N° 0963133, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 0963133 ->
<b>Ducato 2.5 TD, 4x4</b>	1994-98	
8140.47	85 109	
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.5 TD, Panorama, 4x4</b>	1990-94	
8140.27	70 95	
Oil press. switch/Int. pres. aceite	11410	-> N° 0963133, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 0963133 ->
<b>Ducato 2.5 TDI</b>	1994-02	
8140.47R	80 109	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.5 TDI, 4x4</b>	1994-02	
8140.47	85 116	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24370	-> Ch. 5029100
Stop light switch/Int. luz stop	24410	Ch. 5029100 ->
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455

**FIAT Cont.**

<b>Ducato 2.8 D, 4x4</b>	1998-02	
8140.63	64 87	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24365	Ch. 5741637 ->
Stop light switch/Int. luz stop	24410	-> Ch. 5741636
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.8 iDTD, 4x4</b>	1998-01	
8140.43	90 122	
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37910	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.8 JTD</b>	2001-01	
8140.43S	93 126	
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.8 JTD, 4x4</b>	2000-02	
8140.43S	94 128	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24411	
On clutch pedal/Int. pedal embrague	24412	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24413	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	-> 04.2002, Ch. 6144126,6144101 ->
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->, Gear box/Cambio MA, ME,
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Ducato 2.8 TDI, 4x4</b>	1997-02	
8140.43	90 122	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24365	Ch. 5741637 ->
Stop light switch/Int. luz stop	24410	-> Ch. 5741636
Fan switch/Termocontacto ventilador	37900	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37910	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40492	Ch. 5960456 ->
Rev. light switch/Int. luz marcha atrás	40570	-> Ch. 5960455
<b>Duna 60 1.1, Weekend</b>	1987-91	
146 A6.000	43 58	
Oil press. switch/Int. pres. aceite	11410	-> 02.1991, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	02.1991 ->
Rev. light switch/Int. luz marcha atrás	40480	
<b>Duna 70 1.3, Weekend</b>	1987-91	
146 A5.000	49 67	
Oil press. switch/Int. pres. aceite	11410	-> 02.1991, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	02.1991 ->
Rev. light switch/Int. luz marcha atrás	40480	
<b>Duna DS 1.7, Weekend</b>	1987-91	
149 B3.000	44 60	
Oil press. switch/Int. pres. aceite	11410	0.35 bar
Oil press. transmitter/Transm. pres. aceite	14550	
Fan switch/Termocontacto ventilador	37830	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40480	
<b>Elba 1.5</b>	1992-96	
149 C1.000	55 75	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	31140	
<b>Elba 1.7 D</b>	1989-96	
146 B2.000	43 58	
Oil press. switch/Int. pres. aceite	12430	
<b>Fiorino 1.3 D Multijet Furgón</b>	2008 ->	
199 A2.000/199 A9.000	55 75	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Fiorino 1.3, Pick up</b>	1988-94	
146 A5.000	49 67	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40480	
<b>Fiorino 1.4 Furgón</b>	2008 ->	
KFT/KFV	54 73	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Fiorino 1.4 Pick-up</b>	1994-01	
146 D5.000	49 67	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	31140	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Fiorino 1.5</b>	1988-93	
149 C1.000	55 75	
Oil press. switch/Int. pres. aceite	11410	0.35 bar
Temp. sending unit/Termo-Resistencia	31140	
Rev. light switch/Int. luz marcha atrás	40480	
<b>Fiorino 1.6 Pick up</b>	1994-01	
146 D6.000/146 C6.000	55 75	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	31140	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Fiorino 1.7 D Pick-up</b>	1993-99	
146 B2.000	42 57	
Oil press. switch/Int. pres. aceite	12430	
Oil press. transmitter/Transm. pres. aceite	14550	
Fan switch/Termocontacto ventilador	37830	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37900	Climat
Rev. light switch/Int. luz marcha atrás	40520	
<b>Fiorino 1.7 D, Pick-up</b>	1987-90	
149 B3.000	44 60	
Oil press. transmitter/Transm. pres. aceite	14550	
Rev. light switch/Int. luz marcha atrás	40480	
<b>Fiorino 1.7 D, Pick-up</b>	1988-99	
149 B3.000	44 60	
Oil press. transmitter/Transm. pres. aceite	14550	
Fan switch/Termocontacto ventilador	37830	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40480	

**FIAT Cont.**

<b>Fiorino 1.7 TD Pick-up</b>		<b>1997-01</b>
146 D7.000		46 63
Oil press. switch/Int. pres. aceite		12430
Temp. s. warning lamp/Termocont. temp.	Climat	35841
Fan switch/Termocontacto ventilador	Climat	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Fiorino 60 1.1 Furgón</b>		<b>1988-93</b>
146 A9.000		40 54
Oil press. switch/Int. pres. aceite	-> 02.1991, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	02.1991 ->	12430
Rev. light switch/Int. luz marcha atrás		40480
<b>Fiorino 60 1.7 D</b>		<b>1988-00</b>
149 B3.000		44 60
Oil press. switch/Int. pres. aceite	-> N° Vet 8187816, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	N° Vet 8187816 ->	12430
Oil press. transmitter/Transm. pres. aceite		14550
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37830
Rev. light switch/Int. luz marcha atrás		40480
<b>Fiorino 60 1.7 D Furgón</b>		<b>1988-96</b>
146 B2.000		42 57
Oil press. switch/Int. pres. aceite	-> N° Vet 8187816, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	N° Vet 8187816 ->	12430
Oil press. transmitter/Transm. pres. aceite		14550
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37830
Fan switch/Termocontacto ventilador	Climat	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Fiorino 65 1.7 TD Furgón</b>		<b>1997-01</b>
146 D7.000		46 63
Oil press. switch/Int. pres. aceite		12430
Temp. s. warning lamp/Termocont. temp.	Climat	35841
Fan switch/Termocontacto ventilador	Climat	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Fiorino 70 i.e. 1.4 Furgón</b>		<b>1994-01</b>
146 C5.000/146 D5.000		49 67
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		31140
Rev. light switch/Int. luz marcha atrás		40520
<b>Fiorino 75 i.e. 1.5 Furgón</b>		<b>1988-93</b>
149 C1.000		55 75
Oil press. switch/Int. pres. aceite	-> N° 8106769, 0.35 bar	11410
Oil press. switch/Int. pres. aceite	N° 8106769 ->	12430
Temp. sending unit/Termo-Resistencia		31140
Rev. light switch/Int. luz marcha atrás		40480
<b>Fiorino 75 i.e. 1.6</b>		<b>1993-01</b>
146 D6.000/146 C6.000		55 75
Oil press. switch/Int. pres. aceite		12430
Temp. sending unit/Termo-Resistencia		31140
Rev. light switch/Int. luz marcha atrás		40520
<b>Grande Punto 1.2</b>		<b>2005 -&gt;</b>
199 A4.000		48 65
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40490
<b>Grande Punto 1.3 D Multijet</b>		<b>2005 -&gt;</b>
199 A2.000		55 75
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40520
<b>Grande Punto 1.3 D Multijet</b>		<b>2005 -&gt;</b>
199 A3.000		66 90
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40510
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40520
<b>Grande Punto 1.4</b>		<b>2005 -&gt;</b>
350 A1.000		57 77
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40490
<b>Grande Punto 1.4 16V</b>		<b>2005 -&gt;</b>
199 A6.000		70 95
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40490
<b>Grande Punto 1.4 Abarth</b>		<b>2007 -&gt;</b>
199 A8.000		114 155
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24791
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40510
<b>Grande Punto 1.4 Abarth</b>		<b>2007 -&gt;</b>
199 A8.000		132 180
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24791
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40510
<b>Grande Punto 1.4 T-Jet</b>		<b>2007 -&gt;</b>
198 A4.000		88 120
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24791
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40510
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40520
<b>Grande Punto 1.9 D Multijet</b>		<b>2005 -&gt;</b>
939 A1.000		88 120
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40510

**FIAT Cont.**

<b>Grande Punto 1.9 D Multijet</b>		<b>2005 -&gt;</b>
199 A5.000		96 130
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás		40510
<b>Idea 1.2 16V</b>		<b>2004 -&gt;</b>
188 A5.000		59 80
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Idea 1.3 D Multijet</b>		<b>2005 -&gt;</b>
199 A3.000		66 90
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Idea 1.3 JTD</b>		<b>2004 -&gt;</b>
188 A9.000		51 70
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Idea 1.4</b>		<b>2005 -&gt;</b>
350 A1.000		57 77
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Idea 1.4 16V</b>		<b>2004 -&gt;</b>
843 A1.000		70 95
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Idea 1.9 JTD</b>		<b>2004 -&gt;</b>
188 B2.000		74 101
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40510
<b>Linea 1.3 D Multijet</b>		<b>2007 -&gt;</b>
199 A3.000		66 90
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24792
Rev. light switch/Int. luz marcha atrás		40520
<b>Linea 1.4</b>		<b>2007 -&gt;</b>
350 A1.000		57 77
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24412
Stop light switch/Int. luz stop		24413
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24792
Rev. light switch/Int. luz marcha atrás		40490
<b>Linea 1.4 T-Jet</b>		<b>2007 -&gt;</b>
198 A4.000		88 120
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40520
<b>Linea 1.6 D Multijet</b>		<b>2009 -&gt;</b>
198 A3.000		77 105
Stop light switch/Int. luz stop		24413
<b>Marea 1.2 16V, Weekend</b>		<b>1998 -&gt;</b>
182 B2.000		60 82
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40490
<b>Marea 1.4 80 12V, Weekend</b>		<b>1996 -&gt;</b>
182 A3.000		59 80
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40490
<b>Marea 1.6</b>		<b>2000-02</b>
182 B6.000		76 103
Oil press. switch/Int. pres. aceite		12430
<b>Marea 1.6 100 16V Bipower</b>		<b>1999 -&gt;</b>
186 A4.000/185 A3.000		76 103
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 1.6 100 16V, Weekend</b>		<b>1996 -&gt;</b>
182 A4.000		76 103
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia	-> N° 0176690, 5054799	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 1.8 115 16V, Weekend</b>		<b>1996 -&gt;</b>
182 A2.000		83 113
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia	-> N° 2018321, 0270957	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520

**FIAT Cont.**

<b>Marea 1.9 JTD 105, Weekend</b>		1999-01
182 B4.000		77 105
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 1.9 JTD 110, Weekend</b>		2001 ->
186 A6.000		81 110
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 1.9 TD 100</b>		1996 ->
182 A7.000		74 100
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/sin A.A.	37900
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 1.9 TD 100 Weekend</b>		1996 ->
182 A7.000/182 B9.000		74 100
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37900
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 1.9 TD 75, Weekend</b>		1996 ->
182 A8.000		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Temp. sending unit/Termo-Resistencia		32540
Temp. s. warning lamp/Termocont. temp.	Climat	35841
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35855
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 2.0 150 20V, Weekend</b>		1996-99
182 A1.000		108 147
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 2.0 150 20V, Weekend</b>		2001 ->
185 A8.000		110 150
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 2.0 155 20V, Weekend</b>		1999-01
182 B7.000		113 154
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Marea 2.4 JTD 130, Weekend</b>		1999 ->
839 A5.000/185 A6.000		96 130
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Fan switch/Termocontacto ventilador	Without/sin A.A.	37900
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40940
<b>Marea 2.4 TD 125, Weekend</b>		1996-99
185 A2.000		91 125
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24410
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia	-> Ch. 0205884	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40940
<b>Multipla 1.6</b>		2000-01
182 B6.000		76 103
Stop light switch/Int. luz stop		24413
<b>Multipla 1.6 100 16V</b>		1999 ->
182 A4.000		76 103
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Stop light switch/Int. luz stop		24660
Rev. light switch/Int. luz marcha atrás		40520
<b>Multipla 1.6 16V Bipower</b>		1999 ->
186 A4.000		76 103
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Stop light switch/Int. luz stop		24660
Rev. light switch/Int. luz marcha atrás		40520
<b>Multipla 1.6 16V Bipower</b>		2001 ->
182 B6.000		76 103
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Stop light switch/Int. luz stop		24660
Rev. light switch/Int. luz marcha atrás		40520

**FIAT Cont.**

<b>Multipla 1.6 16V Blupower</b>		1999 ->
186 A3.000		70 95
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Stop light switch/Int. luz stop		24660
Rev. light switch/Int. luz marcha atrás		40520
<b>Multipla 1.6 16V Blupower</b>		2002 ->
182 B6.000		70 95
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24413
<b>Multipla 1.9 JTD</b>		2002 ->
186 A9.000		88 120
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24413
<b>Multipla 1.9 JTD 105</b>		1999 ->
182 B4.000		77 105
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24413
Stop light switch/Int. luz stop		24660
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24665
Rev. light switch/Int. luz marcha atrás		40520
<b>Multipla 1.9 JTD 110</b>		2001-02
186 A6.000		81 110
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24413
Stop light switch/Int. luz stop		24660
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24665
Rev. light switch/Int. luz marcha atrás		40520
<b>Multipla 1.9 JTD 115</b>		2002 ->
186 A8.000		85 115
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24413
Stop light switch/Int. luz stop		24660
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24665
Rev. light switch/Int. luz marcha atrás		40520
<b>Palio 1.0</b>		1996 ->
Oil press. switch/Int. pres. aceite		45 61
Stop light switch/Int. luz stop		12430
Temp. sending unit/Termo-Resistencia		24675
Fan switch/Termocontacto ventilador	Without/Sin A.A.	31140
Fan switch/Termocontacto ventilador	Climat	37220
Rev. light switch/Int. luz marcha atrás		37910
<b>Palio 1.0</b>		1996 ->
Oil press. switch/Int. pres. aceite		45 61
Stop light switch/Int. luz stop		12430
Temp. sending unit/Termo-Resistencia		24675
Fan switch/Termocontacto ventilador	Without/Sin A.A.	31140
Fan switch/Termocontacto ventilador	Climat	37220
Rev. light switch/Int. luz marcha atrás		37910
<b>Palio 1.2</b>		1998 ->
178 B5.000/178 E2.000/176 A8.000		54 73
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Palio 1.2 Weekend</b>		1996-01
178 B5.000		54 73
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40490
<b>Palio 1.4</b>		1996 ->
178 B2.000		51 69
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24660
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Palio 1.4 Kat</b>		1996 ->
178 B2.016		51 69
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24660
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás	-> 10.1999	40490
Rev. light switch/Int. luz marcha atrás	11.1999 ->	40520
<b>Palio 1.5</b>		1996-98
Oil press. switch/Int. pres. aceite		57 77
Stop light switch/Int. luz stop		12430
Temp. sending unit/Termo-Resistencia		24675
Fan switch/Termocontacto ventilador	Without/Sin A.A.	31140
Fan switch/Termocontacto ventilador	Climat	37220
Rev. light switch/Int. luz marcha atrás		37910
<b>Palio 1.6 16V Weekend</b>		2001 ->
182 B6.000		76 103
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	07.2002 ->	24666
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		37910

**FIAT Cont.**

<b>Palio 1.6 16V, Weekend</b>		1996 ->
178 B3.000		74 100
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás	-> 10.1999	40490
Rev. light switch/Int. luz marcha atrás	10.1999 ->	40520
<b>Palio 1.7 TD</b>		1994-99
176 A3.000		51 69
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24660
Stop light switch/Int. luz stop	With radio transmitter/Con radiotransmisor	24675
Temp. sending unit/Termo-Resistencia		32540
Temp. s. warning lamp/Termocont. temp.	Climat	35842
Temp. s. warning lamp/Termocont. temp.		35855
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Palio 1.7 TD, Weekend</b>		1996-01
176 A3.000		51 70
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Stop light switch/Int. luz stop		24660
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35842
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Palio 1.9 D, Weekend</b>		2001 ->
223 A6.000		46 63
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24660
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Panda 1.1</b>		2003 ->
187 A1.000		40 54
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24412
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.2 Bi-Power / Natural Power</b>		2007 ->
188 A4.000		44 60
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.2 LPG</b>		2009 ->
188 A4.000		44 60
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.2, Van, 4x4</b>		2004 ->
188 A4.000		44 60
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24412
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.2, Van, Weekend, 4x4</b>		2001 ->
188 A4.000		44 60
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	07.2002 ->	24666
Stop light switch/Int. luz stop		24675
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.3 D Multijet</b>		2006 ->
169 A1.000		55 75
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.3 D Multijet, 4x4</b>		2003 ->
188 A9.000		51 70
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Panda 1.3 JTD Van</b>		2006 ->
169 A1.000		55 75
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
<b>Panda 1.4</b>		2006 ->
169 A3.000		74 100
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490

**FIAT Cont.**

<b>Panda 1000</b>		1986-92
156 A2.100		32 44
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	12.1991 ->	12430
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->	12440
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	35270
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1000 4x4</b>		1986-94
141 C2.000/156 A2.246		33 45
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	12.1991 ->	12430
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->	12440
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. sending unit/Termo-Resistencia	156A2.246	31590
Temp. s. warning lamp/Termocont. temp.		35070
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	35270
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1000 i.e Van</b>		1992-04
156 A2.246		33 45
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1000 i.e. Kat</b>		1987-98
141 C2.000/156 A2.246		33 45
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	12.1991 ->	12430
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->	12440
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	35270
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1000, 4x4</b>		1986-92
156 A3.000		37 50
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	12.1991 ->	12430
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->	12440
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1000, Van, 4x4</b>		1986-92
156 A3.100/156 A2.100		32 44
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	N° 3683628 ->	12440
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	35270
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1100</b>		1995-03
187 A1.000/176 B2.000		40 54
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1100 4x4</b>		1995-04
176 B2.000		40 54
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1100, Trekking 4x4</b>		1991-04
156 C.046		37 50
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	12.1991 ->	12430
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->	12440
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480
<b>Panda 1300 D</b>		1986-92
156 A5.000		27 37
Oil press. switch/Int. pres. aceite	-> N° 3683628	11200
Oil press. switch/Int. pres. aceite	0,20 bar	12020
Oil press. switch/Int. pres. aceite	12.1991 ->	12430
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->	12440
Oil press. transmitter/Transm. pres. aceite		14800
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37220
Rev. light switch/Int. luz marcha atrás		40480

**FIAT Cont.**

<b>Panda 650</b>	<b>1982-04</b>
141 A.000	22 30
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12.1991 ->
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->
Stop light switch/Int. luz stop	12440
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37460
Rev. light switch/Int. luz marcha atrás	40320
<b>Panda 650</b>	<b>1982-04</b>
	22 30
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12.1991 ->
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37490
Rev. light switch/Int. luz marcha atrás	40320
<b>Panda 750</b>	<b>1986-95</b>
156 A4.000	25 34
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12.1991 ->
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37220
Rev. light switch/Int. luz marcha atrás	40480
<b>Panda 750</b>	<b>1995-97</b>
156 A4.048	25 34
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37220
Rev. light switch/Int. luz marcha atrás	40480
<b>Panda 750, Van</b>	<b>1986-92</b>
141 B.000	25 34
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12.1991 ->
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37220
Rev. light switch/Int. luz marcha atrás	40480
<b>Panda 900</b>	<b>1980-94</b>
146 A.000/100 GL3.000	33 45
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12.1991 ->
Oil press. switch/Int. pres. aceite	-> 11.1991, N° 3683628 ->
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37220
Rev. light switch/Int. luz marcha atrás	40480
<b>Panda 900</b>	<b>1992-96</b>
1170 A1.046	29 40
Oil press. switch/Int. pres. aceite	-> N° 3683628
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24010
Temp. sending unit/Termo-Resistencia	31140
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37220
Rev. light switch/Int. luz marcha atrás	40480
<b>Punto 1.1 Van</b>	<b>1996-00</b>
176 B2.000	40 54
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	24675
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37910
Rev. light switch/Int. luz marcha atrás	40490
<b>Punto 1.2 16V 80</b>	<b>1999 -&gt;</b>
188 A5.000	59 80
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
On clutch pedal/Int. pedal embrague	L.H.D., Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24665
	40490
<b>Punto 1.2 60, Van</b>	<b>1999 -&gt;</b>
188 A4.000	44 60
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
Stop light switch/Int. luz stop	R.H.D.
On clutch pedal/Int. pedal embrague	L.H.D., Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24665
	40490
<b>Punto 1.2 Natural Power</b>	<b>2003 -&gt;</b>
188 A4.000	44 60
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24414
Rev. light switch/Int. luz marcha atrás	R.H.D.
	40490
<b>Punto 1.3 JTD 16V</b>	<b>2003 -&gt;</b>
188 A9.000	51 70
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24414
Rev. light switch/Int. luz marcha atrás	R.H.D.
	40520

**FIAT Cont.**

<b>Punto 1.3 JTD, Van</b>	<b>2003 -&gt;</b>
188 A9.000	51 69
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24412
	24413
<b>Punto 1.4</b>	<b>2003 -&gt;</b>
843 A1.000	70 95
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24411
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24413
	40490
<b>Punto 1.4 GT Turbo</b>	<b>1994-96</b>
176 A4.000	98 133
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
On clutch pedal/Int. pedal embrague	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	24675
Fan switch/Termocontacto ventilador	35070
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Punto 1.4 GT Turbo</b>	<b>1996-99</b>
176 B6.000	96 131
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	24675
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	37900
	40520
<b>Punto 1.7 D</b>	<b>1994-97</b>
176 B3.000	42 57
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	24675
Temp. s. warning lamp/Termocont. temp.	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	35070
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	37900
	40520
<b>Punto 1.7 D Van</b>	<b>1996-00</b>
176 B3.000	42 57
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	24675
Temp. s. warning lamp/Termocont. temp.	With radio transmitter/Con radiotransmisor
Fan switch/Termocontacto ventilador	35070
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40490
<b>Punto 1.7 TD, Van</b>	<b>1994-00</b>
176 A5.000	52 71
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	24675
Temp. sending unit/Termo-Resistencia	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	32540
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	35842
Fan switch/Termocontacto ventilador	Without/sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Punto 1.8 130 HGT</b>	<b>1999 -&gt;</b>
183 A1.000/188 A6.000	96 130
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
Stop light switch/Int. luz stop	R.H.D.
On clutch pedal/Int. pedal embrague	L.H.D., Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24665
	40490
<b>Punto 1.9 DS 60, Van</b>	<b>1999 -&gt;</b>
188 A3.000	44 60
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
On clutch pedal/Int. pedal embrague	L.H.D., Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24665
	40490
<b>Punto 1.9 JTD</b>	<b>2003 -&gt;</b>
188 B2.000	74 101
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24411
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
Stop light switch/Int. luz stop	R.H.D.
Rev. light switch/Int. luz marcha atrás	24412
	40520
<b>Punto 1.9 JTD 80</b>	<b>1999 -&gt;</b>
188 A2.000	59 80
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	06.2003 ->
On clutch pedal/Int. pedal embrague	06.2003 ->, Cruise control/Control veloc.
On clutch pedal/Int. pedal embrague	-> 05.2003, R.H.D.
On clutch pedal/Int. pedal embrague	-> 05.2003, L.H.D., Cruise control/Control
Rev. light switch/Int. luz marcha atrás	24665
	40520
<b>Punto 1.9 JTD, Van</b>	<b>2001 -&gt;</b>
188 A7.000	63 86
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	06.2003 ->
On clutch pedal/Int. pedal embrague	06.2003 ->, Cruise control/Control veloc.
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	-> 05.2003, R.H.D.
On clutch pedal/Int. pedal embrague	-> 05.2003, L.H.D., Cruise control/Control
Rev. light switch/Int. luz marcha atrás	24665
	40520



**FIAT Cont.**

<b>Punto 55 1.1</b>	1993-99	
176 A6.000/176 B2.000	40 54	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	35070	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto 60 1.2, Cabrio</b>	1994-00	
176 A7.000	43 58	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	35070	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto 60 1.2, Cabrio</b>	1994-00	
176 B1.000/176 B4.000	44 60	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	35070	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto 60 TD 1.7</b>	1996-99	
176 B7.000	46 63	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	32540	
Temp. s. warning lamp/Termocont. temp.	35842	Climat
Temp. s. warning lamp/Termocont. temp.	35855	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37900	Climat
Rev. light switch/Int. luz marcha atrás	40520	
<b>Punto 75 1.2</b>	1993-99	
176 A8.000	54 73	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Thermistor-Thermocont./Doble función	34020	
Temp. s. warning lamp/Termocont. temp.	35070	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto 85 16V 1.2, Cabrio</b>	1997-99	
176 B9.000	63 86	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	31140	-> N° 219325
Temp. s. warning lamp/Termocont. temp.	35070	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto 90 1.6, Cabrio</b>	1994-97	
176 A9.000	65 88	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24660	
Stop light switch/Int. luz stop	24675	With radio transmitter/Con radiotransmisor
Temp. s. warning lamp/Termocont. temp.	35070	
Fan switch/Termocontacto ventilador	37220	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto Evo 1.2</b>	2009 ->	
199 A4.000	48 65	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto Evo 1.3 D Multijet</b>	2009 ->	
199 A2.000/199 A9.000	55 75	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Punto Evo 1.3 D Multijet</b>	2009 ->	
199 B1.000	70 95	
Oil press. switch/Int. pres. aceite	12430	
<b>Punto Evo 1.4</b>	2009 ->	
350 A1.000	57 77	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto Evo 1.4 16V</b>	2009 ->	
955 A6.000	77 105	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40490	
<b>Punto Evo 1.4 16V</b>	2009 ->	
955 A2.000	99 135	
Oil press. switch/Int. pres. aceite	12430	
<b>Punto Evo 1.6 D Multijet</b>	2009 ->	
955 A3.000	88 120	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40510	
<b>Qubo 1.3 D Multijet</b>	2008 ->	
199 A2.000	55 75	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Qubo 1.4</b>	2008 ->	
KFT/KEV	54 73	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Regata 1.7 60 D, Weekend</b>	1984-89	
149 B3.000	44 60	
Fan switch/Termocontacto ventilador	38190	2 fans or speeds/Ventil. o veloc.

**FIAT Cont.**

<b>Regata 100 i.e. 1.6 Weekend</b>	1987-90	
149 C3.000	74 101	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 100 Super 1.6</b>	1983-90	
149 A2.000/149 A4.000	74 101	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 100 Super 1.6</b>	1983-89	
149 C3.000	70 95	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 60 D 1.7, Weekend</b>	1984-89	
149 B3.000	44 60	
Oil press. switch/Int. pres. aceite	11260	
Oil press. transmitter/Transm. pres. aceite	14550	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 65 D 1.9, Weekend</b>	1984-89	
149 A1.000	48 65	
Oil press. switch/Int. pres. aceite	11260	
Oil press. transmitter/Transm. pres. aceite	14550	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Fan switch/Termocontacto ventilador	38190	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 70 1.3</b>	1983-89	
149 A3.000/149 A7.000	48 65	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 70 1.3 Weekend</b>	1984-89	
138 B2.000	50 68	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 75 1.5 i.e. Weekend Kat</b>	1986-89	
138 C2.048	55 75	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 75 1.5 Weekend</b>	1984-89	
138 C3.048/138 B3.048	55 75	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 75 i.e. 1.5</b>	1985-89	
149 C1.000/138 C2.048	55 75	
Oil press. switch/Int. pres. aceite	11260	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	10.1985 ->, Check control
Stop light switch/Int. luz stop	24390	-> 09.1985, Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Rev. light switch/Int. luz marcha atrás	40330	
<b>Regata 80 TD 1.9, Weekend</b>	1986-89	
831 D1.000	59 80	
Oil press. switch/Int. pres. aceite	11260	
Oil press. transmitter/Transm. pres. aceite	14550	
Stop light switch/Int. luz stop	24010	Without/Sin check control
Stop light switch/Int. luz stop	24380	Check control
Temp. sending unit/Termo-Resistencia	31140	
Fan switch/Termocontacto ventilador	37490	
Fan switch/Termocontacto ventilador	38190	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40330	

**FIAT Cont.**

<b>Regata 85 1.5 Weekend</b>	1984-89
138 B3.000	60 82
Oil press. switch/Int. pres. aceite	11260
Stop light switch/Int. luz stop	24010
Stop light switch/Int. luz stop	10.1985 ->, Check control
Stop light switch/Int. luz stop	24380
Temp. sending unit/Termo-Resistencia	24390
Fan switch/Termocontacto ventilador	31140
Rev. light switch/Int. luz marcha atrás	37490
	40330
<b>Regata 85 1.6</b>	1983-90
149 A.000	60 82
Oil press. switch/Int. pres. aceite	11260
Stop light switch/Int. luz stop	24010
Stop light switch/Int. luz stop	10.1985 ->, Check control
Stop light switch/Int. luz stop	24380
Temp. sending unit/Termo-Resistencia	24390
Fan switch/Termocontacto ventilador	31140
Rev. light switch/Int. luz marcha atrás	37490
	40330
<b>Regata 90 i.e. 1.6, Weekend</b>	1987-89
149 C2.000	66 90
Oil press. switch/Int. pres. aceite	11260
Stop light switch/Int. luz stop	24010
Stop light switch/Int. luz stop	24380
Temp. sending unit/Termo-Resistencia	31140
Fan switch/Termocontacto ventilador	37490
Rev. light switch/Int. luz marcha atrás	40330
<b>Ritmo Bertone 85 1.5 Cabrio</b>	1980-89
138 A4.000	63 86
Oil press. switch/Int. pres. aceite	11260
Stop light switch/Int. luz stop	24010
Stop light switch/Int. luz stop	10.1985 ->, Check control
Stop light switch/Int. luz stop	24380
Temp. sending unit/Termo-Resistencia	24390
Fan switch/Termocontacto ventilador	31140
Rev. light switch/Int. luz marcha atrás	37490
	40330
<b>Scudo 1.6</b>	1996 ->
220 A 2.000	58 79
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24440
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	L.H.D., With control switch, 2 terminals
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420
	40650
<b>Scudo 1.6 D Multijet</b>	2007 ->
9HU	66 90
Oil press. switch/Int. pres. aceite	12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24896
Rev. light switch/Int. luz marcha atrás	24899
	40491
<b>Scudo 1.9 D</b>	1996-98
D9B	51 69
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
	37920
<b>Scudo 1.9 D</b>	1998 ->
WJZ (DW8)	51 69
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	L.H.D., With control switch, 2 terminals
Thermistor-Thermocont./Doble función	Climat
Thermistor-Thermocont./Doble función	Without/Sin A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420
	40650
<b>Scudo 1.9 D, Combinato</b>	1996 ->
D9B	51 69
Oil press. switch/Int. pres. aceite	12460
Stop light switch/Int. luz stop	-> 12.2001
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	L.H.D., With control switch, 2 terminals
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
	40650
<b>Scudo 1.9 TD</b>	1996 ->
D8B	68 92
Oil press. switch/Int. pres. aceite	12460
Oil press. switch/Int. pres. aceite	Nº Vet 7847 ->
Stop light switch/Int. luz stop	12640
On clutch pedal/Int. pedal embrague	-> 12.2001
Stop light switch/Int. luz stop	24440
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	L.H.D., With control switch, 2 terminals
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Temp. s. warning lamp/Termocont. temp.	CEE 19-5
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	37920
Rev. light switch/Int. luz marcha atrás	40492
	40570
<b>Scudo 1.9 TD</b>	1996 ->
DHX (XUD9TF/L)	66 90
Oil press. switch/Int. pres. aceite	12460
Oil press. switch/Int. pres. aceite	Nº Vet 7847 ->
Stop light switch/Int. luz stop	12640
On clutch pedal/Int. pedal embrague	-> 12.2001
Stop light switch/Int. luz stop	24440
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	L.H.D., With control switch, 2 terminals
Temp. s. warning lamp/Termocont. temp.	CEE 19-5
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	37920
Rev. light switch/Int. luz marcha atrás	Nº Vet 8420 ->
	40492
	40570
<b>Scudo 2.0</b>	2000 ->
RFN	100 136
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24440
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	With control switch, 2 terminals
	24885
<b>Scudo 2.0 D Multijet</b>	2007 ->
RHK	88 120
Oil press. switch/Int. pres. aceite	12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24896
Rev. light switch/Int. luz marcha atrás	24899
	40492

**FIAT Cont.**

<b>Scudo 2.0 D Multijet</b>	2007 ->
RHR	100 136
Oil press. switch/Int. pres. aceite	12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24896
Rev. light switch/Int. luz marcha atrás	24899
	40492
<b>Scudo 2.0 JTD</b>	1999 ->
RHZ	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	-> 12.2001
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	With control switch, 2 terminals
Rev. light switch/Int. luz marcha atrás	L.H.D.
	24896
	40492
<b>Scudo 2.0 JTD</b>	1999 ->
RHX	69 94
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	-> 12.2001
On clutch pedal/Int. pedal embrague	With/Con cruise control
Stop light switch/Int. luz stop	24440
Stop light switch/Int. luz stop	With control switch, 2 terminals
Rev. light switch/Int. luz marcha atrás	L.H.D.
	24896
	40492
<b>Sedici 1.6 16V</b>	2006 ->
M16A	79 107
Rev. light switch/Int. luz marcha atrás	40835
<b>Sedici 1.6 16V 4x4</b>	2006 ->
M16A	79 107
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24790
	40835
<b>Sedici 1.9 D Multijet</b>	2006 ->
D19AA	88 120
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24790
	40835
<b>Seicento 0.9, Van</b>	1998 ->
1170 A1.046	29 39
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Temp. sending unit/Termo-Resistencia	31140
Fan switch/Termocontacto ventilador	37710
Rev. light switch/Int. luz marcha atrás	40480
<b>Seicento 1.1, Van</b>	1998 ->
176 B2.000	40 54
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Temp. sending unit/Termo-Resistencia	31140
Fan switch/Termocontacto ventilador	37710
Rev. light switch/Int. luz marcha atrás	40480
<b>Seicento Elektra</b>	1999 ->
	30 41
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Temp. sending unit/Termo-Resistencia	31140
Fan switch/Termocontacto ventilador	37710
Rev. light switch/Int. luz marcha atrás	40480
<b>Sienna 1.0</b>	1998 ->
	45 61
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	24675
Fan switch/Termocontacto ventilador	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Sienna 1.2</b>	1998 ->
178 B5.000	54 73
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	24675
Fan switch/Termocontacto ventilador	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Sienna 1.4</b>	1996 ->
178 B2.000	51 69
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	24675
Fan switch/Termocontacto ventilador	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Sienna 1.4 Kat</b>	1996 ->
178 B2.016	51 69
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	24675
Fan switch/Termocontacto ventilador	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Sienna 1.6 16V</b>	1998 ->
178 B3.000	78 106
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24660
Stop light switch/Int. luz stop	With radio transmitter/Con radiotransmisor
Temp. sending unit/Termo-Resistencia	24675
Fan switch/Termocontacto ventilador	31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Climat
	37910
	40520
<b>Stilo 1.2 16V</b>	2002 ->
188 A5.000	59 80
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24412
Rev. light switch/Int. luz marcha atrás	24413
	40490

**FIAT Cont.**

<b>Stilo 1.4 16V, Multi Wagon</b> 843 A1.000		2004 -> 70 95	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40490	
<b>Stilo 1.4 16V, Multi Wagon</b> 192 B2.000		2005 -> 66 90	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40490	
<b>Stilo 1.6 16V</b> 192 B30		2005 -> 77 105	
Oil press. switch/Int. pres. aceite		12436	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40831	
<b>Stilo 1.6 16V, Multi Wagon</b> 182 B6.000		2001 -> 76 103	
Oil press. switch/Int. pres. aceite		12430	
Oil press. switch/Int. pres. aceite	0.55 bar	12436	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40490	
Rev. light switch/Int. luz marcha atrás		40831	
<b>Stilo 1.8 16V, Multi Wagon</b> 192 A4.000		2001 -> 98 133	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Stilo 1.9 D Multi Wagon</b> 192 B5.000		2004 -> 66 90	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Stilo 1.9 D Multijet, Multi Wagon</b> 192 A8.000		2005 -> 88 120	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás	-> Ch. 653436	40490	
Rev. light switch/Int. luz marcha atrás		40510	
Rev. light switch/Int. luz marcha atrás	Ch. 653437 ->	40940	
<b>Stilo 1.9 D Multijet, Multi Wagon</b> 937 A5.000		2005 -> 110 150	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40510	
Rev. light switch/Int. luz marcha atrás		40940	
<b>Stilo 1.9 D Multijet, Multi Wagon</b> 192 A9.000		2005 -> 74 100	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Stilo 1.9 JTD</b> 192 B5.000		2004 -> 66 90	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Stilo 1.9 JTD, Multi Wagon</b> 192 A3.000		2002 -> 59 80	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Stilo 1.9 JTD, Multi Wagon</b> 192 A1.000/937 A7.000		2001 -> 85 115	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Stilo 1.9 JTD, Multi Wagon</b> 192 A5.000		2004 -> 103 140	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Stilo 2.4 20V</b> 192 A2.000		2001 -> 125 170	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24412	
Stop light switch/Int. luz stop		24413	
Rev. light switch/Int. luz marcha atrás		40940	
<b>Strada 1.2</b> 178 B5.000		1999 -> 54 73	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Strada 1.2</b> 188 A4.000		2003 -> 44 60	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Strada 1.3 D Multijet</b> 223 A9.000		2006 -> 62 85	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Strada 1.7 TD</b> 176 A3.000		1999 -> 51 69	
Oil press. switch/Int. pres. aceite		12430	
Temp. s. warning lamp/Termocont. temp.	Climat	35842	
Rev. light switch/Int. luz marcha atrás		40520	

**FIAT Cont.**

<b>Strada 1.9 D</b> 223 A6.000		2000 -> 46 63	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24666	
Fan switch/Termocontacto ventilador	Ch. 02376453 ->	38190	
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	40520	
<b>Strada 1.9 JTD</b> 188 A2.000		2003 -> 59 80	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24666	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Talento 1.9 D</b> 149 B1.000		1989-94 52 71	
Oil press. switch/Int. pres. aceite	-> N° 0963133, 0.35 bar	11410	
Oil press. switch/Int. pres. aceite	N° 0963133 ->	12430	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38200	
<b>Talento 2.0</b> 170 B		1989-94 55 75	
Temp. s. warning lamp/Termocont. temp.		35210	
<b>Tempra 1.4 i.e., S.W.</b> 836 A4.000/160 A1.046		1992-96 51 69	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.4 i.e., S.W.</b> 159 A2.000		1991-96 57 78	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.6 i.e.</b> 159 A3.046		1990-92 57 78	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.6 i.e.</b> 159 B9.000		1994-96 63 87	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24410	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.6 i.e. S.W.</b> 159 A3.046/835 C1.000		1990-96 57 78	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.6 i.e., S.W.</b> 159 A3.048/835 C1.000		1992-96 55 75	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.6 i.e., S.W.</b> 159 B9.000		1994-96 66 90	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24410	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.6, S.W.</b> 159 A3.000		1990-93 63 86	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	
<b>Tempra 1.8 i.e., S.W.</b> 159 A4.046		1992-96 77 105	
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260	
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430	
Stop light switch/Int. luz stop	-> 04.1993	24400	
Stop light switch/Int. luz stop	04.1993 ->	24410	
Temp. sending unit/Termo-Resistencia		31140	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220	
Fan switch/Termocontacto ventilador	Climat	37910	
Rev. light switch/Int. luz marcha atrás		40520	



**FIAT Cont.**

<b>Tipo 1.8 i.e.</b> 159 A4.000		1994-95 74 101
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop		24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.8 i.e.</b> 835 C4.000		1993-95 66 90
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop		24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.8 i.e.</b> 159 A4.046		1990-93 77 105
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.8 i.e.</b> 159 A4.000		1990-93 81 110
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.8 i.e. 16V Sport</b> 160 A5.000		1989-92 100 136
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Oil press. transmitter/Transm. pres. aceite		14030
Stop light switch/Int. luz stop		24400
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.9 D</b> 160 A7.000/149 A1.000		1991-96 48 65
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	2 fans o speeds/Ventil. o veloc.	37830
Fan switch/Termocontacto ventilador	Without/sin A.A.	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.9 TD</b> 160 B6.046		1992-93 59 80
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia	-> N° 4727693, 7495869	31140
Temp. sending unit/Termo-Resistencia	N° 4724693, 7495869 ->	32610
Temp. s. warning lamp/Termocont. temp.		35910
Fan switch/Termocontacto ventilador	Without/sin A.A.	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 1.9 TD</b> 160 A6.046/160 D1.000/160 A6.000		1990-95 66 90
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Oil press. transmitter/Transm. pres. aceite		14030
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		32540
Temp. sending unit/Termo-Resistencia		32670
Temp. s. warning lamp/Termocont. temp.		35910
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37900
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 2.0 16V</b> 160 A8.046		1991-95 107 146
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Oil press. transmitter/Transm. pres. aceite		14030
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		31140
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31600
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 2.0 i.e.</b> 159 A5.046		1990-92 80 109
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop		24400
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520

**FIAT Cont.**

<b>Tipo 2.0 i.e.</b> 159 A6.046		1990-95 83 113
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Tipo 2.0 i.e. 16V Sport</b> 836 A3.000		1993-95 102 139
Oil press. switch/Int. pres. aceite	-> N° 8247895	11260
Oil press. switch/Int. pres. aceite	N° 8247895 ->	12430
Oil press. transmitter/Transm. pres. aceite		14030
Stop light switch/Int. luz stop	-> 04.1993	24400
Stop light switch/Int. luz stop	04.1993 ->	24410
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37220
Fan switch/Termocontacto ventilador	Climat	37910
Rev. light switch/Int. luz marcha atrás		40520
<b>Ulysse 1.8</b> LFW		1997-02 73 99
Oil press. switch/Int. pres. aceite	-> 05.1998	12460
Oil press. switch/Int. pres. aceite	05.1998 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24400
On clutch pedal/Int. pedal embrague	With/Con cruise control	24880
Stop light switch/Int. luz stop	L.H.D., N° Vet 8534 ->, 2 terminals	24885
Thermistor-Termocont./Doble función		34110
Fan switch/Termocontacto ventilador	-> 05.2000	37580
Rev. light switch/Int. luz marcha atrás	12.1999 ->	40491
Rev. light switch/Int. luz marcha atrás	-> 12.1999	40650
<b>Ulysse 1.9 TD</b> DHX (XUD9TF/L)		1995-02 66 90
Oil press. switch/Int. pres. aceite	-> 05.1998	12460
Oil press. switch/Int. pres. aceite	05.1998 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24400
On clutch pedal/Int. pedal embrague	With/Con cruise control	24880
Stop light switch/Int. luz stop	L.H.D., N° Vet 8534 ->, 2 terminals	24885
Thermistor-Termocont./Doble función		34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Temp. s. warning lamp/Termocont. temp.		35610
Fan switch/Termocontacto ventilador	-> 05.2000	37920
Rev. light switch/Int. luz marcha atrás	-> 12.1999	40570
<b>Ulysse 2.0</b> RFU (XU10J2C)		1994-02 89 121
Oil press. switch/Int. pres. aceite	-> 05.1998	12460
Oil press. switch/Int. pres. aceite	05.1998 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24400
On clutch pedal/Int. pedal embrague	With/Con cruise control	24880
Stop light switch/Int. luz stop	N° Vet 8534 ->, 2 terminals/bornes	24885
Fan switch/Termocontacto ventilador	-> 05.2000	37580
Rev. light switch/Int. luz marcha atrás	12.1999 ->	40491
Rev. light switch/Int. luz marcha atrás	-> 12.1999	40650
<b>Ulysse 2.0</b> RFN(EW10J4)		2002 -> 100 136
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24400
Stop light switch/Int. luz stop	Automatic transmission, Cruise control, 2 L.H.D.	24885
Stop light switch/Int. luz stop		24896
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Ulysse 2.0 16V</b> RFV		1998-00 97 132
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24400
On clutch pedal/Int. pedal embrague	With/Con cruise control	24880
Stop light switch/Int. luz stop	With control switch, 2 terminals/bornes	24885
Thermistor-Termocont./Doble función		34110
Fan switch/Termocontacto ventilador	-> 05.2000	37580
Rev. light switch/Int. luz marcha atrás	12.1999 ->	40491
Rev. light switch/Int. luz marcha atrás	-> 12.1999	40570
<b>Ulysse 2.0 16V</b> RFN		2000-02 100 136
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24400
On clutch pedal/Int. pedal embrague	With/Con cruise control	24880
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Ulysse 2.0 D Multijet</b> RHK		2006 -> 88 120
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop	07.2006 ->	24899
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Ulysse 2.0 D Multijet</b> RHR		2006 -> 100 136
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop	07.2006 ->	24899
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>Ulysse 2.0 JTD</b> RHZ		1999-02 80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24400
On clutch pedal/Int. pedal embrague	With/Con cruise control	24880
Rev. light switch/Int. luz marcha atrás	N° Vet 8420 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 8419	40570
<b>Ulysse 2.0 JTD</b> RHW(DW10ATED4)		2002 -> 80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24400
Stop light switch/Int. luz stop	Automatic transmission, With control switch	24885
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop		24899
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492





**FIAT Cont.**

<b>Uno 70 S 1.4</b>	<b>1989-92</b>
160 A1.048	52 71
Oil press. switch/Int. pres. aceite	-> N° 3683628 <b>11260</b>
Oil press. switch/Int. pres. aceite	N° 3683628 -> <b>12430</b>
Stop light switch/Int. luz stop	<b>24400</b>
Stop light switch/Int. luz stop	Check control <b>24410</b>
Temp. sending unit/Termo-Resistencia	N° 2124683, 0121897 -> <b>31140</b>
Temp. sending unit/Termo-Resistencia	<b>31530</b>
Temp. sending unit/Termo-Resistencia	-> N° 2124683, 0121897 <b>31590</b>
Temp. s. warning lamp/Termocont. temp.	N° 2124683, 0121897 -> <b>35070</b>
Temp. s. warning lamp/Termocont. temp.	-> N° 2124683, 0121897 <b>35270</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C513, -> N° 1822289 <b>40480</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C514 <b>40490</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C513, N° 1822289 -> <b>40520</b>
<b>Uno 70 TD 1.4</b>	<b>1986-90</b>
146 B.000/146 B3.000	52 71
Oil press. switch/Int. pres. aceite	-> N° 3683628 <b>11260</b>
Oil press. switch/Int. pres. aceite	N° 3683628 -> <b>12430</b>
Oil press. transmitter/Transm. pres. aceite	<b>14030</b>
Stop light switch/Int. luz stop	<b>24400</b>
Stop light switch/Int. luz stop	Check control <b>24410</b>
Temp. sending unit/Termo-Resistencia	N° 2124683, 0121897 -> <b>31140</b>
Temp. sending unit/Termo-Resistencia	-> N° 2124683, 0121897 <b>31590</b>
Temp. s. warning lamp/Termocont. temp.	N° 2124683, 0121897 -> <b>35070</b>
Temp. s. warning lamp/Termocont. temp.	-> N° 2124683, 0121897 <b>35270</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37830</b>
Rev. light switch/Int. luz marcha atrás	<b>40240</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C513, -> N° 1822289 <b>40480</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C514 <b>40490</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C513, N° 1822289 -> <b>40520</b>
<b>Uno 75 i.e. 1.5</b>	<b>1985-93</b>
149 C1.000/138 C2.048	55 75
Oil press. switch/Int. pres. aceite	-> N° 3683628 <b>11260</b>
Oil press. switch/Int. pres. aceite	N° 3683628 -> <b>12430</b>
Stop light switch/Int. luz stop	<b>24400</b>
Stop light switch/Int. luz stop	Check control <b>24410</b>
Temp. sending unit/Termo-Resistencia	N° 2124683, 0121897 -> <b>31140</b>
Temp. sending unit/Termo-Resistencia	-> N° 2124683, 0121897 <b>31590</b>
Temp. s. warning lamp/Termocont. temp.	N° 2124683, 0121897 -> <b>35070</b>
Temp. s. warning lamp/Termocont. temp.	-> N° 2124683, 0121897 <b>35270</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1985 <b>40240</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C513, -> N° 1822289 <b>40480</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C514 <b>40490</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio C513, N° 1822289 -> <b>40520</b>
<b>X 1/9 1.5 Five Speed</b>	<b>1978-89</b>
138 AS.000	63 85
Temp. sending unit/Termo-Resistencia	<b>31530</b>
<b>X 1/9 1.5 Five Speed</b>	<b>1985-89</b>
138 BS.031	56 76
Oil press. transmitter/Transm. pres. aceite	<b>14550</b>

**FORD**

<b>C-Max 1.6</b>	<b>2007 -&gt;</b>
SHDA/HWDB/SHDB/HWDA/SHDC	74 100
Oil press. switch/Int. pres. aceite	<b>12613</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 1.6 TDCi</b>	<b>2007 -&gt;</b>
HHDA/HHDB/GPDA	66 90
Oil press. switch/Int. pres. aceite	<b>12640</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 1.6 TDCi</b>	<b>2007 -&gt;</b>
G8DA/G8DB/G8DD	80 109
Oil press. switch/Int. pres. aceite	<b>12640</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 1.8</b>	<b>2007 -&gt;</b>
QQDA/QQDB	92 125
Oil press. switch/Int. pres. aceite	<b>12613</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 1.8 Flexifuel</b>	<b>2007 -&gt;</b>
Q7DA	92 125
Oil press. switch/Int. pres. aceite	<b>12613</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 1.8 TDCi</b>	<b>2007 -&gt;</b>
KKDA	85 115
Oil press. switch/Int. pres. aceite	<b>12613</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 2.0</b>	<b>2007 -&gt;</b>
AODA/AODB/SYDA/AODE	107 145
Oil press. switch/Int. pres. aceite	<b>12613</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 2.0 CNG</b>	<b>2009 -&gt;</b>
SYDA	107 145
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 2.0 LPG</b>	<b>2008 -&gt;</b>
SYDA	107 145
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>

**FORD Cont.**

<b>C-Max 2.0 TDCi</b>	<b>2007 -&gt;</b>
G6DD/G6DB/G6DG/G6DA	100 136
Oil press. switch/Int. pres. aceite	<b>12640</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>C-Max 2.0 TDCi</b>	<b>2008 -&gt;</b>
IXDA	81 110
Oil press. switch/Int. pres. aceite	<b>12640</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel. <b>40591</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel. <b>40596</b>
<b>Cougar 2.0 16V</b>	<b>1998-01</b>
EDBB/EDBC/EDBD/EDBA	96 131
Oil press. switch/Int. pres. aceite	<b>12610</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
<b>Cougar 2.5 ST 200</b>	<b>2000-01</b>
SGA	151 205
Oil press. switch/Int. pres. aceite	<b>12611</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
<b>Cougar 2.5 V6 24V</b>	<b>1998-01</b>
LCBA	125 170
Oil press. switch/Int. pres. aceite	<b>12611</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
<b>Cougar 2.5 V6 24V</b>	<b>2000-01</b>
LCBC/LCBB/LCBE	125 170
Oil press. switch/Int. pres. aceite	<b>12611</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel. <b>40595</b>
<b>Escort '86 1.8 D Express</b>	<b>1988-90</b>
RTA/RTB	44 60
Stop light switch/Int. luz stop	<b>24160</b>
Temp. sending unit/Termo-Resistencia	<b>31390</b>
<b>Escort '91 1.4 Express</b>	<b>1990-94</b>
F6F/F6G	52 71
Temp. sending unit/Termo-Resistencia	<b>31390</b>
<b>Escort '91 1.8 D Express</b>	<b>1990-94</b>
RTH	44 60
Fan switch/Termocontacto ventilador	With/Con A.A. <b>37970</b>
<b>Escort '95 1.8 D Express</b>	<b>1995 -&gt;</b>
RTH/RTF	44 60
Stop light switch/Int. luz stop	<b>24210</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BC/MTX <b>40590</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio IB5 <b>40730</b>
<b>Escort '95 1.8 TD Express</b>	<b>1995-01</b>
RVA	51 70
Stop light switch/Int. luz stop	<b>24210</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BC/MTX <b>40590</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio IB5 <b>40730</b>
<b>Escort Classic 1.6 16V, Turnier</b>	<b>1998-00</b>
L1E	66 90
Oil press. switch/Int. pres. aceite	<b>12610</b>
Stop light switch/Int. luz stop	<b>24210</b>
Fan switch/Termocontacto ventilador	<b>36330</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BC/MTX <b>40590</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio IB5 <b>40730</b>
<b>Escort Classic 1.8 TD, Turnier</b>	<b>1998-00</b>
RFD/RFK	66 90
Oil press. switch/Int. pres. aceite	<b>12220</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32040</b>
Fan switch/Termocontacto ventilador	<b>37240</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>37960</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BC/MTX <b>40590</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio IB5 <b>40730</b>
<b>Escort IV 1.1, Kombi</b>	<b>1985-90</b>
GSG	37 50
Oil press. switch/Int. pres. aceite	<b>12220</b>
Stop light switch/Int. luz stop	Without/Sin ABS <b>24210</b>
Temp. sending unit/Termo-Resistencia	08.1988 ->, Green/Verde <b>32010</b>
Temp. sending unit/Termo-Resistencia	-> 07.1988 <b>32190</b>
Fan switch/Termocontacto ventilador	01.1988 ->, Without/Sin A.A. <b>37290</b>
Fan switch/Termocontacto ventilador	-> 12.1987 <b>37410</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1987 <b>40290</b>
Rev. light switch/Int. luz marcha atrás	01.1988 -> <b>40590</b>
<b>Escort IV 1.3, Express</b>	<b>1988-90</b>
JBA	46 63
Oil press. switch/Int. pres. aceite	<b>12220</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	08.1988 ->, Green/Verde <b>32010</b>
Temp. sending unit/Termo-Resistencia	-> 07.1988 <b>32190</b>
Fan switch/Termocontacto ventilador	01.1988 ->, Without/Sin A.A. <b>37290</b>
Fan switch/Termocontacto ventilador	-> 12.1987 <b>37410</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1987 <b>40290</b>
Rev. light switch/Int. luz marcha atrás	01.1988 -> <b>40590</b>
<b>Escort IV 1.3, Kombi</b>	<b>1986-90</b>
JLA/JBB/JLB	44 60
Oil press. switch/Int. pres. aceite	<b>12220</b>
Stop light switch/Int. luz stop	Without/Sin ABS <b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31390</b>
Temp. sending unit/Termo-Resistencia	08.1988 ->, Green/Verde <b>32010</b>
Temp. sending unit/Termo-Resistencia	-> 07.1988 <b>32190</b>
Fan switch/Termocontacto ventilador	01.1988 ->, Without/Sin A.A. <b>37290</b>
Fan switch/Termocontacto ventilador	-> 12.1987 <b>37410</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1987 <b>40290</b>
Rev. light switch/Int. luz marcha atrás	01.1988 -> <b>40590</b>
<b>Escort IV 1.4, Cabrio, Kombi</b>	<b>1986-90</b>
F6D/F6B/FUC	54 73
Oil press. switch/Int. pres. aceite	<b>12220</b>
Stop light switch/Int. luz stop	Without/Sin ABS <b>24210</b>
Temp. sending unit/Termo-Resistencia	08.1988 ->, Green/Verde <b>32010</b>
Temp. sending unit/Termo-Resistencia	-> 07.1988 <b>32190</b>
Fan switch/Termocontacto ventilador	01.1988 ->, Without/Sin A.A. <b>37290</b>
Fan switch/Termocontacto ventilador	-> 12.1987 <b>37410</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1987 <b>40290</b>
Rev. light switch/Int. luz marcha atrás	01.1988 -> <b>40590</b>









**FORD Cont.**

<b>Fiesta III 1.4</b>		<b>1989-95</b>
FUG/FUJ		54 73
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.4</b>		<b>1989-95</b>
F6E		52 71
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Fiesta III 1.4 Kat</b>		<b>1989-95</b>
F4A		54 73
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Fiesta III 1.6</b>		<b>1989-94</b>
LUH		65 88
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.6</b>		<b>1989-92</b>
Rev. light switch/Int. luz marcha atrás		66 90
<b>Fiesta III 1.6 i 16V</b>		<b>1994-95</b>
L1G		65 88
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	36330
Fan switch/Termocontacto ventilador	Yellow/amarillo	37290
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A.	40590
<b>Fiesta III 1.6 Turbo</b>		<b>1990-92</b>
LHA		96 131
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Fiesta III 1.6 XR2i</b>		<b>1989-93</b>
LJD		76 103
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.6 XR2i</b>		<b>1989-94</b>
LJC		81 110
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.8 16V</b>		<b>1992-95</b>
RDB		77 105
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Yellow/amarillo	36330
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.8 D</b>		<b>1989-95</b>
RTD/RTG/RTC		44 60
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32040
Fan switch/Termocontacto ventilador		37240
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.8 TD</b>		<b>1993-95</b>
RFL		57 77
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32040
Fan switch/Termocontacto ventilador		37240
Rev. light switch/Int. luz marcha atrás		40590
<b>Fiesta III 1.8 XR2i 16V</b>		<b>1992-95</b>
RQC		96 130
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	36330
Fan switch/Termocontacto ventilador	Yellow/amarillo	37290
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A.	40590
<b>Fiesta IV 1.0 i</b>		<b>1997-99</b>
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Rev. light switch/Int. luz marcha atrás	Green/Verde	40730

**FORD Cont.**

<b>Fiesta IV 1.0 i</b>		<b>1999-02</b>
Oil press. switch/Int. pres. aceite		48 65
Stop light switch/Int. luz stop		12220
Temp. sending unit/Termo-Resistencia		24210
Rev. light switch/Int. luz marcha atrás	Green/Verde	32010
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.25 i 16V</b>		<b>1995-02</b>
DHG/DHB/DHC/DHE/DHF/DHA/DHD		55 75
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	36330
Rev. light switch/Int. luz marcha atrás	-> 09.1999	40730
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.3 i</b>		<b>1995-02</b>
JJA/JJE/JJM/JJC/JJJ/JJK		37 50
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Rev. light switch/Int. luz marcha atrás	Green/Verde	40730
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.3 i</b>		<b>1995-02</b>
J4R/J4C/J4L/J4J/J4Q/J4T		44 60
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Rev. light switch/Int. luz marcha atrás	Green/Verde	40730
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.4 i 16V</b>		<b>1996-02</b>
FHE/FHA		66 90
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	36330
Rev. light switch/Int. luz marcha atrás	-> 09.1999	40730
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.6 16V Sport</b>		<b>2000-02</b>
L1V/L1T		76 103
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Rev. light switch/Int. luz marcha atrás	Green/Verde	40730
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.8 D</b>		<b>1995-00</b>
RTK/RTJ		44 60
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Rev. light switch/Int. luz marcha atrás	Green/Verde	40730
	Gear box/Cambio IB5	40730
<b>Fiesta IV 1.8 Di</b>		<b>2000-02</b>
RTP/RTN/RTQ		55 75
Oil press. switch/Int. pres. aceite		12220
Oil press. switch/Int. pres. aceite		12610
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Temp. sending unit/Termo-Resistencia	Green/Verde	32426
Rev. light switch/Int. luz marcha atrás	Coolant Temp./Temp. Refrigerante	40730
	Gear box/Cambio IB5	40730
<b>Fiesta V 1.25 16V</b>		<b>2003 -&gt;</b>
M7JA/M7JB		51 70
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24835
Stop light switch/Int. luz stop	Green/Verde	24840
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel.	40591
Rev. light switch/Int. luz marcha atrás		40730
<b>Fiesta V 1.25 16V</b>		<b>2002 -&gt;</b>
FUJA/FUJB		55 75
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24835
Stop light switch/Int. luz stop	Green/Verde	24840
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel.	40591
Rev. light switch/Int. luz marcha atrás		40730
<b>Fiesta V 1.3</b>		<b>2001 -&gt;</b>
BAJA		44 60
Oil press. switch/Int. pres. aceite		12610
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24835
Stop light switch/Int. luz stop	Green/Verde	24840
Rev. light switch/Int. luz marcha atrás	Green/Verde	40591
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel.	40730
<b>Fiesta V 1.3, Van</b>		<b>2001 -&gt;</b>
A9JA/A9JB		51 69
Oil press. switch/Int. pres. aceite		12610
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24835
Stop light switch/Int. luz stop	Green/Verde	24840
Temp. sending unit/Termo-Resistencia	A9JA, Green/Verde	32010
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel.	40591
Rev. light switch/Int. luz marcha atrás		40730
<b>Fiesta V 1.4 16V</b>		<b>2001 -&gt;</b>
FXJB/FXJA		59 80
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24835
Stop light switch/Int. luz stop	Green/Verde	24840
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel.	40591
Rev. light switch/Int. luz marcha atrás		40730
<b>Fiesta V 1.4 TDCi, Van</b>		<b>2001 -&gt;</b>
F6JA/F6JB		50 68
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24835
Stop light switch/Int. luz stop	Green/Verde	24840
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio B5/IB5, Manual 5 speed/vel.	40591
Rev. light switch/Int. luz marcha atrás		40730





**FORD Cont.**

<b>Focus II 2.0 TDCi, Sedan, Turnier</b>	2008 ->
IXDA	81 110
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Focus II 2.0, Sedan, Turnier</b>	2004 ->
AODA/AODB	107 145
Oil press. switch/Int. pres. aceite	12613
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Focus II 2.5 RS</b>	2009 ->
JZDA	224 305
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Focus II 2.5 RS 500</b>	2010 ->
	257 350
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Focus II 2.5 ST</b>	2005 ->
HYDA	166 225
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Focus RS</b>	2002-04
HMDA	158 215
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Focus ST170, Kombi</b>	2002-04
ALDA	127 173
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Fusion 1.25</b>	2004 ->
FUJA/FUJB	55 75
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40596
<b>Fusion 1.3</b>	2002 ->
	44 60
Rev. light switch/Int. luz marcha atrás	40591
<b>Fusion 1.4</b>	2002 ->
FXJB/FXJA	59 80
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40730
<b>Fusion 1.4 TDCi</b>	2002 ->
F6JA/F6JB	50 68
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40730
<b>Fusion 1.6</b>	2002 ->
FYJA/FYJB	74 100
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40730
<b>Fusion 1.6 TDCi</b>	2004 ->
HHJA/HHJB	66 90
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40730

**FORD Cont.**

<b>Galaxy 1.8 TDCi</b>	2006 ->
FFWA	74 100
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 1.8 TDCi</b>	2006 ->
QYWA	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 1.9 TDI</b>	1995-06
ANU/AHU/1Z	66 90
Oil press. switch/Int. pres. aceite	11690
Oil press. switch/Int. pres. aceite	12882
Oil press. switch/Int. pres. aceite	12890
Oil press. switch/Int. pres. aceite	12930
Stop light switch/Int. luz stop	24420
Stop light switch/Int. luz stop	24760
On clutch pedal/Int. pedal embrague	24772
Stop light switch/Int. luz stop	24773
Temp. sending unit/Termo-Resistencia	31610
Temp. s. warning lamp/Termocont. temp.	35580
Temp. s. warning lamp/Termocont. temp.	35640
Fan switch/Termocontacto ventilador	38180
Rev. light switch/Int. luz marcha atrás	40675
<b>Galaxy 1.9 TDI</b>	1997-00
AVG/AFN	81 110
Oil press. switch/Int. pres. aceite	11690
Oil press. switch/Int. pres. aceite	12890
Oil press. switch/Int. pres. aceite	12930
Stop light switch/Int. luz stop	24420
Stop light switch/Int. luz stop	24760
On clutch pedal/Int. pedal embrague	24772
Stop light switch/Int. luz stop	24773
Temp. sending unit/Termo-Resistencia	31610
Temp. s. warning lamp/Termocont. temp.	35580
Temp. s. warning lamp/Termocont. temp.	35640
Fan switch/Termocontacto ventilador	38180
<b>Galaxy 1.9 TDI</b>	2000-06
AUY	85 115
Oil press. switch/Int. pres. aceite	12890
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
On clutch pedal/Int. pedal embrague	24772
Fan switch/Termocontacto ventilador	38180
Rev. light switch/Int. luz marcha atrás	40675
<b>Galaxy 1.9 TDI</b>	2003-06
ASZ	96 130
Oil press. switch/Int. pres. aceite	12890
Stop light switch/Int. luz stop	24762
On clutch pedal/Int. pedal embrague	24772
Fan switch/Termocontacto ventilador	38180
Rev. light switch/Int. luz marcha atrás	40675
<b>Galaxy 1.9 TDI</b>	2005-06
BTB	110 150
Oil press. switch/Int. pres. aceite	12890
Stop light switch/Int. luz stop	24762
On clutch pedal/Int. pedal embrague	24772
Fan switch/Termocontacto ventilador	38180
Rev. light switch/Int. luz marcha atrás	40675
<b>Galaxy 2.0</b>	2006 ->
AOWB/AOWA	107 145
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 2.0 Flexifuel</b>	2006 ->
TBWA/TBWB	107 145
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 2.0 i</b>	1995-06
NSE/ZVSA	85 116
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24420
On clutch pedal/Int. pedal embrague	24835
Temp. s. warning lamp/Termocont. temp.	35580
Temp. s. warning lamp/Termocont. temp.	35640
Rev. light switch/Int. luz marcha atrás	40675
<b>Galaxy 2.0 SCTi</b>	2010 ->
TNWA	149 203
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 2.0 TDCi</b>	2006 ->
UKWA/AZWC	100 136
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 2.0 TDCi</b>	2006 ->
AZWA	96 130
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Galaxy 2.0 TDCi</b>	2006 ->
UFWA/QXWA/QXWB	103 140
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596

**FORD Cont.**

<b>Galaxy 2.0 TDCi</b>		2007 ->
KLWA/TYWA		85 115
Oil press. switch/Int. pres. aceite		12640
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel.	40595
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Galaxy 2.0 TDCi</b>		2010 ->
		120 163
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel.	40595
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Galaxy 2.2 TDCi</b>		2008 ->
Q4BA/Q4WA		129 175
Oil press. switch/Int. pres. aceite		12640
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel.	40595
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Galaxy 2.3</b>		2007 ->
SEWA		118 160
Oil press. switch/Int. pres. aceite		12613
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MTX75, Manual 5 speed/vel.	40595
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Galaxy 2.3 16V</b>		1997-06
Y5B/E5SA		107 146
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24420
On clutch pedal/Int. pedal embrague	2 terminals/bornes	24835
Temp. s. warning lamp/Termocont. temp.	Cruise control/Control veloc.	35580
Temp. s. warning lamp/Termocont. temp.	Climat	35640
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A.	40675
<b>Galaxy 2.3 16V</b>		2001-06
E5SB		103 140
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24420
On clutch pedal/Int. pedal embrague	2 terminals/bornes	24835
Temp. s. warning lamp/Termocont. temp.	Cruise control/Control veloc.	35580
Temp. s. warning lamp/Termocont. temp.	Climat	35640
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A.	40675
<b>Galaxy 2.8 i V6, 4x4</b>		1995-00
AAA/AMY		128 174
Oil press. switch/Int. pres. aceite	AAA, 08.1998 ->	11690
Oil press. switch/Int. pres. aceite	AMY, 08.1998 -> 0.25 bar	12870
Oil press. switch/Int. pres. aceite	08.1998 ->, 1.40 bar	12880
Oil press. switch/Int. pres. aceite	-> 08.1998, 1.40 bar	12900
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31610
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	34322
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	34330
Temp. s. warning lamp/Termocont. temp.	Climat	35580
Rev. light switch/Int. luz marcha atrás		40675
<b>Galaxy 2.8 V6</b>		2000-06
AYL		150 204
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
On clutch pedal/Int. pedal embrague	With/Con cruise control	24772
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40675
<b>Ka 1.0 i</b>		1997-99
ZH10JRB		38 52
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Ka 1.0 i</b>		1999-08
		48 65
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Ka 1.2</b>		2009 ->
FP4		51 69
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490
<b>Ka 1.3 i</b>		1996-02
JJB		37 50
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Ka 1.3 i</b>		1996-08
J4S/BAA/J4K/J4M/J4P/J4N/J4D		44 60
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	BAA, Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Ka 1.3 i</b>		1998-08
JJH/JJD/JJF/JJG/JJL		36 49
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Ka 1.3 i</b>		2002-08
A9B/A9A		51 70
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	A9B, Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Ka 1.3 TDCi</b>		2009 ->
FD4		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24413
Rev. light switch/Int. luz marcha atrás		40490

**FORD Cont.**

<b>Ka 1.6 i</b>		2003-08
CDC/CDB		70 95
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Rev. light switch/Int. luz marcha atrás		40730
<b>Kuga 2.0 TDCi</b>		2008 ->
G6DG/UKDA		100 136
Oil press. switch/Int. pres. aceite		12640
<b>Kuga 2.0 TDCi 4x4</b>		2008 ->
G6DG/UKDA		100 136
Oil press. switch/Int. pres. aceite		12640
<b>Kuga 2.0 TDCi 4x4</b>		2010 ->
		120 163
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Kuga 2.0 TDCi, 4x4</b>		2008 ->
G6DG/UKDA		100 136
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Kuga 2.0 TDCi, 4x4</b>		2010 ->
UFDA		103 140
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Kuga 2.5, 4x4</b>		2009 ->
HYDB		147 200
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	40596
<b>Maverick 2.0 16V</b>		2001 ->
YF		91 124
Oil press. switch/Int. pres. aceite		12610
<b>Maverick 2.3 16V</b>		2004 ->
GZ		110 150
Oil press. switch/Int. pres. aceite		12613
Rev. light switch/Int. luz marcha atrás		40825
<b>Maverick 2.4 i</b>		1993-96
KA24-E		91 124
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31520
Rev. light switch/Int. luz marcha atrás		40800
<b>Maverick 2.4 i</b>		1996-98
KA-24		85 116
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31520
Rev. light switch/Int. luz marcha atrás		40800
<b>Maverick 2.4 i</b>		1996-98
KA-24		87 118
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31520
Rev. light switch/Int. luz marcha atrás		40800
<b>Maverick 2.7 TD</b>		1993-96
TD27		74 100
Oil press. switch/Int. pres. aceite		12420
Oil press. switch/Int. pres. aceite	Open/Conecta	12940
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31520
Rev. light switch/Int. luz marcha atrás		40800
<b>Maverick 2.7 TD</b>		1996-98
TD27E		92 125
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31520
Rev. light switch/Int. luz marcha atrás		40800
<b>Maverick 3.0 24V</b>		2004 ->
AJ		149 203
Oil press. switch/Int. pres. aceite		12611
Rev. light switch/Int. luz marcha atrás	10.2005 ->	40825
<b>Maverick 3.0 V6 24V</b>		2001 ->
AJ		145 197
Oil press. switch/Int. pres. aceite		12611
Rev. light switch/Int. luz marcha atrás	10.2005 ->	40825
<b>Mondeo I 1.6 i 16V, Kombi, Sedan</b>		1993-96
L1F		66 90
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Without/Sin cruise control	24830
<b>Mondeo I 1.6 i 16V, Kombi, Sedan</b>		1994-96
L1J		65 88
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Without/Sin cruise control	24830
<b>Mondeo I 1.8 i 16V, Kombi, Sedan</b>		1994-96
RKB		82 112
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Without/Sin cruise control	24830
<b>Mondeo I 1.8 i 16V, Kombi, Sedan, 4x4</b>		1993-96
RKA		85 115
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24810
On clutch pedal/Int. pedal embrague	Without/Sin cruise control	24830
<b>Mondeo I 1.8 TD, Kombi, Sedan</b>		1993-96
RFM/RFN		65 88
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24810
Stop light switch/Int. luz stop	Without/Sin cruise control	24820
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24830
Temp. sending unit/Termo-Resistencia		32040
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37240
Fan switch/Termocontacto ventilador	Climat, Red/Rojo	37960



**FORD Cont.**

<b>Mondeo I 1.8 TD, Kombi, Sedan</b>	1995-96
RFM/RFN	66 90
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24810
Stop light switch/Int. luz stop	24820
On clutch pedal/Int. pedal embrague	24830
Temp. sending unit/Termo-Resistencia	32040
Fan switch/Termocontacto ventilador	37240
Fan switch/Termocontacto ventilador	37960
<b>Mondeo I 2.0 i 16V, Kombi, Sedan, 4x4</b>	1993-96
NGA	100 132
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24830
On clutch pedal/Int. pedal embrague	24880
<b>Mondeo I 2.0 i 16V, Kombi, Sedan, 4x4</b>	1993-96
	97 132
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24830
Without/Sin cruise control	24830
<b>Mondeo I 2.5 i 24V, Kombi, Sedan</b>	1994-96
SEA	125 170
Oil press. switch/Int. pres. aceite	12611
<b>Mondeo II 1.6 i 16V, Kombi, Sedan</b>	1998-00
L1N/L1L/L1Q	70 95
Oil press. switch/Int. pres. aceite	-> 05.1998 12220
Oil press. switch/Int. pres. aceite	05.1998 -> 12610
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 1.8 i, Kombi, Sedan</b>	1996-00
L1J	66 90
Oil press. switch/Int. pres. aceite	-> 05.1998 12220
Oil press. switch/Int. pres. aceite	05.1998 -> 12610
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 1.8 i, Kombi, Sedan</b>	1996-00
RKK/RKJ/RKB/RKF/RKH	85 115
Oil press. switch/Int. pres. aceite	-> 05.1998 12220
Oil press. switch/Int. pres. aceite	05.1998 -> 12610
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 1.8 TD, Kombi, Sedan</b>	1996-00
RFN	66 90
Oil press. switch/Int. pres. aceite	-> 05.1998 12220
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Fan switch/Termocontacto ventilador	37240
Fan switch/Termocontacto ventilador	37960
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 2.0 i, Kombi, Sedan</b>	1996-00
NGA/NGB/NGD/NGC	96 131
Oil press. switch/Int. pres. aceite	-> 05.1998 12220
Oil press. switch/Int. pres. aceite	05.1998 -> 12610
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 2.5 24V, Kombi, Sedan</b>	2000-00
SEB/SEC	125 170
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 2.5 i 24V, Kombi, Sedan</b>	1996-00
SEA	125 170
Oil press. switch/Int. pres. aceite	-> 05.1998 12220
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo II 2.5 ST 200, Kombi, Sedan</b>	1999-00
SGA	151 205
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
<b>Mondeo III 1.8 16V, Kombi, Sedan</b>	2000-07
CGBB/CGBA	81 110
Oil press. switch/Int. pres. aceite	12613
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596

**FORD Cont.**

<b>Mondeo III 1.8 16V, Kombi, Sedan</b>	2000-07
CHBA/CHBB	92 125
Oil press. switch/Int. pres. aceite	12613
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 1.8 Sci, Kombi, Sedan</b>	2003-07
CFBA	96 130
Oil press. switch/Int. pres. aceite	12613
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 2.0 16V DI / TDDi / TDCi, Kombi, Sedan</b>	2000-07
SDBA/D5BA	66 90
Oil press. switch/Int. pres. aceite	12612
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 2.0 16V TDDi / TDCi, Kombi, Sedan</b>	2000-07
HJBA/HJBB/D68A/HJBC	85 115
Oil press. switch/Int. pres. aceite	12612
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 2.0 16V, Kombi, Sedan</b>	2000-07
CJBA/CJBB	107 146
Oil press. switch/Int. pres. aceite	12613
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 2.0 TDCi, Kombi, Sedan</b>	2001-07
N7BA/FMBA	96 130
Oil press. switch/Int. pres. aceite	12612
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 2.0 TDCi, Sedan</b>	2003-05
LCBD	125 170
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 2.5 V6 24V, Kombi, Sedan</b>	2000-07
LCBD	125 170
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III 3.0 V6 24V, Kombi, Sedan</b>	2004-07
REBA	150 204
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo III ST220, Kombi, Sedan</b>	2002-07
MEBA	166 226
Oil press. switch/Int. pres. aceite	12611
Stop light switch/Int. luz stop	24810
On clutch pedal/Int. pedal embrague	24835
Stop light switch/Int. luz stop	24840
On clutch pedal/Int. pedal embrague	24845
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo IV 1.6 Ti, Sedan, Turnier</b>	2007 ->
RHBA	81 110
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Mondeo IV 1.6 Ti, Turnier</b>	2007 ->
PNBA	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40591
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596



**FORD Cont.**

<b>Orion III 1.3</b>		1990-93
J6A/J4B		44 60
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Orion III 1.4</b>		1990-93
F6F/F6G		52 71
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Orion III 1.4</b>		1990-93
FUH		54 73
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Orion III 1.6</b>		1990-92
LJJ/LUK		66 90
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Orion III 1.6 i</b>		1990-92
LJF		77 105
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		31390
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
Rev. light switch/Int. luz marcha atrás		40590
<b>Orion III 1.6 i 16V</b>		1992-93
L1E/L1K		66 90
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Orion III 1.8 D</b>		1990-93
RTH/RTF/RTE		44 60
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37960
Fan switch/Termocontacto ventilador	Climat, Red/Rojo	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Orion III 1.8 i 16V</b>		1992-93
RDA		77 105
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Orion III 1.8 i 16V</b>		1992-93
RQB		96 130
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Orion III 1.8 TD</b>		1992-93
RFD/RFK		66 90
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32010
Fan switch/Termocontacto ventilador	Green/Verde	37290
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37960
Fan switch/Termocontacto ventilador	Climat, Red/Rojo	37970
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40590
<b>Puma 1.4 16V</b>		1997-00
FHD/FHF		66 90
Rev. light switch/Int. luz marcha atrás		40730
<b>Puma 1.6 16V</b>		2000 ->
L1W		76 103
Rev. light switch/Int. luz marcha atrás		40730
<b>Puma 1.7 16V</b>		1997 ->
MHB/MHA		92 125
Rev. light switch/Int. luz marcha atrás		40730
<b>Ranger 2.5 D</b>		1999-02
WL		57 78
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31640
Rev. light switch/Int. luz marcha atrás		40986
<b>Ranger 2.5 D 4x4</b>		1999-02
WL		57 78
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31640
Rev. light switch/Int. luz marcha atrás		40986

**FORD Cont.**

<b>Ranger 2.5 TD</b>		2002 ->
		62 84
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31640
Rev. light switch/Int. luz marcha atrás		40986
<b>Ranger 2.5 TD 4x4</b>		1999 ->
WL-T		80 109
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31640
Rev. light switch/Int. luz marcha atrás		40986
<b>Ranger 2.5 TD 4x4</b>		2002 ->
		62 84
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31640
Rev. light switch/Int. luz marcha atrás		40986
<b>Ranger 2.5 TDDi, 4x4</b>		2005 ->
		105 143
Stop light switch/Int. luz stop		24720
<b>Ranger 3.0 TDCi, 4x4</b>		2005 ->
		115 156
Stop light switch/Int. luz stop		24720
<b>Scorpio I 1.8</b>		1985-92
REC		66 90
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0</b>		1985-89
N8D/NEL		77 105
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0</b>		1988-92
N8A		80 109
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0 i</b>		1985-90
NRC		74 100
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0 i</b>		1985-94
NRI/NRA		85 115
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0 i, Kombi, Sedan</b>		1989-94
N9D		88 120
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0 i, Kombi, Sedan</b>		1991-94
N9F		85 115
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.0 i, Kombi, Sedan</b>		1989-92
		92 125
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.4 i, Kombi, Sedan, Kat.</b>		1988-94
ARD		92 125
Oil press. switch/Int. pres. aceite		12220
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia	Green/Verde	32010
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37290
Fan switch/Termocontacto ventilador	With/Con A.A.	37970
<b>Scorpio I 2.5 D, Sedan, Kombi</b>		1985-94
STR		51 69
Oil press. switch/Int. pres. aceite	0.80 bar	11630
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32300
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35170
Temp. s. warning lamp/Termocont. temp.	Climat	35180
Temp. s. warning lamp/Termocont. temp.	01.1990 ->, Climat	35380
Fan switch/Termocontacto ventilador		37230
Fan switch/Termocontacto ventilador	Climat	38010
<b>Scorpio I 2.5 TD, Kombi, Sedan</b>		1993-94
SCB		85 115
Oil press. switch/Int. pres. aceite	0.80 bar	11630
Stop light switch/Int. luz stop		24210
Temp. sending unit/Termo-Resistencia		32300
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35170
Temp. s. warning lamp/Termocont. temp.	Climat	35180
Temp. s. warning lamp/Termocont. temp.	Climat	35380
Fan switch/Termocontacto ventilador		37230
Fan switch/Termocontacto ventilador	Climat	38010

**FORD Cont.**

<b>Scorpio I 2.5 TD, Sedan, Kombi</b>		<b>1988-93</b>
SFA/SFB		68 92
Oil press. switch/Int. pres. aceite	0.80 bar	<b>11630</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32300</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35170</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.	01.1990 ->, Climat	<b>35380</b>
Fan switch/Termocontacto ventilador		<b>37230</b>
Fan switch/Termocontacto ventilador	Climat	<b>38010</b>
<b>Scorpio I 2.9 i 24V, Kombi, Sedan</b>		<b>1991-94</b>
BOA		143 195
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia	Green/Verde	<b>32010</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37290</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>37970</b>
<b>Scorpio I 2.9 i Kat</b>		<b>1987-94</b>
BRE		107 145
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia	Green/Verde	<b>32010</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37290</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>37970</b>
<b>Scorpio I 2.9 i, 4x4</b>		<b>1986-94</b>
BRC		110 150
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia	Green/Verde	<b>32010</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37290</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>37970</b>
<b>Scorpio I 2.9 i, Kombi, Sedan, 4x4</b>		<b>1986-94</b>
BRD/BRE/BRF		107 145
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia	Green/Verde	<b>32010</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37290</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>37970</b>
<b>Scorpio II 2.0 i 16V, Kombi</b>		<b>1994-98</b>
N3A		100 136
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
<b>Scorpio II 2.0 i, Kombi</b>		<b>1994-98</b>
NSD		85 115
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
<b>Scorpio II 2.3 i 16V, Kombi</b>		<b>1996-98</b>
Y5A		108 147
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
<b>Scorpio II 2.5 TD, Kombi</b>		<b>1994-98</b>
SCC		85 115
Oil press. switch/Int. pres. aceite		<b>11710</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37960</b>
<b>Scorpio II 2.5 TD, Kombi</b>		<b>1996-98</b>
VM		92 125
Oil press. switch/Int. pres. aceite		<b>11710</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37960</b>
<b>Scorpio II 2.9 i 24V, Kombi</b>		<b>1994-98</b>
BOB		152 207
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
<b>Scorpio II 2.9 i, Kombi</b>		<b>1995-98</b>
BRG		110 150
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24800</b>
Stop light switch/Int. luz stop	Green/Verde	<b>24840</b>
<b>Sierra 1.6 i, Kombi</b>		<b>1989-93</b>
L6B		59 80
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>31390</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
<b>Sierra 1.6, Kombi</b>		<b>1987-93</b>
LSE		55 75
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 1.6, Kombi</b>		<b>1988-93</b>
LSF		53 72
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 1.8 TD, Kombi</b>		<b>1988-93</b>
RFA/RFB/RFL		55 75
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32040</b>
Fan switch/Termocontacto ventilador		<b>37240</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>

**FORD Cont.**

<b>Sierra 1.8, Kombi</b>		<b>1988-93</b>
R2C/RGA		64 87
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 1.8, Kombi</b>		<b>1987-89</b>
RED/REF		59 80
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
<b>Sierra 2.0 16V Cosworth 4x4</b>		<b>1990-93</b>
N5D		162 220
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.0 16V Cosworth 4x4 Kat</b>		<b>1990-93</b>
N5C		162 220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
<b>Sierra 2.0 i</b>		<b>1989-93</b>
N8A		80 109
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.0 i</b>		<b>1989-93</b>
N9B		92 125
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.0 i Kat, Kombi</b>		<b>1987-93</b>
N4B		74 100
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.0 i, Kombi</b>		<b>1987-93</b>
N4I/N4A		85 115
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
<b>Sierra 2.0 i, Kombi</b>		<b>1987-89</b>
NE5/NEJ		74 100
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.0 i, Kombi, 4x4</b>		<b>1989-93</b>
N9C		88 120
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.0 RS Cosworth</b>		<b>1987-90</b>
N5B		150 204
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
<b>Sierra 2.0, Kombi</b>		<b>1987-93</b>
N8C/NES		77 105
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.3 D</b>		<b>1987-89</b>
YTR/YTT		49 67
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32040</b>
Fan switch/Termocontacto ventilador		<b>37240</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.3 D, Kombi</b>		<b>1987-93</b>
YTR		49 67
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32300</b>
Fan switch/Termocontacto ventilador	02.1990 ->	<b>37240</b>
Fan switch/Termocontacto ventilador		<b>38010</b>
Rev. light switch/Int. luz marcha atrás		<b>40290</b>
<b>Sierra 2.8 i, Kombi</b>		<b>1987-93</b>
PR8		105 143
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32190</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38010</b>

**FORD Cont.**

<b>Sierra 2.8 i, Kombi, XR, 4x4</b>	1987-93
PR7	107 146
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	32190
Fan switch/Termocontacto ventilador	38010
Rev. light switch/Int. luz marcha atrás	40290
2 fans or speeds/Ventil. o veloc.	
<b>Sierra 2.9 i XR 4x4</b>	1988-93
B4A	110 150
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	32190
Fan switch/Termocontacto ventilador	38010
Rev. light switch/Int. luz marcha atrás	40290
2 fans or speeds/Ventil. o veloc.	
<b>Sierra 2.9 i, XR 4x4</b>	1988-93
B4B/B4C	107 145
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	32190
Fan switch/Termocontacto ventilador	38010
Rev. light switch/Int. luz marcha atrás	40290
2 fans or speeds/Ventil. o veloc.	
<b>Sierra 2.9, Kombi, 4x4</b>	1988-93
B4B/B4C	107 145
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	32190
Fan switch/Termocontacto ventilador	38010
Rev. light switch/Int. luz marcha atrás	40290
2 fans or speeds/Ventil. o veloc.	
<b>S-Max 1.8 TDCi</b>	2006 ->
QYWA	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 1.8 TDCi</b>	2007 ->
FFWA	74 100
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0</b>	2006 ->
AOWB/AOWA	107 145
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 Flexifuel</b>	2006 ->
TBWA/TBWB	107 145
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 SCTi</b>	2010 ->
TNWA	149 203
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 TDCi</b>	2006 ->
UKWA/AZWC	100 136
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 TDCi</b>	2006 ->
AZWA	96 130
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 TDCi</b>	2006 ->
UFWA/QXWA/QXWC/QXWB	103 140
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 TDCi</b>	2007 ->
KLWA/TYWA	85 115
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.0 TDCi</b>	2010 ->
	120 163
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.2 TDCi</b>	2008 ->
Q4WA	129 175
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.3</b>	2007 ->
SEWA	118 160
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>S-Max 2.5 ST</b>	2006 ->
HUWA	162 220
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40595
Rev. light switch/Int. luz marcha atrás	40596
<b>Street Ka 1.6</b>	2003-05
CDRA/CDRB	70 95
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40730

**FORD Cont.**

<b>Tourneo Connect 1.8 16V</b>	2002 ->
EYPC/EYPA/EYPD	85 116
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40595
Gear box/Cambio MTX75, Manual 5 speed/vel.	
<b>Tourneo Connect 1.8 Di</b>	2002 ->
BHPA/P7PA/P7PB/R2PA	55 75
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
Gear box/Cambio MTX75, Manual 5 speed/vel.	
<b>Tourneo Connect 1.8 TDCi</b>	2006 ->
RWPA	81 110
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
Gear box/Cambio MTX75, Manual 5 speed/vel.	
<b>Tourneo Connect 1.8 Turbo Di</b>	2002 ->
HCPB/HCPA	66 90
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
Gear box/Cambio MTX75, Manual 5 speed/vel.	
<b>Transit 1.6</b>	1985-92
LAT	46 63
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	31390
Temp. sending unit/Termo-Resistencia	32080
Fan switch/Termocontacto ventilador	37970
Rev. light switch/Int. luz marcha atrás	40290
With/Con A.A.	
<b>Transit 2.0</b>	1985-92
NAT/NAV	57 78
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	31390
Temp. sending unit/Termo-Resistencia	32080
Fan switch/Termocontacto ventilador	37970
Rev. light switch/Int. luz marcha atrás	40290
With/Con A.A.	
<b>Transit 2.0</b>	1994-00
NSF/NSG	84 114
Rev. light switch/Int. luz marcha atrás	40920
<b>Transit 2.0</b>	1985-92
N6T	57 78
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	31390
Temp. sending unit/Termo-Resistencia	32080
Fan switch/Termocontacto ventilador	37970
Rev. light switch/Int. luz marcha atrás	40290
With/Con A.A.	
<b>Transit 2.0</b>	1991-94
NBA	66 90
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	31390
Temp. sending unit/Termo-Resistencia	32080
Fan switch/Termocontacto ventilador	37970
Rev. light switch/Int. luz marcha atrás	40290
Gear box/Cambio MT75	40920
<b>Transit 2.0 CNG, Tourneo</b>	1994-00
NSH	84 114
Rev. light switch/Int. luz marcha atrás	40920
<b>Transit 2.0 DI</b>	2000-06
D3FA	55 75
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40597
Rev. light switch/Int. luz marcha atrás	40921
08.2004 ->	
<b>Transit 2.0 DI</b>	2000-06
ABFA	74 100
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40597
Rev. light switch/Int. luz marcha atrás	40921
08.2004 ->	
<b>Transit 2.0 DI</b>	2000-06
F3FA	63 86
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40597
Rev. light switch/Int. luz marcha atrás	40921
08.2004 ->	
<b>Transit 2.0 i</b>	1991-94
NCA	72 98
Oil press. switch/Int. pres. aceite	12220
Stop light switch/Int. luz stop	24210
Temp. sending unit/Termo-Resistencia	31390
Temp. sending unit/Termo-Resistencia	32080
Fan switch/Termocontacto ventilador	37970
Rev. light switch/Int. luz marcha atrás	40290
With/Con A.A.	
<b>Transit 2.0 TDCi</b>	2002-06
FIFA	92 125
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40597
Rev. light switch/Int. luz marcha atrás	40921
08.2004 ->	
<b>Transit 2.2 TDCi</b>	2006 ->
P8FA/P8FB	63 85
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40596
Rev. light switch/Int. luz marcha atrás	40921
Gear box/Cambio MMT6, Manual 6 speed/vel.	
<b>Transit 2.2 TDCi, Tourneo</b>	2006 ->
QVFA	81 110
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40596
Rev. light switch/Int. luz marcha atrás	40921
Gear box/Cambio MMT6, Manual 6 speed/vel.	
<b>Transit 2.2 TDCi, Tourneo</b>	2006 ->
QWFA	96 131
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40596
Rev. light switch/Int. luz marcha atrás	40921
Gear box/Cambio MMT6, Manual 6 speed/vel.	
<b>Transit 2.2 TDCi, Tourneo</b>	2007 ->
PGFB/PGFA	103 140
Rev. light switch/Int. luz marcha atrás	40596
Gear box/Cambio MMT6, Manual 6 speed/vel.	
<b>Transit 2.2 TDCi, Tourneo</b>	2008 ->
SRFC/SRFA/SRFB/SRFE/SRFD	85 115
Rev. light switch/Int. luz marcha atrás	40596
Gear box/Cambio MMT6, Manual 6 speed/vel.	

**FORD Cont.**

<b>Transit 2.3 16V</b>	2006 ->	
GZFA/GZFC	107 145	
Oil press. switch/Int. pres. aceite	<b>12613</b>	
Rev. light switch/Int. luz marcha atrás	<b>40596</b>	Gear box/Cambio MMT6, Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	
<b>Transit 2.3 16V [RWD]</b>	<b>2000-06</b>	
E5FC/E5FA	107 146	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
<b>Transit 2.4 DI</b>	<b>2000-06</b>	
D2FA/D2FB/D2FE	66 90	
Oil press. switch/Int. pres. aceite	<b>12612</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	08.2004 ->
<b>Transit 2.4 DI [RWD]</b>	<b>2000-06</b>	
D4FA	88 120	
Oil press. switch/Int. pres. aceite	<b>12612</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	08.2004 ->
<b>Transit 2.4 DI [RWD]</b>	<b>2000-06</b>	
F4FA	55 75	
Oil press. switch/Int. pres. aceite	<b>12612</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	08.2004 ->
<b>Transit 2.4 TDCi</b>	<b>2004-06</b>	
H9FA	101 137	
Oil press. switch/Int. pres. aceite	<b>12612</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	08.2004 ->
<b>Transit 2.4 TDCi</b>	<b>2006 -&gt;</b>	
JXFC/JXFA	85 115	
Oil press. switch/Int. pres. aceite	<b>12610</b>	
Rev. light switch/Int. luz marcha atrás	<b>40596</b>	Gear box/Cambio MMT6, Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	
<b>Transit 2.4 TDCi</b>	<b>2006 -&gt;</b>	
H9FD	103 140	
Oil press. switch/Int. pres. aceite	<b>12610</b>	
Rev. light switch/Int. luz marcha atrás	<b>40596</b>	Gear box/Cambio MMT6, Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	
<b>Transit 2.4 TDCi</b>	<b>2006 -&gt;</b>	
PHFA/PHFC	74 100	
Oil press. switch/Int. pres. aceite	<b>12610</b>	
Rev. light switch/Int. luz marcha atrás	<b>40596</b>	Gear box/Cambio MMT6, Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	
<b>Transit 2.4 TDCi Allrad</b>	<b>2006 -&gt;</b>	
H9FB	103 140	
Oil press. switch/Int. pres. aceite	<b>12610</b>	
Rev. light switch/Int. luz marcha atrás	<b>40596</b>	Gear box/Cambio MMT6, Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	
<b>Transit 2.4 TDE</b>	<b>2001-06</b>	
DOFA	92 125	
Oil press. switch/Int. pres. aceite	<b>12612</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	08.2004 ->
<b>Transit 2.4 TDE</b>	<b>2004-06</b>	
FXFA	85 115	
Oil press. switch/Int. pres. aceite	<b>12612</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40597</b>	
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	08.2004 ->
<b>Transit 2.5 D</b>	<b>1985-91</b>	
4AB	50 68	
Oil press. switch/Int. pres. aceite	<b>12180</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 D</b>	<b>1988-92</b>	
4BA/4CA/4AB	52 71	
Oil press. switch/Int. pres. aceite	<b>12040</b>	01.1992 ->
Oil press. switch/Int. pres. aceite	<b>12180</b>	-> 12.1991
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	01.1991 ->
<b>Transit 2.5 DI</b>	<b>1991-94</b>	
4FA /4BC/4CC	51 70	
Oil press. switch/Int. pres. aceite	<b>12040</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 DI</b>	<b>1991-94</b>	
4DA	59 80	
Oil press. switch/Int. pres. aceite	<b>12040</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 DI</b>	<b>1994-00</b>	
4HC /4HB	56 76	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 DI</b>	<b>1988-92</b>	
4BA/4CA	52 71	
Oil press. switch/Int. pres. aceite	<b>12040</b>	01.1992 ->
Oil press. switch/Int. pres. aceite	<b>12180</b>	-> 12.1991
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	01.1991 ->
<b>Transit 2.5 DI</b>	<b>1997-00</b>	
4ED	85 116	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 DI Tourneo</b>	<b>1994-00</b>	
4HC /4HB/4HA	56 76	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 DI, Tourneo</b>	<b>1994-00</b>	
4FA /4FB/4FD/4FC	51 69	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	

**FORD Cont.**

<b>Transit 2.5 TD</b>	1991-94	
4EA	74 100	
Oil press. switch/Int. pres. aceite	<b>12040</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 TD</b>	<b>1994-00</b>	
4EB/4EC	74 100	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 TD</b>	<b>1994-00</b>	
4GF/4GB/4GC /4GA/4GE/4GD	63 85	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 TD</b>	<b>1992-94</b>	
4GA	63 85	
Oil press. switch/Int. pres. aceite	<b>12040</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 TD</b>	<b>1994-00</b>	
4HD/4HA	55 75	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 TD, Tourneo</b>	<b>1992-00</b>	
4GB/4GC /4GA	63 85	
Oil press. switch/Int. pres. aceite	<b>12040</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.5 TDI</b>	<b>1994-00</b>	
4EB/4EC	74 101	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 2.9 i</b>	<b>1991 -&gt;</b>	
BRT	107 145	
Temp. sending unit/Termo-Resistencia	<b>31390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	
<b>Transit 3.2 TDCi</b>	<b>2008 -&gt;</b>	
SAFA/SAFB	147 200	
Oil press. switch/Int. pres. aceite	<b>12610</b>	
Rev. light switch/Int. luz marcha atrás	<b>40596</b>	Gear box/Cambio MMT6, Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40921</b>	
<b>Transit Connect 1.8 16V</b>	<b>2002 -&gt;</b>	
EYPC/EYPA/EYPD	85 116	
Oil press. switch/Int. pres. aceite	<b>12610</b>	
Rev. light switch/Int. luz marcha atrás	<b>40595</b>	Gear box/Cambio MTX75, Manual 5 speed/vel.
<b>Transit Connect 1.8 Di</b>	<b>2002 -&gt;</b>	
BHPA/P7PA/P7PB/R2PA	55 75	
Oil press. switch/Int. pres. aceite	<b>12613</b>	
Rev. light switch/Int. luz marcha atrás	<b>40595</b>	Gear box/Cambio MTX75, Manual 5 speed/vel.
<b>Transit Connect 1.8 TDCi</b>	<b>2002 -&gt;</b>	
HCPB/HCPA	66 90	
Oil press. switch/Int. pres. aceite	<b>12613</b>	
Rev. light switch/Int. luz marcha atrás	<b>40595</b>	Gear box/Cambio MTX75, Manual 5 speed/vel.
<b>Transit Connect 1.8 TDCi</b>	<b>2006 -&gt;</b>	
RWPA	81 110	
Oil press. switch/Int. pres. aceite	<b>12613</b>	
Rev. light switch/Int. luz marcha atrás	<b>40595</b>	Gear box/Cambio MTX75, Manual 5 speed/vel.
<b>Transit Tourneo 2.5 TD</b>	<b>1998-00</b>	
4EB/4EC	74 100	
Rev. light switch/Int. luz marcha atrás	<b>40920</b>	

**FORD USA**

<b>Aerostar 3.0 i V6</b>	1986-97	
	108 147	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	
<b>Aerostar 4.0 i V6 4WD</b>	<b>1989-97</b>	
	115 156	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	
<b>Bronco II 2.9 i V6 4x4</b>	<b>1988-90</b>	
	104 141	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	
<b>Explorer 4.0 V6 Allrad</b>	<b>1993 -&gt;</b>	
	121 165	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1996
<b>Mustang 3.8</b>	<b>1993 -&gt;</b>	
	112 152	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1997
<b>Mustang 3.8</b>	<b>1994-99</b>	
	108 147	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1997
<b>Mustang 4.6</b>	<b>1995-99</b>	
	160 218	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1997
<b>Mustang 4.6</b>	<b>1995-99</b>	
	225 306	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1997
<b>Mustang 4.6</b>	<b>1995-99</b>	
	165 224	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1997
<b>Mustang 4.9</b>	<b>1993 -&gt;</b>	
	160 218	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	-> 01.1997
<b>Probe II 2.0 16V</b>	<b>1993-98</b>	
FS	85 116	
Oil press. switch/Int. pres. aceite	<b>11610</b>	
<b>Windstar 3.0 V6</b>	<b>1995-99</b>	
	109 148	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	
<b>Windstar 3.8 V6</b>	<b>1995 -&gt;</b>	
	149 203	
Temp. sending unit/Termo-Resistencia	<b>32713</b>	

**FSO**

<b>125P 1.3, Kombi</b>	1967-92	
116 C 076	47 64	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
<b>125P 1.5, Kombi</b>	<b>1967-92</b>	
115 C 076	55 75	
Oil press. switch/Int. pres. aceite	<b>11200</b>	

**FSO Cont.**

<b>126P 0.6</b>	<b>1977-91</b>
126 A1.048	22 30
Oil press. switch/Int. pres. aceite	<b>11200</b>
Rev. light switch/Int. luz marcha atrás	<b>41215</b>
<b>126P 650</b>	<b>1981-00</b>
126 A1.048	18 24
Oil press. switch/Int. pres. aceite	<b>11200</b>
<b>Polonez II 1.6</b>	<b>1988-92</b>
CB	64 87
Oil press. switch/Int. pres. aceite	<b>11200</b>

**HOLDEN**

<b>Statesman 3.8 i V6 Sedan</b>	<b>2001-03</b>
	147 200
Temp. sending unit/Termo-Resistencia	<b>32230</b>

**HONDA**

<b>Accord III 1.6 L</b>	<b>1985-89</b>
A16A1	65 88
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord III 2.0 EX Aerodeck</b>	<b>1985-89</b>
A20A2	78 106
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord III 2.0 EX, Aerodeck</b>	<b>1985-89</b>
A20A1	75 102
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord III 2.0 Exi, Aerodeck</b>	<b>1986-89</b>
A20A3	85 116
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord III 2.0 i 16V</b>	<b>1987-89</b>
B20A8	98 133
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 1.8</b>	<b>1990-91</b>
	77 105
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.0 16V</b>	<b>1990-93</b>
F20A6	66 90
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.0 16V</b>	<b>1990-93</b>
F20A3/F20A2	81 110
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.0 i 16V</b>	<b>1990-93</b>
F20A4/F20A8	98 133
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.0 i 16V Aerodeck</b>	<b>1993-93</b>
F20Z3	98 133
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.0 i 16V Coupe</b>	<b>1992-93</b>
F20A7	98 133
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.2 i 16V</b>	<b>1990-93</b>
F22A3	110 150
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.2 i 16V Aerodeck</b>	<b>1991-93</b>
F22A8	108 147
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IV 2.2 i 16V Aerodeck</b>	<b>1991-93</b>
F22A7	110 150
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>

**HONDA Cont.**

<b>Accord IV 2.2 i 16V Automatik</b>	<b>1990-93</b>
F22A3	108 147
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord IX 2.0, Kombi</b>	<b>2008 -&gt;</b>
R20A3	115 156
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>
<b>Accord IX 2.2 i-DTEC, Kombi</b>	<b>2008 -&gt;</b>
N22B1	110 150
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>
<b>Accord IX 2.4, Kombi</b>	<b>2008 -&gt;</b>
K24Z3	148 201
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>
<b>Accord V 2.0 Coupe</b>	<b>1993-97</b>
F20B3	100 136
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Manual	
<b>Accord V 2.0 i</b>	<b>1993-96</b>
F20Z2	85 116
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Manual	
<b>Accord V 2.0 i LS 16V Aerodeck</b>	<b>1993-98</b>
F20B3	100 136
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Manual	
<b>Accord V 2.0 i S</b>	<b>1993-96</b>
F20Z1	96 131
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Manual	
<b>Accord V 2.2 i ES</b>	<b>1993-98</b>
F22B5	110 150
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Manual	
<b>Accord V 2.3 i SR</b>	<b>1993-96</b>
H23A3	116 158
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24550</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Manual	
<b>Accord VI 1.9 i</b>	<b>1996-98</b>
F18A3	85 116
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36440</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord VI 2.0 i LS</b>	<b>1996-98</b>
F20Z1	96 131
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36440</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord VI 2.0 TDi</b>	<b>1996-98</b>
20T2N	77 105
Oil press. switch/Int. pres. aceite	<b>12410</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36440</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Accord VI 2.2 i VTEC</b>	<b>1996-98</b>
F22Z2	110 150
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36440</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>

**HONDA Cont.**

<b>Accord VII 1.6 i</b>	1998-02
D16B6	85 116
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Accord VII 1.8 i</b>	1998-02
F18B2	100 136
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36435
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 2.0</b>	1999-02
F20B6	108 147
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36435
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 2.0 i</b>	1998-01
F20B6	108 147
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36435
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 2.0 i 16V Coupe</b>	1998-03
F20B7/F20B5	108 147
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36435
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 2.0 Turbo DI</b>	1999-02
20T2N	77 105
Oil press. switch/Int. pres. aceite	12410
Oil press. switch/Int. pres. aceite	12470
Fan switch/Termocontacto ventilador	36290
Manual	
<b>Accord VII 2.2 Type-R</b>	1999-02
H22A7	156 212
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36410
Rev. light switch/Int. luz marcha atrás	40580
<b>Accord VII 2.3</b>	2001-03
F23Z5/F23A1	113 154
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24600
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36435
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 2.3</b>	2000-02
F23Z5	113 154
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24600
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36435
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 2.3 16 V Aerodeck</b>	1998 ->
F23A7	118 160
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24600
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
Manual	
<b>Accord VII 3.0 V6 24V Coupe</b>	1998-03
J30A1	147 200
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24625
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
<b>Accord VIII 2.0, Allroad, Tourer</b>	2003 ->
K20A6/K20A	114 155
Rev. light switch/Int. luz marcha atrás	41302
<b>Accord VIII 2.2 i-CTDi, Tourer</b>	2004 ->
N22A1	103 140
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	41302
<b>Accord VIII 2.4</b>	2003 ->
K24A3/K24A	140 190
Rev. light switch/Int. luz marcha atrás	41302
<b>Accord VIII 2.4 Tourer</b>	2003 ->
K24A	140 190
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic II 1.4 i 16V Shuttle</b>	1988-92
D14A1	66 90
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic II 1.5 i 16V Shuttle</b>	1988-91
D15B2	69 94
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic II 1.6 i 16V 4WD Shuttle</b>	1988-95
D16A6	81 110
Rev. light switch/Int. luz marcha atrás	40580

**HONDA Cont.**

<b>Civic IV 1.3 16V</b>	1989-91
D13B2	55 75
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.3, Sedan</b>	1987-89
D13B1	55 75
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.4 L, Sedan</b>	1987-89
D14A1	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.5 i 16V</b>	1991-95
D15B2/D15Z2	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic IV 1.5 i 16V, Sedan</b>	1987-91
D15B2	69 94
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.5 i 16V, Sedan</b>	1991-95
D15Z1 /D15B2	69 94
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic IV 1.5 i 16V, Sedan</b>	1988-91
D15B2	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.6 16V Vtec</b>	1991-95
D16Z6	92 125
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic IV 1.6 i 16V</b>	1987-91
D16A9/D16A7	96 130
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.6 i 16V Sedan</b>	1987-91
D16A7	96 130
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.6 i 16V Vtec</b>	1989-91
B16A1	110 150
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.6 i 16V, Sedan</b>	1987-91
D16Z2	81 110
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.6 i 16V, Sedan, 4x4</b>	1987-91
D16A6	80 109
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Rev. light switch/Int. luz marcha atrás	40580
<b>Civic IV 1.6 VTI</b>	1991-95
B16A2	118 160
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic V 1.5 i LSi Coupe</b>	1994-95
D15B7	74 101
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic V 1.6 16V Vtec Sedan</b>	1991-95
D16Z6/D16Z7	92 125
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585



**HONDA Cont.**

<b>Civic V 1.6 i Coupe</b>	<b>1994-95</b>
D16Y7	77 105
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic V 1.6 i Vtec Coupe</b>	<b>1994-96</b>
D16Y6/D16Z9	92 125
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic V 1.6 i Vtec Coupe</b>	<b>1994-95</b>
B16A2	118 160
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic VI 1.4 16V, Aerodeck</b>	<b>1997-01</b>
D14A7	55 75
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 1.4 16V, Aerodeck</b>	<b>1997-01</b>
D14A8	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 1.4 i</b>	<b>1994-97</b>
D14A2	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic VI 1.4 i</b>	<b>1995-01</b>
D14Z1/D14A3	55 75
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
01.1996 ->	
Manual	
<b>Civic VI 1.4 i</b>	<b>1995-97</b>
D14A5	55 75
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic VI 1.4 i Sedan</b>	<b>1995-01</b>
D14A4/D14Z2	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
01.1996 ->	
Manual	
<b>Civic VI 1.5 i Vtec-E</b>	<b>1994-97</b>
D15Z3	66 90
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic VI 1.5 i, Sedan</b>	<b>1995-01</b>
D15Z6	84 114
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
01.1996 ->	
Manual	
<b>Civic VI 1.6 16V, Aerodeck</b>	<b>1997-01</b>
D16B2	85 116
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 1.6 i</b>	<b>1994-97</b>
D16Y3	83 113
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24600
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic VI 1.6 i</b>	<b>1995-01</b>
D16Y5	84 114
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
01.1996 ->	
Manual	

**HONDA Cont.**

<b>Civic VI 1.6 i Coupe</b>	<b>1996-00</b>
D16Y7	77 105
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 1.6 i Vtec</b>	<b>1994-97</b>
D16Y2	93 126
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
<b>Civic VI 1.6 i Vtec Coupe</b>	<b>1996-00</b>
D16Y8	92 125
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 1.6 i Vtec Coupe</b>	<b>1999-00</b>
B16A2	118 160
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 1.6 i Vtec Sedan</b>	<b>1995-01</b>
D16Y6/D16Y8	92 125
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
01.1996 ->	
Manual	
<b>Civic VI 1.6 VTI, Sedan</b>	<b>1995-01</b>
B16A2	118 160
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
01.1996 ->	
Manual	
<b>Civic VI 1.8 16V, Aerodeck</b>	<b>1997-01</b>
B18C4	124 169
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	40585
Manual	
<b>Civic VI 2.0 i D Aerodeck</b>	<b>1998-01</b>
20T2N	77 105
Oil press. switch/Int. pres. aceite	12410
Oil press. switch/Int. pres. aceite	12470
M 12x1,5	
0.35 bar	
<b>Civic VI 2.0 i TD</b>	<b>1997-01</b>
20T2R	63 86
Oil press. switch/Int. pres. aceite	12470
<b>Civic VI 2.0 TDIC</b>	<b>1998-00</b>
20T2N	77 105
Oil press. switch/Int. pres. aceite	12410
<b>Civic VII 1.3 IMA</b>	<b>2004-05</b>
LDA1	61 83
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.4</b>	<b>2001-05</b>
D14Z5	66 90
Oil press. switch/Int. pres. aceite	12230
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.4 i</b>	<b>2001-05</b>
	55 75
Oil press. switch/Int. pres. aceite	12230
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.4 IS</b>	<b>2001-05</b>
D14Z5/D14Z6	66 90
Oil press. switch/Int. pres. aceite	12230
Fan switch/Termocontacto ventilador	36440
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.6, 1.6 i, Coupe, Sedan</b>	<b>2001-05</b>
D16V1	81 110
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.7</b>	<b>2001-05</b>
D17A6	85 116
Oil press. switch/Int. pres. aceite	12230
Fan switch/Termocontacto ventilador	36440
<b>Civic VII 1.7 CTDi</b>	<b>2002-05</b>
4EE-2	74 100
Fan switch/Termocontacto ventilador	36470
<b>Civic VII 1.7 i Coupe</b>	<b>2001-05</b>
D17A8	88 120
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.7 i Vtec Coupe</b>	<b>2001-05</b>
D17A5/D17A9	92 125
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 1.8 Sedan</b>	<b>2005-05</b>
R18A1	103 140
Oil press. switch/Int. pres. aceite	12550
<b>Civic VII 2.0 i Sport</b>	<b>2004-05</b>
K20A3	118 160
Rev. light switch/Int. luz marcha atrás	41302
<b>Civic VII 2.0 Type-R</b>	<b>2001-05</b>
K20A2	147 200
Rev. light switch/Int. luz marcha atrás	41302

**HONDA Cont.**

<b>Civic VIII 1.3</b>	2006 ->	
LDA2	70 95	
Oil press. switch/Int. pres. aceite	12550	
<b>Civic VIII 1.4</b>	2006 ->	
L13A7	61 83	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Civic VIII 1.4</b>	2008 ->	
L13Z1	73 100	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Civic VIII 1.8</b>	2006 ->	
R18A2	103 140	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Civic VIII 2.2 CTDi</b>	2006 ->	
N22A2	103 140	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Civic VIII Type R</b>	2006 ->	
K20Z4	148 201	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Concerto 1.4, Sedan</b>	1989-91	
D14A8/D14A1	66 90	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Rev. light switch/Int. luz marcha atrás	40580	
<b>Concerto 1.4, Sedan</b>	1989-92	
D14A1	61 83	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Rev. light switch/Int. luz marcha atrás	40580	
<b>Concerto 1.5 i 16V, Sedan</b>	1989-95	
D15B2	66 90	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Rev. light switch/Int. luz marcha atrás	40580	
<b>Concerto 1.6 16V, Sedan</b>	1989-95	
D16Z2	78 106	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Rev. light switch/Int. luz marcha atrás	40580	
<b>Concerto 1.6 i 16V</b>	1989-95	
D16A8	90 122	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Rev. light switch/Int. luz marcha atrás	40580	
<b>Concerto 1.6 i 16V, Sedan</b>	1989-95	
D16Z2	82 112	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Rev. light switch/Int. luz marcha atrás	40580	
<b>CR-V 1.2.0 16V</b>	1995-99	
B20B	94 128	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	R.H.D.
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40586	
<b>CR-V 1.2.0 16V</b>	1999-02	
B20Z1	108 147	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	R.H.D.
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40586	
<b>CR-V II 2.0</b>	2002-06	
K20A4	110 150	
Oil press. switch/Int. pres. aceite	12230	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	41302	
<b>CR-V II 2.2 CTDi</b>	2005-06	
N22A2	103 140	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>CR-V III 2.0 i-VTEC</b>	2007 ->	
R20A2	110 150	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>CR-V III 2.2 i-CTDi</b>	2007 ->	
N22A2	103 140	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>CRX II 1.6 i 16V</b>	1987-89	
D16A8/D16A9	96 131	
Rev. light switch/Int. luz marcha atrás	40580	
<b>CRX II 1.6 i 16V</b>	1987-92	
D16Z5	91 124	
Rev. light switch/Int. luz marcha atrás	40580	
<b>CRX II 1.6 i 16V Vtec</b>	1989-92	
B16A1	110 150	
Rev. light switch/Int. luz marcha atrás	40580	
<b>CRX III 1.6 ESi</b>	1992-98	
D16Y8/D16Z6	92 125	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24550	
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40585	Manual

**HONDA Cont.**

<b>CRX III 1.6 i VTI</b>	1992-98	
B16A2	118 160	
Oil press. switch/Int. pres. aceite	12230	
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40585	Manual
<b>FR-V 1.7</b>	2005 ->	
D17A2	92 125	
Rev. light switch/Int. luz marcha atrás	40586	
<b>FR-V 1.8</b>	2007 ->	
R18A1	103 140	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>FR-V 2.0</b>	2005 ->	
K20A9	110 150	
Rev. light switch/Int. luz marcha atrás	41302	
<b>FR-V 2.2 i-CTDi</b>	2005 ->	
N22A1	103 140	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>HR-V 1.6 16V 4WD</b>	1999 ->	
D16W5	91 124	
Oil press. switch/Int. pres. aceite	12230	
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40586	
<b>HR-V 1.6 16V, 4WD</b>	1999 ->	
D16W1	77 105	
Oil press. switch/Int. pres. aceite	12230	
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40586	
<b>Insight 1.0 Hybrid</b>	2000-06	
ECA1	56 76	
Oil press. switch/Int. pres. aceite	12550	
Fan switch/Termocontacto ventilador	36470	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Insight 1.3</b>	2009 ->	
LDA3	65 88	
Oil press. switch/Int. pres. aceite	12550	
<b>Jazz II 1.2</b>	2002 ->	
L12A1	57 78	
Oil press. switch/Int. pres. aceite	12550	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Jazz II 1.4</b>	2002-08	
L13A1	61 83	
Oil press. switch/Int. pres. aceite	12550	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Jazz III 1.2</b>	2008 ->	
L12B1	66 90	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Jazz III 1.4</b>	2008 ->	
L13Z1	73 100	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41302	
<b>Legend I 2.7 i 24V, Coupe</b>	1987-90	
C27A1	124 169	
Oil press. switch/Int. pres. aceite	10610	
<b>Legend II 3.2 i 24V, Coupe</b>	1991-96	
C32A2	151 205	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24600	
Temp. sending unit/Termo-Resistencia	32590	
Fan switch/Termocontacto ventilador	36380	
<b>Legend III 3.5 i 24V</b>	1996 ->	
C35A2	151 205	
Oil press. switch/Int. pres. aceite	12230	
<b>Lobo 1.3</b>	1999-02	
D13B7	48 65	
Oil press. switch/Int. pres. aceite	12230	
Fan switch/Termocontacto ventilador	36440	
Rev. light switch/Int. luz marcha atrás	40580	Manual
<b>NSX 3.0 24V Vtec</b>	1990-05	
C30A3	201 274	
Oil press. switch/Int. pres. aceite	10610	
Stop light switch/Int. luz stop	24600	
Temp. sending unit/Termo-Resistencia	32590	
<b>NSX 3.0 24V Vtec Automatic</b>	1990-05	
C30A4	188 256	
Oil press. switch/Int. pres. aceite	10610	
Stop light switch/Int. luz stop	24600	
Temp. sending unit/Termo-Resistencia	32590	
<b>NSX 3.2 24V Vtec</b>	1997-05	
C32B2	206 280	
Oil press. switch/Int. pres. aceite	10610	
Stop light switch/Int. luz stop	24600	
Temp. sending unit/Termo-Resistencia	32590	
<b>Prelude III 2.0</b>	1987-92	
B20A4	84 114	
Oil press. switch/Int. pres. aceite	12230	
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36390	
Fan switch/Termocontacto ventilador	36460	
Rev. light switch/Int. luz marcha atrás	40580	Manual
<b>Prelude III 2.0 EX</b>	1987-92	
B20A3	80 109	
Oil press. switch/Int. pres. aceite	12230	
Temp. sending unit/Termo-Resistencia	32350	
Fan switch/Termocontacto ventilador	36390	
Fan switch/Termocontacto ventilador	36460	
Rev. light switch/Int. luz marcha atrás	40580	Manual

**HONDA Cont.**

<b>Prelude III 2.0 i EX 16V</b>	1987-92
B20A5	101 137
Oil press. switch/Int. pres. aceite	12230
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude III 2.0 i EX 16V</b>	1990-92
B20A9	103 140
Oil press. switch/Int. pres. aceite	12230
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude III 2.0 i EX 16V</b>	1987-90
B20A7	110 150
Oil press. switch/Int. pres. aceite	12230
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude IV 2.0 i 16V</b>	1992-96
F20A4	98 133
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude IV 2.2 i 16V Vtec</b>	1993-96
H22A2	136 185
Oil press. switch/Int. pres. aceite	12230
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude IV 2.3 i 16V</b>	1992-96
H23A2	118 160
Oil press. switch/Int. pres. aceite	10610
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude V 2.0 16V</b>	1996-00
F20A4	98 133
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24550
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude V 2.2 16V</b>	1996-00
H22A5	136 185
Oil press. switch/Int. pres. aceite	12230
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>Prelude V 2.2 16V</b>	1996-00
H22A5	147 200
Oil press. switch/Int. pres. aceite	12230
Temp. sending unit/Termo-Resistencia	32350
Fan switch/Termocontacto ventilador	36390
Fan switch/Termocontacto ventilador	36460
Rev. light switch/Int. luz marcha atrás	40580
<b>S2000 2.0</b>	1999 ->
F20C VTEC	177 240
Fan switch/Termocontacto ventilador	36440
<b>Stream 1.7 16V</b>	2001 ->
D17A2	92 125
Rev. light switch/Int. luz marcha atrás	40586
<b>Stream 2.0 16V</b>	2001 ->
K20A1/K20A	115 156
Rev. light switch/Int. luz marcha atrás	41302

**HYUNDAI**

<b>Accent</b>	2005 ->
G4ED	82 112
Rev. light switch/Int. luz marcha atrás	40896
<b>Accent 1.3</b>	2002 ->
	62 84
Stop light switch/Int. luz stop	24541
Stop light switch/Int. luz stop	R.H.D. 24720
Stop light switch/Int. luz stop	-> 12.2005 24720
Rev. light switch/Int. luz marcha atrás	41245
<b>Accent 1.3 i 12V, Sedan</b>	1994-00
G4EH	62 84
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. 24542
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	41240
<b>Accent 1.3, Sedan</b>	1994-00
G4EH	44 60
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. 24542
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	41240
<b>Accent 1.3, Sedan</b>	1994-00
G4EH	55 75
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. 24542
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	41240

**HYUNDAI Cont.**

<b>Accent 1.3, Sedan</b>	2000 ->
G4E-A	55 75
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	R.H.D. 24720
Stop light switch/Int. luz stop	-> 12.2005 24720
Rev. light switch/Int. luz marcha atrás	-> 09.2000 41245
Rev. light switch/Int. luz marcha atrás	41245
<b>Accent 1.3, Sedan</b>	2000 ->
G4E-A	63 86
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24541
Stop light switch/Int. luz stop	-> 12.2005 24720
Stop light switch/Int. luz stop	R.H.D. 24720
Rev. light switch/Int. luz marcha atrás	41245
Rev. light switch/Int. luz marcha atrás	-> Ch. 09.2000 41245
<b>Accent 1.4 GL</b>	2005 ->
G4EE	71 97
Rev. light switch/Int. luz marcha atrás	40896
<b>Accent 1.4 GL</b>	2005 ->
G4EE	71 97
Rev. light switch/Int. luz marcha atrás	40896
<b>Accent 1.5</b>	2000 ->
G4EC-G	75 102
Stop light switch/Int. luz stop	24541
Stop light switch/Int. luz stop	-> 12.2005 24720
Stop light switch/Int. luz stop	R.H.D. 24720
Rev. light switch/Int. luz marcha atrás	-> 09.2000 41245
<b>Accent 1.5 CRDi GLS</b>	2005 ->
D4FA	81 110
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Accent 1.5 CRDi, Sedan</b>	2002 ->
D3-EA	60 82
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	41245
<b>Accent 1.5 i 12V, Sedan</b>	1994-00
G4EK	65 88
Oil press. switch/Int. pres. aceite	Antipollución EC96 11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. 24542
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36485
Rev. light switch/Int. luz marcha atrás	41240
<b>Accent 1.5 i 16V, Sedan</b>	1995-00
G4ER	73 99
Oil press. switch/Int. pres. aceite	Antipollución EC96 11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc. 24542
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36485
Rev. light switch/Int. luz marcha atrás	41240
<b>Accent 1.5, Sedan</b>	2000 ->
G4EB	66 90
Stop light switch/Int. luz stop	24541
Stop light switch/Int. luz stop	-> 12.2005 24720
Stop light switch/Int. luz stop	R.H.D. 24720
Rev. light switch/Int. luz marcha atrás	-> 09.2000 41245
<b>Accent 1.6 GLS</b>	2005 ->
G4ED	82 112
Rev. light switch/Int. luz marcha atrás	40896
<b>Accent 1.6, Sedan</b>	2002 ->
G4ED-G	77 105
Stop light switch/Int. luz stop	-> 12.2005 24720
Stop light switch/Int. luz stop	R.H.D. 24720
Rev. light switch/Int. luz marcha atrás	41245
<b>Atos 1.0 i, Prime</b>	1998-02
G4HC	40 54
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41246
<b>Atos 1.0 i, Prime</b>	1999 ->
G4HC	40 54
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41246
<b>Atos 1.0 i, Prime</b>	2001 ->
G4HC-E	43 58
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41246
<b>Atos 1.1 Prime</b>	2003 ->
G4HD	43 59
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41246
<b>Atos 1.1, Prime</b>	2004 ->
G4HG	46 63
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	-> 03.2006 41246
<b>Coupe 1.6 16V</b>	1998-02
G4GR	85 116
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24541
Stop light switch/Int. luz stop	R.H.D., With/Con cruise control 24615
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	-> 07.1999 41240
Rev. light switch/Int. luz marcha atrás	08.1999 -> 41245
<b>Coupe 1.6 16V</b>	2002 ->
G4ED-G	77 105
Rev. light switch/Int. luz marcha atrás	41245
<b>Coupe 1.6 16V</b>	2002 ->
G4ED-G	79 107
Rev. light switch/Int. luz marcha atrás	41245

**HYUNDAI Cont.**

<b>Coupe 1.6 i 16V</b>		1996-02
4G61		84 114
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	With/Con cruise control, Manual	24541
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24543
Stop light switch/Int. luz stop	R.H.D., With/Con cruise control	24615
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás	07.1999 ->	41240
Rev. light switch/Int. luz marcha atrás		41245
Rev. light switch/Int. luz marcha atrás	08.1999 ->	41245
<b>Coupe 2.0</b>		2002 ->
G4GC-G		102 139
Rev. light switch/Int. luz marcha atrás		41245
<b>Coupe 2.0</b>		2001 ->
G4GC-G		100 136
Rev. light switch/Int. luz marcha atrás		41245
<b>Coupe 2.0 16V</b>		1996-02
G4GF		102 139
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	With/Con cruise control, Manual	24541
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24543
Stop light switch/Int. luz stop	R.H.D., With/Con cruise control	24615
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás	-> 07.1999	41240
Rev. light switch/Int. luz marcha atrás	08.1999 ->	41245
Rev. light switch/Int. luz marcha atrás		41245
<b>Coupe 2.0 16V</b>		2001-02
G4DF		99 135
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	With/Con cruise control, Manual	24541
Stop light switch/Int. luz stop	R.H.D., With/Con cruise control	24615
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		41240
<b>Coupe 2.0 GLS</b>		2003 ->
G4GC-G		105 143
Rev. light switch/Int. luz marcha atrás		41245
<b>Coupe 2.7 V6</b>		2002 ->
G6BA-G		123 167
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás		40825
<b>Elantra 1.6 Sedan</b>		2000-06
		66 90
Rev. light switch/Int. luz marcha atrás	-> 09.2000	41245
<b>Elantra 1.6, Sedan</b>		2000 ->
G4ED-G		79 107
Rev. light switch/Int. luz marcha atrás	-> 09.2000	41245
<b>Elantra 1.6, Sedan</b>		2003 ->
G4ED-G		77 105
Rev. light switch/Int. luz marcha atrás		41245
<b>Elantra 1.8, Sedan</b>		2000 ->
G4BB		97 132
Rev. light switch/Int. luz marcha atrás	-> 09.2000	41245
<b>Elantra 2.0 CRDi, Sedan</b>		2001 ->
D4EA		83 113
Oil press. switch/Int. pres. aceite		12990
<b>Elantra 2.0, Sedan</b>		2000 ->
G4GC		104 141
Rev. light switch/Int. luz marcha atrás	-> 09.2000	41245
<b>Elantra 2.0, Sedan</b>		2000 ->
G4GC-G		102 139
Rev. light switch/Int. luz marcha atrás	-> 09.2000	41245
<b>Elantra 2.0, Sedan</b>		2003 ->
G4GC		105 143
Rev. light switch/Int. luz marcha atrás		41245
<b>Galloper I 2.5 TD, Intercooler</b>		1991-98
4D56T		62 85
Oil press. switch/Int. pres. aceite		11610
<b>Galloper I 2.5 TD, Intercooler</b>		1991-98
4D56T		70 95
Oil press. switch/Int. pres. aceite		11610
<b>Galloper I 3.0 V6</b>		1991-98
6G72		104 141
Oil press. switch/Int. pres. aceite		11610
Temp. sending unit/Termo-Resistencia		31570
<b>Galloper II 2.5 Tci D</b>		1998 ->
D4BH		77 105
Oil press. switch/Int. pres. aceite		11610
<b>Galloper II 2.5 TD</b>		1998 ->
D4BA		65 88
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Galloper II 2.5 TD Intercooler</b>		1998 ->
D4BH		73 99
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Galloper II 3.0 V6</b>		1998 ->
G6AT		104 141
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
<b>Getz 1.1</b>		2002 ->
G4HD		46 63
Oil press. switch/Int. pres. aceite		12990
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245
<b>Getz 1.1</b>		2005 ->
G4HD		49 67
Oil press. switch/Int. pres. aceite		12990
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245
<b>Getz 1.3</b>		2002 ->
G4E-A		60 82
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245

**HYUNDAI Cont.**

<b>Getz 1.3</b>		2003 ->
G4E-A		63 85
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245
<b>Getz 1.4</b>		2005 ->
G4EE		71 97
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245
<b>Getz 1.5 CRDi</b>		2003 ->
D3-EA		60 82
Oil press. switch/Int. pres. aceite		12990
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245
<b>Getz 1.5 CRDi</b>		2005 ->
		65 88
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás		41245
<b>Getz 1.5 CRDi GLS</b>		2005 ->
D4FA		81 110
Oil press. switch/Int. pres. aceite		12990
<b>Getz 1.6</b>		2002 ->
G4ED-G		77 106
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41245
<b>Grandeur 2.2 CRDi</b>		2006 ->
D4EB		110 150
Oil press. switch/Int. pres. aceite		12990
<b>Grandeur 2.2 CRDi</b>		2006 ->
D4EB		114 155
Oil press. switch/Int. pres. aceite		12990
<b>Grandeur 3.3</b>		2005 ->
G6DB		173 235
Oil press. switch/Int. pres. aceite		12990
<b>H-1 2.4, Starex, 4WD</b>		2000 ->
G4CS		82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
<b>H-1 2.5 CRDi, Starex, 4WD</b>		2003 ->
		103 140
Oil press. switch/Int. pres. aceite		12990
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40895
<b>H-1 2.5 TD 4WD Starex</b>		2001 ->
		73 99
Oil press. switch/Int. pres. aceite		12990
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41239
<b>H-1 2.5 TD 4WD Starex</b>		2001 ->
		74 101
Oil press. switch/Int. pres. aceite		12990
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41239
<b>H-1 2.5 TD, Starex</b>		1999-01
D4BH		73 99
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
<b>H-1 2.5 TD, Starex</b>		2000-00
D4BF		59 80
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
<b>H-1 2.5 TD, Starex</b>		2000 ->
D4BH		73 99
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
<b>H-1 2.5 TD, Starex</b>		2001 ->
D4BH		74 101
Oil press. switch/Int. pres. aceite		12990
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24542
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41239
<b>H100 2.4</b>		1997-00
G4CS		84 114
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>H100 2.4</b>		1993-00
G4CS		90 122
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>H100 2.5 D</b>		1994-00
		57 78
Oil press. switch/Int. pres. aceite		11610
Oil press. switch/Int. pres. aceite		12990
Stop light switch/Int. luz stop		24720
<b>H100 2.5 D</b>		1993-94
D4BA/D4BX		55 75
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>H100 2.5 TD</b>		1993-00
D4BF		59 80
Oil press. switch/Int. pres. aceite		12990
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41239
<b>I10 1.1 CRDi</b>		2008 ->
D3FA		55 75
Oil press. switch/Int. pres. aceite		12990
<b>i30 1.4</b>		2007 ->
G4FA		80 109
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás		40896
<b>i30 1.6</b>		2007 ->
G4FC		90 122
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás		40896

**HYUNDAI Cont.**

<b>i30 1.6 CRDi</b>	2007 ->	
D4FB	85 116	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40896	
<b>i30 2.0</b>	2007 ->	
G4GC-G	105 143	
Rev. light switch/Int. luz marcha atrás	40896	
<b>i30 2.0 CRDi, CW Kombi</b>	2007 ->	
D4EA	103 140	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Lantra I 1.5 i.e.</b>	1990-95	
G15B/G4DJ	63 86	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36485	-> 10.1993
Fan switch/Termocontacto ventilador	36610	10.1993 ->
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra I 1.6 i.e. 16V</b>	1990-95	
G4CR	78 106	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36485	-> 10.1993
Fan switch/Termocontacto ventilador	36610	10.1993 ->
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra I 1.6 i.e. 16V</b>	1990-95	
G4CR	84 114	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36485	-> 10.1993
Fan switch/Termocontacto ventilador	36610	10.1993 ->
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra I 1.8 i.e. 16V</b>	1990-95	
G4CN	93 127	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36620	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra II 1.5 12V, Wagon</b>	1997 ->	
G4EK	65 88	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36620	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra II 1.6 16V, Wagon</b>	1995 ->	
4G61	84 114	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra II 1.6 i, Wagon</b>	1995 ->	
G4GR	66 90	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	31570	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra II 1.8 16V, Wagon</b>	1995 ->	
G4GM	94 128	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra II 1.9 D, Wagon</b>	1998-00	
	50 68	
Oil press. switch/Int. pres. aceite	12460	
Stop light switch/Int. luz stop	24541	With/Con cruise control, Manual
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	R.H.D., With/Con cruise control
Thermistor-Thermocont./Doble función	34400	
Temp. s. warning lamp/Termocont. temp.	35290	Without/Sin A.A., Blue/Azul
Rev. light switch/Int. luz marcha atrás	41240	
<b>Lantra II 2.0 16V, Wagon</b>	1996 ->	
G4GF	102 139	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Matrix 1.5 CRDi</b>	2001 ->	
D3-EA	60 82	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Matrix 1.5 CRDi</b>	2004 ->	
D4FA	75 102	
Oil press. switch/Int. pres. aceite	12990	
<b>Matrix 1.5 CRDi VGT</b>	2005 ->	
D4FA	81 110	
Oil press. switch/Int. pres. aceite	12990	

**HYUNDAI Cont.**

<b>Matrix 1.6</b>	2001 ->	
G4ED-G	76 103	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Matrix 1.8</b>	2001 ->	
G4GB-G	90 122	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Pony 1.2</b>	1974 ->	
	40 54	
Temp. sending unit/Termo-Resistencia	31480	
<b>Pony 1.2 Wagon</b>	1978 ->	
	40 54	
Temp. sending unit/Termo-Resistencia	31480	
<b>Pony 1.3</b>	1989-95	
G4DG	43 58	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>Pony 1.4, Wagon</b>	1978 ->	
	50 68	
Temp. sending unit/Termo-Resistencia	31480	
<b>Pony 1.5 i</b>	1989-95	
G15B/G4DJ	61 83	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>Pony 1.5 i</b>	1989-95	
G15B/G4DJ	62 84	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>Pony 1.5, Sedan</b>	1989-95	
G15B/G4DJ	53 72	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>Pony/Excel 1.5 i Sedan</b>	1990-95	
G15B/G4DJ	61 83	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>Pony/Excel 1.5 i Sedan</b>	1990-95	
G15B/G4DJ	62 84	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>Pony/Excel 1.5 Sedan</b>	1990-95	
G15B/G4DJ	53 72	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	02.1990 ->
<b>S 1.5 i Coupe</b>	1990-96	
G15B/G4DJ	62 84	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36610	
Rev. light switch/Int. luz marcha atrás	41240	
<b>S 1.5 i Coupe</b>	1992-96	
G4EK	65 88	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	2 terminals/bornes
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24615	4 terminals/bornes
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36610	
Rev. light switch/Int. luz marcha atrás	41240	
<b>S 1.5 i Coupe Turbo</b>	1991-96	
G4EK-TC	85 116	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24541	With/Con cruise control
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	31570	
Fan switch/Termocontacto ventilador	36610	
Rev. light switch/Int. luz marcha atrás	41240	Manual
<b>Santa Fé 2.0</b>	2001 ->	
G4BP	99 135	
Oil press. switch/Int. pres. aceite	12990	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40897	
<b>Santa Fé 2.0 CRDi, 4x4</b>	2001 ->	
D4EA	83 113	
Oil press. switch/Int. pres. aceite	12990	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40897	
<b>Santa Fé 2.0 CRDi, 4x4</b>	2003 ->	
D4EA	92 125	
Oil press. switch/Int. pres. aceite	12990	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40897	
<b>Santa Fé 2.2 CRDi, 4x4</b>	2006 ->	
	102 139	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Santa Fé 2.2 CRDi, 4x4</b>	2006 ->	
D4EB	114 155	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Santa Fé 2.2 CRDi, GLS, 4x4</b>	2005 ->	
D4EB	110 150	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Santa Fé 2.4 16V, 4x4</b>	2001 ->	
G4JS-G	100 136	
Oil press. switch/Int. pres. aceite	12990	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40897	

**HYUNDAI Cont.**

<b>Santa Fé 2.4 16V, 4x4</b>	2001 ->	
G4JS-G	107 146	
Oil press. switch/Int. pres. aceite	12990	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40897	
<b>Santa Fé 2.7 V6 GLS, 4x4</b>	2006 ->	
G6EA	139 189	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Santa Fé 2.7, 4x4</b>	2005 ->	
G6EA	139 189	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Santa Fé 2.7, 4x4</b>	2006 ->	
	125 170	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Santamo 2.0 16V, 4x4</b>	1999 ->	
	102 139	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata II 1.8 i</b>	1988-93	
	70 95	
Oil press. switch/Int. pres. aceite	11610	
<b>Sonata II 2.0 i</b>	1991-93	
G4CP-U	80 109	
Oil press. switch/Int. pres. aceite	11610	
Fan switch/Termocontacto ventilador	36620	
<b>Sonata II 2.0 i</b>	1988-91	
G4CP	74 101	
Oil press. switch/Int. pres. aceite	11610	
<b>Sonata II 2.0 i 16V</b>	1991-93	
G4CP-D	96 130	
Oil press. switch/Int. pres. aceite	11610	
Fan switch/Termocontacto ventilador	36620	
<b>Sonata II 2.4 i</b>	1988-91	
G4CS	83 113	
Oil press. switch/Int. pres. aceite	11610	
Fan switch/Termocontacto ventilador	36630	
<b>Sonata II 3.0 i V6</b>	1991-93	
G6AT	107 145	
Oil press. switch/Int. pres. aceite	11610	
Fan switch/Termocontacto ventilador	36620	
<b>Sonata III 1.8 i</b>	1993-98	
	72 98	
Oil press. switch/Int. pres. aceite	11610	
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata III 2.0 i</b>	1994-96	
G4CP	77 105	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata III 2.0 i</b>	1996-98	
	70 95	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata III 2.0 i 16V</b>	1993-98	
G4CP-D	102 139	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata III 2.0 i 16V</b>	1996-98	
G4CP-DM	92 125	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata III 3.0 i V6</b>	1993-98	
G6AT	107 146	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	41240	
<b>Sonata IV 2.0 16V</b>	1998-01	
G4JP-G	100 136	
Oil press. switch/Int. pres. aceite	11610	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Sonata IV 2.0 16V</b>	2001-04	
G4JP-EG	96 131	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Sonata IV 2.4 16V</b>	1998-01	
	105 143	
Oil press. switch/Int. pres. aceite	11610	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Sonata IV 2.5 V6 24V</b>	1998-01	
G6BV-G	118 160	
Oil press. switch/Int. pres. aceite	11610	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Sonata IV 2.7 V6</b>	2001-04	
G6BA-G	127 173	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Sonata V 2.0 CRDi</b>	2006 ->	
D4EA	103 140	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Sonata V 2.0 CRDi</b>	2006 ->	
D4EA	100 136	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Sonata V 2.0 VTI GLS</b>	2005 ->	
	106 144	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Sonata V 2.4</b>	2005 ->	
	119 162	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	

**HYUNDAI Cont.**

<b>Sonata V 3.3</b>	2005 ->	
G6DB	171 233	
Oil press. switch/Int. pres. aceite	12990	
<b>Starex 2.4, 4WD</b>	1997 ->	
G4CS	82 112	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720	
<b>Starex 2.5 TD, 4WD</b>	1997 ->	
D4BF	59 80	
Oil press. switch/Int. pres. aceite	11610	
On clutch pedal/Int. pedal embrague	24542	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720	
<b>Stellar 1.6</b>	1983-91	
G32B	56 76	
Temp. sending unit/Termo-Resistencia	31480	
<b>Terracan 2.5 TD</b>	2001 ->	
D4BH	74 101	
Oil press. switch/Int. pres. aceite	12990	
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
<b>Terracan 2.9 CRDi</b>	2003 ->	
J3	120 163	
Oil press. switch/Int. pres. aceite	12990	
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40895	
<b>Terracan 2.9 CRDi 4WD</b>	2001 ->	
	110 150	
Oil press. switch/Int. pres. aceite	12990	
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40895	
<b>Terracan 3.5 i V6 4WD</b>	2001 ->	
G6CU	143 194	
Oil press. switch/Int. pres. aceite	12990	
On clutch pedal/Int. pedal embrague	24543	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40895	
<b>Trajet 2.0</b>	2000 ->	
G4JP-G	100 136	
Rev. light switch/Int. luz marcha atrás	41245	-> 09.2000
<b>Trajet 2.0</b>	2004 ->	
G4GC-G	103 140	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Trajet 2.0 CRDi</b>	2001 ->	
D4EA	83 113	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40897	
<b>Trajet 2.7 V6</b>	2000 ->	
G6BA-G	127 173	
Oil press. switch/Int. pres. aceite	12990	
<b>Tucson 2.0 CRDi</b>	2006 ->	
D4EA-V	103 140	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Tucson 2.0 CRDi Allrad</b>	2006 ->	
D4EA-V/D4EA-F	103 140	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Tucson 2.0 CRDi, Allrad</b>	2004 ->	
D4EA	83 113	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Tucson 2.0 CRDi, Allrad</b>	2006 ->	
D4EA	100 136	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	40895	
<b>Tucson 2.0 CRDi, Allrad</b>	2004 ->	
G4GC	104 141	
Rev. light switch/Int. luz marcha atrás	41245	
<b>Tucson 2.7 Allrad</b>	2004 ->	
G6BA-G	129 175	
Oil press. switch/Int. pres. aceite	12990	
Rev. light switch/Int. luz marcha atrás	41245	
<b>XG 25</b>	1998 ->	
	120 163	
Oil press. switch/Int. pres. aceite	12990	
Temp. sending unit/Termo-Resistencia	31570	-> 11.2002
Rev. light switch/Int. luz marcha atrás	41245	-> 09.2000
<b>XG 30/300</b>	1998 ->	
G6CT-G	138 188	
Rev. light switch/Int. luz marcha atrás	41245	-> 09.2000
<b>XG 350</b>	2003 ->	
G6CU	145 197	
Rev. light switch/Int. luz marcha atrás	41245	

**INFINITI**

<b>FX 35</b>	2003 ->	
VQ35DE	206 280	
Oil press. switch/Int. pres. aceite	12555	
<b>FX 45</b>	2003 ->	
VK45DE	232 316	
Oil press. switch/Int. pres. aceite	12555	
<b>G20 2.0</b>	1990-97	
SR20DE	85 115	
Oil press. switch/Int. pres. aceite	12420	
Stop light switch/Int. luz stop	24450	
Temp. sending unit/Termo-Resistencia	31580	-> 12.1992
Temp. sending unit/Termo-Resistencia	31650	01.1993 ->
Rev. light switch/Int. luz marcha atrás	40820	
<b>J30 3.0</b>	1992-97	
VG30DE	157 213	
Oil press. switch/Int. pres. aceite	12420	
Stop light switch/Int. luz stop	24450	
Temp. sending unit/Termo-Resistencia	31580	

**INFINITI Cont.**

<b>M30 3.0, Cabrio, Coupe</b>	<b>1989-93</b>
VG30E	121 164
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
<b>Q45 4.5</b>	<b>1989-93</b>
VH45DE	205 278
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>

**INNOCENTI**

<b>Elba 1.3</b>	<b>1991 -&gt;</b>
146 A5.000	49 67
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24370</b>
Temp. sending unit/Termo-Resistencia	<b>31140</b>
Fan switch/Termocontacto ventilador	<b>37220</b>
Rev. light switch/Int. luz marcha atrás	<b>40480</b>
<b>Elba 1.4 i.e.</b>	<b>1994-96</b>
146 C5.000/146 D5.000	49 67
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24370</b>
Temp. sending unit/Termo-Resistencia	<b>31140</b>
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>Elba 1.5 i.e.</b>	<b>1992-94</b>
149 C1.000	55 75
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24370</b>
Temp. sending unit/Termo-Resistencia	<b>31140</b>
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40480</b>
<b>Elba 1.6 i.e.</b>	<b>1994-96</b>
146 D6.000/146 C6.000	55 75
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24370</b>
Temp. sending unit/Termo-Resistencia	<b>31140</b>
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>
<b>Elba 1.7 D</b>	<b>1991-96</b>
146 B2.000	42 57
Oil press. switch/Int. pres. aceite	<b>12430</b>
Oil press. transmitter/Transm. pres. aceite	<b>14550</b>
Stop light switch/Int. luz stop	<b>24370</b>
Temp. sending unit/Termo-Resistencia	<b>31140</b>
Fan switch/Termocontacto ventilador	<b>37830</b>
Fan switch/Termocontacto ventilador	<b>37910</b>
Rev. light switch/Int. luz marcha atrás	<b>40520</b>

**ISUZU**

<b>Impulse 1.6</b>	<b>1990-93</b>
	71 97
Oil press. switch/Int. pres. aceite	<b>12540</b>
<b>Impulse 1.6</b>	<b>1990-93</b>
	120 163
Oil press. switch/Int. pres. aceite	<b>12540</b>
<b>Midi 2.0, 4WD</b>	<b>1989 -&gt;</b>
4ZC1	61 83
Oil press. switch/Int. pres. aceite	<b>12540</b>
<b>Trooper 2.2 D 4x4, Soft Top</b>	<b>1984-89</b>
C223	39 53
Oil press. switch/Int. pres. aceite	<b>12240</b>
Stop light switch/Int. luz stop	<b>24450</b>
Stop light switch/Int. luz stop	<b>24600</b>
Stop light switch/Int. luz stop	<b>25080</b>
Temp. sending unit/Termo-Resistencia	<b>32210</b>
Rev. light switch/Int. luz marcha atrás	<b>41260</b>
<b>Trooper 2.3 Soft Top</b>	<b>1985-91</b>
4ZD1	66 90
Rev. light switch/Int. luz marcha atrás	<b>41260</b>
<b>Trooper 2.6 i Soft Top</b>	<b>1987-91</b>
4ZE1	85 116
Oil press. switch/Int. pres. aceite	<b>12540</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41260</b>
<b>Trooper 3.2, Soft Top</b>	<b>1991-98</b>
6VD1	130 177
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24450</b>
Stop light switch/Int. luz stop	<b>24600</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>

**JAGUAR**

<b>S-Type 2.5 V6</b>	<b>2002 -&gt;</b>
	147 200
Oil press. switch/Int. pres. aceite	<b>12611</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>S-Type 2.7 D</b>	<b>2004 -&gt;</b>
	152 207
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>S-Type 3.0 V6</b>	<b>1999 -&gt;</b>
AJ-V6	175 238
Oil press. switch/Int. pres. aceite	<b>12611</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>
<b>S-Type 4.0 V8</b>	<b>1999-02</b>
AJ-V8	203 276
Oil press. switch/Int. pres. aceite	<b>12614</b>
Rev. light switch/Int. luz marcha atrás	<b>40640</b>

**JAGUAR Cont.**

<b>S-Type 4.2 V8</b>		<b>2002 -&gt;</b>
		219 298
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>S-Type R 4,2 V8</b>		<b>2002 -&gt;</b>
		291 396
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
Rev. light switch/Int. luz marcha atrás		<b>40640</b>
<b>XF 3.0</b>		<b>2008 -&gt;</b>
		175 238
Oil press. switch/Int. pres. aceite		<b>12611</b>
<b>XJ 12 6.0</b>		<b>1994-97</b>
8E		229 311
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38250</b>
<b>XJ 12 H.E.</b>		<b>1981-92</b>
V 12 (82-90)		217 295
Oil press. switch/Int. pres. aceite		<b>11420</b>
Oil press. transmitter/Transm. pres. aceite		<b>14040</b>
<b>XJ 6 2.9</b>		<b>1986-90</b>
AJ 6 (2.9)		123 167
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>XJ 6 3.0</b>		<b>2003 -&gt;</b>
AJ-V6		175 238
Oil press. switch/Int. pres. aceite		<b>12611</b>
<b>XJ 6 3.2</b>		<b>1994-97</b>
9JPGRB		155 211
Temp. sending unit/Termo-Resistencia		<b>31210</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38250</b>
<b>XJ 6 3.6</b>		<b>1986-89</b>
9DPANA/AJ 6 (3.6, 156KW)		156 212
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>XJ 6 4.0</b>		<b>1989-94</b>
9EPCNA		163 222
Temp. sending unit/Termo-Resistencia		<b>31210</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38250</b>
<b>XJ 6 4.0 Sovereign</b>		<b>1994-97</b>
9JPFRR		177 241
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38250</b>
<b>XJ 8 4.0</b>		<b>1997-03</b>
BC		209 284
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XJ 8 4.2</b>		<b>2003 -&gt;</b>
		219 298
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XJ R 4.0</b>		<b>1997-03</b>
DC		267 363
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XJ R 4.0 Super Charged</b>		<b>1994-97</b>
9KPDRB		235 320
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38250</b>
<b>XJ R 4.2</b>		<b>2003 -&gt;</b>
		291 395
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XJ Sovereign V12</b>		<b>1986-92</b>
7P		194 264
Oil press. switch/Int. pres. aceite		<b>13480</b>
Oil press. transmitter/Transm. pres. aceite		<b>14040</b>
Temp. sending unit/Termo-Resistencia		<b>31210</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>XJ Sovereign V12</b>		<b>1985-92</b>
V 12 (90-93, 197KW)		197 268
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>XJ V12 6.0</b>		<b>1993-94</b>
8C (92-94)		229 311
Temp. sending unit/Termo-Resistencia		<b>31210</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38250</b>
<b>XJS 3.6 Coupe</b>		<b>1987-89</b>
AJ 6 (3.6, 156KW)		156 212
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>XJSC 3.6 Cabrio</b>		<b>1987-91</b>
AJ 6 (3.6, 156KW)		156 212
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>XK 8 4.0</b>		<b>1996 -&gt;</b>
CC/CE		209 284
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XK 8 4.0 Coupe</b>		<b>1996 -&gt;</b>
CC/CE		209 284
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XK 8 4.0, Coupe</b>		<b>1998 -&gt;</b>
EC		267 363
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XK 8 4.2, Coupe</b>		<b>2002 -&gt;</b>
		219 298
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>XK 8 R 4.2, Coupe</b>		<b>2002 -&gt;</b>
		291 396
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12614</b>
<b>X-Type 2.0 D</b>		<b>2003-05</b>
R4-X404		96 130
Oil press. switch/Int. pres. aceite		<b>12610</b>
Rev. light switch/Int. luz marcha atrás		<b>40595</b>
<b>X-Type 2.0 D Estate</b>		<b>2004-05</b>
FMBA/FMBB/R4-X404		96 130
Oil press. switch/Int. pres. aceite		<b>12610</b>
Rev. light switch/Int. luz marcha atrás		<b>40595</b>
<b>X-Type 2.0 V6, Estate</b>		<b>2002-05</b>
		115 156
Oil press. switch/Int. pres. aceite		<b>12611</b>
Rev. light switch/Int. luz marcha atrás		<b>40595</b>
<b>X-Type 2.2 D, Estate</b>		<b>2005 -&gt;</b>
LJ46G		114 155
Oil press. switch/Int. pres. aceite		<b>12610</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	<b>40596</b>

**JAGUAR Cont.**

<b>X-Type 2.2 D, Estate</b>	2007 ->
LJ46G	107 146
Oil press. switch/Int. pres. aceite	12610
Rev. light switch/Int. luz marcha atrás	40596
<b>X-Type 2.5 V6, Estate</b>	2001 ->
	144 196
Oil press. switch/Int. pres. aceite	12611
Rev. light switch/Int. luz marcha atrás	40595
<b>X-Type 3.0 V6, Estate</b>	2001 ->
	169 230
Oil press. switch/Int. pres. aceite	12611
Rev. light switch/Int. luz marcha atrás	40595

**KIA**

<b>Besta 2.2 D Furgón</b>	1996 ->
R2	48 65
Oil press. switch/Int. pres. aceite	12240
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	-> Ch. 3114
Temp. sending unit/Termo-Resistencia	-> N° 3115
<b>Carens I 1.8 i</b>	2000-02
T8	81 110
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>Carens II 1.6</b>	2002 ->
	77 105
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>Carens II 1.8</b>	2002 ->
	93 126
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>Carens II 2.0 CRDi</b>	2002 ->
D4EA	83 113
Oil press. switch/Int. pres. aceite	10610
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	41245
<b>Carens II 2.0 CRDi</b>	2005 ->
D4EA	103 140
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40895
<b>Carens II 2.0 CVVT</b>	2004 ->
G4GC	102 139
Rev. light switch/Int. luz marcha atrás	41245
<b>Carens III 2.0 CRDi</b>	2006 ->
D4EA	103 140
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40895
<b>Carens III 2.0 CVVT</b>	2006 ->
G4KA	106 144
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	41245
<b>Carnival 2.5 V6</b>	1999-01
	121 165
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
<b>Carnival 2.9 TD</b>	1999-01
	93 126
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
<b>Carnival II 2.5 V6</b>	2001 ->
K5	110 150
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40895
<b>Carnival II 2.9 CRDi</b>	2001 ->
	106 144
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40895
<b>Carnival III 2.7 V6</b>	2006 ->
G6EA	139 189
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40895
<b>Carnival III 2.9 CRDi</b>	2006 ->
J3	136 185
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40895
<b>Cee'd 1.4, Kombi</b>	2006 ->
G4FA	80 109
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Cee'd 1.6 CRDi 115, Kombi</b>	2006 ->
D4FB	85 115
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Cee'd 1.6 CRDi 90, Kombi</b>	2006 ->
D4FB-L	66 90
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Cee'd 1.6, Kombi</b>	2006 ->
G4FC	90 122
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Cee'd 2.0</b>	2006 ->
G4GC	105 143
Rev. light switch/Int. luz marcha atrás	40896
<b>Cee'd 2.0 CRDi, Kombi</b>	2007 ->
D4EA-F	103 140
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40895

**KIA Cont.**

<b>Cee'd 2.0 Kombi</b>	2007 ->
G4GC	105 143
Rev. light switch/Int. luz marcha atrás	40896
<b>Cerato 1.5 CRDi</b>	2005 ->
D4FA	75 102
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
Rev. light switch/Int. luz marcha atrás	41239
<b>Cerato 1.6 CRDi, Sedan</b>	2005 ->
D4FB	85 115
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Cerato 1.6 Sedan</b>	2006 ->
G4FC	90 122
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40896
<b>Cerato 1.6, Sedan</b>	2004 ->
G4ED	77 105
Rev. light switch/Int. luz marcha atrás	41245
<b>Cerato 2.0 CRDi, Sedan</b>	2004 ->
D4EA	83 112
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	41245
<b>Cerato 2.0, Sedan</b>	2004 ->
G4GC	105 143
Rev. light switch/Int. luz marcha atrás	41245
<b>Clarus 1.8 i 16V, Kombi</b>	1996 ->
T8	85 116
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
<b>Clarus 2.0 i 16V, Kombi</b>	1996 ->
FE (16 V)	98 133
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
<b>Joice 2.0</b>	2000 ->
	102 139
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	24543
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41245
<b>Joice 2.0</b>	2001 ->
	88 120
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	24543
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41245
<b>K2500 2.5 D</b>	2003 ->
D4BH	69 94
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41239
<b>K2700 2.7 D</b>	1999 ->
J2	59 80
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40890
<b>Magentis 2.0</b>	2001 ->
G4JP	100 136
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41245
<b>Magentis 2.0</b>	2005 ->
G4KA	106 144
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	41245
<b>Magentis 2.0 CRDi</b>	2006 ->
D4EA	103 140
Oil press. switch/Int. pres. aceite	12990
Rev. light switch/Int. luz marcha atrás	40895
<b>Magentis 2.5 V6</b>	2001 ->
G6BV	124 169
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41245
<b>Magentis 2.7</b>	2005 ->
G6EA	138 188
Oil press. switch/Int. pres. aceite	12990
<b>Opirus 3.8 V6</b>	2006 ->
G6DA	196 267
Oil press. switch/Int. pres. aceite	12990
<b>Picanto 1.0</b>	2005 ->
G4HE	45 61
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
<b>Picanto 1.1</b>	2004 ->
G4HG	48 65
Oil press. switch/Int. pres. aceite	12990
Stop light switch/Int. luz stop	24720
<b>Picanto 1.1 CRDi</b>	2005 ->
D3FA	55 75
Oil press. switch/Int. pres. aceite	12990
<b>Pregio 2.5 Tci D</b>	2002 ->
D4BH	69 94
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41239
<b>Pregio 2.7 D Furgón</b>	1997 ->
J2	60 82
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40890



**KIA Cont.**

<b>Pride 1.1 i</b>		1991 ->
B1		38 52
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		32310
Temp. s. warning lamp/Termocont. temp.		35101
Temp. s. warning lamp/Termocont. temp.	02.1993 ->	35101
Rev. light switch/Int. luz marcha atrás		40890
<b>Pride 1.3 16V</b>		1990 ->
B3		44 60
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		32310
Temp. s. warning lamp/Termocont. temp.		35101
Rev. light switch/Int. luz marcha atrás		40890
<b>Pride 1.3 16V</b>		1990 ->
B3		53 72
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		32310
Temp. s. warning lamp/Termocont. temp.		35101
Rev. light switch/Int. luz marcha atrás		40890
<b>Pride 1.3 16V</b>		1996 ->
B3		47 64
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		32310
Temp. s. warning lamp/Termocont. temp.		35101
Rev. light switch/Int. luz marcha atrás		40890
<b>Pride 1.3 i</b>		1990 ->
		51 69
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		32310
Temp. s. warning lamp/Termocont. temp.	02.1993 ->	35101
Rev. light switch/Int. luz marcha atrás		40890
<b>Pride 1.3 Kombi</b>		1999 ->
		47 64
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		32310
Rev. light switch/Int. luz marcha atrás		40890
<b>Retona 2.0 16V</b>		2000 ->
FE (16 V)		94 128
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
<b>Retona 2.0 TD</b>		1999 ->
RF		61 83
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Rio 1.3</b>		2002-05
		60 82
Stop light switch/Int. luz stop		24720
<b>Rio 1.3, Kombi</b>		2000-05
		60 82
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Rio 1.3, Kombi</b>		2000-05
		55 75
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Rio 1.5 16V Kombi</b>		2002-05
		71 97
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Rio 1.5 16V, Kombi</b>		2000-05
		72 98
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Rio II 1.4 16V</b>		2005 ->
G4EE		71 97
Rev. light switch/Int. luz marcha atrás		40896
<b>Rio II 1.5 CRDi</b>		2005 ->
D4FA		81 110
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás		40896
<b>Rio II 1.6 16V</b>		2005 ->
G4ED		82 112
Rev. light switch/Int. luz marcha atrás		40896
<b>Rio II 1.6 CVVT</b>		2005 ->
G4ED		82 112
Rev. light switch/Int. luz marcha atrás		40896
<b>Sephia 1.5 i, Sedan</b>		1996 ->
B5		59 80
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24600
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24720
Temp. sending unit/Termo-Resistencia		31570
<b>Sephia 1.6 i, Sedan</b>		1993 ->
B6		59 80
Oil press. switch/Int. pres. aceite		11610
Temp. sending unit/Termo-Resistencia		31570
<b>Sephia 1.8 i 16V, Sedan</b>		1995 ->
OK24N/OK26Y		82 112
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia	-> 01.2001	31570
<b>Shuma 1.5 i 16V, Sedan</b>		1997-01
		65 88
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570

**KIA Cont.**

<b>Shuma 1.5 Sedan</b>		1996-98
OK280		59 80
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
<b>Shuma 1.8 i 16V</b>		1997-01
T8		81 110
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
<b>Shuma II 1.6, Sedan</b>		2001-04
		75 101
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>Shuma II 1.8</b>		2003-04
T8		84 114
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
<b>Sorento 2.4</b>		2002 ->
G4JS		102 139
Oil press. switch/Int. pres. aceite		11610
<b>Sorento 2.5 CRDi</b>		2002 ->
D4CB		103 140
Oil press. switch/Int. pres. aceite	-> 06.2003	11610
Oil press. switch/Int. pres. aceite	06.2003 ->	12990
Rev. light switch/Int. luz marcha atrás		40895
<b>Sorento 2.5 CRDi</b>		2000-03
		87 118
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Sorento 2.5 CRDi</b>		2006 ->
D4CB		125 170
Oil press. switch/Int. pres. aceite		12990
<b>Sorento 3.3 V6</b>		2006 ->
		177 241
Oil press. switch/Int. pres. aceite		12990
<b>Sportage 2.0</b>		2000-03
		87 118
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Sportage 2.0 16V 4WD</b>		2004 ->
G4GC		104 141
Rev. light switch/Int. luz marcha atrás		41245
<b>Sportage 2.0 4WD</b>		1999-03
FE (16 V)		94 128
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Sportage 2.0 CRDi</b>		2006 ->
D4EA-V		103 140
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40895
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40895
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	41245
<b>Sportage 2.0 CRDi 4WD</b>		2006 ->
D4EA-V/D4EA-F		103 140
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40895
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40895
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	41245
<b>Sportage 2.0 CRDi, 4WD</b>		2004 ->
D4EA		83 113
Oil press. switch/Int. pres. aceite		12990
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40895
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40895
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	41245
<b>Sportage 2.0 i 16V</b>		1994-03
FE (16 V)		94 128
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Sportage 2.0 i 16V</b>		2004 ->
G4GC		104 141
Rev. light switch/Int. luz marcha atrás		41245
<b>Sportage 2.0 i 16V 4WD</b>		1994-99
FE		70 95
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Sportage 2.0 i 4WD</b>		1997-03
RF		61 83
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		40890
<b>Sportage 2.0 TD 4WD</b>		2004 ->
G6BA		129 175
Oil press. switch/Int. pres. aceite		12990

**LADA**

<b>Niva 1600</b>		1987-95
BA3 2121		54 73
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14530
Stop light switch/Int. luz stop		24010
Temp. sending unit/Termo-Resistencia		31140
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40630
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	41020



**LANCIA Cont.**

<b>Dedra 2.0 HF Integrale</b>	1990-94
835 A7.046	124 169
Oil press. switch/Int. pres. aceite	11260
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24410
Temp. sending unit/Termo-Resistencia	31600
Thermistor-Thermocont./Doble función	34060
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37910
Fan switch/Termocontacto ventilador	38090
Rev. light switch/Int. luz marcha atrás	41220
<b>Dedra 2.0 i.e.</b>	<b>1989-99</b>
835 A5.046	83 113
Oil press. switch/Int. pres. aceite	11260
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24410
Temp. sending unit/Termo-Resistencia	31600
Thermistor-Thermocont./Doble función	34060
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37910
Fan switch/Termocontacto ventilador	38090
Rev. light switch/Int. luz marcha atrás	40520
<b>Dedra 2.0 i.e. Turbo</b>	<b>1991-99</b>
835 A8.046	119 162
Oil press. switch/Int. pres. aceite	11260
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24410
Temp. sending unit/Termo-Resistencia	31600
Thermistor-Thermocont./Doble función	34060
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37910
Fan switch/Termocontacto ventilador	38090
Rev. light switch/Int. luz marcha atrás	41220
<b>Dedra 2.0 i.e. Turbo Integrale</b>	<b>1990-94</b>
835 A7.000	121 165
Oil press. switch/Int. pres. aceite	11260
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24410
Temp. sending unit/Termo-Resistencia	31600
Thermistor-Thermocont./Doble función	34060
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37910
Fan switch/Termocontacto ventilador	38090
Rev. light switch/Int. luz marcha atrás	41220
<b>Dedra 2.0 Turbo</b>	<b>1990-94</b>
835 A8.000	130 177
Oil press. switch/Int. pres. aceite	11260
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24410
Temp. sending unit/Termo-Resistencia	31600
Thermistor-Thermocont./Doble función	34060
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37910
Fan switch/Termocontacto ventilador	38090
Rev. light switch/Int. luz marcha atrás	41220
<b>Delta I 1.1</b>	<b>1986-90</b>
831 B8.000	47 64
Oil press. switch/Int. pres. aceite	11260
Stop light switch/Int. luz stop	24380
Stop light switch/Int. luz stop	24400
Temp. sending unit/Termo-Resistencia	31600
Thermistor-Thermocont./Doble función	34020
Rev. light switch/Int. luz marcha atrás	40330
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta I 1.3</b>	<b>1979-92</b>
831 A2.000/831 B.000	55 75
Oil press. switch/Int. pres. aceite	12020
Temp. sending unit/Termo-Resistencia	31530
Temp. sending unit/Termo-Resistencia	31600
Rev. light switch/Int. luz marcha atrás	40330
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta I 1.3</b>	<b>1983-92</b>
831 A2.000	58 79
Oil press. switch/Int. pres. aceite	12020
Temp. sending unit/Termo-Resistencia	31530
Temp. sending unit/Termo-Resistencia	31600
<b>Delta I 1.5</b>	<b>1979-92</b>
831 A1.000/831 B1.000	63 86
Oil press. switch/Int. pres. aceite	12020
Oil press. switch/Int. pres. aceite	12430
Temp. sending unit/Termo-Resistencia	31530
Temp. sending unit/Termo-Resistencia	31600
Rev. light switch/Int. luz marcha atrás	40330
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta I 1.6 GT i.e.</b>	<b>1987-92</b>
149 C2.000	66 90
Oil press. switch/Int. pres. aceite	12020
Oil press. switch/Int. pres. aceite	12430
Temp. sending unit/Termo-Resistencia	31600
Rev. light switch/Int. luz marcha atrás	40330
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta I 1.6 HF Turbo</b>	<b>1987-89</b>
831 B7.046	97 132
Oil press. switch/Int. pres. aceite	12020
Oil press. switch/Int. pres. aceite	12430
Temp. sending unit/Termo-Resistencia	31600
Rev. light switch/Int. luz marcha atrás	40330
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta I 1.6 HF Turbo</b>	<b>1986-93</b>
Oil press. switch/Int. pres. aceite	122 166
Temp. sending unit/Termo-Resistencia	12020
Oil temp./Temp. aceite	31600

**LANCIA Cont.**

<b>Delta I 1.9 Turbo DS</b>	1986-89
831 D1.000	59 80
Oil press. switch/Int. pres. aceite	0.35 bar
Rev. light switch/Int. luz marcha atrás	-> N° Vet 445259
Rev. light switch/Int. luz marcha atrás	N° Vet 445260 ->
<b>Delta I 2.0 16V HF Evo Integrale</b>	<b>1993-94</b>
831 E5.046/831 E5.000	155 211
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite	14030
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220
<b>Delta I 2.0 16V HF Integrale</b>	<b>1989-91</b>
831 D5.000	144 196
Oil press. switch/Int. pres. aceite	0.35 bar
Oil press. transmitter/Transm. pres. aceite	14110
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
<b>Delta I 2.0 HF Integrale</b>	<b>1987-89</b>
831 C5.000	133 181
Oil press. switch/Int. pres. aceite	0.35 bar
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
<b>Delta I 2.0 HF Integrale</b>	<b>1986-92</b>
831 C5.046	130 177
Oil press. switch/Int. pres. aceite	-> N° 1286259, 0.35 bar
Oil press. switch/Int. pres. aceite	N° 1286259 ->
Oil press. transmitter/Transm. pres. aceite	12430
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220
<b>Delta II 1.4 i.e.</b>	<b>1994-99</b>
836 A4.000/160 A1.046	51 69
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.6 i.e.</b>	<b>1993-99</b>
835 C1.000	55 75
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.6 i.e.</b>	<b>1996-99</b>
182 A6.000	66 90
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.6 i.e. 16V</b>	<b>1996-99</b>
182 A4.000	76 103
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.8 i.e.</b>	<b>1993-99</b>
835 C2.000	76 103
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.8 i.e.</b>	<b>1994-99</b>
835 C4.000/836 C4.000/836 A6.000	66 90
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.8 i.e. 16V</b>	<b>1996-99</b>
182 A2.000	83 113
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.8 i.e. 16V GT</b>	<b>1996-99</b>
183 A1.000	96 131
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 1.9 TD</b>	<b>1994-99</b>
835 A4.000/160 D1.000	66 90
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Thermistor-Thermocont./Doble función	34380
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	35842
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	35910
Rev. light switch/Int. luz marcha atrás	38290
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 2.0 16V</b>	<b>1993-99</b>
836 A3.000	102 139
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
<b>Delta II 2.0 16V Turbo</b>	<b>1993-99</b>
836 A2.000	137 186
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520
Rev. light switch/Int. luz marcha atrás	41220
<b>Delta II 2.0 16V Turbo</b>	<b>1996-99</b>
175 A4.000	142 193
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	R.H.D.
Stop light switch/Int. luz stop	24400
Rev. light switch/Int. luz marcha atrás	24675
Rev. light switch/Int. luz marcha atrás	40520

**LANCIA Cont.**

<b>Delta III 1.4</b> 198 A4.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2008 -> 88 120 <b>12430</b> 24412 24413 40510	
<b>Delta III 1.4</b> 198 A1.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2008 -> 110 150 <b>12430</b> 24412 24413 40510	Cruise control/Control veloc.
<b>Delta III 1.6 D Multijet</b> 198 A2.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2008 -> 88 120 <b>12430</b> 24412 24413 40940	Cruise control/Control veloc.
<b>Delta III 1.9 D Multijet</b> 844 A1.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2009 -> 140 190 <b>12430</b> 24412 24413 40510	Cruise control/Control veloc.
<b>Delta III 2.0 D Multijet</b> 198 A5.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2008 -> 121 165 <b>12430</b> 24412 24413 40510	Cruise control/Control veloc.
<b>Kappa 2.0 16V Turbo, Coupe, SW</b> 838 A4.000 Oil press. switch/Int. pres. aceite Temp. sending unit/Termo-Resistencia Rev. light switch/Int. luz marcha atrás		1995-01 151 205 <b>12430</b> 31600 40940	Oil temp./Temp. aceite
<b>Kappa 2.0 20V</b> 838 A1.000 Oil press. switch/Int. pres. aceite Rev. light switch/Int. luz marcha atrás		1994-01 107 146 <b>12430</b> 40540	
<b>Kappa 2.0 20V Turbo, Coupe, SW</b> 175 A3.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás	Ch. 2095794 -> -> Ch. 2095793	1998-01 162 220 <b>12430</b> 24410 24660 40940	
<b>Kappa 2.0 20V, Coupe, SW</b> 838 A6.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	Ch. 2095794 -> -> Ch. 2095793 -> 08.1997 09.1997 ->	1996-01 114 155 <b>12430</b> 24410 24660 40540 40940	
<b>Kappa 2.4 20V</b> 838 A2.000/838 A2.027 Oil press. switch/Int. pres. aceite Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	-> N° Vet 2071768 N° Vet 2071769 ->	1994-01 129 175 <b>12430</b> 40540 40940	
<b>Kappa 2.4 20V Coupe, SW</b> 838 A2.000 Oil press. switch/Int. pres. aceite Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	-> N° Vet 2071768 N° Vet 2071769 ->	1996-01 129 175 <b>12430</b> 40540 40940	
<b>Kappa 2.4 JTD</b> 838 A8.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás	Ch. 2095794 -> -> Ch. 2095793	1998-01 100 136 <b>12430</b> 24410 24660 40940	
<b>Kappa 2.4 T.DS, SW</b> 838 A7.000/838 A3.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	Ch. 2095794 -> -> Ch. 2095793 -> N° Vet 2071768 N° Vet 2071769 ->	1994-01 91 124 <b>12430</b> 24410 24660 40540 40940	
<b>Kappa 3.0 24V, Coupe, SW</b> 838 B.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	Ch. 2095794 -> -> Ch. 2095793 -> N° Vet 2071768 N° Vet 2071769 ->	1994-01 150 204 <b>12430</b> 24410 24660 40540 40940	
<b>Lybra 1.6 16V, SW</b> 182 A4.000 Oil press. switch/Int. pres. aceite Rev. light switch/Int. luz marcha atrás		1999 -> 76 103 <b>12430</b> 40520	
<b>Lybra 1.8 16V</b> 839 A7.000/839 A9.000/839 A4.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Rev. light switch/Int. luz marcha atrás	Engine control/Gestión motor Cruise control/Control veloc. Oil temp./Temp. aceite	1999 -> 96 131 <b>12430</b> 24411 24412 24413 31600 40520	
<b>Lybra 1.9 JTD, SW</b> AR 32302 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.	1999-00 77 105 <b>12430</b> 24400 24410 40940	
<b>Lybra 1.9 JTD, SW</b> AR 37101 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.	2000-01 81 110 <b>12430</b> 24412 24413 40940	

**LANCIA Cont.**

<b>Lybra 1.9 JTD, SW</b> 937 A2.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2001 -> 85 116 <b>12430</b> 24412 24413 40940	Cruise control/Control veloc.
<b>Lybra 2.0 20V, SW</b> 182 B7.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Rev. light switch/Int. luz marcha atrás		1999-00 113 154 <b>12430</b> 24400 24410 40520	Cruise control/Control veloc.
<b>Lybra 2.0 20V, SW</b> 185 A8.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2000 -> 110 150 <b>12430</b> 24412 24413 40520	Cruise control/Control veloc.
<b>Lybra 2.4 JTD, SW</b> AR 32501/839 A5.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Rev. light switch/Int. luz marcha atrás		1999-00 99 135 <b>12430</b> 24400 24410 40940	Cruise control/Control veloc.
<b>Lybra 2.4 JTD, SW</b> 839 A6.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2000-02 103 140 <b>12430</b> 24412 24413 40940	Cruise control/Control veloc.
<b>Lybra 2.4 JTD, SW</b> 841 C.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2002 -> 110 150 <b>12430</b> 24412 24413 40940	Cruise control/Control veloc.
<b>Lybra SW 1.8 16V</b> 839 A7.000/839 A4.000 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Temp. sending unit/Termo-Resistencia Rev. light switch/Int. luz marcha atrás		1999 -> 96 131 <b>12430</b> 24411 24412 31600 40520	Cruise control/Control veloc. Oil temp./Temp. aceite
<b>Musa 1.3 D Multijet</b> 188 A9.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2004 -> 51 70 <b>12430</b> 24412 24413 40520	Cruise control/Control veloc.
<b>Musa 1.3 D Multijet</b> 199 A3.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2006 -> 66 90 <b>12430</b> 24412 24413 40520	Cruise control/Control veloc.
<b>Musa 1.4</b> 843 A 1.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2004 -> 70 95 <b>12430</b> 24412 24413 40490	Cruise control/Control veloc.
<b>Musa 1.4</b> 350 A1.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2005 -> 57 78 <b>12430</b> 24412 24413 40490	Cruise control/Control veloc.
<b>Musa 1.4</b> 350 A2.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2008 -> 88 120 <b>12430</b> 24412 24413 40940	Cruise control/Control veloc.
<b>Musa 1.6 D Multijet</b> 188 B2.000 Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2004 -> 74 101 <b>12430</b> 24412 24413 40830	Cruise control/Control veloc.
<b>Musa 1.9 D Multijet</b> RFN(EW10J4) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás	Automatic transmission -> 10.2005. Cruise control/Control veloc. 07.2006 -> Gear box/Cambio BE3	2002 -> 100 136 <b>12640</b> 24885 24896 24899 40491	
<b>Phedra 2.0 D Multijet</b> RHR Oil press. switch/Int. pres. aceite On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás		2006 -> 100 136 <b>12640</b> 24896 24899 40492	Cruise control/Control veloc. Gear box/Cambio MA, ME, MG, ML
<b>Phedra 2.0 JTD</b> RHW(DW10ATED4) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás	Automatic transmission 07.2006 -> Gear box/Cambio MA, ME, MG, ML	2002 -> 80 109 <b>12640</b> 24885 24899 40492	
<b>Phedra 2.0 JTD</b> RHM Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop Stop light switch/Int. luz stop	Automatic transmission 07.2006 ->	2003 -> 79 107 <b>12640</b> 24885 24896 24899	

**LANCIA Cont.**

<b>Phedra 2.0 JTD</b>	2006 ->	
RHK	88 120	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	07.2006 ->
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Phedra 2.2 JTD</b>	2002 ->	
4HW(DW12ATED4)	94 128	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24885	With control switch
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	07.2006 ->
Rev. light switch/Int. luz marcha atrás	40492	Gear box/Cambio MA, ME, MG, ML
<b>Phedra 3.0 V6</b>	2002 ->	
ES9 J4S	150 204	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24885	Automatic transmission
Stop light switch/Int. luz stop	24899	
<b>Prisma 1.3</b>	1983-92	
831 A2.000	58 79	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Temp. sending unit/Termo-Resistencia	31530	
<b>Prisma 1.5</b>	1985-92	
831 B1.048/138 C2.048	55 75	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Temp. sending unit/Termo-Resistencia	31530	
<b>Prisma 1.5</b>	1986-92	
831 B1.000	59 80	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Temp. sending unit/Termo-Resistencia	31530	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Prisma 1.6</b>	1986-92	
831 B6.000	73 99	
Oil press. switch/Int. pres. aceite	11410	0.35 bar
Temp. sending unit/Termo-Resistencia	31530	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Prisma 1.6 i.e.</b>	1986-89	
831 B7.000	80 108	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Temp. sending unit/Termo-Resistencia	31530	
Rev. light switch/Int. luz marcha atrás	40520	
<b>Prisma 1.6 i.e. Super</b>	1987-89	
149 C2.000	66 90	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Temp. sending unit/Termo-Resistencia	31530	
<b>Prisma 1.9 Diesel</b>	1983-92	
831 D.000	48 65	
Oil press. switch/Int. pres. aceite	11410	0.35 bar
Rev. light switch/Int. luz marcha atrás	40520	
<b>Prisma 1.9 TD</b>	1985-89	
831 D1.000	59 80	
Oil press. switch/Int. pres. aceite	11410	0.35 bar
Rev. light switch/Int. luz marcha atrás	40520	
<b>Prisma 2.0 i.e. 4WD</b>	1986-89	
831 B4.000	85 115	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Oil press. transmitter/Transm. pres. aceite	14550	
<b>Thema 2000 16V Turbo, SW</b>	1992-94	
834 F2.000	148 201	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40540	-> N° Vet 2071768
Rev. light switch/Int. luz marcha atrás	40940	N° Vet 2071769 ->
<b>Thema 2000 16V Turbo, SW</b>	1988-90	
834 C1.000	133 181	
Oil press. switch/Int. pres. aceite	11410	-> N° 1242363, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	
<b>Thema 2000 16V, SW</b>	1992-94	
834 F1.000	112 152	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Fan switch/Termocontacto ventilador	38290	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40540	-> N° Vet 2071768
Rev. light switch/Int. luz marcha atrás	40940	N° Vet 2071769 ->
<b>Thema 2000 i.e.</b>	1987-92	
834 B.146	85 115	
Oil press. switch/Int. pres. aceite	11410	-> N° 1242363, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
Rev. light switch/Int. luz marcha atrás	41220	10.1991 ->
<b>Thema 2000 i.e.</b>	1988-92	
834 B1.000	86 117	
Oil press. switch/Int. pres. aceite	11410	-> N° 1242363, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	10.1991 ->
<b>Thema 2000 i.e. 16V Turbo, SW</b>	1989-93	
834 C1.246	130 177	
Oil press. switch/Int. pres. aceite	11410	-> N° 1242363, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	11.1991 ->
<b>Thema 2000 i.e. 16V, SW</b>	1989-92	
834 B2.246	104 141	
Oil press. switch/Int. pres. aceite	12020	-> N° Vet 0253230, 0.20 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	10.1991 ->
<b>Thema 2000 i.e. 16V, SW</b>	1989-92	
834 B2.000	108 147	
Oil press. switch/Int. pres. aceite	11410	-> N° 1242363, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	11.1991 ->

**LANCIA Cont.**

<b>Thema 2000 i.e. Turbo, SW</b>	1986-92	
834 C.146	110 150	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Oil press. switch/Int. pres. aceite	12430	N° 1242363 ->
<b>Thema 2500 Turbo DS, SW</b>	1988-92	
8144.97	85 115	
Oil press. switch/Int. pres. aceite	11410	-> N° 1358981, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1358981 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	11.1991 ->
<b>Thema 2500 Turbo DS, SW</b>	1988-92	
8144.97S	77 105	
Oil press. switch/Int. pres. aceite	11410	-> N° 1358981, 0.35 bar
Oil press. switch/Int. pres. aceite	12430	N° 1358981 ->
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	11.1991 ->
<b>Thema 2500 Turbo DS, SW</b>	1992-94	
8144.97 Y	85 116	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	40540	-> N° Vet 2071768
Rev. light switch/Int. luz marcha atrás	40940	N° Vet 2071769 ->
<b>Thema 2850 V6 i.e.</b>	1988-92	
834 E.146	108 147	
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	41220	11.1991 ->
<b>Thema 3000 V6, SW</b>	1992-94	
834 F.000	126 171	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	31600	Oil temp./Temp. aceite
Rev. light switch/Int. luz marcha atrás	40540	-> N° Vet 2071768
Rev. light switch/Int. luz marcha atrás	40940	N° Vet 2071769 ->
<b>Thema 8.32</b>	1987-92	
F 105 L.046	151 205	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Rev. light switch/Int. luz marcha atrás	41220	11.1991 ->
<b>Thema 8.32</b>	1987-89	
F 105 L	158 215	
Oil press. switch/Int. pres. aceite	12020	0.20 bar
Rev. light switch/Int. luz marcha atrás	41220	
<b>Thesis 2.0 Turbo</b>	2002 ->	
841 E.000	136 185	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24412	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24413	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	EASY-GO
Rev. light switch/Int. luz marcha atrás	40940	
<b>Thesis 2.4</b>	2002 ->	
841 D.000	125 170	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24412	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24413	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	EASY-GO
Rev. light switch/Int. luz marcha atrás	40940	
<b>Thesis 2.4 D Multijet</b>	2006 ->	
841 P.000	136 185	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24413	
Rev. light switch/Int. luz marcha atrás	40830	
<b>Thesis 2.4 JTD</b>	2002 ->	
841 C.000	110 150	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24412	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24413	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	EASY-GO
Rev. light switch/Int. luz marcha atrás	40940	
<b>Thesis 2.4 JTD</b>	2003 ->	
841 G.000	129 175	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24412	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24413	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	EASY-GO
Rev. light switch/Int. luz marcha atrás	40830	
<b>Thesis 3.0 V6</b>	2002 ->	
841 A.000	158 215	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24413	
<b>Thesis 3.2 V6</b>	2003 ->	
841 L.000	169 230	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24413	
<b>Y 1.1</b>	1995-03	
176 B2.000	40 54	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	37910	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40490	
<b>Y 1.2</b>	1996-03	
840 A3.000/188 A4.000	44 60	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	37910	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40490	
<b>Y 1.2 16V</b>	1997-03	
176 B9.000	63 86	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	37910	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40490	
<b>Y 1.2 16V</b>	2000-03	
188 A5.000	59 80	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40490	
<b>Y 1.4 12V</b>	1996-03	
840 A4.000	55 75	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	37910	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40490	

**LANCIA Cont.**

<b>Y 1.4 12V</b>		<b>1996-03</b>
840 A2.000		59 80
Oil press. switch/Int. pres. aceite		<b>12430</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37910</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Y10 1.0 Fire</b>		<b>1985-89</b>
156 A.000		41 56
Thermistor-Thermocont./Doble función		<b>34030</b>
<b>Y10 1.0 Fire, 4WD</b>		<b>1985-91</b>
156 A 2.100		32 44
Oil press. switch/Int. pres. aceite	-> N° 3683628, 0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite	N° 3683628 ->	<b>12430</b>
Stop light switch/Int. luz stop		<b>24370</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	<b>35270</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Y10 1.0 Fire, 4WD</b>		<b>1987-92</b>
156 A2.246		33 45
Oil press. switch/Int. pres. aceite	-> N° 3683628, 0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite	N° 3683628 ->	<b>12430</b>
Stop light switch/Int. luz stop		<b>24370</b>
Thermistor-Thermocont./Doble función		<b>34030</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	<b>35270</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Y10 1.0 Fire, 4WD</b>		<b>1987-90</b>
156 A 2.000		37 50
Thermistor-Thermocont./Doble función		<b>34030</b>
<b>Y10 1.0 Fire, 4WD</b>		<b>1985-89</b>
156 A 2.000		33 45
Oil press. switch/Int. pres. aceite		<b>11260</b>
Oil press. transmitter/Transm. pres. aceite		<b>14800</b>
<b>Y10 1.0 Turbo</b>		<b>1985-89</b>
156 A 1.000		62 84
Oil press. switch/Int. pres. aceite	0.20 bar	<b>12020</b>
<b>Y10 1.1 Avenue, 4WD</b>		<b>1995-95</b>
176 B2.000		40 54
Oil press. switch/Int. pres. aceite		<b>12430</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Y10 1.1 i.e</b>		<b>1989-92</b>
156 C.000		42 57
Oil press. switch/Int. pres. aceite	-> N° 3683628, 0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite	N° 3683628 ->	<b>12430</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Y10 1.1 i.e 4WD</b>		<b>1989-92</b>
156 C.000		42 57
Oil press. switch/Int. pres. aceite	-> N° 3683628, 0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite	N° 3683628 ->	<b>12430</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Y10 1.1 i.e. Fire, 4WD</b>		<b>1989-95</b>
156 C.046		37 50
Oil press. switch/Int. pres. aceite	-> N° 3683628, 0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite	N° 3683628 ->	<b>12430</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25	<b>35270</b>
Rev. light switch/Int. luz marcha atrás		<b>40480</b>
<b>Y10 1.3 i.e. Fire</b>		<b>1989-95</b>
156 B.000/146 A 5.046		53 72
Oil press. switch/Int. pres. aceite	-> 12.1992, 0.20 bar	<b>12020</b>
Oil press. switch/Int. pres. aceite	01.1993 ->	<b>12430</b>
Oil press. transmitter/Transm. pres. aceite		<b>14800</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Y10 1.3 i.e. Fire</b>		<b>1987-93</b>
156 B.000		56 76
Oil press. switch/Int. pres. aceite	0.20 bar	<b>12020</b>
<b>Ypsilon 1.2</b>		<b>2003 -&gt;</b>
188 A4.000		44 60
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24411</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Ypsilon 1.2</b>		<b>2003 -&gt;</b>
188 A5.000		59 80
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Ypsilon 1.3 D Multijet</b>		<b>2006 -&gt;</b>
199 A2.000		55 75
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Ypsilon 1.3 D Multijet</b>		<b>2006 -&gt;</b>
199 A3.000		66 90
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Ypsilon 1.3 JTD</b>		<b>2003 -&gt;</b>
188 A9.000		51 70
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40520</b>
<b>Ypsilon 1.4</b>		<b>2006 -&gt;</b>
350 A1.000		57 78
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>
<b>Ypsilon 1.4 16V</b>		<b>2003 -&gt;</b>
843 A 1.000		70 95
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>
Rev. light switch/Int. luz marcha atrás		<b>40490</b>

**LANCIA Cont.**

<b>Zeta 2.0 16V</b>		<b>1998-00</b>
RFV		97 132
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Zeta 2.0 16V</b>		<b>2000-02</b>
RFN		100 136
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>Zeta 2.0 JTD</b>		<b>1999-02</b>
RHW		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 8420 ->	<b>40492</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 8419	<b>40570</b>
<b>Zeta 2.0 JTD</b>		<b>2000-02</b>
RHZ		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Zeta 2.0 Turbo</b>		<b>1995-02</b>
RGX		108 147
Oil press. switch/Int. pres. aceite	-> 05.1998	<b>12460</b>
Oil press. switch/Int. pres. aceite	05.1998 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Thermistor-Thermocont./Doble función		<b>34435</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37930</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Zeta 2.1 TD</b>		<b>1996-99</b>
P 8 C		80 109
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop		<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37920</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>

**LAND ROVER**

<b>90/110 2.5</b>		<b>1985-90</b>
17H		62 84
Temp. sending unit/Termo-Resistencia		<b>31250</b>
<b>90/110 2.5 TD</b>		<b>1986-90</b>
		63 86
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Temp. sending unit/Termo-Resistencia		<b>31250</b>
<b>90/110 3.5 V8</b>		<b>1983-90</b>
		100 136
Temp. sending unit/Termo-Resistencia		<b>31250</b>
Rev. light switch/Int. luz marcha atrás		<b>40120</b>
<b>Defender 2.5 90 TDI</b>		<b>1990 -&gt;</b>
16 L/23 L/11 L		83 113
Oil press. switch/Int. pres. aceite		<b>12410</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Temp. sending unit/Termo-Resistencia		<b>32460</b>
Rev. light switch/Int. luz marcha atrás		<b>40581</b>
<b>Defender 2.5 90,110 TDI S.W.</b>		<b>1990-98</b>
16 L/23 L/11 L		83 113
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	23 L, 1 terminals/bornes	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Oil press. transmitter/Transm. pres. aceite		<b>14500</b>
Stop light switch/Int. luz stop		<b>24710</b>
Temp. sending unit/Termo-Resistencia		<b>32460</b>
Fan switch/Termocontacto ventilador		<b>36280</b>
Rev. light switch/Int. luz marcha atrás		<b>40581</b>
<b>Defender 2.5 Td5 4WD, Pick-up, S.W.</b>		<b>1998 -&gt;</b>
		90 122
Oil press. switch/Int. pres. aceite	1 terminals/bornes	<b>12475</b>
Rev. light switch/Int. luz marcha atrás		<b>40581</b>
<b>Discovery I 2.0 16V</b>		<b>1993-98</b>
		99 135
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Temp. sending unit/Termo-Resistencia		<b>32480</b>
Rev. light switch/Int. luz marcha atrás		<b>40960</b>
<b>Discovery I 2.5 TDI</b>		<b>1989-98</b>
19 L/21 L/17 L/12 L		83 113
Oil press. switch/Int. pres. aceite		<b>11710</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Temp. sending unit/Termo-Resistencia		<b>31740</b>
Fan switch/Termocontacto ventilador		<b>36280</b>
Rev. light switch/Int. luz marcha atrás		<b>40960</b>
<b>Discovery I 3.5</b>		<b>1989-94</b>
22 D		113 154
Oil press. switch/Int. pres. aceite		<b>11700</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Temp. sending unit/Termo-Resistencia		<b>32470</b>
Fan switch/Termocontacto ventilador		<b>37410</b>
Rev. light switch/Int. luz marcha atrás		<b>40960</b>
<b>Discovery I 3.9 V8</b>		<b>1993-98</b>
36 D/35 D		134 182
Oil press. switch/Int. pres. aceite		<b>11700</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Temp. sending unit/Termo-Resistencia		<b>32470</b>
Fan switch/Termocontacto ventilador		<b>37410</b>
Rev. light switch/Int. luz marcha atrás		<b>40960</b>

**LAND ROVER Cont.**

<b>Discovery II 2.5 Td5</b>		<b>1999-04</b>
		102 139
Oil press. switch/Int. pres. aceite	1 terminals/bornes	<b>12475</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3A771055 ->	<b>40581</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3A000000 ->	<b>40586</b>
<b>Discovery II 4.0 V8</b>		<b>1998-04</b>
		136 185
Oil press. switch/Int. pres. aceite		<b>11700</b>
Oil press. switch/Int. pres. aceite		<b>12410</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3A771055 ->	<b>40581</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3A000000 ->	<b>40586</b>
<b>Freelander 1.8 16V</b>		<b>2000 -&gt;</b>
18 K4F		86 117
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Ch. 1A326957 ->	<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>Freelander 1.8 i 16V, Soft Top</b>		<b>1998 -&gt;</b>
18 K4F		88 120
Oil press. switch/Int. pres. aceite		<b>12410</b>
Stop light switch/Int. luz stop	Ch. YA999999 ->	<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>Freelander 2.0 DI</b>		<b>1998-00</b>
		72 98
Oil press. switch/Int. pres. aceite		<b>12470</b>
Temp. sending unit/Termo-Resistencia		<b>32730</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>Freelander 2.0 DI Soft Top</b>		<b>1998 -&gt;</b>
		72 98
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24310</b>
Temp. sending unit/Termo-Resistencia		<b>32730</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>Freelander 2.0 Td4</b>		<b>2000 -&gt;</b>
		82 112
Oil press. switch/Int. pres. aceite		<b>12410</b>
<b>Freelander 2.0 Td4</b>		<b>2001 -&gt;</b>
		80 109
Oil press. switch/Int. pres. aceite		<b>12410</b>
<b>Freelander 2.5 V6</b>		<b>2000 -&gt;</b>
25 K4F		130 177
Oil press. switch/Int. pres. aceite		<b>12410</b>
<b>Range Rover 4.3 Vogue LSE</b>		<b>1992-94</b>
40 D		149 203
Oil press. switch/Int. pres. aceite		<b>11700</b>
<b>Range Rover 4.6</b>		<b>1998-02</b>
		160 218
Oil press. switch/Int. pres. aceite		<b>11700</b>
<b>Range Rover I 3.5</b>		<b>1987-90</b>
31 D		107 146
Oil press. switch/Int. pres. aceite		<b>11320</b>
Rev. light switch/Int. luz marcha atrás		<b>40120</b>
<b>Range Rover I 3.5 Vogue</b>		<b>1981-90</b>
11 D		93 126
Oil press. switch/Int. pres. aceite		<b>11320</b>
Rev. light switch/Int. luz marcha atrás		<b>40120</b>
<b>Range Rover I 3.5 Vogue</b>		<b>1985-90</b>
25 D/24 D		120 163
Oil press. switch/Int. pres. aceite		<b>11320</b>
Rev. light switch/Int. luz marcha atrás		<b>40120</b>
<b>Range Rover I 3.9 Kat</b>		<b>1988-94</b>
37 D/38 D		127 173
Oil press. switch/Int. pres. aceite	01.1990 ->	<b>11700</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>Range Rover I 3.9 Vogue SEI</b>		<b>1988-94</b>
36 D/35 D		134 182
Oil press. switch/Int. pres. aceite	01.1990 ->	<b>11700</b>
<b>Range Rover II 2.5 D</b>		<b>1994-02</b>
14 L		83 113
Oil press. switch/Int. pres. aceite		<b>11710</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Temp. sending unit/Termo-Resistencia		<b>32460</b>
Fan switch/Termocontacto ventilador		<b>36280</b>
Rev. light switch/Int. luz marcha atrás	01.1995 ->	<b>40580</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1994	<b>40960</b>
<b>Range Rover II 2.5 TD</b>		<b>1994-02</b>
25 6T (BMW)		100 136
Oil press. switch/Int. pres. aceite		<b>11710</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Temp. s. warning lamp/Termocont. temp.		<b>35570</b>
Fan switch/Termocontacto ventilador		<b>36280</b>
Rev. light switch/Int. luz marcha atrás	01.1995 ->	<b>40580</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1994	<b>40960</b>
<b>Range Rover II 3.9</b>		<b>1994-02</b>
42 D		140 190
Oil press. switch/Int. pres. aceite	-> Ch. XA426593, White/Blanco	<b>11700</b>
Oil press. switch/Int. pres. aceite	Ch. XA426594 ->	<b>12410</b>
Stop light switch/Int. luz stop	Without/Sin ABS	<b>24300</b>
Stop light switch/Int. luz stop	With/Con ABS	<b>24530</b>
Fan switch/Termocontacto ventilador		<b>37410</b>
Rev. light switch/Int. luz marcha atrás	01.1995 ->	<b>40580</b>
Rev. light switch/Int. luz marcha atrás	-> 12.1994	<b>40960</b>
<b>Range Rover II 4.6</b>		<b>1994-02</b>
46 D		165 224
Oil press. switch/Int. pres. aceite	White/Blanco	<b>11700</b>
Oil press. switch/Int. pres. aceite		<b>12410</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Range Rover III 3.0 TD 6</b>		<b>2002 -&gt;</b>
		130 177
Oil press. switch/Int. pres. aceite		<b>12410</b>
<b>Range Rover III 4.4</b>		<b>2002 -&gt;</b>
		210 286
Oil press. switch/Int. pres. aceite		<b>12410</b>

**LEXUS**

<b>ES 250</b>		<b>1989-91</b>
2VZ-FE		118 160
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24605</b>
Temp. sending unit/Termo-Resistencia		<b>31330</b>
Fan switch/Termocontacto ventilador		<b>36170</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>ES 300</b>		<b>1991-97</b>
3VZ-FE		138 188
Oil press. switch/Int. pres. aceite	-> 07.1992	<b>11610</b>
Oil press. switch/Int. pres. aceite	08.1992 ->	<b>12550</b>
Stop light switch/Int. luz stop		<b>24690</b>
Temp. sending unit/Termo-Resistencia	-> 07.1993	<b>31570</b>
Temp. sending unit/Termo-Resistencia	08.1993 ->	<b>32650</b>
Fan switch/Termocontacto ventilador		<b>36170</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>GS 300</b>		<b>1993-97</b>
2JZ-GE		156 212
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24690</b>
Fan switch/Termocontacto ventilador	10.1993 ->	<b>36540</b>
Fan switch/Termocontacto ventilador	-> 09.1993	<b>36550</b>
<b>GS 300 T3</b>		<b>1997-00</b>
2JZ-GE		163 222
Oil press. switch/Int. pres. aceite		<b>12550</b>
<b>GS 430</b>		<b>2000-05</b>
3UZ-FE		208 283
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24690</b>
Fan switch/Termocontacto ventilador		<b>36540</b>
<b>IS 200, SportCross</b>		<b>1999 -&gt;</b>
1G-FE		114 155
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop	Manual	<b>24680</b>
Stop light switch/Int. luz stop	Automatic	<b>24690</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
<b>LS 400</b>		<b>1989-94</b>
1UZ-FE		180 245
Oil press. switch/Int. pres. aceite	-> 07.1992	<b>11610</b>
Oil press. switch/Int. pres. aceite	12.1992 ->	<b>12550</b>
Stop light switch/Int. luz stop	01.1991 ->	<b>24605</b>
Stop light switch/Int. luz stop	-> 12.1992	<b>24690</b>
Temp. sending unit/Termo-Resistencia	-> 07.1992	<b>31570</b>
Temp. sending unit/Termo-Resistencia	08.1992 ->	<b>32650</b>
Fan switch/Termocontacto ventilador	08.1992 ->	<b>36540</b>
Fan switch/Termocontacto ventilador	-> 07.1992	<b>36570</b>
<b>LS 400</b>		<b>1994-97</b>
1UZ-FE		194 264
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24690</b>
Temp. sending unit/Termo-Resistencia		<b>32650</b>
<b>LS 400</b>		<b>1997 -&gt;</b>
1UZ-FE		209 284
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24690</b>
Temp. sending unit/Termo-Resistencia	-> 10.1997	<b>32650</b>
<b>LS 400</b>		<b>1998 -&gt;</b>
1UZ-FE		203 276
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24690</b>
Temp. sending unit/Termo-Resistencia	-> 12.1998	<b>32650</b>
<b>RX 300</b>		<b>2003 -&gt;</b>
1MZ-FE		150 204
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop	Without/Sin cruise control	<b>24680</b>
Stop light switch/Int. luz stop	With/Con cruise control	<b>24690</b>
Fan switch/Termocontacto ventilador		<b>36712</b>
<b>RX 300 V6</b>		<b>2000-03</b>
1MZ-FE		148 201
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop	Without/Sin cruise control	<b>24680</b>
Stop light switch/Int. luz stop	With/Con cruise control	<b>24690</b>
Fan switch/Termocontacto ventilador		<b>36712</b>

**MARUTI**

<b>800 0.8</b>		<b>1991 -&gt;</b>
F8B		26 35
Oil press. switch/Int. pres. aceite		<b>10610</b>
Stop light switch/Int. luz stop		<b>25050</b>
Temp. sending unit/Termo-Resistencia		<b>31630</b>
Fan switch/Termocontacto ventilador		<b>36240</b>

**MAZDA**

<b>121 I 1.1</b>		<b>1987-90</b>
B1/B16		42 57
Oil press. switch/Int. pres. aceite	04.1989 ->	<b>11610</b>
Oil press. switch/Int. pres. aceite	-> 03.1989, 0.30 bar	<b>12240</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>37610</b>
Fan switch/Termocontacto ventilador		<b>37620</b>
<b>121 I 1.3</b>		<b>1987-90</b>
B3		44 60
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>37610</b>
Fan switch/Termocontacto ventilador		<b>37620</b>
<b>121 I 1.3</b>		<b>1989-90</b>
B3		40 55
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>37610</b>
Fan switch/Termocontacto ventilador		<b>37620</b>

**MAZDA Cont.**

<b>121 II 1.3 16V</b>		<b>1990-96</b>
B3 (16V)		39 53
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-85 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36670</b>
<b>121 II 1.3 i 16V</b>		<b>1990-96</b>
B3 (16V)		53 72
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-85 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36670</b>
<b>121 III 1.25</b>		<b>1996 -&gt;</b>
DHG/DHF		55 75
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>121 III 1.3</b>		<b>1996 -&gt;</b>
JJM/JJK		37 50
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32020</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>121 III 1.3</b>		<b>1996 -&gt;</b>
J4R/J4T		44 60
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32020</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>121 III 1.8 D</b>		<b>1996 -&gt;</b>
RTJ/RTK		44 60
Oil press. switch/Int. pres. aceite		<b>12220</b>
Stop light switch/Int. luz stop		<b>24210</b>
Temp. sending unit/Termo-Resistencia		<b>32020</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>2 1.25</b>		<b>2003 -&gt;</b>
FUJA		55 75
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>2 1.4</b>		<b>2003 -&gt;</b>
FXJA		59 80
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>2 1.4 CD</b>		<b>2003 -&gt;</b>
F6JA/F6JB		50 68
Oil press. switch/Int. pres. aceite		<b>12640</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>2 1.6</b>		<b>2003 -&gt;</b>
FYJA		74 100
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>3 1.6 DI Turbo, Sedan</b>		<b>2004 -&gt;</b>
Y601		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Rev. light switch/Int. luz marcha atrás		<b>40595</b>
<b>3 2.0 MZR-CD, Sedan</b>		<b>2006 -&gt;</b>
RF7J		105 143
Oil press. switch/Int. pres. aceite		<b>12613</b>
<b>3 2.0, Sedan</b>		<b>2003 -&gt;</b>
LF17		110 150
Oil press. switch/Int. pres. aceite		<b>12613</b>
<b>3 2.3 MPS</b>		<b>2006 -&gt;</b>
L3N9		191 260
Oil press. switch/Int. pres. aceite		<b>12613</b>
<b>323 C IV 1.3</b>		<b>1989-94</b>
B3E		49 67
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.3 16V</b>		<b>1989-94</b>
B6		54 73
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.6</b>		<b>1989-91</b>
B6E		62 84
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.6 16V</b>		<b>1991-94</b>
B6		65 88
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.7 D</b>		<b>1989-94</b>
PN54		41 56
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.8 16V</b>		<b>1989-93</b>
BP22/BP31		103 140
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>

**MAZDA Cont.**

<b>323 C IV 1.8 16V 4WD</b>		<b>1991-93</b>
BP		76 103
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.8 16V GT</b>		<b>1989-93</b>
BP (DOHC)		94 128
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.8 16V Turbo 4WD</b>		<b>1993-94</b>
B3		136 185
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C IV 1.8 16V Turbo 4WD</b>		<b>1990-92</b>
B3		120 163
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C V 1.3 16V</b>		<b>1994-98</b>
B3 (16V)		54 73
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	11.1996 ->	<b>24720</b>
Stop light switch/Int. luz stop	-> 10.1996	<b>24851</b>
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	<b>40985</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C V 1.5 16V</b>		<b>1994-98</b>
Z5-DE		65 88
Oil press. switch/Int. pres. aceite		<b>11610</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24720</b>
Stop light switch/Int. luz stop		<b>24851</b>
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	<b>40985</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 C V 1.8 16V</b>		<b>1994-98</b>
BP-ZE		84 114
Oil press. switch/Int. pres. aceite		<b>11610</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24720</b>
Stop light switch/Int. luz stop		<b>24851</b>
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	<b>40985</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F IV 1.6</b>		<b>1989-91</b>
B6E		62 84
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F IV 1.6 16V</b>		<b>1991-94</b>
B6		65 88
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F IV 1.8 16V</b>		<b>1989-94</b>
BP		76 103
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F IV 1.8 16V</b>		<b>1989-93</b>
BP31		103 140
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F IV 1.8 16V GT</b>		<b>1989-94</b>
BP (DOHC)		94 128
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F IV 1.8 4WD</b>		<b>1991-94</b>
B6		76 103
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	97-92 °C	<b>36660</b>
Fan switch/Termocontacto ventilador	91-86 °C	<b>36670</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F V 1.5 16V</b>		<b>1994-98</b>
Z5-DE		65 88
Oil press. switch/Int. pres. aceite		<b>11610</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24720</b>
Stop light switch/Int. luz stop		<b>24851</b>
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	<b>40985</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>
<b>323 F V 1.8 16V</b>		<b>1994-98</b>
BP-ZE		84 114
Oil press. switch/Int. pres. aceite		<b>11610</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24720</b>
Stop light switch/Int. luz stop		<b>24851</b>
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	<b>40985</b>
Rev. light switch/Int. luz marcha atrás		<b>41280</b>



**MAZDA Cont.**

<b>323 F V 2.0 24V</b>		1994-98
KF		106 144
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41280
<b>323 F VI 1.4</b>		2001-04
B3 (16V)		53 72
Stop light switch/Int. luz stop		24720
<b>323 F VI 1.4 16V</b>		1998-01
B3 ME		54 73
Stop light switch/Int. luz stop		24720
<b>323 F VI 1.5 16V</b>		1998-01
		65 88
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 F VI 1.6</b>		2001-04
ZM		72 98
Stop light switch/Int. luz stop		24720
<b>323 F VI 1.6</b>		2001-04
ZM		70 95
Stop light switch/Int. luz stop		24720
<b>323 F VI 1.9 16V</b>		1998-01
		84 114
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 F VI 2.0</b>		2001-04
FS7G/FS7E		96 131
Stop light switch/Int. luz stop		24720
<b>323 F VI 2.0 D</b>		1998-04
RF1G		52 71
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 F VI 2.0 TD</b>		1998-01
		66 90
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 F VI 2.0 TD</b>		2001-04
RF4F		74 101
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 III</b>		1985-89
E1		40 54
Stop light switch/Int. luz stop		24720
<b>323 III 1.3</b>		1985-89
E3		44 60
Stop light switch/Int. luz stop		24720
<b>323 III 1.5</b>		1987-89
B5		54 73
Stop light switch/Int. luz stop		24720
<b>323 III 1.5 Station Wagon</b>		1986-89
B50/B53/E5		55 75
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
<b>323 III 1.5 Station Wagon</b>		1987-89
B50/B53/B5		54 73
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
<b>323 III 1.5, Fastback</b>		1985-89
E5		55 75
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
<b>323 III 1.6 GT</b>		1986-89
B6		63 85
Stop light switch/Int. luz stop		24720
<b>323 III 1.6 GT Turbo 4WD</b>		1987-89
		110 150
Stop light switch/Int. luz stop		24720
<b>323 III 1.6 GT Turbo, 4WD</b>		1985-91
B6		103 140
Stop light switch/Int. luz stop		24720
<b>323 III 1.6 Station Wagon</b>		1987-89
B68		54 73
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 III 1.6 Station Wagon, 4x4</b>		1986-95
B65M /B6E		63 86
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 III 1.7 D</b>		1986-89
PN27		40 54
Stop light switch/Int. luz stop		24720
<b>323 III 1.7 D Fastback</b>		1987-89
PN46		42 57
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41280
<b>323 III 1.7 D Station Wagon</b>		1989-93
PN26/PN54		41 56
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36660
Rev. light switch/Int. luz marcha atrás		41280
<b>323 P V 1.3 16V</b>		1996 ->
B3 (16V)		54 73
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280

**MAZDA Cont.**

<b>323 P V 1.5 16V</b>		1996 ->
Z5-DE		65 88
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 P V 2.0 D</b>		1996 ->
RF1G		52 71
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.3</b>		1989-91
B3E/B383		49 67
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.3 16V</b>		1991-94
B3 (16V)		54 73
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.6</b>		1989-91
B6E		62 84
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.6 16V</b>		1989-94
B6		65 88
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.7 D</b>		1989-94
PN46/PN54/PN62		41 56
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.8 16V GT</b>		1989-94
BP (DOHC)		94 128
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S IV 1.8 16V Turbo 4WD</b>		1991-94
BP Turbo		120 163
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 S IV 1.8 16V, 4WD</b>		1989-94
BP52		76 103
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	97-92 °C	36660
Fan switch/Termocontacto ventilador	91-86 °C	36670
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S V 1.3 16V</b>		1994-98
B3 (16V)		54 73
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	11.1996 ->	24720
Stop light switch/Int. luz stop	-> 10.1996	24851
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S V 1.5 16V</b>		1994-98
Z5-DE		65 88
Oil press. switch/Int. pres. aceite		11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24720
Stop light switch/Int. luz stop		24851
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S V 1.6 TD</b>		1994-98
4EE1-T		60 82
Stop light switch/Int. luz stop		24851
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S V 1.8 16V</b>		1994-98
BP-ZE		84 114
Oil press. switch/Int. pres. aceite		11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24720
Stop light switch/Int. luz stop		24851
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S V 2.0 D</b>		1996-98
RF1G		52 71
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás	Parking light/Luz de estacionamiento	40985
Rev. light switch/Int. luz marcha atrás		41280
<b>323 S VI 1.4</b>		2001-04
B3 (16V)		53 72
Stop light switch/Int. luz stop		24720
<b>323 S VI 1.4 16V</b>		1998-01
B3 ME		54 73
Stop light switch/Int. luz stop		24720
<b>323 S VI 1.5 16V</b>		1998-01
		65 88
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
<b>323 S VI 1.6</b>		2001-04
ZM		70 95
Stop light switch/Int. luz stop		24720

**MAZDA Cont.**

<b>323 S VI 1.6</b>	2001-04
ZM	72 98
Stop light switch/Int. luz stop	24720
<b>323 S VI 1.9 16V</b>	1998-04
	84 114
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>323 S VI 2.0</b>	2001-04
FS7G/FS7E	96 131
Stop light switch/Int. luz stop	24720
<b>323 S VI 2.0 D</b>	1998-04
	52 71
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>323 S VI 2.0 TD</b>	1998-04
RF3F	66 90
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>5 1.8</b>	2005 ->
L823	85 116
Oil press. switch/Int. pres. aceite	12613
<b>5 2.0</b>	2005 ->
LF77	107 146
Oil press. switch/Int. pres. aceite	12613
<b>6 1.8, MZR</b>	2002 ->
L813	88 120
Oil press. switch/Int. pres. aceite	12613
<b>6 2.0</b>	2002 ->
LF18/LF17	104 141
Oil press. switch/Int. pres. aceite	12613
<b>6 2.0 CiTD Station Wagon 4x4</b>	2002-05
RF5C	89 121
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>6 2.0 CiTD Station Wagon 4x4</b>	2002-05
RF5C	100 136
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>6 2.0 DI, S.W.</b>	2002 ->
RF5C	100 136
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>6 2.0 DI, S.W.</b>	2002 ->
RF5C	89 121
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>6 2.0 MZR, Kombi</b>	2007 ->
LF17	108 147
Oil press. switch/Int. pres. aceite	12613
<b>6 2.0 Station Wagon</b>	2002 ->
LF18/LF17	104 141
Oil press. switch/Int. pres. aceite	12613
<b>6 2.0, Station Wagon</b>	2005 ->
LF77	108 147
Oil press. switch/Int. pres. aceite	12613
<b>6 2.3</b>	2002 ->
L3C1	122 166
Oil press. switch/Int. pres. aceite	12613
<b>6 2.3 AWD Station Wagon</b>	2002 ->
L3C1	119 162
Oil press. switch/Int. pres. aceite	12613
<b>6 2.3 MPS Turbo</b>	2005 ->
L3KG	191 260
Oil press. switch/Int. pres. aceite	12613
<b>6 2.3 Station Wagon</b>	2002 ->
L3C1	122 166
Oil press. switch/Int. pres. aceite	12613
<b>6 2.5 MZR</b>	2007 ->
L5-VE	125 170
Oil press. switch/Int. pres. aceite	12613
<b>626 III 1.6, Coupe, Fastback</b>	1987-92
	60 82
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	37610
<b>626 III 1.8, Coupe, Station Wagon</b>	1987-92
F8	65 88
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36660
<b>626 III 1.8, Coupe, Station Wagon</b>	1987-92
	69 94
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36660
<b>626 III 2.0 12V, Coupe, Station Wagon</b>	1987-92
FE (12V)	79 107
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36660
Rev. light switch/Int. luz marcha atrás	40986
<b>626 III 2.0 12V, Coupe, Station Wagon</b>	1987-90
FE (12V)	81 110
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36660
Rev. light switch/Int. luz marcha atrás	40986
<b>626 III 2.0 16V, Coupe, Station Wagon</b>	1987-92
FE Kat. (16V)	103 140
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36660
Rev. light switch/Int. luz marcha atrás	40986

**MAZDA Cont.**

<b>626 III 2.0 16V, Coupe, Station Wagon</b>	1987-89
FE Kat. (16V)	109 148
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36660
Rev. light switch/Int. luz marcha atrás	40986
<b>626 III 2.0 D Station Wagon</b>	1994-97
RF65	60 82
Oil press. switch/Int. pres. aceite	0.30 bar
Stop light switch/Int. luz stop	12240
Fan switch/Termocontacto ventilador	24720
Fan switch/Termocontacto ventilador	36670
Fan switch/Termocontacto ventilador	37610
<b>626 III 2.0 D Station Wagon Complex</b>	1993-96
RF-CX	55 75
Oil press. switch/Int. pres. aceite	0.30 bar
Stop light switch/Int. luz stop	12240
Fan switch/Termocontacto ventilador	24720
Fan switch/Termocontacto ventilador	36670
Fan switch/Termocontacto ventilador	37610
<b>626 III 2.0 D, Station Wagon</b>	1987-91
RF-N	44 60
Oil press. switch/Int. pres. aceite	0.30 bar
Stop light switch/Int. luz stop	12240
Fan switch/Termocontacto ventilador	24720
Fan switch/Termocontacto ventilador	36670
Fan switch/Termocontacto ventilador	37610
<b>626 III 2.0 i 16V Station Wagon</b>	1994-97
	110 150
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	24720
Rev. light switch/Int. luz marcha atrás	36660
Rev. light switch/Int. luz marcha atrás	40986
<b>626 III 2.0, Coupe, Station Wagon</b>	1987-97
FE	66 90
Oil press. switch/Int. pres. aceite	-> 08.1989
Stop light switch/Int. luz stop	10610
Fan switch/Termocontacto ventilador	24720
Rev. light switch/Int. luz marcha atrás	36660
Rev. light switch/Int. luz marcha atrás	40986
<b>626 III 2.2 12V Station Wagon 4WD</b>	1991-92
F2L1/F2	85 116
Oil press. switch/Int. pres. aceite	0.30 bar
Stop light switch/Int. luz stop	12240
<b>626 III 2.2 12V, Coupe, SW, 4WD</b>	1987-96
F2	85 115
Oil press. switch/Int. pres. aceite	0.30 bar
Stop light switch/Int. luz stop	12240
<b>626 IV 1.8 i</b>	1992-97
FP	77 105
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720
Stop light switch/Int. luz stop	24852
<b>626 IV 1.8 i, Fastback</b>	1994-97
	66 90
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720
Stop light switch/Int. luz stop	24851
Stop light switch/Int. luz stop	24852
<b>626 IV 1.8, Fastback</b>	1991-97
FP	77 105
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720
Stop light switch/Int. luz stop	24852
<b>626 IV 2.0 D GLX Complex, Fastback</b>	1992-97
RF OHC	55 75
Oil press. switch/Int. pres. aceite	0.30 bar
Stop light switch/Int. luz stop	(J)
Stop light switch/Int. luz stop	(USA)
Stop light switch/Int. luz stop	24851
Fan switch/Termocontacto ventilador	24852
Fan switch/Termocontacto ventilador	36670
Fan switch/Termocontacto ventilador	37610
<b>626 IV 2.0 i, Fastback, 4WD</b>	1991-97
FS	85 115
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720
Stop light switch/Int. luz stop	24851
Stop light switch/Int. luz stop	24852
Rev. light switch/Int. luz marcha atrás	41280
<b>626 IV 2.5 24V Fastback</b>	1992-97
KL	121 165
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720
Stop light switch/Int. luz stop	24852
Rev. light switch/Int. luz marcha atrás	41280
<b>626 IV 2.5 24V Fastback</b>	1994-97
KL	120 163
Oil press. switch/Int. pres. aceite	11610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24720
Stop light switch/Int. luz stop	24851
Stop light switch/Int. luz stop	24852
Rev. light switch/Int. luz marcha atrás	41280
<b>626 V 1.8 Fastback</b>	1999-02
FP	74 100
Stop light switch/Int. luz stop	24720
<b>626 V 1.8, Fastback, SW</b>	1997-99
	66 90
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>626 V 1.8, Fastback, SW</b>	1998-00
	66 90
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>626 V 1.8, Station Wagon</b>	1999-02
FP9A	74 100
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
<b>626 V 2.0 TD, SW</b>	2000-02
	81 110
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
With/Con cruise control	24720

**MAZDA Cont.**

<b>626 V 2.0 Turbo DI, Station Wagon</b>	<b>1998-02</b>
RF4F	74 101
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
With/Con cruise control	
<b>626 V 2.0, Fastback, Station Wagon</b>	<b>1997-02</b>
FS	85 115
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>626 V 2.0, Fastback, Station Wagon</b>	<b>1998-02</b>
FS2C	100 136
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>929 III 2.2 12V</b>	<b>1988-89</b>
F21/F2E/F2	85 115
Stop light switch/Int. luz stop	<b>24720</b>
<b>929 III 2.2 12V</b>	<b>1989-91</b>
F2-C	94 128
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>929 III 3.0</b>	<b>1988-89</b>
JE3	125 170
Stop light switch/Int. luz stop	<b>24720</b>
<b>929 III 3.0</b>	<b>1987-91</b>
JE	140 190
Stop light switch/Int. luz stop	<b>24720</b>
<b>929 III 3.0 i</b>	<b>1990-91</b>
JE3	123 167
Stop light switch/Int. luz stop	<b>24720</b>
<b>B-Serie 2.5 D, 4WD</b>	<b>1998 -&gt;</b>
MD25NA	57 78
Rev. light switch/Int. luz marcha atrás	<b>40986</b>
<b>B-Serie 2.5 TD 4WD</b>	<b>1999 -&gt;</b>
MD25TI	80 109
Rev. light switch/Int. luz marcha atrás	<b>40986</b>
<b>B-Serie 2.6 12V 4WD</b>	<b>1999 -&gt;</b>
JK26	90 122
Rev. light switch/Int. luz marcha atrás	<b>40986</b>
<b>BT-50 2.5 MRZ-CD 4x4</b>	<b>2006 -&gt;</b>
WLAA	105 143
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40986</b>
<b>CX-7 2.3 MZR DISI Turbo</b>	<b>2007 -&gt;</b>
L3-VDT	190 258
Oil press. switch/Int. pres. aceite	<b>12613</b>
<b>Demio 1.3 16V</b>	<b>1998 -&gt;</b>
B3 ME	46 63
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>Demio 1.3 i 16V</b>	<b>1998-00</b>
B3 (16V)	53 72
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>Demio 1.5 16V</b>	<b>2000 -&gt;</b>
B5 E	55 75
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>E2000 4WD</b>	<b>1988-89</b>
FEBN	60 82
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
-> 07.1989	
<b>E2200 D, 4WD</b>	<b>1991-03</b>
R203/R207	47 64
Oil press. switch/Int. pres. aceite	<b>10610</b>
-> 04.1997	
<b>E2200 D, 4WD</b>	<b>1997-03</b>
R2	52 71
Stop light switch/Int. luz stop	<b>24720</b>
<b>MPV I 2.5 TD</b>	<b>1996-99</b>
	85 115
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>MPV I 3.0 i V6</b>	<b>1995-99</b>
JE94	113 154
Stop light switch/Int. luz stop	<b>24720</b>
<b>MPV II 2.0</b>	<b>1999-00</b>
FS-DS	90 122
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>MPV II 2.0</b>	<b>2000-02</b>
FS	88 120
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>MPV II 2.0 DI</b>	<b>2002 -&gt;</b>
RF5C	100 136
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>MPV II 2.3</b>	<b>2002 -&gt;</b>
L3	104 141
Oil press. switch/Int. pres. aceite	<b>12613</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>MPV II 3.0 i V6</b>	<b>2002 -&gt;</b>
	147 200
Oil press. switch/Int. pres. aceite	<b>12611</b>
<b>MX-3 1.6 i</b>	<b>1991 -&gt;</b>
B69	65 88
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36660</b>
Rev. light switch/Int. luz marcha atrás	<b>41280</b>
<b>MX-3 1.6 i</b>	<b>1994 -&gt;</b>
B6D	79 107
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36660</b>
Rev. light switch/Int. luz marcha atrás	<b>41280</b>

**MAZDA Cont.**

<b>MX-3 1.8 i V6</b>	<b>1992-94</b>
K819	98 133
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41280</b>
<b>MX-3 1.8 i V6</b>	<b>1994 -&gt;</b>
K838	95 129
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41280</b>
<b>MX-5 I 1.6</b>	<b>1990-94</b>
B64F	85 115
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36660</b>
97-92 °C	
Fan switch/Termocontacto ventilador	<b>36670</b>
91-85 °C	
<b>MX-5 I 1.6</b>	<b>1995-98</b>
	66 90
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36660</b>
97-92 °C	
Fan switch/Termocontacto ventilador	<b>36670</b>
91-85 °C	
<b>MX-5 I 1.8</b>	<b>1994-98</b>
BPF1	96 130
Oil press. switch/Int. pres. aceite	<b>11610</b>
12.1994 ->	
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40985</b>
5 speed/vel.	
<b>MX-5 II 1.6 16V</b>	<b>1998-05</b>
B6D	81 110
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36660</b>
91-85 °C	
Fan switch/Termocontacto ventilador	<b>36670</b>
<b>MX-5 II 1.8 16V</b>	<b>2000-05</b>
BPD	107 146
Stop light switch/Int. luz stop	<b>24720</b>
<b>MX-5 II 1.8 16V</b>	<b>2000-05</b>
BPD	102 139
Stop light switch/Int. luz stop	<b>24720</b>
<b>MX-5 II 1.9 16V</b>	<b>1998-05</b>
BP-ZE	103 140
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40985</b>
5 speed/vel.	
<b>MX-5 III</b>	<b>2005 -&gt;</b>
L8-DE/L828	93 126
Oil press. switch/Int. pres. aceite	<b>12613</b>
<b>MX-5 III 2.0</b>	<b>2005 -&gt;</b>
LF62/LF-DE	118 160
Oil press. switch/Int. pres. aceite	<b>12613</b>
<b>MX-6 2.0</b>	<b>1992 -&gt;</b>
FS	85 115
Oil press. switch/Int. pres. aceite	<b>11610</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24720</b>
<b>MX-6 2.5 24V</b>	<b>24851</b>
KL	<b>1992 -&gt;</b>
Oil press. switch/Int. pres. aceite	121 165
Stop light switch/Int. luz stop	<b>11610</b>
<b>MX-6 2.5 i 24V</b>	<b>24720</b>
KL	<b>1994 -&gt;</b>
Oil press. switch/Int. pres. aceite	120 163
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>11610</b>
<b>Premacy 1.8</b>	<b>24720</b>
FP	<b>24851</b>
Oil press. switch/Int. pres. aceite	<b>1999 -&gt;</b>
Stop light switch/Int. luz stop	74 100
<b>Premacy 1.9</b>	<b>11610</b>
FP	<b>24720</b>
Oil press. switch/Int. pres. aceite	<b>1999 -&gt;</b>
Stop light switch/Int. luz stop	84 114
<b>Premacy 2.0</b>	<b>11610</b>
FS7G/FS7E	<b>24720</b>
Oil press. switch/Int. pres. aceite	<b>2001 -&gt;</b>
Stop light switch/Int. luz stop	96 131
<b>Premacy 2.0 TD</b>	<b>11610</b>
RF3F	<b>24720</b>
Oil press. switch/Int. pres. aceite	<b>1999-00</b>
Stop light switch/Int. luz stop	66 90
<b>Premacy 2.0 TD</b>	<b>11610</b>
RF4F	<b>24720</b>
Oil press. switch/Int. pres. aceite	<b>2000 -&gt;</b>
Stop light switch/Int. luz stop	74 101
<b>RX 7 II Turbo</b>	<b>11610</b>
RE13B	<b>24720</b>
Stop light switch/Int. luz stop	<b>1989-91</b>
<b>RX 7 II Wankel</b>	147 200
RE13B	<b>24720</b>
Stop light switch/Int. luz stop	<b>1985-89</b>
<b>RX 8 2.6 Wankel</b>	110 150
	<b>24720</b>
Oil press. switch/Int. pres. aceite	<b>2003 -&gt;</b>
<b>RX 8 2.6 Wankel</b>	170 231
	<b>12550</b>
Oil press. switch/Int. pres. aceite	<b>2003 -&gt;</b>
<b>Tribute 3.0 V6 24V 4WD</b>	141 192
AJ	<b>12550</b>
Oil press. switch/Int. pres. aceite	<b>2000 -&gt;</b>
<b>Tribute 3.0 V6 AWD</b>	145 197
AJ	<b>12611</b>
Oil press. switch/Int. pres. aceite	<b>2004 -&gt;</b>
	149 203
	<b>12611</b>

**MAZDA Cont.**

<b>Xedos 6 1.6 16V</b>	<b>1994 -&gt;</b>
B6	79 107
Oil press. switch/Int. pres. aceite	<b>11610</b>
On clutch pedal/Int. pedal embrague	<b>24720</b>
Cruise control/Control veloc.	
Rev. light switch/Int. luz marcha atrás	<b>41280</b>
<b>Xedos 6 1.6 16V</b>	<b>1992-94</b>
B69	83 113
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41280</b>
<b>Xedos 6 2.0 V6</b>	<b>1992-94</b>
KF1	106 144
Stop light switch/Int. luz stop	<b>24720</b>
<b>Xedos 6 2.0 V6</b>	<b>1994 -&gt;</b>
KF1	103 140
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41280</b>
<b>Xedos 9 2.0 24V</b>	<b>1993-00</b>
KF	105 143
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>Xedos 9 2.3 24V</b>	<b>1995-00</b>
KJ -ZEM	155 211
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24851</b>
-> 01.1996	
<b>Xedos 9 2.5 24V</b>	<b>1993-00</b>
KL	123 167
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>Xedos 9 2.5 V6</b>	<b>2000 -&gt;</b>
KL	120 163
Oil press. switch/Int. pres. aceite	<b>11610</b>

**MERCEDES BENZ**

<b>100 D</b>	<b>1988-92</b>
OM 616.963	53 72
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14630</b>
Stop light switch/Int. luz stop	<b>25120</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	<b>41060</b>
<b>100 D</b>	<b>1990-96</b>
OM 616/OM 616.963	55 75
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14630</b>
Stop light switch/Int. luz stop	<b>25120</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Rev. light switch/Int. luz marcha atrás	<b>41060</b>
<b>100 D</b>	<b>1990-94</b>
OM 616	41 56
Oil press. transmitter/Transm. pres. aceite	<b>14630</b>
Stop light switch/Int. luz stop	<b>25120</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	<b>41060</b>
<b>100 D</b>	<b>1990-96</b>
OM 616.963	55 75
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14630</b>
Stop light switch/Int. luz stop	<b>25120</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Rev. light switch/Int. luz marcha atrás	<b>41060</b>
<b>190 2.0</b>	<b>1986-90</b>
M 102.924	75 102
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Without/Sin cat.	
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 2.0</b>	<b>1984-90</b>
M 102.924	77 105
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Stop light switch/Int. luz stop	<b>25030</b>
-> 01.1987	
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Without/Sin cat.	
Fan switch/Termocontacto ventilador	<b>36250</b>
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 D 2.0</b>	<b>1983-89</b>
OM 601.911	53 72
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Stop light switch/Int. luz stop	<b>25030</b>
-> 01.1987	
Temp. sending unit/Termo-Resistencia	<b>32200</b>
Oil temp./Temp. aceite	
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Fan switch/Termocontacto ventilador	<b>38140</b>
2 fans or speeds/Ventil. o veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 D 2.0</b>	<b>1989-93</b>
OM 601.911	55 75
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32200</b>
Oil temp./Temp. aceite	
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Fan switch/Termocontacto ventilador	<b>38140</b>
2 fans or speeds/Ventil. o veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>

**MERCEDES BENZ Cont.**

<b>190 D 2.5</b>	<b>1985-93</b>
OM 602.911	66 90
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32330</b>
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Fan switch/Termocontacto ventilador	<b>38140</b>
2 fans or speeds/Ventil. o veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 D 2.5</b>	<b>1989-93</b>
OM 602.911	69 94
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32330</b>
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Fan switch/Termocontacto ventilador	<b>38140</b>
2 fans or speeds/Ventil. o veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 1.8</b>	<b>1990-93</b>
M 102.910	80 109
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Thermistor-Thermocont./Doble función	<b>34310</b>
Climat	
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Climat	
Temp. s. warning lamp/Termocont. temp.	<b>35880</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>36250</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.0</b>	<b>1985-93</b>
M 102.962	87 118
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Climat	
Thermistor-Thermocont./Doble función	<b>34310</b>
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Climat	
Temp. s. warning lamp/Termocont. temp.	<b>35880</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>36250</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.0</b>	<b>1982-93</b>
M 102.961/M 102.962	90 122
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
M 102.962	
Temp. sending unit/Termo-Resistencia	<b>32250</b>
Fan switch/Termocontacto ventilador	<b>38120</b>
2 fans or speeds/Ventil. o veloc.	
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.0</b>	<b>1982-93</b>
	93 126
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>25030</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Climat	
Thermistor-Thermocont./Doble función	<b>34310</b>
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Climat	
Temp. s. warning lamp/Termocont. temp.	<b>35880</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>36250</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.3</b>	<b>1986-91</b>
M 102.985	97 132
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24470</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Climat	
Thermistor-Thermocont./Doble función	<b>34310</b>
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Climat	
Temp. s. warning lamp/Termocont. temp.	<b>35880</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>36250</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.3</b>	<b>1986-93</b>
M 102.985	100 136
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24470</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Climat	
Thermistor-Thermocont./Doble función	<b>34310</b>
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Climat	
Temp. s. warning lamp/Termocont. temp.	<b>35880</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>36250</b>
Without/Sin A.A.	
Fan switch/Termocontacto ventilador	<b>38120</b>
Climat	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.5-16</b>	<b>1989-93</b>
M 102.991	143 194
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32250</b>
Fan switch/Termocontacto ventilador	<b>38120</b>
2 fans or speeds/Ventil. o veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>190 E 2.5-16</b>	<b>1988-93</b>
M 102.990	150 204
Oil press. switch/Int. pres. aceite	<b>10250</b>
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32250</b>
Fan switch/Termocontacto ventilador	<b>38120</b>
2 fans or speeds/Ventil. o veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40740</b>





**MERCEDES BENZ Cont.**

<b>260 E Sedan</b>	1985-92
M 103.940	118 160
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32250
Fan switch/Termocontacto ventilador	38120
Rev. light switch/Int. luz marcha atrás	40740
<b>260 E Sedan</b>	1985-89
M 103.940	122 166
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32250
Fan switch/Termocontacto ventilador	38120
Rev. light switch/Int. luz marcha atrás	40740
<b>260 SE</b>	1985-91
M 103.941	118 160
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32250
Temp. s. warning lamp/Termocont. temp.	35770
Rev. light switch/Int. luz marcha atrás	40740
<b>260 SE</b>	1985-91
M 103.941	122 166
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32250
Rev. light switch/Int. luz marcha atrás	40740
<b>260 TE FGST Kombi</b>	1989-92
M 103.940	118 160
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32250
Rev. light switch/Int. luz marcha atrás	40740
<b>260 TE FGST Kombi</b>	1985-89
M 103.940	122 166
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32250
Rev. light switch/Int. luz marcha atrás	40740
<b>280 E Sedan</b>	1992-93
M 104.942	145 197
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>280 GE</b>	1984-89
M 110.994	110 150
Oil press. switch/Int. pres. aceite	10250
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Temp. s. warning lamp/Termocont. temp.	35770
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>280 GE</b>	1979-89
M 110.994	115 156
Oil press. switch/Int. pres. aceite	10250
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Temp. s. warning lamp/Termocont. temp.	35770
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>280 TE Kombi</b>	1992-93
M 104.942	145 197
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>290 GD/G 290 D</b>	1992 ->
OM 602.942	70 95
Oil press. switch/Int. pres. aceite	10200
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 CE Coupe</b>	1987-89
M 103.983	138 188
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 CE Coupe</b>	1987-93
M 103.983	132 180
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 CE-24, Cabrio, Coupe</b>	1989-93
M 104.980	162 220
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Fan switch/Termocontacto ventilador	38120
Rev. light switch/Int. luz marcha atrás	40740

**MERCEDES BENZ Cont.**

<b>300 D 4-matic Sedan</b>	1986-92
OM 603.913	80 109
Temp. sending unit/Termo-Resistencia	32220
<b>300 D 4-matic Sedan</b>	1989-93
OM 603.913	83 113
Temp. sending unit/Termo-Resistencia	32220
<b>300 D, Sedan, T Kombi</b>	1984-89
OM 603.912	80 109
Temp. sending unit/Termo-Resistencia	32220
<b>300 D, Sedan, T Kombi</b>	1989-93
OM 603.912	83 113
Temp. sending unit/Termo-Resistencia	32220
<b>300 D, Sedan, T Kombi</b>	1986-93
OM 603.912	80 109
Temp. sending unit/Termo-Resistencia	32220
<b>300 D, Sedan, T Kombi</b>	1989-93
OM 603.912	81 110
Temp. sending unit/Termo-Resistencia	32220
<b>300 E 4-matic Sedan</b>	1986-93
M 103.985	132 180
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 E 4-matic Sedan</b>	1986-92
M 103.983	138 188
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 E Sedan</b>	1985-92
M 103.983	132 180
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 E Sedan</b>	1985-92
M 103.983	138 188
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 E-24 Sedan</b>	1988-92
M 104.980	162 220
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 GD</b>	1979-91
OM 617.931	65 88
Oil press. switch/Int. pres. aceite	10250
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 GD, Cabrio</b>	1989 ->
OM 603.931	83 113
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 GE</b>	1990 ->
M 103.987	128 174
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 GE, Cabrio</b>	1990 ->
M 103.987	125 170
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 GE, Cabrio</b>	1989-97
M 103.987	125 170
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 SE 2.8</b>	1993-98
M 104.944	145 197
Temp. sending unit/Termo-Resistencia	32220
Rev. light switch/Int. luz marcha atrás	40750
<b>300 SE,SEL</b>	1986-91
M 103.981	132 180
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	35770
<b>300 SE,SEL</b>	1985-89
M 103.981	138 188
Temp. s. warning lamp/Termocont. temp.	35770

**MERCEDES BENZ Cont.**

<b>300 SE,SEL/S320</b>	1991-98
M 104.990/M 104.994	170 231
Oil press. transmitter/Transm. pres. aceite	14730
Temp. sending unit/Termo-Resistencia	32220
<b>300 T Turbo-D Kombi</b>	1986-89
OM 603.960/OM 603.963	105 143
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38370
<b>300 T Turbo-D Kombi, 4-matic</b>	1989-93
OM 603.960	108 147
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38370
<b>300 TE 4-matic Kombi</b>	1986-93
M 103.985	132 180
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 TE 4-matic Kombi</b>	1986-89
M 103.983	138 188
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
Rev. light switch/Int. luz marcha atrás	40740
<b>300 TE Kombi</b>	1986-92
M 103.983	132 180
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 TE Kombi</b>	1986-89
M 103.983	138 188
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
Rev. light switch/Int. luz marcha atrás	40740
<b>300 TE-24 Kombi</b>	1989-92
M 104.980	162 220
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>300 Turbo-D 4-matic</b>	1988-93
OM 603.963	108 147
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38370
<b>300 Turbo-D 4-matic Kombi</b>	1986-89
OM 603.963	105 143
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38370
<b>300 Turbo-D Sedan</b>	1988-93
OM 603.960	108 147
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38370
<b>319 CDI 4x4</b>	2009 ->
Temp. sending unit/Termo-Resistencia	140 190
	32706
<b>320 CE Coupe</b>	1992-93
M 104.992	162 220
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>320 E Sedan</b>	1992-93
M 104.992	162 220
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>320 GE Cabrio</b>	1994-97
M 104.996	155 211
Oil press. switch/Int. pres. aceite	N° 002813 -> 11200
Oil press. transmitter/Transm. pres. aceite	14730
Temp. sending unit/Termo-Resistencia	32220
<b>320 TE Kombi</b>	1992-93
M 104.992	162 220
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>350 G Turbo D, Cabrio</b>	1991 ->
OM 603.972	100 136
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. s. warning lamp/Termocont. temp.	35770

**MERCEDES BENZ Cont.**

<b>400 E 4.2 Sedan</b>	1992-93
M 119.975	205 279
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>400 SE,SEL/S420</b>	1991-98
M 119.971	210 286
Oil press. transmitter/Transm. pres. aceite	14730
Temp. sending unit/Termo-Resistencia	32220
<b>420 SE,SEL</b>	1985-91
M 116.965	150 204
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
<b>420 SE,SEL</b>	1985-91
M 116.965	165 224
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
<b>420 SEC Coupe</b>	1985-91
M 116.965	150 204
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>420 SEC Coupe</b>	1985-91
M 116.965	165 224
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>500 E AMG 6.0 Sedan</b>	1992-93
	275 374
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>500 E Sedan</b>	1991-93
M 119.974	240 326
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>500 SE,SEL</b>	1985-91
M 117.965	164 223
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
<b>500 SE,SEL</b>	1985-91
M 117.965	180 245
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
<b>500 SE,SEL</b>	1987-91
M 117.965	185 252
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
<b>500 SE,SEL</b>	1987-91
M 117.965	195 265
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
<b>500 SE,SEL</b>	1991-98
M 119.970	240 326
Oil press. transmitter/Transm. pres. aceite	14730
Temp. sending unit/Termo-Resistencia	32220
<b>500 SE,SEL Kat</b>	1989-91
M 117.965	185 252
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24470
Temp. sending unit/Termo-Resistencia	32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. 38130
<b>500 SEC Coupe</b>	1985-91
M 117.965	164 223
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740
<b>500 SEC Coupe</b>	1985-91
M 117.965	180 245
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	25030
Temp. sending unit/Termo-Resistencia	32220
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat. 35760
Fan switch/Termocontacto ventilador	36250
Rev. light switch/Int. luz marcha atrás	40740



**MERCEDES BENZ Cont.**

<b>500 SEC Coupe</b>	<b>1987-91</b>
M 117.965	185 252
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24470</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>500 SEC Coupe</b>	<b>1985-91</b>
M 117.965	195 265
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>25030</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>500 SEC Kat Coupe</b>	<b>1989-91</b>
M 117.965	185 252
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>25030</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>560 SE,SEL</b>	<b>1985-91</b>
M 117.968	178 242
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24470</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Fan switch/Termocontacto ventilador	<b>38130</b>
2 fans or speeds/Ventil. o veloc.	
<b>560 SE,SEL</b>	<b>1987-91</b>
M 117.968	205 279
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24470</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
<b>560 SE,SEL</b>	<b>1985-91</b>
M 117.968	220 300
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>24470</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
<b>560 SEC Coupe</b>	<b>1985-91</b>
M 117.968	178 242
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>25030</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>560 SEC Coupe</b>	<b>1985-91</b>
M 117.968	205 279
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>25030</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>560 SEC Coupe</b>	<b>1985-89</b>
M 117.968	220 300
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Stop light switch/Int. luz stop	<b>25030</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Fan switch/Termocontacto ventilador	<b>36250</b>
Rev. light switch/Int. luz marcha atrás	<b>40740</b>
<b>600 SE,SEL</b>	<b>1991-92</b>
M 120.982/M 120.980	300 408
Oil press. transmitter/Transm. pres. aceite	<b>14730</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
<b>A 140</b>	<b>1997-04</b>
M 166.940	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 140</b>	<b>2001-04</b>
M 166.960	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 150</b>	<b>2004 -&gt;</b>
M 266.920	70 95
Oil press. switch/Int. pres. aceite	<b>12841</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 160</b>	<b>1997-04</b>
M 166.960	75 102
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 160</b>	<b>2009 -&gt;</b>
M 266.920	70 95
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 160 CDI</b>	<b>1998-01</b>
OM 668.941	44 60
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 160 CDI</b>	<b>2001-04</b>
OM 668.940	55 75
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 160 CDI</b>	<b>2004 -&gt;</b>
OM 640.942	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 170</b>	<b>2004 -&gt;</b>
M 266.940	85 116
Oil press. switch/Int. pres. aceite	<b>12841</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>

**MERCEDES BENZ Cont.**

<b>A 170 CDI</b>	<b>1998-01</b>
OM 668.940	66 90
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 170 CDI</b>	<b>2001-04</b>
OM 668.942	70 95
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 180</b>	<b>2009 -&gt;</b>
M 266.940	85 116
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 180 CDI</b>	<b>2004 -&gt;</b>
OM 640.940	80 109
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>A 190</b>	<b>1999-04</b>
M 166.990	92 125
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 200</b>	<b>2004 -&gt;</b>
M 266.960	100 136
Oil press. switch/Int. pres. aceite	<b>12841</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>A 200 CDI</b>	<b>2004 -&gt;</b>
OM 640.941	103 140
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>A 200 Turbo</b>	<b>2005 -&gt;</b>
M 266.980	142 193
Oil press. switch/Int. pres. aceite	<b>12840</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>A 210</b>	<b>2002-04</b>
M 166.995	103 140
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>B 150</b>	<b>2005 -&gt;</b>
M 266.920	70 95
Oil press. switch/Int. pres. aceite	<b>12841</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>B 160</b>	<b>2009 -&gt;</b>
M 266.920	70 95
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>B 170</b>	<b>2005 -&gt;</b>
M 266.940	85 116
Oil press. switch/Int. pres. aceite	<b>12841</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>B 180</b>	<b>2009 -&gt;</b>
M 266.940	85 116
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>B 200</b>	<b>2005 -&gt;</b>
M 266.960	100 136
Oil press. switch/Int. pres. aceite	<b>12841</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>40755</b>
<b>B 200 Turbo</b>	<b>2005 -&gt;</b>
M 266.980	142 193
Oil press. switch/Int. pres. aceite	<b>12840</b>
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>C 160 Kompressor Coupe</b>	<b>2002 -&gt;</b>
M 271.921	90 122
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>C 180</b>	<b>1994-00</b>
M 111.921	89 121
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32580</b>
Rev. light switch/Int. luz marcha atrás	<b>40750</b>
<b>C 180 CDI</b>	<b>2011 -&gt;</b>
OM 651.913	88 120
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>C 180 CGI</b>	<b>2007 -&gt;</b>
M 271.820	115 156
Stop light switch/Int. luz stop	Hall
Temp. sending unit/Termo-Resistencia	<b>24999</b>
<b>C 180 Kompressor, Coupe, T</b>	<b>2002 -&gt;</b>
M 271.946	105 143
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>C 180 Kompressor, T-Model</b>	<b>2007 -&gt;</b>
M 271.952	115 156
Stop light switch/Int. luz stop	Hall
<b>C 180 Kompressor, T-Model</b>	<b>2008 -&gt;</b>
M 271.910	115 156
Stop light switch/Int. luz stop	Hall
<b>C 180 T Kombi</b>	<b>2000-01</b>
M 111.952	95 129
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32580</b>
Rev. light switch/Int. luz marcha atrás	<b>40750</b>
<b>C 180, Coupe, T</b>	<b>2000-02</b>
M 111.951	95 129
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>C 180, C180 T</b>	<b>1993-00</b>
M 111.921/M 111.920	90 122
Stop light switch/Int. luz stop	<b>24590</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32580</b>
Rev. light switch/Int. luz marcha atrás	<b>40750</b>

**MERCEDES BENZ Cont.**

<b>C 200 CDI</b>		2011 ->	
OM 651.913		100 136	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 200 CDI, Coupe, T</b>		2003 ->	
OM 646.962		90 122	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 200 CDI, T</b>		2000 ->	
OM 611.962		85 116	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 200 CDI, T</b>		2001 ->	
OM 646.962		75 102	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 200 CDI, T CDI Kombi</b>		1997-00	
OM 611.960		92 125	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>C 200 CDI, T CDI Kombi</b>		1998-00	
OM 611.960		75 102	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>C 200 CDI, T-Model</b>		2007 ->	
OM 646.811		100 136	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 200 CDI, C 200 T CDI Kombi</b>		1997-00	
OM 611.960		92 125	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>C 200 CDI, C 200 T CDI Kombi</b>		1998-00	
OM 611.960		75 102	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>C 200 CGI</b>		2007 ->	
M 271.820		135 184	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 200 CGI Kompressor, Coupe, T</b>		2003 ->	
M 271.942		125 170	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 200 D</b>		1993-00	
OM 601.913		55 75	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32510</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 200 Kompressor</b>		1995-00	
M 111.944		132 180	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 200 Kompressor, Coupe, T</b>		2000-02	
M 111.955		120 163	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 200 Kompressor, Coupe, T</b>		2002 ->	
M 271.940		120 163	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 200 Kompressor, T Kombi</b>		1996-00	
M 111.944		141 192	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 200 Kompressor, T-Model</b>		2007 ->	
M 271.950		135 184	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>C 200 T Kompressor Kombi</b>		2000-01	
M 111.956		120 163	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 200, T Kombi</b>		1994-01	
M 111.945/M 111.941		100 136	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 220</b>		1993-00	
M 111.961		110 150	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 220 CDI</b>		2008 ->	
OM 651.911		125 170	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 220 CDI T-Model</b>		2006 ->	
		100 136	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 220 CDI T-Model</b>		2009 ->	
OM 651.911		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 220 CDI, Coupe, T</b>		2000 ->	
OM 611.962		105 143	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 220 CDI, Coupe, T Kombi</b>		2004 ->	
OM 646.963		110 150	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	

**MERCEDES BENZ Cont.**

<b>C 220 CDI, T-Model</b>		2007 ->	
OM 646.811		125 170	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 220 CDI, T-Model</b>		2008 ->	
OM 651.911		125 170	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>C 220 D</b>		1993-00	
OM 604.910		70 95	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	09.1995 ->	<b>32330</b>	
Temp. sending unit/Termo-Resistencia	-> 09.1995	<b>32510</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 220 D, T D Kombi</b>		1996-00	
OM 604.910		55 75	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32330</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 220 T D Kombi</b>		1996-98	
OM 604.910		70 95	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32330</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 230</b>		2007 ->	
M 272.921		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 230 4-matic</b>		2007 ->	
M 272.911		150 204	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 230 Kompressor Coupe</b>		2001-02	
M 111.981		145 197	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 230 Kompressor, Coupe, T</b>		2002 ->	
M 271.948		141 192	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 230 Kompressor, T Kombi</b>		1995-00	
M 111.975		142 193	
Stop light switch/Int. luz stop		<b>24590</b>	
Stop light switch/Int. luz stop		<b>24595</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 230, Coupe, T Kombi</b>		2005 ->	
M 272.920		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 230, T-Model</b>		2007 ->	
M 272.921		150 204	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>C 230, C 230 T Kombi</b>		1996-98	
M 111.974		110 150	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 240 4-matic, T</b>		2002 ->	
M 112.916		125 170	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>C 240 T Kombi</b>		2000-01	
M 112.915		125 170	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 240, C 240 T</b>		2000 ->	
M 112.912		125 170	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
<b>C 240, C 240 T Kombi</b>		1997-00	
M 112.910		125 170	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>C 250</b>		2011 ->	
		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 250 CDI</b>		2008 ->	
OM 651.911		150 204	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 250 CDI 4-matic</b>		2011 ->	
		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 250 CGI</b>		2009 ->	
M 271.860		150 204	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>C 250 D</b>		1993-00	
OM 605.910		83 113	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	09.1995 ->	<b>32330</b>	
Temp. sending unit/Termo-Resistencia	-> 09.1995	<b>32510</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	

**MERCEDES BENZ Cont.**

<b>C 250 Turbo-D, T Kombi</b>	1995-01
OM 605.960	110 150
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32330
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>C 270 CDI, T</b>	2000 ->
OM 612.962	125 170
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>C 280</b>	1993-00
M 104.941	142 193
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>C 280</b>	2007 ->
M 272.947	170 231
Temp. sending unit/Termo-Resistencia	32706
<b>C 280 4-matic</b>	2007 ->
M 272.948	170 231
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 280 4-matic, T</b>	2005 ->
M 272.941	170 231
Temp. sending unit/Termo-Resistencia	32710
<b>C 280, T-Model</b>	2007 ->
M 272.947	170 231
Stop light switch/Int. luz stop	24999
<b>C 280, C 280 T</b>	1997-01
M 112.920	145 197
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>C 280, C 280 T</b>	2005 ->
M 272.940	170 231
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>C 30 CDI AMG, Coupe, T</b>	2003 ->
OM 612.990	170 231
Temp. sending unit/Termo-Resistencia	32710
<b>C 300</b>	2009 ->
M 272.947	170 231
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 300 4-matic</b>	2007 ->
M 272.948	170 231
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 32 AMG Kompressor, T</b>	2001 ->
M 112.961	260 354
Temp. sending unit/Termo-Resistencia	32710
<b>C 320 4-matic, T</b>	2002 ->
M 112.953	160 218
Temp. sending unit/Termo-Resistencia	32710
<b>C 320 CDI 4-matic, T</b>	2007 ->
OM 642.961	165 224
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 320 CDI, T</b>	2005 ->
OM 642.910	165 224
Temp. sending unit/Termo-Resistencia	32706
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>C 320 CDI, T-Model</b>	2007 ->
OM 642.960	165 224
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 320, Coupe, T</b>	2000 ->
M 112.946	160 218
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>C 350</b>	2011 ->
	225 306
Temp. sending unit/Termo-Resistencia	32706
<b>C 350</b>	2011 ->
	225 306
Temp. sending unit/Termo-Resistencia	32706
<b>C 350</b>	2007 ->
M 272.961	200 272
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 4-matic</b>	2011 ->
	225 306
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 4-matic</b>	2007 ->
M 272.971	200 272
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 4-matic, T</b>	2005 ->
M 272.970	200 272
Temp. sending unit/Termo-Resistencia	32706
Temp. sending unit/Termo-Resistencia	32710
<b>C 350 CDI</b>	2011 ->
	195 265
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 CDI</b>	2009 ->
OM 642.960	165 224
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 CDI</b>	2009 ->
OM 642.830	170 231
Temp. sending unit/Termo-Resistencia	32706

**MERCEDES BENZ Cont.**

<b>C 350 CDI 4-matic</b>	2009 ->
OM 642.961	165 224
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 CDI 4-matic</b>	2009 ->
OM 642.832	170 231
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 CDI 4-matic, T-Model</b>	2009 ->
OM 642.832	170 231
Stop light switch/Int. luz stop	24999
<b>C 350 CDI T-Model</b>	2009 ->
OM 642.830	170 231
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 CDI T-Model 4-matic</b>	2009 ->
OM 642.832	170 231
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 CDI, T-Model</b>	2009 ->
OM 642.830	170 231
Stop light switch/Int. luz stop	24999
<b>C 350 CGI</b>	2008 ->
M 272.982	215 292
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>C 350 T-Model</b>	2007 ->
M 272.961	200 272
Stop light switch/Int. luz stop	24999
<b>C 350, Coupe, T</b>	2005 ->
M 272.960	200 272
Temp. sending unit/Termo-Resistencia	32706
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>C 36 AMG</b>	1994-00
M 104.941 (AMG 3.6)	206 280
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>C 43 AMG, Kombi</b>	1997-00
M 113.944	225 306
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>C 55 AMG, T</b>	2004 ->
M 113.988	270 367
Temp. sending unit/Termo-Resistencia	32710
<b>C 63 AMG Coupe</b>	2011 ->
	400 544
Temp. sending unit/Termo-Resistencia	32706
<b>C 63 AMG, T-Model</b>	2008 ->
M 156.985	336 457
Stop light switch/Int. luz stop	24999
<b>CL 500 4-matic Coupe</b>	2008 ->
M 273.968	285 388
Stop light switch/Int. luz stop	24999
Temp. sending unit/Termo-Resistencia	32706
<b>CL 500 Coupe</b>	2006 ->
M 273.961	285 388
Temp. sending unit/Termo-Resistencia	32706
<b>CL 500 Coupe, 4-matic</b>	2011 ->
M 278.920	320 435
Temp. sending unit/Termo-Resistencia	32706
<b>CL 600 Coupe</b>	2006 ->
M 275.953	380 517
Temp. sending unit/Termo-Resistencia	32706
<b>CL 63 AMG Coupe</b>	2006 ->
M 156.984	386 525
Temp. sending unit/Termo-Resistencia	32706
<b>CL 65 AMG Coupe</b>	2011 ->
M 275.982	463 630
Temp. sending unit/Termo-Resistencia	32706
<b>CL 65 AMG Coupe</b>	2006 ->
M 275.982	450 612
Temp. sending unit/Termo-Resistencia	32706
<b>CLC 230</b>	2008 ->
M 272.920	150 204
Temp. sending unit/Termo-Resistencia	32706
<b>CLC 350</b>	2008 ->
M 272.960	200 272
Temp. sending unit/Termo-Resistencia	32706
<b>CLK 200 CGI, Cabrio</b>	2003 ->
M 271.942	125 170
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 200 Kompressor, Cabrio</b>	1997-00
M 111.944	141 192
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>CLK 200 Kompressor, Cabrio</b>	2000-02
M 111.956	120 163
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 200 Kompressor, Cabrio</b>	2002 ->
M 271.940	120 163
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 200 Kompressor, Cabrio</b>	2006 ->
M 271.955	135 184
Rev. light switch/Int. luz marcha atrás	41290

**MERCEDES BENZ Cont.**

<b>CLK 200, Cabrio</b>	1997-02
M 111.945/M 111.941	100 136
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>CLK 220 CDI</b>	2005 ->
OM 646.966	110 150
Temp. sending unit/Termo-Resistencia	32706
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 230 Kompressor, Cabrio</b>	1997-00
M 111.975/M 111.973	142 193
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>CLK 230 Kompressor, Cabrio</b>	2000-02
M 111.982	145 197
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 240, Cabrio</b>	2002 ->
M 112.912	125 170
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 270 CDI</b>	2002 ->
OM 612.967/OM 612.962	125 170
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 280 , Cabrio</b>	2005 ->
M 272.940	170 231
Temp. sending unit/Termo-Resistencia	32706
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 320 CDI, Cabrio</b>	2005 ->
OM 642.910	165 224
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 320, Cabrio</b>	1997-02
M 112.940	160 218
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>CLK 320, Cabrio</b>	2002 ->
M 112.955	160 218
Temp. sending unit/Termo-Resistencia	32710
<b>CLK 350, Cabrio</b>	2005 ->
M 272.960	200 272
Temp. sending unit/Termo-Resistencia	32706
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>CLK 430, Cabrio</b>	1998-02
M 113.943	205 279
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>CLK 500</b>	2006 ->
M 273.965	285 388
Temp. sending unit/Termo-Resistencia	32706
<b>CLK 500 Cabrio</b>	2006 ->
M 273.967	285 388
Temp. sending unit/Termo-Resistencia	32706
<b>CLK 500, Cabrio</b>	2002 ->
M 113.968	225 306
Temp. sending unit/Termo-Resistencia	32710
<b>CLK 55 AMG, Cabrio</b>	1999-02
M 113.981/M 113.984	255 347
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>CLK 55 AMG, Cabrio</b>	2002 ->
M 113.987	270 367
Temp. sending unit/Termo-Resistencia	32710
<b>CLK DTM AMG</b>	2004 ->
M 113.994	428 582
Temp. sending unit/Termo-Resistencia	32710
<b>CLS 280</b>	2008 ->
M 272.943	170 231
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 300</b>	2009 ->
M 272.943	170 231
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 320 CDI</b>	2005 ->
OM 642.910/OM 642.920	165 224
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 350</b>	2004 ->
M 272.964	200 272
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 350</b>	2006 ->
M 272.985	215 292
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 350 CDI</b>	2009 ->
OM 642.920	165 224
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 350 CGI</b>	2009 ->
M 272.985	215 292
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 500</b>	2004 ->
M 113.967	225 306
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 500</b>	2006 ->
M 273.960	285 388
Temp. sending unit/Termo-Resistencia	32706

**MERCEDES BENZ Cont.**

<b>CLS 55 AMG</b>	2005 ->
M 113.990	350 476
Temp. sending unit/Termo-Resistencia	32706
<b>CLS 63 AMG</b>	2006 ->
M 156.983	378 514
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CDI</b>	1998-02
OM 611.961	75 102
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 CDI</b>	1999-02
OM 611.961	85 116
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 CDI</b>	2002 ->
OM 646.951	75 102
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 CDI</b>	2002 ->
OM 646.951	90 122
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 CDI</b>	2006 ->
OM 646.820	100 136
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 CDI</b>	2009 ->
OM 651.925	100 136
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CDI T-Model</b>	2009 ->
OM 651.925	100 136
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CDI, T</b>	2006 ->
OM 646.821	100 136
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CDI, T-Model</b>	2009 ->
OM 651.925	100 136
Temp. sending unit/Termo-Resistencia	32706
Stop light switch/Int. luz stop	Hall
<b>E 200 CGI</b>	2002 ->
M 271.946	125 170
Temp. sending unit/Termo-Resistencia	32710
<b>E 200 CGI</b>	2009 ->
M 271.820/M 271.860	135 184
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CGI</b>	2010 ->
M 271.820/M 271.860	135 184
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CGI Coupe</b>	2010 ->
M 271.860	135 184
Stop light switch/Int. luz stop	Hall
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CGI T-Model</b>	2009 ->
M 271.820/M 271.860	135 184
Temp. sending unit/Termo-Resistencia	32706
<b>E 200 CGI, Cabrio, T-Model</b>	2009 ->
M 271.820/M 271.860	135 184
Stop light switch/Int. luz stop	Hall
<b>E 200 D</b>	1993-95
OM 601.912	55 75
Oil press. transmitter/Transm. pres. aceite	14730
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32510
Temp. sending unit/Termo-Resistencia	32580
Temp. s. warning lamp/Termocont. temp.	35780
Rev. light switch/Int. luz marcha atrás	40750
<b>E 200 D</b>	1996-02
OM 604.917	65 88
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32510
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
<b>E 200 Kompressor, T</b>	2002 ->
M 271.941	120 163
Temp. sending unit/Termo-Resistencia	32710
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 Kompressor, T</b>	2006 ->
M 271.956	135 184
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 Kompressor, T Kombi</b>	1997-03
M 111.947	137 186
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Fan switch/Termocontacto ventilador	38120
Rev. light switch/Int. luz marcha atrás	40750
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200 Kompressor, T Kombi</b>	2000-02
M 111.957	120 163
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Rev. light switch/Int. luz marcha atrás	40750
Rev. light switch/Int. luz marcha atrás	41290
<b>E 200, Cabrio, Coupe, T Kombi</b>	1993-98
M 111.940	100 136
Stop light switch/Int. luz stop	24590
Temp. sending unit/Termo-Resistencia	32220
Temp. sending unit/Termo-Resistencia	32580
Temp. s. warning lamp/Termocont. temp.	35780
Fan switch/Termocontacto ventilador	38120
Fan switch/Termocontacto ventilador	38120
Rev. light switch/Int. luz marcha atrás	40750

**MERCEDES BENZ Cont.**

<b>E 200, T Kombi</b>		1995-00
M 111.942		100 136
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia		32580
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
Rev. light switch/Int. luz marcha atrás		41290
<b>E 220 CDI</b>		2009 ->
OM 651.924		125 170
Temp. sending unit/Termo-Resistencia		32706
<b>E 220 CDI</b>		2010 ->
OM 651.911		125 170
Temp. sending unit/Termo-Resistencia		32706
<b>E 220 CDI Coupe</b>		2010 ->
OM 651.911		125 170
Temp. sending unit/Termo-Resistencia		32706
<b>E 220 CDI T-Model</b>		2009 ->
OM 651.924		125 170
Temp. sending unit/Termo-Resistencia		32706
<b>E 220 CDI, Cabrio, Coupe</b>		2010 ->
OM 651.911		125 170
Stop light switch/Int. luz stop	Hall	24999
<b>E 220 CDI, T</b>		2002 ->
OM 646.961		110 150
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 220 CDI, T</b>		2006 ->
OM 646.821		125 170
Rev. light switch/Int. luz marcha atrás		41290
<b>E 220 CDI, T</b>		2002 ->
OM 646.961		100 136
Rev. light switch/Int. luz marcha atrás		41290
<b>E 220 CDI, T Kombi</b>		1998-99
OM 611.961		92 125
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 220 CDI, T Kombi</b>		1999-02
OM 611.961		105 143
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 220 CDI, T-Model</b>		2009 ->
OM 651.924		125 170
Stop light switch/Int. luz stop	Hall	24999
<b>E 220 D</b>		1995-99
OM 604.912		70 95
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	09.1995 ->	32330
Temp. sending unit/Termo-Resistencia	-> 09.1995	32510
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 220 D</b>		1996-02
OM 604.912		55 75
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia		32330
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 220, Cabrio, Coupe, T Kombi</b>		1993-98
M 111.960		110 150
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Temp. s. warning lamp/Termocont. temp.		35780
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38120
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 230</b>		2007 ->
M 272.922		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 230 T-Model</b>		2007 ->
M 272.922		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 230, T Kombi</b>		1995-97
M 111.970		110 150
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Fan switch/Termocontacto ventilador		38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 240</b>		2002 ->
M 112.917/M 112.913		130 177
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 240 4-matic, T</b>		2003 ->
M 112.917		130 177
Temp. sending unit/Termo-Resistencia		32710
<b>E 240 T</b>		2003 ->
M 112.913		130 177
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 240, T Kombi</b>		1997-00
M 112.911		125 170
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
Rev. light switch/Int. luz marcha atrás		41290
<b>E 240, T Kombi</b>		2000-02
M 112.914		125 170
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
Rev. light switch/Int. luz marcha atrás		41290
<b>E 250 CDI</b>		2009 ->
OM 651.924		150 204
Temp. sending unit/Termo-Resistencia		32706

**MERCEDES BENZ Cont.**

<b>E 250 CDI</b>		2010 ->
OM 651.911		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CDI 4-matic</b>		2009 ->
OM 651.924		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CDI Coupe</b>		2009 ->
OM 651.911		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CDI T-Model</b>		2009 ->
OM 651.924		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CDI, Cabrio, Coupe</b>		2009 ->
OM 651.911		150 204
Stop light switch/Int. luz stop	Hall	24999
<b>E 250 CDI, T-Model</b>		2009 ->
OM 651.924		150 204
Stop light switch/Int. luz stop	Hall	24999
<b>E 250 CGI</b>		2009 ->
M 271.860		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CGI</b>		2009 ->
M 271.860		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CGI T-Model</b>		2009 ->
M 271.860		150 204
Temp. sending unit/Termo-Resistencia		32706
<b>E 250 CGI, Cabrio, Coupe, T-Model</b>		2009 ->
M 271.860		150 204
Stop light switch/Int. luz stop	Hall	24999
<b>E 250 D, T Kombi</b>		1993-96
OM 605.911		83 113
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	09.1995 ->	32330
Temp. sending unit/Termo-Resistencia	-> 09.1995	32510
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 250 D, T Kombi</b>		1995-99
OM 605.912		83 113
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	09.1995 ->	32330
Temp. sending unit/Termo-Resistencia	-> 09.1995	32510
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 250 TD, T Kombi</b>		1997-99
OM 605.962		110 150
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia		32330
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 250 Turbo D, Kombi</b>		1993-95
OM 602.962		93 126
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	09.1995 ->	32330
Temp. sending unit/Termo-Resistencia	-> 09.1995	32510
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 270 CDI, T</b>		2002 ->
OM 647.961		130 177
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 270 CDI, T Kombi</b>		1999-02
OM 612.961		125 170
Rev. light switch/Int. luz marcha atrás		41290
<b>E 280</b>		1996-97
M 104.945		142 193
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 280 4-matic</b>		2006 ->
M 272.943		170 231
Temp. sending unit/Termo-Resistencia		32706
<b>E 280 CDI 4-matic, T</b>		2005 ->
OM 642.921		140 190
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
<b>E 280 CDI, T</b>		2004 ->
OM 648.961		130 177
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
<b>E 280 CDI, T</b>		2005 ->
OM 642.920		140 190
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 280 largo, T kombi</b>		1993-95
M 104.942		142 193
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Temp. s. warning lamp/Termocont. temp.		35780
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 280, 4-matic, T</b>		2005 ->
M 272.943		170 231
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290

**MERCEDES BENZ Cont.**

<b>E 280, 4-matic, T Kombi</b>		1996-02
M 112.921		150 204
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
Rev. light switch/Int. luz marcha atrás		41290
<b>E 280, T Kombi</b>		1993-96
M 104.942		145 197
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Temp. s. warning lamp/Termocont. temp.		35780
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 300</b>		2011 ->
		185 252
Temp. sending unit/Termo-Resistencia		32706
<b>E 300</b>		2011 ->
		185 252
Temp. sending unit/Termo-Resistencia		32706
<b>E 300 4-matic, T Kombi</b>		1993-96
M 103.985		132 180
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 300 Bluetec</b>		2007 ->
OM 642.920		155 211
Temp. sending unit/Termo-Resistencia		32706
<b>E 300 CDI</b>		2011 ->
OM 642.850		170 231
Temp. sending unit/Termo-Resistencia		32706
<b>E 300 D</b>		1995-97
OM 606.912		100 136
Fan switch/Termocontacto ventilador	Climat	38120
<b>E 300 D, T Kombi</b>		1993-96
OM 606.910		100 136
Oil press. transmitter/Transm. pres. aceite		14730
<b>E 300 T Turbo-D 4-matic Kombi</b>		1993-96
OM 603.963		108 147
Oil press. transmitter/Transm. pres. aceite		14730
Temp. sending unit/Termo-Resistencia		32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38370
<b>E 300 T Turbo-D Kombi</b>		1993-96
OM 603.960		108 147
Oil press. transmitter/Transm. pres. aceite		14730
Temp. sending unit/Termo-Resistencia		32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38370
<b>E 300 TE-24 AMG Kombi</b>		1993-96
M 104.980		162 220
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 300 Turbo-D</b>		1993-95
OM 603.960		108 147
Oil press. transmitter/Transm. pres. aceite		14730
Temp. sending unit/Termo-Resistencia		32220
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38370
<b>E 300 Turbo-D 4-matic</b>		1993-95
OM 603.963		108 147
Oil press. transmitter/Transm. pres. aceite	Fan side/Lado vent.	14730
Temp. sending unit/Termo-Resistencia	Fan side/Lado vent.	32220
Temp. s. warning lamp/Termocont. temp.	Fan side/Lado vent.	35770
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38370
<b>E 300 Turbo-D, T Kombi</b>		1996-99
OM 606.962		130 177
Fan switch/Termocontacto ventilador	Climat	38120
<b>E 320</b>		1995-97
M 104.995		162 220
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 320 4-matic, T</b>		2003 ->
M 112.954		165 224
Temp. sending unit/Termo-Resistencia		32710
<b>E 320 4-matic, T Kombi</b>		1996-03
M 112.941		165 224
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 320 Cabrio</b>		1993-98
M 104.992/M 104.995		162 220
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Temp. s. warning lamp/Termocont. temp.		35780
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 320 CDI 4-matic</b>		2005 ->
OM 642.910		165 224
Temp. sending unit/Termo-Resistencia		32706
<b>E 320 CDI 4-matic, T</b>		2005 ->
OM 642.920		165 224
Temp. sending unit/Termo-Resistencia		32706
<b>E 320 CDI, T</b>		2002 ->
OM 648.961		150 204
Temp. sending unit/Termo-Resistencia		32710

**MERCEDES BENZ Cont.**

<b>E 320 CDI, T</b>		2005 ->
OM 642.920		165 224
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
<b>E 320, Coupe, T Kombi</b>		1993-97
M 104.992		162 220
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Temp. s. warning lamp/Termocont. temp.		35780
Fan switch/Termocontacto ventilador	Climat	38120
Rev. light switch/Int. luz marcha atrás		40750
<b>E 320, T</b>		2002 ->
M 112.949		165 224
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
<b>E 320, T Kombi</b>		1996-03
M 112.941		165 224
Stop light switch/Int. luz stop		24590
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	32220
Temp. sending unit/Termo-Resistencia	Climat	32580
Rev. light switch/Int. luz marcha atrás		40750
<b>E 350</b>		2009 ->
M 272.980		200 272
Temp. sending unit/Termo-Resistencia		32706
<b>E 350</b>		2011 ->
		225 306
Temp. sending unit/Termo-Resistencia		32706
<b>E 350</b>		2011 ->
		225 306
Temp. sending unit/Termo-Resistencia		32706
<b>E 350</b>		2005 ->
M 272.964		200 272
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 350 4-matic, T</b>		2005 ->
M 272.964/M 272.972		200 272
Temp. sending unit/Termo-Resistencia		32706
Temp. sending unit/Termo-Resistencia		32710
Rev. light switch/Int. luz marcha atrás		41290
<b>E 350 4-matic, T-Model</b>		2009 ->
M 272.977		200 272
Stop light switch/Int. luz stop	Hall	24999
<b>E 350 BlueTEC T-Model</b>		2009 ->
OM 642.850		155 211
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 BlueTEC, T-Model</b>		2009 ->
OM 642.850		155 211
Stop light switch/Int. luz stop	Hall	24999
<b>E 350 CDI</b>		2011 ->
OM 642.852		195 265
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI</b>		2011 ->
		195 265
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI</b>		2009 ->
OM 642.850		170 231
Stop light switch/Int. luz stop	Hall	24999
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI</b>		2010 ->
OM 642.836		170 231
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI 4-matic</b>		2011 ->
OM 642.858		195 265
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI 4-matic</b>		2009 ->
OM 642.858/OM 642.856		170 231
Stop light switch/Int. luz stop	Hall	24999
<b>E 350 CDI 4-matic T-Model</b>		2009 ->
OM 642.856		170 231
Stop light switch/Int. luz stop	Hall	24999
<b>E 350 CDI Coupe</b>		2009 ->
OM 642.836		170 231
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI T-Model</b>		2009 ->
OM 642.850/OM 642.852		170 231
Stop light switch/Int. luz stop	Hall	24999
<b>E 350 CDI Coupe</b>		2009 ->
OM 642.836		170 231
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI T-Model 4-matic</b>		2009 ->
OM 642.856		170 231
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CDI, Cabrio, Coupe</b>		2009 ->
OM 642.836		170 231
Stop light switch/Int. luz stop	Hall	24999
<b>E 350 CGI</b>		2007 ->
M 272.985		215 292
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CGI</b>		2009 ->
M 272.983		215 292
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CGI</b>		2009 ->
M 272.982/M 272.984		215 292
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CGI</b>		2010 ->
M 272.982/M 272.984		215 292
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CGI T-Model</b>		2006 ->
M 272.985		215 292
Temp. sending unit/Termo-Resistencia		32706
<b>E 350 CGI T-Model</b>		2009 ->
M 272.983		215 292
Temp. sending unit/Termo-Resistencia		32706

**MERCEDES BENZ Cont.**

<b>E 350 CGI, Cabrio, Coupe</b>		2009 ->	
M 272.982/M 272.984		215 292	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>E 350 CGI, T-Model</b>		2009 ->	
M 272.983		215 292	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>E 350 T-Model 4-matic</b>		2009 ->	
M 272.977		200 272	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 36 AMG Cabrio, Coupe, T Kombi</b>		1994-98	
M 104.992 (AMG 3.6)		200 272	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35780</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38120</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 36 AMG Coupe</b>		1993-95	
M 104.992 (AMG 3.6)		195 265	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 400 CDI</b>		2003 ->	
OM 628.961		191 260	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>E 420</b>		1993-95	
M 119.975		205 279	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35780</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38120</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 420 CDI</b>		2006 ->	
OM 629.910		231 314	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 420, T Kombi</b>		1996-97	
M 119.985		205 279	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 430, T Kombi, 4-matic</b>		1997-03	
M 113.940		205 279	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 50 AMG</b>		1996-97	
M 119.985 (AMG 5.0)		255 347	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 500</b>		1993-95	
M 119.974		235 320	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35780</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38120</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 500</b>		2006 ->	
M 273.960		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500</b>		2009 ->	
M 273.971		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500</b>		2010 ->	
M 273.966		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500 4-matic</b>		2006 ->	
M 273.962		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500 4-matic</b>		2009 ->	
M 273.970		285 388	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500 4-matic, T</b>		2003 ->	
M 113.969		225 306	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>E 500 Coupe</b>		2009 ->	
M 273.966		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500 T-model</b>		2006 ->	
M 273.960		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500 T-Model</b>		2009 ->	
M 273.971		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500 T-model 4-matic</b>		2006 ->	
M 273.962		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 500, Cabrio, Coupe</b>		2009 ->	
M 273.966		285 388	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>E 500, T</b>		2002 ->	
M 113.967		225 306	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	

**MERCEDES BENZ Cont.**

<b>E 500, T-Model</b>		2009 ->	
M 273.971		285 388	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>E 55 AMG Kompressor, T</b>		2002 ->	
M 113.990		350 476	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
<b>E 55 AMG, T Kombi, 4-matic</b>		1997-03	
M 113.980		260 354	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 60 AMG</b>		1994-95	
M 119.974 AMG		280 381	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia	-> N° 1811391, 082686	<b>32220</b>	
Temp. sending unit/Termo-Resistencia	Climat	<b>32580</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35780</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38120</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
<b>E 63 AMG</b>		2011 ->	
M 157.980/M 157.981		386 525	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 63 AMG</b>		2009 ->	
M 156.985		386 525	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>E 63 AMG, T-Model</b>		2009 ->	
M 156.985		386 525	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>G 250 GD</b>		1987-92	
OM 602.930		62 84	
Oil press. switch/Int. pres. aceite		<b>10200</b>	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>25030</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. sending unit/Termo-Resistencia		<b>32330</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35760</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38140</b>	
Rev. light switch/Int. luz marcha atrás		<b>40740</b>	
<b>G 250 GD</b>		1988-92	
OM 602.930		68 92	
Oil press. switch/Int. pres. aceite		<b>10200</b>	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>25030</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. sending unit/Termo-Resistencia		<b>32330</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35760</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38140</b>	
Rev. light switch/Int. luz marcha atrás		<b>40740</b>	
<b>G 250 GD</b>		1990 ->	
OM 602.931		69 94	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24470</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>G 250 GD</b>		1990 ->	
OM 602.939		68 92	
Oil press. switch/Int. pres. aceite		<b>10200</b>	
Stop light switch/Int. luz stop		<b>24470</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>G 290 TD</b>		1997 ->	
OM 602.983		88 120	
Oil press. switch/Int. pres. aceite		<b>10200</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>G 300 TD, Cabrio</b>		1996 ->	
OM 606.964		130 177	
Oil press. switch/Int. pres. aceite		<b>11200</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35770</b>	
<b>G 320</b>		1994-97	
M 104.996		155 211	
Oil press. switch/Int. pres. aceite	N° 002813 ->	<b>11200</b>	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>G 320 CDI, Cabrio</b>		2006 ->	
OM 642.970		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>G 320 CDI, Cabrio</b>		2006 ->	
OM 642.970		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>G 36 AMG</b>		1995 ->	
		200 272	
Oil press. switch/Int. pres. aceite	N° 002813 ->	<b>11200</b>	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>G 500 E</b>		1993 ->	
M 117.965		177 241	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24470</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>GL 320 CDI</b>		2006-09	
OM 642.940		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>GL 350 CDI</b>		2009 ->	
OM 642.940		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>GL 350 CDI BlueTEC</b>		2009 ->	
OM 642.820		155 211	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>GL 420 CDI</b>		2006-09	
OM 629.912		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>GL 450</b>		2006 ->	
M 273.923		250 340	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	

**MERCEDES BENZ Cont.**

GL 450 CDI		2009 ->	
OM 629.912		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GL 500		2006 ->	
M 273.963		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 200 CDI		2010 ->	
OM 651.913		105 143	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 220 CDI		2008 ->	
OM 651.916		125 170	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 220 CDI		2008 ->	
OM 651.916		120 163	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 220 CDI 4-matic		2008 ->	
OM 651.912		125 170	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 220 CDI 4-matic		2008 ->	
OM 651.912		120 163	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 250 CDI 4-matic		2009 ->	
OM 651.912		150 204	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 280 4-matic		2008-09	
M 272.948		170 231	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 300 4-matic		2009 ->	
M 272.948		170 231	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 320 CDI 4-matic		2008 ->	
OM 642.961		165 224	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 350 4-matic		2008 ->	
M 272.971		200 272	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK 350 CDI 4-matic		2009 ->	
OM 642.832		165 224	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
GLK C 320 CDI 4-matic		2008 ->	
OM 642.961		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 230		1998-05	
M 111.977		110 150	
Fan switch/Termocontacto ventilador	Climat	<b>38120</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
ML 270 CDI		1999-05	
OM 612.963		120 163	
Rev. light switch/Int. luz marcha atrás		<b>41290</b>	
ML 280 CDI 4-matic		2005-09	
OM 642.940		140 190	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 300 CDI 4-matic		2009 ->	
OM 642.940		140 190	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 300 CDI 4-matic		2010 ->	
		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 320 CDI 4-matic		2005-09	
OM 642.940		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 350 4-matic		2005 ->	
M 272.962/M 272.967		200 272	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 350 CDI 4-matic		2009 ->	
OM 642.940		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 350 CDI 4-matic		2009 ->	
OM 642.820		155 211	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 350 CDI 4-matic		2010 ->	
		170 231	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 420 CDI 4-matic		2006-09	
OM 629.912		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 450 CDI 4-matic		2009 ->	
OM 629.912		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 500 4-matic		2005 ->	
M 113.964		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 500 4-matic		2007 ->	
M 273.963		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
ML 63 AMG 4-matic		2006 ->	
M 156.980		375 510	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 280		2007 ->	
M 272.945		170 231	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 280 4-matic		2007 ->	
M 272.945		170 231	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 280 CDI, 4-matic		2006 ->	
OM 642.950		140 190	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	

**MERCEDES BENZ Cont.**

R 300		2009 ->	
M 272.945		170 231	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 300 CDI		2009 ->	
OM 642.950		140 190	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 300 CDI 4-matic		2009 ->	
OM 642.950		140 190	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 320 CDI 4-matic		2006 ->	
OM 642.950		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 350		2007 ->	
M 272.967		200 272	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 350 4-matic		2006 ->	
M 272.967		200 272	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 350 BlueTEC 4-matic		2009 ->	
OM 642.950		155 211	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 350 CDI 4-matic		2010 ->	
OM 642.872		195 265	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 350 CDI 4-matic		2009 ->	
OM 642.950		165 224	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 500 4-matic		2006 ->	
M 113.971		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 500 4-matic		2007 ->	
M 273.963		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
R 63 AMG		2006 ->	
M 156.980		375 510	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 250 CDI		2011 ->	
		150 204	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 280		1993-98	
M 104.944		142 193	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35780</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38120</b>	
Rev. light switch/Int. luz marcha atrás		<b>40750</b>	
S 300 Turbo-D		1996-98	
OM 606.961		130 177	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
S 320 CDI		1999-02	
OM 613.960		145 197	
Temp. sending unit/Termo-Resistencia		<b>32710</b>	
S 320 CDI, 4-matic		2005 ->	
OM 642.930		173 235	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350		2011 ->	
		190 258	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350		2011 ->	
		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350		2005 ->	
M 272.965		200 272	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350 4-matic		2011 ->	
OM 642.868		190 258	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350 4-matic		2011 ->	
		225 306	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350 4-matic		2008 ->	
M 272.965		200 272	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 350 Turbo-D		1993-98	
OM 603.971		110 150	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
S 350, 4-matic		2005 ->	
M 272.965		200 272	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
S 400 Hybrid		2009 ->	
M 272.974		205 279	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 420		1993-98	
M 119.971		205 279	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
S 420 CDI		2006 ->	
OM 629.911		235 320	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 450		2005 ->	
M 273.923		250 340	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 450 4-matic		2005 ->	
M 273.922		250 340	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
S 500		1993-98	
M 119.970/M 119.980		235 320	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
S 500		2011 ->	
		320 435	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	



**MERCEDES BENZ Cont.**

<b>S 500</b>		2005 ->	
M 273.961		285 388	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 500 4-matic</b>		2011 ->	
		320 435	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 500 4-matic</b>		2005 ->	
M 273.961		285 388	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 600</b>		1993-98	
M 120.982/M 120.980		290 394	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>S 600</b>		2005 ->	
M 275.953		380 517	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 63 AMG</b>		2011 ->	
		400 544	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 63 AMG</b>		2006 ->	
M 156.984		386 525	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 65 AMG</b>		2011 ->	
		463 630	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>S 65 AMG</b>		2005 ->	
M 275.982		450 612	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>SCL 500 Coupe</b>		2006 ->	
M 273.961		285 388	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>SCL 600 Coupe</b>		2006 ->	
M 275.953		380 517	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>SCL 63 AMG Coupe</b>		2006 ->	
M 156.984		386 525	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>SCL 65 AMG Coupe</b>		2006 ->	
M 275.982		450 612	
Stop light switch/Int. luz stop	Hall	<b>24999</b>	
<b>SEC/CL 420 Coupe</b>		1994-99	
M 119.971/M 119.981		205 279	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>SEC/CL 500</b>		1992-99	
M 119.970		235 320	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>SEC/CL 600</b>		1992-99	
M 120.982/M 120.980		290 394	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>SL 280</b>		1993-01	
M 104.943		142 193	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.	<b>35760</b>	
Fan switch/Termocontacto ventilador		<b>36250</b>	
Rev. light switch/Int. luz marcha atrás		<b>40740</b>	
<b>SL 280</b>		1998-01	
M 112.923/M 112.925		150 204	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.	<b>35760</b>	
Fan switch/Termocontacto ventilador		<b>36250</b>	
Rev. light switch/Int. luz marcha atrás		<b>40740</b>	
<b>SL 280</b>		2008 ->	
M 272.949		170 231	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>SL 300</b>		2009 ->	
M 272.949		170 231	
Temp. sending unit/Termo-Resistencia		<b>32706</b>	
<b>SL 300 SL</b>		1985-89	
M 103.982		132 180	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24470</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>SL 300 SL</b>		1985-89	
M 103.982		138 188	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24470</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
<b>SL 300 SL</b>		1989-93	
M 103.984		140 190	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.	<b>35760</b>	
Fan switch/Termocontacto ventilador		<b>36250</b>	
Rev. light switch/Int. luz marcha atrás		<b>40740</b>	
<b>SL 300 SL-24</b>		1989-93	
M 104.981		170 231	
Oil press. transmitter/Transm. pres. aceite		<b>14730</b>	
Stop light switch/Int. luz stop		<b>24590</b>	
Temp. sending unit/Termo-Resistencia		<b>32220</b>	
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.	<b>35760</b>	
Fan switch/Termocontacto ventilador		<b>36250</b>	
Rev. light switch/Int. luz marcha atrás		<b>40740</b>	

**MERCEDES BENZ Cont.**

<b>SL 320</b>			1993-01
M 104.991			170 231
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24590</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.		<b>35760</b>
Fan switch/Termocontacto ventilador			<b>36250</b>
Rev. light switch/Int. luz marcha atrás			<b>40740</b>
<b>SL 320</b>		1998-01	
M 112.943		165 224	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.		<b>35760</b>
Fan switch/Termocontacto ventilador			<b>36250</b>
Rev. light switch/Int. luz marcha atrás			<b>40740</b>
<b>SL 350</b>		2003 ->	
M 112.973		180 245	
Rev. light switch/Int. luz marcha atrás			<b>41290</b>
<b>SL 350</b>		2006 ->	
M 272.966		200 272	
Temp. sending unit/Termo-Resistencia			<b>32706</b>
<b>SL 350</b>		2008 ->	
M 272.968		232 316	
Temp. sending unit/Termo-Resistencia			<b>32706</b>
<b>SL 420 SL</b>		1986-89	
M 116.964		150 204	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24470</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
<b>SL 420 SL</b>		1986-89	
M 116.964		160 218	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24470</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
<b>SL 500</b>		1992-01	
M 119.982/M 119.972		235 320	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24590</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.		<b>35760</b>
Fan switch/Termocontacto ventilador			<b>36250</b>
Rev. light switch/Int. luz marcha atrás			<b>40740</b>
<b>SL 500</b>		1998-01	
M 113.961		225 306	
Temp. sending unit/Termo-Resistencia	Without/Sin cat.		<b>32710</b>
<b>SL 500</b>		2006 ->	
M 273.965		285 388	
Temp. sending unit/Termo-Resistencia			<b>32706</b>
<b>SL 500 SL</b>		1986-89	
M 117.964		164 223	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24470</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
<b>SL 500 SL</b>		1986-89	
M 117.964/M 117.960		180 245	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24470</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
<b>SL 500 SL</b>		1989-92	
M 119.960/M 119.972		240 326	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24590</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.		<b>35760</b>
Fan switch/Termocontacto ventilador			<b>36250</b>
Rev. light switch/Int. luz marcha atrás			<b>40740</b>
<b>SL 55 AMG</b>		2000-01	
M 113.985		260 354	
Temp. sending unit/Termo-Resistencia	Without/Sin cat.		<b>32710</b>
<b>SL 55 AMG</b>		2006 ->	
		380 517	
Temp. sending unit/Termo-Resistencia			<b>32706</b>
<b>SL 60 AMG</b>		1997-01	
M 122.981		280 381	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24590</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.		<b>35760</b>
Fan switch/Termocontacto ventilador			<b>36250</b>
Rev. light switch/Int. luz marcha atrás			<b>40740</b>
<b>SL 600</b>		1992-01	
M 120.983/M 120.981		290 394	
Oil press. transmitter/Transm. pres. aceite			<b>14730</b>
Stop light switch/Int. luz stop			<b>24590</b>
Temp. sending unit/Termo-Resistencia			<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin cat.		<b>35760</b>
Fan switch/Termocontacto ventilador			<b>36250</b>
Rev. light switch/Int. luz marcha atrás			<b>40740</b>
<b>SL 600</b>		2006 ->	
M 275.954		380 517	
Temp. sending unit/Termo-Resistencia			<b>32706</b>
<b>SL 63 AMG</b>		2008 ->	
M 156.981		386 525	
Temp. sending unit/Termo-Resistencia			<b>32706</b>
<b>SLK 200</b>		1996-00	
M 111.946		100 136	
Temp. s. warning lamp/Termocont. temp.			<b>35780</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.		<b>38120</b>
Rev. light switch/Int. luz marcha atrás			<b>40750</b>
<b>SLK 200 Kompressor</b>		1996-00	
M 111.943		141 192	
Temp. s. warning lamp/Termocont. temp.			<b>35780</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.		<b>38120</b>
Rev. light switch/Int. luz marcha atrás			<b>40750</b>

**MERCEDES BENZ Cont.**

<b>SLK 200 Kompressor</b>	2000-04
M 111.958	120 163
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>SLK 200 Kompressor</b>	2004 ->
M 271.944	120 163
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>SLK 230 Kompressor</b>	1996-00
M 111.973	142 193
Temp. s. warning lamp/Termocont. temp.	<b>35780</b>
Fan switch/Termocontacto ventilador	<b>38120</b>
Rev. light switch/Int. luz marcha atrás	<b>40750</b>
<b>SLK 230 Kompressor</b>	2000-04
M 111.983	145 197
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>SLK 280</b>	2005 ->
M 272.942	170 231
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>SLK 300</b>	2009 ->
M 272.942	170 231
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>SLK 320</b>	2000-04
M 112.947	160 218
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>SLK 350</b>	2004 ->
M 272.963	200 272
Temp. sending unit/Termo-Resistencia	<b>32706</b>
Rev. light switch/Int. luz marcha atrás	<b>41290</b>
<b>SLK 350</b>	2008 ->
M 272.969	224 305
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>SLS AMG 6.2</b>	2010 ->
	420 571
Stop light switch/Int. luz stop	<b>24999</b>
<b>Sprinter 2-t 208 CDI</b>	2000-06
OM 611.987	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 208 D</b>	1995-00
OM 601.943	58 79
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 208 D</b>	1996-00
	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 210 D</b>	1997-00
OM 602.980	75 102
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 211 CDI</b>	2000-06
OM 611.981	80 109
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 212 D</b>	1995-00
OM 602.980	90 122
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 213 CDI</b>	2000-06
OM 611.981	95 129
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 214</b>	1995-06
M 111.979/M 111.984	105 143
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 214 NGT</b>	2000-06
	92 125
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 216 CDI</b>	2000-06
OM 612.981	115 156
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 2-t 314 NGT</b>	2000-06
	92 125
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3,5 313 CDI 4x4</b>	2006 ->
	95 129
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 224</b>	2006 ->
M 272.979	190 258
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 309 CDI</b>	2006 ->
OM 646.984	65 88
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 310 CDI</b>	2009 ->
OM 651.955	70 95
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 311 CDI, 4x4</b>	2006 ->
OM 646.985	80 109
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 313 CDI</b>	2006 ->
OM 646.986	95 129
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 315 CDI, 4x4</b>	2006 ->
OM 646.990	110 150
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 316</b>	2008 ->
M 271.951	115 156
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 316 CDI</b>	2009 ->
OM 651.957	120 163
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 316 CDI 4x4</b>	2009 ->
OM 651.957	120 163
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 316 NGT</b>	2008 ->
M 271.951	115 156
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 318 CDI</b>	2008 ->
	135 184
Temp. sending unit/Termo-Resistencia	<b>32706</b>

**MERCEDES BENZ Cont.**

<b>Sprinter 3,5-t 318 CDI</b>	2006 ->
OM 642.992	135 184
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 318 CDI 4x4</b>	2008 ->
OM 642.992	135 184
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 319 CDI</b>	2009 ->
OM 642.992	140 190
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3,5-t 319 CDI, 4x4</b>	2009 ->
	140 190
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 209 CDI</b>	2006 ->
OM 646.984	65 88
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 210 CDI</b>	2009 ->
OM 651.955	70 95
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 210 CDI</b>	2009 ->
OM 651.955	70 95
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 211 CDI</b>	2006 ->
OM 646.985	80 109
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 213 CDI</b>	2006 ->
OM 646.986	95 129
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 213 CDI</b>	2009 ->
	95 129
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 215 CDI</b>	2006 ->
OM 646.990	110 150
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 216</b>	2008 ->
M 271.951	115 156
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 216 CDI</b>	2009 ->
OM 651.957	120 163
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 218 CDI</b>	2006 ->
OM 642.992	135 184
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 219 CDI</b>	2009 ->
OM 642.992	140 190
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 224</b>	2006 ->
M 272.979	190 258
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 3-t 308 CDI</b>	2000-06
OM 611.987	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 308 D</b>	1995-00
OM 601.943	58 79
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 308 D 2.3</b>	2000-06
	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 308 E</b>	2000-06
	40 54
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 310 D 2.9</b>	1995-00
OM 602.980	75 102
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 311 CDI, 4x4</b>	2000-06
OM 611.981	80 109
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 312 D 2.9, 4x4</b>	1995-00
OM 602.980	90 122
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 313 CDI, 4x4</b>	2000-06
OM 611.981	95 129
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 314, 4x4</b>	1995-06
M 111.979/M 111.984	105 143
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 3-t 316 CDI, 4x4</b>	2000-06
OM 612.981	115 156
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 4,6-t 413 CDI</b>	2006 ->
	95 129
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 4,6-t 415 CDI</b>	2006 ->
OM 646.990	110 150
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 4,6-t 416 CDI</b>	2009 ->
OM 651.957	120 163
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 4,6-t 416 CDI</b>	2009 ->
OM 642.992	140 190
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 4,6-t 418 CDI</b>	2006 ->
	135 184
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 4,6-t 424</b>	2006 ->
M 272.979	190 258
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 4-t 408 CDI</b>	2000-06
OM 611.987	60 82
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 4-t 408 D</b>	1996-06
OM 601.943	58 79
Temp. sending unit/Termo-Resistencia	<b>32710</b>

**MERCEDES BENZ Cont.**

<b>Sprinter 4-t 410 D, 4x4</b>	<b>1996-06</b>
OM 602.980	75 102
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
03.2000 ->	
<b>Sprinter 4-t 411 CDI, 4x4</b>	<b>2000-06</b>
OM 611.981	80 109
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 4-t 412 D, 4x4</b>	<b>1996-06</b>
OM 602.980	85 115
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
03.2000 ->	
<b>Sprinter 4-t 412 D, 4x4</b>	<b>1996-06</b>
OM 602.980	90 122
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
03.2000 ->	
<b>Sprinter 4-t 413 CDI, 4x4</b>	<b>2000-06</b>
OM 611.981	95 129
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 4-t 414, 4x4</b>	<b>1996-06</b>
M 111.979/M 111.984	105 143
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
03.2000 ->	
<b>Sprinter 4-t 416 CDI, 4x4</b>	<b>2000-06</b>
OM 612.981	115 156
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>Sprinter 5-t 509 CDI</b>	<b>2006 -&gt;</b>
OM 646.984	65 88
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 510 CDI</b>	<b>2009 -&gt;</b>
OM 651.955	70 95
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 511 CDI</b>	<b>2006 -&gt;</b>
OM 646.985	80 109
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 513 CDI</b>	<b>2006 -&gt;</b>
OM 646.986	95 129
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 515 CDI</b>	<b>2006 -&gt;</b>
OM 646.986	110 150
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 515 CDI</b>	<b>2006 -&gt;</b>
OM 646.990	110 150
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 516</b>	<b>2008 -&gt;</b>
M 271.951	115 156
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 516 CDI</b>	<b>2009 -&gt;</b>
OM 651.957	120 163
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 516 NGT</b>	<b>2008 -&gt;</b>
	115 156
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 518 CDI</b>	<b>2006 -&gt;</b>
OM 642.992	135 184
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 519 CDI</b>	<b>2009 -&gt;</b>
OM 642.992	140 190
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 5-t 524</b>	<b>2006 -&gt;</b>
M 272.979	190 258
Temp. sending unit/Termo-Resistencia	<b>32706</b>
<b>Sprinter 616 CDI</b>	<b>2001 -&gt;</b>
OM 612.981	115 156
Temp. sending unit/Termo-Resistencia	<b>32710</b>
<b>T1 207 D 2.4</b>	<b>1982-90</b>
	53 72
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
<b>T1 208 D 2.3</b>	<b>1988-96</b>
OM 601.940	58 79
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 208 D 2.3</b>	<b>1988-96</b>
OM 601.940	60 82
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 209 D 2.9</b>	<b>1982-90</b>
OM 617.913	65 88
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 210 2.3</b>	<b>1989-96</b>
M 102.945	77 105
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 210 2.3</b>	<b>1982-90</b>
M 102.942	70 95
Oil press. switch/Int. pres. aceite	<b>10200</b>
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 210 2.3</b>	<b>1982-96</b>
M 102.942/M 102.946	70 95
Oil press. switch/Int. pres. aceite	<b>10200</b>
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505

**MERCEDES BENZ Cont.**

<b>T1 210 2.3</b>	<b>1977-89</b>
M 102.942	70 95
Oil press. switch/Int. pres. aceite	<b>10200</b>
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35760</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 210 D 2.8</b>	<b>1988-96</b>
OM 602.940	70 95
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 210 D 2.8</b>	<b>1988-96</b>
OM 602.940	72 98
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 210 D 2.8</b>	<b>1988-96</b>
OM 602.940	72 98
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 307 D 2.4</b>	<b>1982-90</b>
OM 616.937/OM 616.939	53 72
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
<b>T1 308 D 2.3</b>	<b>1988-96</b>
OM 601.940	58 79
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 308 D 2.3</b>	<b>1989-96</b>
OM 601.940	60 82
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 309 D 3.0</b>	<b>1982-90</b>
OM 617.913	65 88
Oil press. switch/Int. pres. aceite	<b>10250</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
<b>T1 310 D 2.9</b>	<b>1989-96</b>
OM 602.940	72 98
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1 310 D 2.9</b>	<b>1989-96</b>
OM 602.940	70 95
Oil press. switch/Int. pres. aceite	<b>10200</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. s. warning lamp/Termocont. temp.	<b>35770</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 941505
<b>T1/TN 410</b>	<b>1982-95</b>
M 102.942	70 95
Oil press. switch/Int. pres. aceite	<b>10200</b>
<b>T1/TN 410</b>	<b>1982-95</b>
M 102.945	77 105
Oil press. switch/Int. pres. aceite	<b>10200</b>
<b>V 200</b>	<b>1997-03</b>
M 111.948/M 111.950	95 129
Oil press. switch/Int. pres. aceite	-> N° 003396
Stop light switch/Int. luz stop	<b>11200</b>
Temp. sending unit/Termo-Resistencia	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Fan switch/Termocontacto ventilador	01.1999 ->
Fan switch/Termocontacto ventilador	M 111.948, Gray/gris
Fan switch/Termocontacto ventilador	M 111.948, Black/Negro
<b>V 220 CDI</b>	<b>1999-03</b>
OM 611.980	75 102
Oil press. switch/Int. pres. aceite	<b>11200</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32200</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Fan switch/Termocontacto ventilador	Gray/gris
Fan switch/Termocontacto ventilador	Black/Negro
<b>V 220 CDI</b>	<b>1999-03</b>
OM 611.980	90 122
Oil press. switch/Int. pres. aceite	<b>11200</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32200</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Fan switch/Termocontacto ventilador	Gray/gris
Fan switch/Termocontacto ventilador	Black/Negro
<b>V 230</b>	<b>1996-03</b>
M 111.980/M 111.978	105 143
Oil press. switch/Int. pres. aceite	-> N° 002723
Stop light switch/Int. luz stop	<b>11200</b>
Temp. sending unit/Termo-Resistencia	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Fan switch/Termocontacto ventilador	01.1999 ->
Fan switch/Termocontacto ventilador	Gray/gris
Fan switch/Termocontacto ventilador	M 111.978, Black/Negro
<b>V 230 TD</b>	<b>1996-03</b>
OM 601.970	72 98
Oil press. switch/Int. pres. aceite	-> N° 575367
Stop light switch/Int. luz stop	<b>11200</b>
Temp. sending unit/Termo-Resistencia	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Fan switch/Termocontacto ventilador	01.1999 ->
Fan switch/Termocontacto ventilador	Gray/gris
Fan switch/Termocontacto ventilador	Black/Negro
<b>V 280</b>	<b>1997-03</b>
M 104.900	128 174
Oil press. switch/Int. pres. aceite	<b>11200</b>
Oil press. switch/Int. pres. aceite	<b>11690</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>32220</b>
Temp. sending unit/Termo-Resistencia	<b>32710</b>
Fan switch/Termocontacto ventilador	01.1999 ->
Fan switch/Termocontacto ventilador	Gray/gris
Fan switch/Termocontacto ventilador	Black/Negro

**MERCEDES BENZ Cont.**

<b>Vaneo 1.6</b>	2002 ->	
M 166.961	75 102	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vaneo 1.6</b>	2002 ->	
M 166.961	60 82	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vaneo 1.7 CDI</b>	2002 ->	
OM 668.914	55 75	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vaneo 1.7 CDI</b>	2002 ->	
OM 668.914	67 91	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vaneo 1.9</b>	2002 ->	
M 166.991	92 125	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vario 512 D</b>	1996 ->	
OM 602.984	90 122	
Oil press. switch/Int. pres. aceite	<b>10200</b>	
<b>Vario 612 D, Kipper</b>	1996 ->	
OM 602.985 /OM 602.984	90 122	
Oil press. switch/Int. pres. aceite	<b>10200</b>	
<b>Vario 812 D, Kipper</b>	1996 ->	
OM 602.985 /OM 602.984	90 122	
Oil press. switch/Int. pres. aceite	<b>10200</b>	
<b>Vario 0 812</b>	1996 ->	
OM 602.985 /OM 602.984	90 122	
Oil press. switch/Int. pres. aceite	<b>10200</b>	
<b>Viano 2.0 CDI</b>	2010 ->	
	100 136	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 2.0 CDI 4-matic</b>	2010 ->	
	100 136	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 2.0 CDI, 4-matic</b>	2003 ->	
OM 646.982	80 109	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Viano 2.2 CDI</b>	2010 ->	
	120 163	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 2.2 CDI 4-matic</b>	2010 ->	
	120 163	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 2.2 CDI, 4-matic</b>	2003 ->	
OM 646.982	110 150	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Viano 3.0 CDI</b>	2010 ->	
	165 224	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 3.0 CDI</b>	2006 ->	
OM 642.990	150 204	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 3.2</b>	2003 ->	
M 112.951	140 190	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Viano 3.2</b>	2003 ->	
M 112.951	160 218	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Viano 3.5</b>	2007 ->	
M 272.979	190 258	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Viano 3.7</b>	2004 ->	
M 112.976	170 231	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vito / Mixto 122 CDI</b>	2010 ->	
	165 224	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito / Mixto 126</b>	2007 ->	
M 272.978	190 258	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 108 2.2 CDI</b>	1999-03	
OM 611A (60 KW CDI)	60 82	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
Fan switch/Termocontacto ventilador	<b>37265</b>	Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	Black/Negro
<b>Vito 108 2.3 D</b>	1996-03	
OM 601.942	58 79	
Oil press. switch/Int. pres. aceite	<b>11200</b>	-> N° 575367
Temp. sending unit/Termo-Resistencia	<b>32220</b>	-> 02.1999
Temp. sending unit/Termo-Resistencia	<b>32710</b>	03.1999 ->
Fan switch/Termocontacto ventilador	<b>37265</b>	Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	Black/Negro
<b>Vito 109 2.2 CDI</b>	2003 ->	
OM 646.983	65 88	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vito 110 2.2 CDI</b>	1999-03	
OM 611LA (75 KW CDI)	75 102	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
Fan switch/Termocontacto ventilador	<b>37265</b>	Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	Black/Negro
<b>Vito 110 2.3 D</b>	1997-03	
OM 601.970	72 98	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32220</b>	-> 02.1999
Temp. sending unit/Termo-Resistencia	<b>32710</b>	03.1999 ->
Fan switch/Termocontacto ventilador	<b>37265</b>	Gray/gris

**MERCEDES BENZ Cont.**

<b>Vito 110 2.3 TD</b>	1996-03	
OM 601.970	72 98	
Oil press. switch/Int. pres. aceite	<b>11200</b>	-> N° 575367
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32220</b>	-> 02.1999
Temp. sending unit/Termo-Resistencia	<b>32710</b>	03.1999 ->
Fan switch/Termocontacto ventilador	<b>37265</b>	Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	Black/Negro
<b>Vito 110 CDI</b>	2010 ->	
	70 95	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 111 2.2 CDI, 4x4</b>	2003 ->	
OM 646.982	80 109	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vito 112 2.2 CDI</b>	1999-03	
OM 611.980	90 122	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
Fan switch/Termocontacto ventilador	<b>37265</b>	Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	Black/Negro
<b>Vito 113 2.0</b>	1996-03	
M 111.948/M 111.950	95 129	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32220</b>	-> 02.1999
Temp. sending unit/Termo-Resistencia	<b>32710</b>	03.1999 ->
Fan switch/Termocontacto ventilador	<b>37265</b>	M 111.948, Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	M 111.948, Black/Negro
<b>Vito 113 CDI, 4x4</b>	2010 ->	
	100 136	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 114 2.3</b>	1996-03	
M 111.980/M 111.978	105 143	
Oil press. switch/Int. pres. aceite	<b>11200</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia	<b>32220</b>	-> 02.1999
Temp. sending unit/Termo-Resistencia	<b>32710</b>	03.1999 ->
Fan switch/Termocontacto ventilador	<b>37265</b>	M 111.978, Gray/gris
Fan switch/Termocontacto ventilador	<b>37820</b>	M 111.978, Black/Negro
<b>Vito 115 2.2 CDI, 4x4</b>	2003 ->	
OM 646.982	110 150	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vito 116 CDI, 4x4</b>	2010 ->	
	120 163	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 119 3.2</b>	2003 ->	
M 112.951	140 190	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vito 120 CDI</b>	2007 ->	
OM 642.990	150 204	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 122 3.2</b>	2003 ->	
M 112.951	160 218	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	
<b>Vito 122 CDI</b>	2010 ->	
	165 224	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 123</b>	2004 ->	
M 112.976	170 231	
Temp. sending unit/Termo-Resistencia	<b>32706</b>	
<b>Vito 126</b>	2007 ->	
M 272.978	190 258	
Temp. sending unit/Termo-Resistencia	<b>32710</b>	

**MG**

<b>Maestro 2.0 EFi</b>	1984-90	
	86 117	
Oil press. switch/Int. pres. aceite	<b>11420</b>	
Rev. light switch/Int. luz marcha atrás	<b>40580</b>	
<b>Maestro 2.0 Turbo</b>	1988-90	
	112 152	
Oil press. switch/Int. pres. aceite	<b>11420</b>	
<b>Metro 1300</b>	1982-90	
	54 73	
Oil press. switch/Int. pres. aceite	<b>11420</b>	
<b>MG TF 115</b>	2002 ->	
16 K4F	85 116	
Oil press. switch/Int. pres. aceite	<b>12410</b>	
Stop light switch/Int. luz stop	<b>24310</b>	-> Ch. YD514325
Rev. light switch/Int. luz marcha atrás	<b>40580</b>	
<b>MG TF 120</b>	2002 ->	
18 K4F	88 120	
Oil press. switch/Int. pres. aceite	<b>12410</b>	N° 18K4FJ31, J32 ->
Oil press. switch/Int. pres. aceite	<b>12470</b>	-> N° 18K4FJ31, J32
Stop light switch/Int. luz stop	<b>24310</b>	-> Ch. YD514325
Rev. light switch/Int. luz marcha atrás	<b>40580</b>	
<b>MG TF 135</b>	2002 ->	
18 K4F	100 136	
Oil press. switch/Int. pres. aceite	<b>12410</b>	N° 18K4FJ31, J32 ->
Oil press. switch/Int. pres. aceite	<b>12470</b>	-> N° 18K4FJ31, J32
Stop light switch/Int. luz stop	<b>24310</b>	-> Ch. YD514325
Rev. light switch/Int. luz marcha atrás	<b>40580</b>	
<b>MG TF 160</b>	2002 ->	
18 K4K	118 160	
Oil press. switch/Int. pres. aceite	<b>12410</b>	N° 18K4KJ89, J90 ->
Oil press. switch/Int. pres. aceite	<b>12470</b>	-> N° 18K4KJ89, J90
Stop light switch/Int. luz stop	<b>24310</b>	-> Ch. YD514325
<b>MG ZR 105</b>	2001 ->	
14 K4F	76 103	
Oil press. switch/Int. pres. aceite	<b>12410</b>	
Rev. light switch/Int. luz marcha atrás	<b>40730</b>	

**MG Cont.**

<b>MG ZR 120</b>	2001 ->
18 K4F	86 117
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40580
<b>MG ZR 160</b>	2001 ->
18 K4K	118 160
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40580
<b>MG ZR Turbodiesel</b>	2001 ->
20 T2N	74 100
Oil press. switch/Int. pres. aceite	12410
Temp. sending unit/Termo-Resistencia	Green/Verde
Temp. sending unit/Termo-Resistencia	Black/Negro
Rev. light switch/Int. luz marcha atrás	40580
<b>MG ZS 120</b>	2001 ->
18 K4F	86 117
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40580
<b>MG ZS 180, Fastback</b>	2001 ->
25 K4F	130 177
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40580
<b>MG ZS 2.0 TD, Fastback</b>	2004 ->
20 T2N	74 101
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT 1.8 16V</b>	2003 ->
18 K4F	88 120
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT 1.8 T 16V</b>	2003 ->
118 160	12410
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT 160</b>	2001 ->
25 K4F	118 160
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40830
<b>MG ZT 180</b>	2003 ->
25 K4F	130 177
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT 190</b>	2001 ->
25 K4F	140 190
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40830
<b>MG ZT 2.0 CDTi</b>	2002 ->
204D2	96 131
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT 2.0 CDTi</b>	2002-03
204D2	85 116
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT-T 1.8 16V</b>	2003 ->
18 K4F	88 120
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT-T 1.8 T 16V</b>	2003 ->
118 160	12410
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT-T 160</b>	2001 ->
25 K4F	118 160
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40830
<b>MG ZT-T 180</b>	2003 ->
25 K4F	130 177
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT-T 190</b>	2001 ->
25 K4F	140 190
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	40830
<b>MG ZT-T 2.0 CDTi</b>	2002 ->
204D2	96 131
Oil press. switch/Int. pres. aceite	12410
<b>MG ZT-T 2.0 CDTi</b>	2002-03
204D2	85 116
Oil press. switch/Int. pres. aceite	12410
<b>MGF 1.6</b>	2000-02
16 K4F	82 111
Oil press. switch/Int. pres. aceite	12410
<b>MGF 1.8 i 16V</b>	1995-02
18 K4F	88 120
Oil press. switch/Int. pres. aceite	12410
Oil press. switch/Int. pres. aceite	Nº 18K4FJ31, J32 ->
Stop light switch/Int. luz stop	-> Nº 18K4FJ31, J32
Rev. light switch/Int. luz marcha atrás	-> Ch. YD514325
<b>MGF 1.8 i VVC</b>	1995-02
18 K4K	107 146
Oil press. switch/Int. pres. aceite	12410
Oil press. switch/Int. pres. aceite	Nº 18K4KJ89, J90 ->
Stop light switch/Int. luz stop	-> Nº 18K4KJ89, J90
Rev. light switch/Int. luz marcha atrás	-> Ch. YD514325
<b>MGF 1.8 i VVC</b>	2001-02
18 K4K	118 160
Oil press. switch/Int. pres. aceite	12410
Oil press. switch/Int. pres. aceite	Nº 18K4KJ89, J90 ->
Stop light switch/Int. luz stop	-> Nº 18K4KJ89, J90
<b>Montego 2.0 EFI</b>	1984-90
86 117	40580
Rev. light switch/Int. luz marcha atrás	40580
<b>Montego 2.0 Turbo</b>	1984-90
20 HT	110 150
Oil press. switch/Int. pres. aceite	11420
Rev. light switch/Int. luz marcha atrás	40580

**MINI**

<b>Mini Clubman Cooper</b>	2007 ->
N12B16A	88 120
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640

**MINI Cont.**

<b>Mini Clubman Cooper S</b>	2007 ->
N14B16A	128 174
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>Mini Clubman John Cooper Works</b>	2008 ->
155 211	12640
Oil press. switch/Int. pres. aceite	24999
Stop light switch/Int. luz stop	40640
Rev. light switch/Int. luz marcha atrás	40640
<b>Mini Cooper D, Clubman</b>	2007 ->
9HZ (DV6TED4)	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>Mini Cooper S, Cabrio</b>	2002 ->
N14B16A/W11B16A	120 163
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40830
<b>Mini Cooper S, Cabrio</b>	2004 ->
W11B16A	125 170
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40830
<b>Mini Cooper S, Cabrio</b>	2006 ->
N14B16A	128 174
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>Mini Cooper, Cabrio</b>	2001 ->
W10B16A	85 116
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	-> 07.2004
Rev. light switch/Int. luz marcha atrás	08.2004 ->
<b>Mini Cooper, Cabrio</b>	2006 ->
N12B16A	88 120
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>Mini One</b>	2007 ->
N12B14A	70 95
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40640
<b>Mini One D</b>	2003 ->
1ND	55 75
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40830
<b>Mini One D</b>	2003 ->
1ND-TV	65 88
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40830
<b>Mini One, Cabrio</b>	2001 ->
W10B16A	66 90
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	-> 07.2004
Rev. light switch/Int. luz marcha atrás	08.2004 ->
<b>Mini Works, John Cooper Cabrio</b>	2003 ->
W11B16A	155 210
Stop light switch/Int. luz stop	24999
Rev. light switch/Int. luz marcha atrás	40830

**MITSUBISHI**

<b>3000 GT 3.0 i 24V 4x4</b>	1992-99
6G72	210 286
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24600
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Fan switch/Termocontacto ventilador	36490
Rev. light switch/Int. luz marcha atrás	41240
<b>Carisma 1.6, Sedan</b>	1995-06
4 G 92	66 90
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24220
Rev. light switch/Int. luz marcha atrás	40600
<b>Carisma 1.6, Sedan</b>	1997-06
4 G 92	73 99
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24220
Rev. light switch/Int. luz marcha atrás	40600
<b>Carisma 1.6, Sedan</b>	1998-06
4 G 92	70 95
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24220
Rev. light switch/Int. luz marcha atrás	40600
<b>Carisma 1.6, Sedan</b>	2000-06
4 G 92	76 103
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24220
Rev. light switch/Int. luz marcha atrás	40600
<b>Carisma 1.8 16V</b>	1995-06
4G93	103 140
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24220
Rev. light switch/Int. luz marcha atrás	40600
Rev. light switch/Int. luz marcha atrás	With/Con cruise control
<b>Carisma 1.8 16V GDI, Sedan</b>	1997-06
4G93	92 125
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24220
Rev. light switch/Int. luz marcha atrás	40600
Rev. light switch/Int. luz marcha atrás	With/Con cruise control

**MITSUBISHI Cont.**

<b>Carisma 1.8 GDI, Sedan</b>		<b>2000-06</b>
4G93		90 122
Oil press. switch/Int. pres. aceite		<b>11730</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24220</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cruise control	<b>41240</b>
<b>Carisma 1.8, Sedan</b>		<b>1995-06</b>
4G93		85 116
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24220</b>
Rev. light switch/Int. luz marcha atrás	With/Con cruise control	<b>40600</b>
<b>Carisma 1.9 DI-D, Sedan</b>		<b>2000-06</b>
F9Q1		75 102
Rev. light switch/Int. luz marcha atrás		<b>40990</b>
<b>Carisma 1.9 DI-D, Sedan</b>		<b>2000-06</b>
F9Q2		85 115
Rev. light switch/Int. luz marcha atrás		<b>40990</b>
<b>Carisma 1.9 TD, Sedan</b>		<b>1996-00</b>
F8QT		66 90
Oil press. switch/Int. pres. aceite	10.1997 ->	<b>12370</b>
Oil press. switch/Int. pres. aceite	-> 09.1997	<b>12490</b>
Stop light switch/Int. luz stop		<b>24220</b>
Thermistor-Thermocont./Doble función		<b>34350</b>
Rev. light switch/Int. luz marcha atrás	With/Con cruise control	<b>40600</b>
<b>Colt CZC 1.5 Turbo</b>		<b>2006 -&gt;</b>
4G15T		110 150
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Colt III 1.3</b>		<b>1988-92</b>
		51 70
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt III 1.3 12V</b>		<b>1988-92</b>
4 G 13 (12V)		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36110</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt III 1.5</b>		<b>1990-92</b>
4 G 15		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador	Manual	<b>36110</b>
Fan switch/Termocontacto ventilador	Automatic	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Colt III 1.5 GLXi</b>		<b>1988-92</b>
4 G 15		62 84
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador	Manual	<b>36110</b>
Fan switch/Termocontacto ventilador	Automatic	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Colt III 1.6 GTi 16V</b>		<b>1988-90</b>
4G61		91 124
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Colt III 1.8 Diesel GLX</b>		<b>1988-92</b>
4 D 65		44 60
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt III 1.8 GTi 16V</b>		<b>1990-92</b>
4G67		100 136
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt IV 1.3 GLi 12V</b>		<b>1992-96</b>
4 G 13 (BJ92-... 12V)		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt IV 1.6 GLXi 16V</b>		<b>1992-96</b>
4 G 92		83 113
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt IV 1.8 GTi 16V</b>		<b>1992-96</b>
4G93		103 140
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt V 1300</b>		<b>2000-05</b>
4 G 13 (16 V)		60 82
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt V 1300 GL, GLX</b>		<b>1996-00</b>
4 G 13 (12V)		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt V 1500</b>		<b>1995-05</b>
4 G 15 (16V)		69 94
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt V 1600</b>		<b>2000-05</b>
4 G 92		76 103
Rev. light switch/Int. luz marcha atrás		<b>41240</b>

**MITSUBISHI Cont.**

<b>Colt V 1600 GLX</b>		<b>1996-00</b>
4 G 92		66 90
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Colt VI 1.1</b>		<b>2004 -&gt;</b>
3A91		55 75
Oil press. switch/Int. pres. aceite		<b>12830</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Colt VI 1.3</b>		<b>2004 -&gt;</b>
4A90		70 95
Oil press. switch/Int. pres. aceite		<b>12830</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Colt VI 1.5</b>		<b>2004 -&gt;</b>
4A91		80 109
Oil press. switch/Int. pres. aceite		<b>12830</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Colt VI 1.5 CZT</b>		<b>2005 -&gt;</b>
4G15T		110 150
Oil press. switch/Int. pres. aceite		<b>12830</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Colt VI 1.5 DI-D</b>		<b>2004 -&gt;</b>
		50 68
Oil press. switch/Int. pres. aceite		<b>12841</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Colt VI 1.5 DI-D</b>		<b>2004 -&gt;</b>
OM639		70 95
Oil press. switch/Int. pres. aceite		<b>12841</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24895</b>
<b>Eclipse I 2.0 i 16V, 4x4</b>		<b>1991-95</b>
4 G 63		110 150
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador	Climat	<b>36400</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Eclipse II 2000 GS 16V</b>		<b>1995-99</b>
4 G 63		107 146
Oil press. switch/Int. pres. aceite		<b>11730</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Eclipse II 2000 GT 16V</b>		<b>1995-99</b>
		157 214
Oil press. switch/Int. pres. aceite		<b>11730</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant IV 1.8 Turbo-D, Sedan</b>		<b>1987-92</b>
4 D 65 T		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant IV 1.8, Sedan</b>		<b>1987-90</b>
4G37		63 86
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Galant IV 1.8, Sedan</b>		<b>1987-92</b>
4G37		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Galant IV 2.0 GTi 16V, Sedan</b>		<b>1988-92</b>
4 G 63		107 146
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant IV 2.0 GTi 16V, Sedan, 4x4</b>		<b>1987-92</b>
4 G 63		106 144
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant IV 2.0, Sedan, 4x4</b>		<b>1987-92</b>
4G63		80 109
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant V 1.8 GLSi, Sedan</b>		<b>1992-96</b>
4G93		93 126
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Fan switch/Termocontacto ventilador		<b>36480</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant V 2.0 GLSi, Sedan, 4x4</b>		<b>1992-96</b>
4G63		101 137
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant V 2.0 GLSTD, Sedan</b>		<b>1992-96</b>
4 D 68 T		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>

**MITSUBISHI Cont.**

<b>Galant V 2.0 V6-24, Sedan</b>		<b>1992-96</b>
6A12		110 150
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Galant V 2.5 V6-24 4x4, Sedan</b>		<b>1992-96</b>
6G73		125 170
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant VI 2.0 TDI, SW</b>		<b>1996-04</b>
4D68 SOHC		66 90
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant VI 2.0, Station Wagon</b>		<b>1996-00</b>
4 G 63		100 136
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant VI 2.0, Station Wagon</b>		<b>2000-04</b>
4 G 63		98 133
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Galant VI 2.4 GDI, Station Wagon</b>		<b>1999-00</b>
4G64 (GDI)		110 150
Oil press. switch/Int. pres. aceite		<b>11610</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Galant VI 2.4 GDI, Station Wagon</b>		<b>2000-04</b>
4G64 (GDI)		106 144
Oil press. switch/Int. pres. aceite		<b>11610</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Galant VI 2.5 V6 24V, Station Wagon</b>		<b>1996-00</b>
6A13		120 163
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Galant VI 2.5 V6 24V, Station Wagon</b>		<b>2000-03</b>
6A13		118 160
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>
<b>Grandis 2.0 DI-D</b>		<b>2005 -&gt;</b>
BSY		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Grandis 2.0 DI-D</b>		<b>2007 -&gt;</b>
BWC		103 140
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Grandis 2.4</b>		<b>2004 -&gt;</b>
4G69		121 165
Oil press. switch/Int. pres. aceite	-> 05.2007	<b>11610</b>
Oil press. switch/Int. pres. aceite	06.2007 ->	<b>12830</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>L 200 2.0</b>		<b>1996 -&gt;</b>
4G63		90 122
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
<b>L 200 2.4 4x4</b>		<b>1996 -&gt;</b>
4G64		97 132
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
<b>L 200 2.5 D</b>		<b>1996 -&gt;</b>
4 D 56		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>L 200 2.5 D, 4WD</b>		<b>1986-96</b>
4 D 56		51 70
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>L 200 2.5 TD 4WD</b>		<b>1992-96</b>
4 D 56 T		64 87
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>L 200 2.5 TD 4WD</b>		<b>2001 -&gt;</b>
4 D 56 T		85 115
Oil press. switch/Int. pres. aceite		<b>11730</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41247</b>
<b>L 200 2.5 TD 4WD</b>		<b>2003 -&gt;</b>
4 D 56 T		98 133
Oil press. switch/Int. pres. aceite		<b>11730</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>L 200 2.5 TD 4x4</b>		<b>1996 -&gt;</b>
4 D 56 TD		73 99
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41247</b>
<b>L 200 2.5 TD 4x4</b>		<b>2001 -&gt;</b>
4 D 56 T		74 100
Oil press. switch/Int. pres. aceite		<b>11730</b>
<b>L 200 2.6 4WD</b>		<b>1989-95</b>
G54B		76 103
Oil press. switch/Int. pres. aceite		<b>11610</b>
<b>L 300 1.6</b>		<b>1986 -&gt;</b>
4G32		51 69
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 1.6</b>		<b>1983-94</b>
4G32		51 70
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>

**MITSUBISHI Cont.**

<b>L 300 2.0</b>		<b>1986 -&gt;</b>
G63B		64 87
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 2.0</b>		<b>1994 -&gt;</b>
4 G 63		85 116
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 2.0 i</b>		<b>1996 -&gt;</b>
4 G 63		83 113
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 2.0, 4WD</b>		<b>1986 -&gt;</b>
4G63		65 88
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 2.0, 4WD</b>		<b>1986 -&gt;</b>
4G63		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 2.4 4WD</b>		<b>1986-90</b>
G64B		80 109
Oil press. switch/Int. pres. aceite		<b>11610</b>
<b>L 300 2.4, 4WD</b>		<b>1990 -&gt;</b>
4G64		82 112
Oil press. switch/Int. pres. aceite		<b>11610</b>
<b>L 300 2.5 D</b>		<b>1986 -&gt;</b>
4 D 56		51 69
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41235</b>
<b>L 300 2.5 D</b>		<b>1994 -&gt;</b>
4 D 56 T		64 87
Oil press. switch/Int. pres. aceite		<b>11610</b>
<b>L 300 2.5 TD 4WD</b>		<b>1988 -&gt;</b>
4 D 56 T		64 87
Oil press. switch/Int. pres. aceite		<b>11610</b>
<b>L 400 2500 TD, 4x4</b>		<b>1996 -&gt;</b>
4 D 56 T		64 87
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
<b>Lancer 1.3 Sedan</b>		<b>2003 -&gt;</b>
4 G 13 (16 V)		60 82
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer 2.0 16V EVO IX Sedan</b>		<b>2006 -&gt;</b>
4 G 63 Turbo		206 280
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer 2.0 16V EVO VIII Sedan</b>		<b>2004 -&gt;</b>
		195 265
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer 2.0 Sedan</b>		<b>2003 -&gt;</b>
4 G 63		99 135
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer III 1.5 12V SW</b>		<b>1990-91</b>
4G15 (12V)		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>37630</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer III 1.5 Station Wagon</b>		<b>1985-89</b>
G15B		51 70
Oil press. switch/Int. pres. aceite		<b>11610</b>
Fan switch/Termocontacto ventilador		<b>37630</b>
<b>Lancer III 1.5 SW</b>		<b>1988-90</b>
4 G 15		61 83
Oil press. switch/Int. pres. aceite		<b>11610</b>
Fan switch/Termocontacto ventilador		<b>37630</b>
<b>Lancer III 1.8 4x4 Station Wagon</b>		<b>1987-89</b>
G37B		61 83
Oil press. switch/Int. pres. aceite		<b>11610</b>
<b>Lancer III 1.8 4x4 Station Wagon</b>		<b>1989-90</b>
4G37		63 86
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer III 1.8 4x4 Station Wagon</b>		<b>1990-92</b>
4G37		69 94
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer III 1.8 D Station Wagon</b>		<b>1986-92</b>
4 D 65		44 60
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás	11.1987 ->	<b>41240</b>
<b>Lancer IV 1.3 12V</b>		<b>1992-94</b>
4 G 13 (12V)		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer IV 1.3 Sedan</b>		<b>1988-92</b>
G13B		51 70
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>41240</b>
<b>Lancer IV 1.5 12V, Sedan, SW</b>		<b>1989-92</b>
4G15 (12V)		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>31570</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>41240</b>

**MITSUBISHI Cont.**

<b>Lancer IV 1.5, Sedan</b>	<b>1988-92</b>
4 G 15	62 84
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
Manual	
<b>Lancer IV 1.6 16V</b>	<b>1992-94</b>
4 G 92	83 113
Oil press. switch/Int. pres. aceite	<b>11730</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer IV 1.8 4x4</b>	<b>1989-92</b>
4G37	71 97
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
Manual	
<b>Lancer IV 1.8 D</b>	<b>1988-92</b>
4 D 65	44 60
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer IV 1.8 GLX Diesel Sedan</b>	<b>1988-92</b>
4 D 65	44 60
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
Manual	
<b>Lancer IV 1.8 GTi 16V</b>	<b>1992-93</b>
4G93	103 140
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer IV 1.8 GTi 16V</b>	<b>1989-92</b>
4G67	100 136
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer IV Sedan 1.3 12V</b>	<b>1990-92</b>
4 G 13 (12V)	55 75
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer V 1.3</b>	<b>1992 -&gt;</b>
4 G 13 (BJ92-..., 12V)	55 75
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer V 1.6 16V, 4WD, Station Wagon</b>	<b>1992 -&gt;</b>
4 G 92	83 113
Oil press. switch/Int. pres. aceite	<b>11730</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer V 1.8 16V</b>	<b>1992-93</b>
4G93	103 140
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer V 2.0 D, Station Wagon</b>	<b>1992 -&gt;</b>
4 D 68	50 68
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer VI 1.3 12V</b>	<b>1995-03</b>
4 G 13 (12V)	55 75
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer VI 1.5 16V</b>	<b>1995-03</b>
4 G 15 (16V)	69 94
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer VI 1.6 16V</b>	<b>1995-03</b>
4 G 92	66 90
Oil press. switch/Int. pres. aceite	<b>11730</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Fan switch/Termocontacto ventilador	<b>36480</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Lancer VI 2.0 16V EVO IV / V / VI / VII</b>	<b>1996-03</b>
4 G 63 Turbo	206 280
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41240</b>
<b>Montero 2.4</b>	<b>1991-00</b>
4G64	82 112
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>Montero 2.4</b>	<b>1991-00</b>
4G64	82 112
Stop light switch/Int. luz stop	<b>24720</b>

**MITSUBISHI Cont.**

<b>Montero 2.5 TD</b>	<b>1990-91</b>
4 D 56 T	64 87
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41235</b>
<b>Montero 2.5 TD Classic</b>	<b>2002 -&gt;</b>
4 D 56 T	85 115
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero 2.5 TD Sport</b>	<b>1998 -&gt;</b>
4 D 56 T	73 99
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24600</b>
Stop light switch/Int. luz stop	2 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>24720</b>
2 terminals/bornes	<b>41247</b>
<b>Montero 2.5 TD Sport</b>	<b>2002 -&gt;</b>
4 D 56 T	85 115
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24600</b>
Stop light switch/Int. luz stop	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>24720</b>
2 terminals/bornes	<b>41247</b>
<b>Montero 2.5 TD Sport</b>	<b>2003 -&gt;</b>
4 D 56 T	98 133
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24600</b>
Stop light switch/Int. luz stop	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>24720</b>
2 terminals/bornes	<b>41247</b>
<b>Montero 2.5 TD, 4x4, Todo terreno abierta</b>	<b>1990-00</b>
4 D 56 TD	73 99
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24600</b>
Stop light switch/Int. luz stop	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>24720</b>
2 terminals/bornes	<b>41247</b>
<b>Montero 2.5 TD, Todo terreno abierta</b>	<b>1986-89</b>
4 D 56 T	62 84
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41235</b>
-> 10.1988	
<b>Montero 2.5 TD, Todo terreno abierta</b>	<b>1989-90</b>
4 D 56 T	70 95
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41235</b>
<b>Montero 2.6 Todo terreno abierta</b>	<b>1983-90</b>
4G54	76 103
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41235</b>
<b>Montero 2.8 TD</b>	<b>1994-00</b>
4M40-T/4 M 40	92 125
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
<b>Montero 3.0 V6</b>	<b>1988-90</b>
6G72	104 141
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41235</b>
<b>Montero 3.0 V6 24V</b>	<b>1994-00</b>
6G72	133 181
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero 3.0 V6 24V</b>	<b>1997-00</b>
6G72	130 177
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24600</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero 3.0 V6 4x4</b>	<b>1990-95</b>
6G72	110 150
Rev. light switch/Int. luz marcha atrás	<b>41235</b>
<b>Montero 3.0 V6 Sport</b>	<b>1998 -&gt;</b>
6G72	130 177
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero 3.0 V6 Sport</b>	<b>2000 -&gt;</b>
6G72	125 170
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero 3.2 DI-D Classic</b>	<b>2005 -&gt;</b>
4M41	118 160
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>Montero 3.5 V6 24V</b>	<b>1994-00</b>
6G74 DOHC	153 208
Stop light switch/Int. luz stop	<b>24720</b>
<b>Montero 3.5 V6 24V</b>	<b>1997-00</b>
6G74 DOHC	143 194
Stop light switch/Int. luz stop	<b>24720</b>
<b>Montero III 2.5 TDi</b>	<b>2000 -&gt;</b>
4 D 56 T	73 99
Oil press. switch/Int. pres. aceite	<b>11730</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero III 2.5 TDi</b>	<b>2001 -&gt;</b>
4 D 56 T	85 115
Oil press. switch/Int. pres. aceite	<b>11730</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>41247</b>
<b>Montero III 3.2 DI-D</b>	<b>2000-01</b>
4M41	121 165
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>



**MITSUBISHI Cont.**

<b>Montero III 3.2 DI-D</b>	2001 ->
4M41	118 160
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
<b>Montero III 3.5 V6 GDI</b>	2000 ->
6G74 DOHC	149 203
Oil press. switch/Int. pres. aceite	11730
<b>Montero iO 1.8</b>	2001 ->
4G93	84 114
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41248
<b>Montero iO 1.8 GDI</b>	1999 ->
4G93	88 120
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41248
<b>Montero iO 2.0 GDI</b>	2000 ->
4G94	95 129
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41248
<b>Montero IV 3.8 V6</b>	2007 ->
6G75	184 250
Oil press. switch/Int. pres. aceite	12830
<b>Outlander I2.0 4WD</b>	2003 ->
	177 241
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12830
Rev. light switch/Int. luz marcha atrás	41240
<b>Outlander I2.0 4WD</b>	2003 ->
4 G 63	93 126
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12830
Rev. light switch/Int. luz marcha atrás	41240
<b>Outlander I2.0 Turbo 4WD</b>	2004 ->
4 G 63 T	148 201
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12830
Rev. light switch/Int. luz marcha atrás	41240
<b>Outlander I2.0, 4WD</b>	2003 ->
4 G 63	100 136
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12830
Rev. light switch/Int. luz marcha atrás	41240
<b>Outlander I2.4 4WD</b>	2003 ->
4G64 (GDI)	102 139
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12830
<b>Outlander I2.4 4WD</b>	2003 ->
4G69	119 160
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	12830
<b>Outlander II 2.0 DI-D</b>	2007 ->
BSY	103 140
Oil press. switch/Int. pres. aceite	12890
Stop light switch/Int. luz stop	24720
<b>Outlander II 2.4 Mivec</b>	2007 ->
4B12	125 170
Oil press. switch/Int. pres. aceite	12830
<b>Sapporo III 2.4</b>	1987-90
4G64	91 124
Oil press. switch/Int. pres. aceite	11610
<b>Sigma 3.0 Station Wagon</b>	1993-96
6G72	125 170
Rev. light switch/Int. luz marcha atrás	41240
<b>Sigma 3.0 V6</b>	1990-96
6G72	130 177
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41240
<b>Sigma 3.0 V6</b>	1990-96
6G72	151 205
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Gear 2.0 16V</b>	1995-00
4 G 63	85 115
Stop light switch/Int. luz stop	24720
<b>Space Gear 2.0 16V</b>	1996-00
4 G 63	83 113
Stop light switch/Int. luz stop	24720
<b>Space Gear 2.4 i</b>	1995-00
4G64	97 132
Stop light switch/Int. luz stop	24720
<b>Space Gear 2.4 i 4x4</b>	1995-00
4G64	97 132
Stop light switch/Int. luz stop	24720
<b>Space Gear 2.5 TD</b>	1995-00
4 D 56 T	64 87
Stop light switch/Int. luz stop	24720
<b>Space Gear 2.5 TD, 4X4</b>	1995-00
4 D 56 TD	73 99
Stop light switch/Int. luz stop	24720
<b>Space Runner 1.8, 4x4</b>	1991-99
4G93	90 122
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Runner 1.8, 4x4</b>	1996-99
4G93	85 116
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Runner 2.0</b>	1999 ->
4 G 63	100 136
Oil press. switch/Int. pres. aceite	11730

**MITSUBISHI Cont.**

<b>Space Runner 2.0 16V</b>	1997-99
4 G 63	98 133
Oil press. switch/Int. pres. aceite	11730
<b>Space Runner 2.0 TD</b>	1992-99
4 D 68 T/4D68 T	60 82
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Runner 2.4 GDI</b>	1999 ->
4G64 (GDI)	110 150
Oil press. switch/Int. pres. aceite	11610
<b>Space Star 1.3 16V</b>	1998 ->
4 G 13 (16 V)	63 86
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40600
<b>Space Star 1.3 16V</b>	1998 ->
4 G 13 (16 V)	61 83
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40600
<b>Space Star 1.3 16V</b>	2000 ->
4 G 13 (16 V)	60 82
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40600
<b>Space Star 1.6 16V</b>	2001 ->
4G18	72 98
Rev. light switch/Int. luz marcha atrás	40600
<b>Space Star 1.8 GDI</b>	1998 ->
4G93	90 122
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40600
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Star 1.8 GDI</b>	1998 ->
4G93	87 118
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Star 1.8 MPI</b>	2002 ->
4G93	82 112
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Star 1.9 DI-D</b>	2001 ->
F9Q1	75 102
Rev. light switch/Int. luz marcha atrás	40990
<b>Space Star 1.9 DI-D</b>	2002 ->
F9Q2	85 115
Rev. light switch/Int. luz marcha atrás	40990
<b>Space Wagon 1.8 TD</b>	1986-91
4 D 65 T	55 75
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 1.8 TD</b>	1991-98
4 D 65 T	55 75
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 1.8, 4x4</b>	1991-98
4G93	90 122
Oil press. switch/Int. pres. aceite	11730
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 2.0 4x4</b>	1985-91
4G63	75 102
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 2.0 GLXi, 4x4</b>	1988-91
4G63	74 101
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 2.0 TD</b>	1992-98
4D68 T	60 82
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 2.0, 4x4</b>	1992-98
4 G 63	98 133
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Temp. sending unit/Termo-Resistencia	31570
Fan switch/Termocontacto ventilador	36480
Rev. light switch/Int. luz marcha atrás	41240
<b>Space Wagon 2.4 GDI, 4x4</b>	1998 ->
4G64 (GDI)	110 150
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	Automatic
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	Manual
<b>Space Wagon 2.4 GDI, 4x4</b>	2000 ->
4G64 (GDI)	108 147
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	Automatic
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	Manual

**MITSUBISHI Cont.**

<b>Starion 2.6 Turbo ECi</b>	<b>1987-90</b>
G 54 B T/C	114 155
Stop light switch/Int. luz stop	<b>24720</b>

**NISSAN**

<b>100 NX 1.6</b>	<b>1990-94</b>
GA16DS	66 90
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Rev. light switch/Int. luz marcha atrás	<b>40800</b>
Rev. light switch/Int. luz marcha atrás	<b>40820</b>
<b>100 NX 1.6 SR</b>	<b>1993-94</b>
GA16DE	75 102
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Rev. light switch/Int. luz marcha atrás	<b>40820</b>
<b>100 NX 2.0 GTI</b>	<b>1991-94</b>
SR20DE	105 143
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Rev. light switch/Int. luz marcha atrás	<b>40820</b>
<b>200 SX 1.8 Turbo</b>	<b>1988-93</b>
CA18DET	124 169
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
<b>200 SX 2.0 i 16V</b>	<b>1988-93</b>
SR20DE	103 140
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
Fan switch/Termocontacto ventilador	<b>37760</b>
<b>200 SX 2.0 i 16V Turbo</b>	<b>1993-99</b>
SR20DET	147 200
Oil press. switch/Int. pres. aceite	<b>12420</b>
<b>300 ZX 3.0 Turbo</b>	<b>1987-90</b>
VG30ET	149 203
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Rev. light switch/Int. luz marcha atrás	<b>40800</b>
<b>300 ZX 3.0 Turbo</b>	<b>1984-90</b>
VG30T	168 228
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Rev. light switch/Int. luz marcha atrás	<b>40800</b>
<b>300 ZX 3.0 Twin Turbo</b>	<b>1990-95</b>
VG30DETT	208 283
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Rev. light switch/Int. luz marcha atrás	<b>40800</b>
<b>300 ZX 3.0 Twin Turbo</b>	<b>1990-95</b>
VG30DETT	197 268
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>
Rev. light switch/Int. luz marcha atrás	<b>40800</b>
<b>350 Z 3.5, Roadster</b>	<b>2003 -&gt;</b>
VQ35DE	206 280
Stop light switch/Int. luz stop	<b>24495</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>350 Z 3.5, Roadster</b>	<b>2006 -&gt;</b>
VQ35DE	221 301
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>350 Z 3.5, Roadster</b>	<b>2005 -&gt;</b>
VQ35HR	230 313
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera 2.0 Tino</b>	<b>2000 -&gt;</b>
SR20DE	100 136
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Temp. sending unit/Termo-Resistencia	<b>31680</b>
<b>Almera I 1.4 GX, LX, Fastback</b>	<b>1995-00</b>
GA14DE	55 75
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40810</b>
<b>Almera I 1.4, Fastback</b>	<b>1995-00</b>
GA14DE	64 87
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40810</b>
<b>Almera I 1.6 SLX, SR, Fastback</b>	<b>1995-00</b>
GA16DE	66 90
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40810</b>

**NISSAN Cont.**

<b>Almera I 1.6, Fastback</b>	<b>1995-00</b>
GA16DE	73 99
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40810</b>
<b>Almera I 2.0 D, Fastback</b>	<b>1995-00</b>
CD20	55 75
Oil press. switch/Int. pres. aceite	-> 04.1996 <b>12230</b>
Oil press. switch/Int. pres. aceite	04.1996 -> <b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Rev. light switch/Int. luz marcha atrás	<b>40820</b>
<b>Almera I 2.0 Gti</b>	<b>1996-00</b>
SR20DE	105 143
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24450</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40820</b>
<b>Almera II 1.5 dCi, Fastback</b>	<b>2003 -&gt;</b>
K9K 722	60 82
Oil press. switch/Int. pres. aceite	<b>12630</b>
Stop light switch/Int. luz stop	<b>24495</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>40998</b>
Rev. light switch/Int. luz marcha atrás	<b>40999</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera II 1.5, Fastback</b>	<b>2000 -&gt;</b>
QG15DE	66 90
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera II 1.5, Fastback</b>	<b>2002 -&gt;</b>
QG15DE	72 98
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera II 1.8, Fastback</b>	<b>2000 -&gt;</b>
QG18DE	84 114
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera II 1.8, Fastback</b>	<b>2002 -&gt;</b>
QG18DE	85 116
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera II 2.2 dCi, Fastback</b>	<b>2003 -&gt;</b>
YD22DDT	82 112
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
<b>Almera II 2.2 dCi, Fastback</b>	<b>2003 -&gt;</b>
YD22DDTi	100 136
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
<b>Almera II 2.2 Di, Fastback</b>	<b>2000 -&gt;</b>
YD22DDT	81 110
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Temp. sending unit/Termo-Resistencia	<b>31650</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
<b>Almera Tino 1.8</b>	<b>2000 -&gt;</b>
QG18DE	84 114
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Temp. sending unit/Termo-Resistencia	<b>31680</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera Tino 1.8</b>	<b>2002 -&gt;</b>
QG18DE	85 116
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera Tino 2.2 dCi</b>	<b>2003 -&gt;</b>
YD22DDT	82 112
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera Tino 2.2 dCi</b>	<b>2003 -&gt;</b>
YD22DDTi	100 136
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Almera Tino 2.2 Di</b>	<b>2000 -&gt;</b>
YD22DDTi	84 115
Oil press. switch/Int. pres. aceite	<b>12420</b>
Stop light switch/Int. luz stop	<b>24495</b>
Temp. sending unit/Termo-Resistencia	<b>31680</b>
Rev. light switch/Int. luz marcha atrás	<b>40825</b>
Rev. light switch/Int. luz marcha atrás	<b>41255</b>
<b>Bluebird 1.6, Fastback</b>	<b>1986-90</b>
CA16S	61 83
Oil press. switch/Int. pres. aceite	<b>12420</b>
Rev. light switch/Int. luz marcha atrás	<b>40810</b>
<b>Bluebird 1.6, Fastback</b>	<b>1986-91</b>
CA16S	66 90
Fan switch/Termocontacto ventilador	<b>37520</b>
Rev. light switch/Int. luz marcha atrás	<b>40810</b>
<b>Bluebird 1.8 i 16V, Fastback</b>	<b>1989-90</b>
CA18D	95 129
Oil press. switch/Int. pres. aceite	<b>12420</b>
Temp. sending unit/Termo-Resistencia	<b>31580</b>

3 Terminals/bornes

**NISSAN Cont.**

<b>Bluebird 1.8 Turbo, Fastback</b>		1984-90
CA18T		99 135
Oil press. switch/Int. pres. aceite		12420
Temp. sending unit/Termo-Resistencia		31580
<b>Bluebird 2.0 D, Fastback, S.W.</b>		1986-90
LD20		49 67
Oil press. switch/Int. pres. aceite		12420
<b>Bluebird 2.0 i, Fastback, Station Wagon</b>		1988-90
CA20E		85 115
Fan switch/Termocontacto ventilador		37520
<b>Bluebird 2.0 Station Wagon</b>		1986-90
CA20S		75 102
Oil press. switch/Int. pres. aceite		12420
Rev. light switch/Int. luz marcha atrás		40810
<b>Interstar dCi 100</b>		2003 ->
		73 99
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 100</b>		2006 ->
G9U 720		74 101
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 120</b>		2002 ->
G9U 720		84 115
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 120</b>		2006 ->
G9U 720		88 120
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 140</b>		2003 ->
ZD30		100 136
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 150</b>		2006 ->
		107 140
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 80</b>		2002 ->
F9Q 772		60 82
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Interstar dCi 90</b>		2002 ->
G9T 722		66 90
Oil press. switch/Int. pres. aceite		12635
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Rev. light switch/Int. luz marcha atrás		40600
<b>Kubistar 1.2</b>		2003 ->
D7F 764		44 60
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.2 16V</b>		2006 ->
D4F 712		55 75
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.5 dCi</b>		2003 ->
K9K 722		60 82
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.5 dCi</b>		2003 ->
K9K 704		48 65
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999

**NISSAN Cont.**

<b>Kubistar 1.5 dCi</b>		2003 ->
		42 57
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.5 dCi</b>		2005 ->
		45 61
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.5 dCi 70</b>		2006 ->
K9K 700		50 68
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.5 dCi 85</b>		2006 ->
K9K 276		62 85
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Kubistar 1.6 16V</b>		2003 ->
K4M 752		70 95
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JB3	40600
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio JH3	40999
<b>Maxima 3.0 i</b>		1988-94
VG30E		125 170
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31580
<b>Maxima QX 2.0, SW</b>		1995 ->
VQ20DE		103 140
Oil press. switch/Int. pres. aceite		12420
<b>Maxima QX 3.0</b>		1995-00
VQ30DE		142 193
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
<b>Maxima QX 3.0 V6 24V</b>		2000 ->
VQ30DE		147 200
Oil press. switch/Int. pres. aceite		12420
<b>Micra 1.0</b>		1982-89
MA10S		40 54
Oil press. switch/Int. pres. aceite		12420
Fan switch/Termocontacto ventilador		36360
<b>Micra 1.0</b>		1982-89
MA10S		37 50
Oil press. switch/Int. pres. aceite		12420
Fan switch/Termocontacto ventilador		36360
Fan switch/Termocontacto ventilador		37440
<b>Micra 1.0</b>		1982-91
		43 58
Fan switch/Termocontacto ventilador		36360
<b>Micra 1.0 16V</b>		2003 ->
CG10DE		48 65
Oil press. switch/Int. pres. aceite		12420
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Micra 1.0 i 16V</b>		1992-00
CG10DE		40 54
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24490
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás	-> 07.2000	40810
Rev. light switch/Int. luz marcha atrás	07.2000 ->	40825
Rev. light switch/Int. luz marcha atrás	07.2000 ->	41255
<b>Micra 1.0 i 16V</b>		2000-03
CG10DE		44 60
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24495
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás		40810
Rev. light switch/Int. luz marcha atrás		40825
Rev. light switch/Int. luz marcha atrás		41255
<b>Micra 1.2</b>		1986-92
MA12S		44 60
Oil press. switch/Int. pres. aceite		12420
Fan switch/Termocontacto ventilador		36360
<b>Micra 1.2</b>		1986-92
MA12S		40 54
Oil press. switch/Int. pres. aceite		12420
Fan switch/Termocontacto ventilador		36360

**NISSAN Cont.**

<b>Micra 1.2 16V</b>		2003 ->	
CR12DE/CG12DE		59 80	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24495	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 1.2 16V</b>		2003 ->	
CR12DE/CG12DE		48 65	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24495	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 1.3 i 16V</b>		1992-00	
CG13DE		55 75	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24490	
Temp. sending unit/Termo-Resistencia		31680	
Rev. light switch/Int. luz marcha atrás		40810	
<b>Micra 1.4 16V</b>		2003 ->	
CR14DE		65 88	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24495	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 1.4 i 16V</b>		2000-03	
CGA3DE		60 82	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24495	
Rev. light switch/Int. luz marcha atrás		40825	
Rev. light switch/Int. luz marcha atrás		41255	
<b>Micra 1.5 D</b>		1998-03	
TD15		42 57	
Oil press. switch/Int. pres. aceite	-> 12.1999	12460	
Oil press. switch/Int. pres. aceite	12.1999 ->	12640	
Temp. sending unit/Termo-Resistencia		31680	
Rev. light switch/Int. luz marcha atrás	08.2000 ->	40492	
Rev. light switch/Int. luz marcha atrás	-> 07.2000	40570	
Rev. light switch/Int. luz marcha atrás	08.2000 ->	40810	
Rev. light switch/Int. luz marcha atrás	With/Con cable	40810	
<b>Micra 1.5 dCi</b>		2003 ->	
K9K 704		48 65	
Oil press. switch/Int. pres. aceite	-> 05.2005	12630	
Oil press. switch/Int. pres. aceite	05.2005 ->	12636	
Stop light switch/Int. luz stop		24495	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 1.5 dCi</b>		2003 ->	
K9K 722		60 82	
Oil press. switch/Int. pres. aceite	-> 05.2005	12630	
Oil press. switch/Int. pres. aceite	05.2005 ->	12636	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 1.5 dCi</b>		2005 ->	
		50 68	
Oil press. switch/Int. pres. aceite		12701	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 1.5 dCi</b>		2005 ->	
K9K 276		63 86	
Oil press. switch/Int. pres. aceite		12701	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra 160 SR, C+C</b>		2005 ->	
HR 16 DE		81 110	
Oil press. switch/Int. pres. aceite		12555	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Micra C+C 1.4 16V</b>		2005 ->	
CR14DE		65 88	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24495	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Murano 3.5 4x4</b>		2005 ->	
VQ35DE		172 234	
Oil press. switch/Int. pres. aceite		12420	
<b>Navara 2.5 dCi, 4WD</b>		2005 ->	
YD25DDTi		106 144	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Navara 2.5 dCi, 4WD</b>		2005 ->	
YD25DDTi		128 174	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Navara 2.5 dCi, 4WD</b>		2006 ->	
YD25DDTi		126 171	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Note 1.4</b>		2006 ->	
CR14DE		65 88	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Note 1.5 dCi</b>		2006 ->	
K9K 700		50 68	
Oil press. switch/Int. pres. aceite		12701	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Note 1.5 dCi</b>		2006 ->	
K9K 276		63 86	
Oil press. switch/Int. pres. aceite		12701	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	

**NISSAN Cont.**

<b>Note 1.6</b>		2006 ->	
HR 16 DE		81 110	
Oil press. switch/Int. pres. aceite		12555	
Rev. light switch/Int. luz marcha atrás	3 Terminales/bornes	40998	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Pathfinder 2.5 dCi, 4WD</b>		2005 ->	
YD25DDTi		128 174	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Pathfinder 2.5 dCi, 4WD</b>		2006 ->	
YD25DDTi		126 171	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Pathfinder 3.3 V6 4WD</b>		1997-04	
VG33E		125 170	
Oil press. switch/Int. pres. aceite		12420	
<b>Pathfinder 3.3 V6 4WD</b>		1998-00	
VG33E		110 150	
Oil press. switch/Int. pres. aceite		12420	
<b>Pathfinder 3.5 V6 4WD</b>		2000-04	
VQ35		162 220	
Oil press. switch/Int. pres. aceite	-> 09.2001	12420	
Oil press. switch/Int. pres. aceite	09.2001 ->	12555	
<b>Pathfinder 4.0, 4WD</b>		2005 ->	
VQ40DE		198 269	
Oil press. switch/Int. pres. aceite		12555	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol 2.8 Hardtop</b>		1986-90	
L28		88 120	
Oil press. transmitter/Transm. pres. aceite		14710	
Temp. sending unit/Termo-Resistencia		31380	
Rev. light switch/Int. luz marcha atrás		40530	
<b>Patrol 2.8 TD, Hardtop, SW</b>		1986-95	
RD28T		85 116	
Oil press. switch/Int. pres. aceite		12420	
Oil press. transmitter/Transm. pres. aceite		14130	
Oil press. transmitter/Transm. pres. aceite		14720	
Stop light switch/Int. luz stop		24350	
Temp. sending unit/Termo-Resistencia		31400	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol 3.2 D, Hardtop, SW</b>		1988-90	
		81 110	
Oil press. transmitter/Transm. pres. aceite		14810	
Stop light switch/Int. luz stop		24350	
Temp. sending unit/Termo-Resistencia		31400	
<b>Patrol GR I 2.8 TD</b>		1988-97	
RD28T		85 116	
Oil press. switch/Int. pres. aceite		12420	
Oil press. transmitter/Transm. pres. aceite		14130	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31580	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol GR I 4.2 Kat</b>		1988-97	
TB42E		121 165	
Oil press. switch/Int. pres. aceite		12420	
Oil press. transmitter/Transm. pres. aceite		14130	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31580	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol GR II 2.8 TD</b>		1997-00	
RD28Ti		95 129	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31650	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol GR II 2.8 TDiC</b>		1997-00	
RD28Ti		96 131	
Oil press. switch/Int. pres. aceite		12420	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol GR II 3.0 DTi</b>		2000 ->	
ZD30DDTi		116 158	
Oil press. switch/Int. pres. aceite		12420	
Oil press. switch/Int. pres. aceite		12555	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31650	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Patrol GR II 3.0 DTi</b>		2000 ->	
ZD30DDTi		118 160	
Oil press. switch/Int. pres. aceite		12420	
Oil press. switch/Int. pres. aceite	0.15 bar	12555	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Pick Up 2.4 i 12V, 4WD</b>		1992-98	
KA24E		91 124	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31650	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Pick Up 2.4 i 4WD</b>		2002 ->	
KA24E		98 133	
Oil press. switch/Int. pres. aceite		12420	
Oil press. switch/Int. pres. aceite		12555	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31650	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Pick Up 2.4 i, 4WD</b>		1998 ->	
KA24E		88 120	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31650	
Rev. light switch/Int. luz marcha atrás		40800	
<b>Pick Up 2.5 D, 4WD</b>		1996 ->	
TD25		61 83	
Oil press. switch/Int. pres. aceite		12420	
Stop light switch/Int. luz stop		24450	
Temp. sending unit/Termo-Resistencia		31650	
Rev. light switch/Int. luz marcha atrás		40800	

**NISSAN Cont.**

<b>Pick Up 2.5 D, 4WD</b>		1987-98
TD25		59 80
Oil press. switch/Int. pres. aceite		12420
<b>Pick Up 2.5 D, 4WD</b>		1986-91
SD25		55 75
Oil press. switch/Int. pres. aceite		12420
<b>Pick Up 2.5 Di, 4WD</b>		2002 ->
YD25DDTi		98 133
Oil press. switch/Int. pres. aceite		12420
Oil press. switch/Int. pres. aceite		12555
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31650
Rev. light switch/Int. luz marcha atrás		40800
<b>Pick Up 2.5 TD 4WD</b>		1998 ->
TD25Ti		76 103
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31650
Rev. light switch/Int. luz marcha atrás		40800
<b>Prairie Pro 2.0 i, 4x4</b>		1988-92
CA20E		72 98
Oil press. switch/Int. pres. aceite		12420
Rev. light switch/Int. luz marcha atrás		40846
<b>Prairie Pro 2.4 i, 4x4</b>		1992-94
KA24E		98 133
Oil press. switch/Int. pres. aceite		12420
Temp. sending unit/Termo-Resistencia		31580
<b>Primastar 2.0</b>		2001 ->
F4R 722/F4R 720		88 120
Oil press. switch/Int. pres. aceite	0.20 bar	12630
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Oil press. switch/Int. pres. aceite	0.60 bar	12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar 2.0</b>		2003 ->
F4R 720		88 120
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar dCi 100</b>		2001 ->
F9Q 760		74 101
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar dCi 120</b>		2006 ->
		84 114
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Oil press. switch/Int. pres. aceite	0.60 bar	12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar dCi 140</b>		2003 ->
G9U 730		99 135
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar dCi 150</b>		2006 ->
G9U 632		107 145
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar dCi 80</b>		2001 ->
F9Q 762		60 80
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primastar dCi 90</b>		2006 ->
M9R 782		66 90
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40600
<b>Primera 1.6 16 Visia Kombi</b>		2002 ->
QG16DE		80 109
Oil press. switch/Int. pres. aceite	-> 01.2003	12420
Oil press. switch/Int. pres. aceite	01.2003 ->	12555
Rev. light switch/Int. luz marcha atrás		40825
Rev. light switch/Int. luz marcha atrás		41255

**NISSAN Cont.**

<b>Primera 1.6 16V, Fastback</b>		1996-02
QG16DE		78 106
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás	-> 07.2000	40820
Rev. light switch/Int. luz marcha atrás	08.2000 ->	40825
Rev. light switch/Int. luz marcha atrás	08.2000 ->	41255
<b>Primera 1.6 16V, Fastback, Traveller</b>		1996-02
GA16DE		73 99
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6 16V, Fastback, Traveller</b>		1996-02
GA16DE		66 90
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24450
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6 i Traveller</b>		1990-98
GA16DS		66 90
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24490
Fan switch/Termocontacto ventilador		37550
Fan switch/Termocontacto ventilador		37760
Fan switch/Termocontacto ventilador		37760
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6 i Traveller</b>		1994-98
GA16DE		75 102
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24490
Fan switch/Termocontacto ventilador		37550
Fan switch/Termocontacto ventilador		37760
Fan switch/Termocontacto ventilador		37760
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6, Fastback</b>		1990-96
GA16DS		66 90
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24490
Fan switch/Termocontacto ventilador		37550
Fan switch/Termocontacto ventilador		37760
Fan switch/Termocontacto ventilador		37760
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6, Fastback</b>		1990-96
GA16DS		71 97
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24490
Fan switch/Termocontacto ventilador		37550
Fan switch/Termocontacto ventilador		37760
Fan switch/Termocontacto ventilador		37760
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6, Fastback</b>		1993-96
GA16DE		75 102
Stop light switch/Int. luz stop		24490
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás		40820
<b>Primera 1.6, Fastback</b>		2002 ->
QG16DE		78 106
Oil press. switch/Int. pres. aceite	-> 01.2003	12420
Oil press. switch/Int. pres. aceite	01.2003 ->	12555
Stop light switch/Int. luz stop		24495
Rev. light switch/Int. luz marcha atrás		40825
Rev. light switch/Int. luz marcha atrás		41255
<b>Primera 1.6, Fastback</b>		2002 ->
QG16DE		80 109
Oil press. switch/Int. pres. aceite	-> 01.2003	12420
Oil press. switch/Int. pres. aceite	01.2003 ->	12555
Rev. light switch/Int. luz marcha atrás		40825
Rev. light switch/Int. luz marcha atrás		41255
<b>Primera 1.8 16V, Fastback, Traveller</b>		1999-01
QG18DE		84 114
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24495
Temp. sending unit/Termo-Resistencia		31680
Rev. light switch/Int. luz marcha atrás		40825
Rev. light switch/Int. luz marcha atrás		41255
<b>Primera 1.8, Fastback, Kombi</b>		2002 ->
QG18DE		85 115
Oil press. switch/Int. pres. aceite	-> 01.2003	12420
Oil press. switch/Int. pres. aceite	01.2003 ->	12555
Stop light switch/Int. luz stop		24495
Rev. light switch/Int. luz marcha atrás		40825
Rev. light switch/Int. luz marcha atrás		41255
<b>Primera 1.9 dCi, Fastback, Kombi</b>		2003 ->
		88 120
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Stop light switch/Int. luz stop		24495
Rev. light switch/Int. luz marcha atrás		40825
<b>Primera 2.0 16V, Fastback</b>		1996-02
SR20DE		110 150
Oil press. switch/Int. pres. aceite		12420
Rev. light switch/Int. luz marcha atrás	-> 05.1999	40820
Rev. light switch/Int. luz marcha atrás	06.1999 ->	40825
Rev. light switch/Int. luz marcha atrás	06.1999 ->	41255
Rev. light switch/Int. luz marcha atrás		41255
<b>Primera 2.0 16V, Fastback, 4x4</b>		1990-96
SR20DI		85 115
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop		24490
Rev. light switch/Int. luz marcha atrás	-> 08.1990	40810
Rev. light switch/Int. luz marcha atrás	09.1990 ->	40820

**NISSAN Cont.**

<b>Primera 2.0 16V, Traveller</b>	1996-02
SR20DE	96 131
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24495
Temp. sending unit/Termo-Resistencia	31680
Rev. light switch/Int. luz marcha atrás	40820
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	41255
Rev. light switch/Int. luz marcha atrás	41255
<b>Primera 2.0 16V, Traveller</b>	1996-02
SR20De	85 115
Oil press. switch/Int. pres. aceite	12420
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
<b>Primera 2.0 16V, Traveller</b>	1999-02
SR20DE	103 140
Oil press. switch/Int. pres. aceite	12420
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>Primera 2.0 D, Fastback, Traveller</b>	1990-96
CD20	55 75
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24490
Temp. sending unit/Termo-Resistencia	31580
Temp. sending unit/Termo-Resistencia	02.1993 ->
Temp. sending unit/Termo-Resistencia	02.1993 ->
Rev. light switch/Int. luz marcha atrás	31680
Rev. light switch/Int. luz marcha atrás	40820
<b>Primera 2.0 Fastback</b>	1990-96
SR20DE	110 150
Oil press. transmitter/Transm. pres. aceite	14130
Stop light switch/Int. luz stop	24490
Temp. sending unit/Termo-Resistencia	31680
Rev. light switch/Int. luz marcha atrás	08.1990 ->
Rev. light switch/Int. luz marcha atrás	40810
<b>Primera 2.0 GT</b>	1990-96
SR20DE	110 150
Oil press. switch/Int. pres. aceite	12420
Oil press. transmitter/Transm. pres. aceite	14130
Stop light switch/Int. luz stop	24490
Temp. sending unit/Termo-Resistencia	31680
Rev. light switch/Int. luz marcha atrás	08.1990 ->
Rev. light switch/Int. luz marcha atrás	40810
<b>Primera 2.0 i Traveller</b>	1990-98
SR20Di	85 116
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31650
Rev. light switch/Int. luz marcha atrás	40820
<b>Primera 2.0 i, Fastback</b>	1995-96
SR20DE	92 125
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31650
Rev. light switch/Int. luz marcha atrás	40820
<b>Primera 2.0 TD, Fastback, Traveller</b>	1996-02
CD20T	66 90
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24495
Temp. sending unit/Termo-Resistencia	31680
Rev. light switch/Int. luz marcha atrás	05.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
Rev. light switch/Int. luz marcha atrás	06.1999 ->
<b>Primera 2.0, Fastback, Kombi</b>	2002 ->
QR20DE	103 140
Oil press. switch/Int. pres. aceite	12555
Stop light switch/Int. luz stop	24495
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>Primera 2.2 dCi, Fastback, Kombi</b>	2003 ->
YD22DDT	102 139
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24495
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>Primera 2.2 Di, Fastback, Kombi</b>	2002 ->
YD22DDT	93 126
Oil press. switch/Int. pres. aceite	12420
Oil press. switch/Int. pres. aceite	01.2003 ->
Stop light switch/Int. luz stop	01.2003 ->
Rev. light switch/Int. luz marcha atrás	24495
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>Qashqai 1.5 dCi</b>	2007 ->
HR 16 DE	78 106
Oil press. switch/Int. pres. aceite	12701
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Qashqai 1.6</b>	2007 ->
HR 16 DE	84 114
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Qashqai 2.0 dCi, Allrad</b>	2007 ->
M1D/M9R	110 150
Oil press. switch/Int. pres. aceite	12420
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>Qashqai 2.0, Allroad</b>	2007 ->
MR20DE	103 140
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
Rev. light switch/Int. luz marcha atrás	41255

**NISSAN Cont.**

<b>Serena 2.0 16V</b>	1992 ->
SR20DE	93 126
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40800
<b>Serena 2.0 16V</b>	1993 ->
GA16DE	71 97
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40800
<b>Serena 2.0 D</b>	1992 ->
LD20	49 67
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40800
<b>Serena 2.3 D</b>	1995 ->
LD23	55 75
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40800
<b>Sunny 1.6 i 16V Furgón</b>	1992-00
GA16DE	66 90
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40820
<b>Sunny 1.7 D Furgón</b>	1990-00
CD17	40 54
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Fan switch/Termocontacto ventilador	37550
Rev. light switch/Int. luz marcha atrás	40820
<b>Sunny I 1.3 Traveller</b>	1982-90
E13	44 60
Fan switch/Termocontacto ventilador	36100
<b>Sunny II 1.3, Fastback</b>	1986-91
E13S	44 60
Oil press. switch/Int. pres. aceite	12420
Fan switch/Termocontacto ventilador	37530
<b>Sunny II 1.4 LX, Fastback</b>	1988-91
GA14S	55 75
Oil press. switch/Int. pres. aceite	12420
Fan switch/Termocontacto ventilador	37760
<b>Sunny II 1.6 GTI 16V, Coupe, Fastback</b>	1987-89
CA16D	81 110
Oil press. switch/Int. pres. aceite	12420
Rev. light switch/Int. luz marcha atrás	40810
<b>Sunny II 1.6 i 12V, Coupe, Fastback</b>	1986-91
GA16i	66 90
Oil press. switch/Int. pres. aceite	12420
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40810
<b>Sunny II 1.6 i, Coupe, Traveller, 4x4</b>	1986-90
E16i	54 73
Oil press. switch/Int. pres. aceite	12420
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40810
<b>Sunny II 1.7 D, Traveller</b>	1986-91
CD17	40 54
Oil press. switch/Int. pres. aceite	12420
<b>Sunny II 1.8 GTI 16V, Coupe, Fastback</b>	1989-91
CA18D	92 125
Oil press. switch/Int. pres. aceite	12420
<b>Sunny III 1.4 i</b>	1990-95
GA14DE /GA14DS	55 75
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Temp. sending unit/Termo-Resistencia	11.1992 ->
Temp. sending unit/Termo-Resistencia	11.1992 ->
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40810
<b>Sunny III 1.4 i 16V</b>	1990-95
GA14DE	64 87
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Temp. sending unit/Termo-Resistencia	11.1992 ->
Temp. sending unit/Termo-Resistencia	11.1992 ->
Rev. light switch/Int. luz marcha atrás	40810
<b>Sunny III 1.6 i</b>	1990-95
GA16DE/GA16DEL/GA16DS	66 90
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40820
<b>Sunny III 1.6 i 16V 4WD, Traveller</b>	1990-95
GA16DS	66 90
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40820
<b>Sunny III 1.6 i 16V, 4x4, Liftback, Traveller</b>	1992-00
GA16DE	75 102
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Fan switch/Termocontacto ventilador	37760
Rev. light switch/Int. luz marcha atrás	40820

**NISSAN Cont.**

<b>Sunny III 1.6 i Traveller</b>	1991-00
GA16DE/GA16DS	66 90
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Fan switch/Termocontacto ventilador	37760
Fan switch/Termocontacto ventilador Automatic	37770
Rev. light switch/Int. luz marcha atrás	40820
<b>Sunny III 2.0 D, Liftback, Traveller</b>	1990-00
CD20	55 75
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Temp. sending unit/Termo-Resistencia	11.1992 ->
Rev. light switch/Int. luz marcha atrás	31650
<b>Sunny III 2.0 GTI 16V</b>	1990-95
SR20DE	105 143
Oil press. switch/Int. pres. aceite	12420
Oil press. transmitter/Transm. pres. aceite	14130
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Temp. sending unit/Termo-Resistencia	11.1992 ->
Rev. light switch/Int. luz marcha atrás	40820
<b>Sunny III 2.0 GTI-R 4x4 Fastback</b>	1990-95
SR20DET	162 220
Oil press. switch/Int. pres. aceite	12420
Oil press. transmitter/Transm. pres. aceite	14130
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31580
Temp. sending unit/Termo-Resistencia	11.1992 ->
Rev. light switch/Int. luz marcha atrás	40820
<b>Terrano I 2.4 i 4WD</b>	1987-93
Z24i	76 103
Oil press. switch/Int. pres. aceite	12420
Rev. light switch/Int. luz marcha atrás	40800
<b>Terrano I 2.7 TD 4WD</b>	1989-96
TD27T	73 99
Oil press. switch/Int. pres. aceite	12420
<b>Terrano I 3.0 i 4WD</b>	1990-95
VG30E	109 148
Oil press. switch/Int. pres. aceite	12420
Temp. sending unit/Termo-Resistencia	31580
Rev. light switch/Int. luz marcha atrás	41250
<b>Terrano II 2.4 4WD</b>	1996-02
KA24E	85 116
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31520
Rev. light switch/Int. luz marcha atrás	40800
<b>Terrano II 2.4 4WD</b>	1996 ->
KA24E	87 118
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31520
Rev. light switch/Int. luz marcha atrás	40800
<b>Terrano II 2.4 i 12V 4WD</b>	1993-96
KA24E	91 124
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31520
Rev. light switch/Int. luz marcha atrás	40800
<b>Terrano II 2.7 TD 4WD</b>	1993-02
TD27T	74 101
Oil press. switch/Int. pres. aceite	12420
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	12940
Temp. sending unit/Termo-Resistencia	24450
Rev. light switch/Int. luz marcha atrás	31520
<b>Terrano II 2.7 TDi 4WD</b>	1996 ->
TD27Ti	92 125
Oil press. switch/Int. pres. aceite	12420
Oil press. switch/Int. pres. aceite	12620
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31520
Rev. light switch/Int. luz marcha atrás	40800
<b>Terrano II 3.0 Di 4WD</b>	2002 ->
ZD30	113 154
Oil press. switch/Int. pres. aceite	12420
Rev. light switch/Int. luz marcha atrás	40800
<b>Tiida 1.5 dCi Fastback, Sedan</b>	2007 ->
	78 106
Oil press. switch/Int. pres. aceite	12701
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Tiida 1.6 Fastback, Sedan</b>	2007 ->
HR 16 DE	81 110
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Tiida 1.8 Fastback, Sedan</b>	2007 ->
MR18DE	93 126
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Urvan 2.0</b>	1987-97
Z20	64 87
Rev. light switch/Int. luz marcha atrás	40530
<b>Urvan 2.3 D</b>	1988-97
TD23	51 69
Rev. light switch/Int. luz marcha atrás	40530
<b>Urvan 2.4 i</b>	1989-93
Z24i	74 101
Oil press. switch/Int. pres. aceite	12420
Temp. sending unit/Termo-Resistencia	31580
Rev. light switch/Int. luz marcha atrás	40530

**NISSAN Cont.**

<b>Urvan 2.5 D</b>	1989-96
TD25	59 80
Rev. light switch/Int. luz marcha atrás	40530
<b>Vanette 1.5</b>	1986-95
A15S	51 69
Oil press. switch/Int. pres. aceite	12230
Oil press. switch/Int. pres. aceite	12420
Stop light switch/Int. luz stop	25060
Temp. sending unit/Termo-Resistencia	31250
<b>Vanette 2.0 D</b>	1986-95
LD20	47 64
Oil press. switch/Int. pres. aceite	12420
Temp. sending unit/Termo-Resistencia	31250
Rev. light switch/Int. luz marcha atrás	40530
<b>Vanette 2.0 D</b>	1986-95
LD20	49 67
Oil press. switch/Int. pres. aceite	12420
Temp. sending unit/Termo-Resistencia	31250
Rev. light switch/Int. luz marcha atrás	40530
<b>Vanette 2.0 D</b>	1991-95
LD20II	49 67
Oil press. switch/Int. pres. aceite	12420
Temp. sending unit/Termo-Resistencia	31250
Rev. light switch/Int. luz marcha atrás	40530
<b>Vanette 2.4 i</b>	1986-95
Z24i	74 101
Temp. sending unit/Termo-Resistencia	31250
<b>Vanette 2.4 i</b>	1986-95
Z24i	77 105
Temp. sending unit/Termo-Resistencia	31250
<b>X-Trail 2.0</b>	2007 ->
MR20DE	104 141
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.0 dCi</b>	2007 ->
M9R 760	127 173
Oil press. switch/Int. pres. aceite	12701
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.0 dCi</b>	2007 ->
M9R	110 150
Oil press. switch/Int. pres. aceite	12701
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.0, 4x4</b>	2001 ->
QR20DE	103 140
Oil press. switch/Int. pres. aceite	12555
Stop light switch/Int. luz stop	24495
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.2 dCi, 4x4</b>	2003 ->
YD22DDTi	100 136
Oil press. switch/Int. pres. aceite	12555
Stop light switch/Int. luz stop	24495
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.2 Di 4x4</b>	2001 ->
YD22ETi	84 114
Oil press. switch/Int. pres. aceite	12555
Stop light switch/Int. luz stop	24495
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.5, 4x4</b>	2003 ->
QR25DE	121 165
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	41255
<b>X-Trail 2.5, 4x4</b>	2007 ->
QR25DE	124 161
Oil press. switch/Int. pres. aceite	12555
Rev. light switch/Int. luz marcha atrás	40825
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
Rev. light switch/Int. luz marcha atrás	41255

**OPEL**

<b>Agila 1.0</b>	2003 ->
Z 10 XEP	44 60
Oil press. switch/Int. pres. aceite	12436
Oil press. switch/Int. pres. aceite	Ch. 3G999999
Rev. light switch/Int. luz marcha atrás	Ch. 4G000001 ->
Rev. light switch/Int. luz marcha atrás	12439
Rev. light switch/Int. luz marcha atrás	40830
Rev. light switch/Int. luz marcha atrás	40835
<b>Agila 1.0</b>	2007 ->
K10B	48 65
Rev. light switch/Int. luz marcha atrás	40835
<b>Agila 1.0 12V</b>	2000 ->
Z 10 XE	43 58
Oil press. switch/Int. pres. aceite	12436
Oil press. switch/Int. pres. aceite	Ch. 3G999999
Rev. light switch/Int. luz marcha atrás	Ch. 4G000001 ->
Rev. light switch/Int. luz marcha atrás	12439
Rev. light switch/Int. luz marcha atrás	40830
Rev. light switch/Int. luz marcha atrás	40835
<b>Agila 1.2</b>	2007 ->
K12B	63 86
Rev. light switch/Int. luz marcha atrás	40835

**OPEL Cont.**

<b>Agila 1.2 16V</b>	2000 ->	
Z 12 XE	55 75	
Oil press. switch/Int. pres. aceite	12436	-> Ch. 3G999999
Oil press. switch/Int. pres. aceite	12439	Ch. 4G000001 ->
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F13, F17
Rev. light switch/Int. luz marcha atrás	40835	Gear box/Cambio F12
<b>Agila 1.2 16V Twinport</b>	2004 ->	
Z 12 XEP	59 80	
Oil press. switch/Int. pres. aceite	12436	-> Ch. 3G999999
Oil press. switch/Int. pres. aceite	12439	Ch. 4G000001 ->
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F13, F17
Rev. light switch/Int. luz marcha atrás	40835	Gear box/Cambio F12
<b>Agila 1.3 CDTI</b>	2003 ->	
Z 13 DT	51 70	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F13, F17
Rev. light switch/Int. luz marcha atrás	40835	Gear box/Cambio F12
<b>Agila 1.3 CDTI</b>	2007 ->	
Z 13 DTJ	55 75	
Oil press. switch/Int. pres. aceite	12430	
Rev. light switch/Int. luz marcha atrás	40835	
<b>Antara 2.0 CDTI</b>	2006 ->	
Z 20 DMH/Z 20 S	110 150	
Oil press. switch/Int. pres. aceite	12430	
<b>Antara 2.0 CDTI</b>	2007 ->	
Z 20 S	93 127	
Oil press. switch/Int. pres. aceite	12430	
<b>Antara 2.0 CDTI FWD</b>	2008 ->	
Z 20 DM	93 127	
Oil press. switch/Int. pres. aceite	12430	
<b>Antara 2.4</b>	2006 ->	
Z 24 XED	104 141	
Oil press. switch/Int. pres. aceite	12430	
Temp. sending unit/Termo-Resistencia	32070	
<b>Antara 2.4 FWD</b>	2008 ->	
Z 24 XE	103 140	
Oil press. switch/Int. pres. aceite	12430	
<b>Arena 1.9 D</b>	1998-01	
F8Q 606/F8Q 600	44 60	
Oil press. switch/Int. pres. aceite	12630	
Rev. light switch/Int. luz marcha atrás	41080	
<b>Arena 2.5 D</b>	1998-01	
S8U 780/S8U 782/S8U 758	55 75	
Rev. light switch/Int. luz marcha atrás	41080	
<b>Astra F 1.4 i 16V, Cabrio, Caravan, CC</b>	1996-01	
X 14 XE	66 90	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.4 i Classic CC</b>	1998-00	
X 14 XE	66 90	
Oil press. switch/Int. pres. aceite	12430	
<b>Astra F 1.4 i Classic, CC, Caravan, Van</b>	1991-05	
C 14 NZ	44 60	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	Climat
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.4 Si, Cabrio, Caravan, CC</b>	1992-01	
C 14 SE	60 82	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.4, Caravan, CC</b>	1991-93	
14 NV	55 75	
Oil press. switch/Int. pres. aceite	12430	
<b>Astra F 1.4, Caravan, CC</b>	1992-98	
14 SE	60 82	
Oil press. switch/Int. pres. aceite	12430	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
<b>Astra F 1.6 i 16V, Caravan, CC, Classic</b>	1994-05	
X 16 XEL	74 100	
Oil press. switch/Int. pres. aceite	12430	Nº 20C17332 ->
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40830	
<b>Astra F 1.6 i Classic, Caravan, CC, Sedan</b>	1998-02	
X 16 SZR	55 75	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	

**OPEL Cont.**

<b>Astra F 1.6 i Van</b>	1991-93	
C 16 NZ	55 75	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.6 i, Cabrio</b>	1996-01	
X 16 SZR	55 75	
Oil press. switch/Int. pres. aceite	12430	-> 08.1996
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.6 i, Cabrio, Caravan, CC, Van</b>	1993-96	
X 16 SZ	52 71	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.6 i, Caravan, CC</b>	1991-98	
C 16 NZ/X 16 SZR	55 75	
Oil press. switch/Int. pres. aceite	12430	-> 08.1996
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36190	C 16 NZ
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	37280	X 16 SZR
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.6 Si, Caravan, CC</b>	1992-94	
C 16 SE	74 100	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36190	16 NZR
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	37280	16 LZ2
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	
<b>Astra F 1.7 D, Caravan, CC, Van</b>	1991-92	
17 D	42 57	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	Nº 02BF1477,19241624 ->
<b>Astra F 1.7 D, Caravan, CC, Van</b>	1992-99	
17 DR	44 60	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36260	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	Nº 02BF1477,19241624 ->
<b>Astra F 1.7 TD, Caravan, CC, Van</b>	1994-99	
X 17 DTL	50 68	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Stop light switch/Int. luz stop	24515	
Temp. sending unit/Termo-Resistencia	32700	
Fan switch/Termocontacto ventilador	36190	
Fan switch/Termocontacto ventilador	36260	With/con A.A.
Fan switch/Termocontacto ventilador	37280	
Fan switch/Termocontacto ventilador	38040	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38235	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510	Nº 02BF1477,19241624 ->





**OPEL Cont.**

<b>Astra G 2.0 16V Turbo Coupe</b>	<b>2000-05</b>
Z 20 LET	140 190
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24515
On clutch pedal/Int. pedal embrague	24790
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Climat
	Manual
<b>Astra G 2.0 16V, Caravan, CC</b>	<b>1998-05</b>
X 20 XEV	100 136
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Stop light switch/Int. luz stop	24515
Stop light switch/Int. luz stop	24516
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Manual
	38040
	38235
	40510
	40830
<b>Astra G 2.0 DI Furgón</b>	<b>1999-05</b>
X 20 DTL	60 82
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24516
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	Ch. 32, 36, 35, 3H, 38, 3B ->, With/Con
	Manual
	40510
<b>Astra G 2.0 DI, Caravan, CC</b>	<b>1998-05</b>
X 20 DTL/Y 20 DTL	60 82
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24516
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	Ch. 32, 36, 35, 3H, 38, 3B ->, With/Con
	Manual
	40510
<b>Astra G 2.0 DTI 16V, Caravan, CC</b>	<b>1999-05</b>
Y 20 DTH/X 20 DTH	74 101
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24515
On clutch pedal/Int. pedal embrague	24790
Temp. sending unit/Termo-Resistencia	Ch. 32, 36, 35, 3H, 38, 3B ->, With/Con
Fan switch/Termocontacto ventilador	32230
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.
	38235
	40510
<b>Astra G 2.0 OPC, Cabrio, Caravan, Coupe</b>	<b>2002-04</b>
Z 20 LER	147 200
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Stop light switch/Int. luz stop	24515
Fan switch/Termocontacto ventilador	Nº T2500634, T8100001 ->
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Manual
	40510
<b>Astra G 2.0 OPC, Caravan, CC</b>	<b>2002-05</b>
Z 20 LET	141 192
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24515
On clutch pedal/Int. pedal embrague	24790
Fan switch/Termocontacto ventilador	Ch. 32, 36, 35, 3H, 38, 3B ->, With/Con
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Manual
	40510
<b>Astra G 2.2 16V, Caravan, CC, Coupe</b>	<b>2000-05</b>
Z 22 SE	108 147
Stop light switch/Int. luz stop	24310
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24515
Stop light switch/Int. luz stop	24516
On clutch pedal/Int. pedal embrague	24790
Fan switch/Termocontacto ventilador	Ch. 32, 36, 35, 3H, 38, 3B ->, With/Con
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Manual
	40510
<b>Astra G 2.2 DTI, Caravan, CC, Coupe</b>	<b>2002-05</b>
Y 22 DTR	92 125
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24499
On clutch pedal/Int. pedal embrague	24790
<b>Astra G CC 2.0 16V OPC</b>	<b>1999-02</b>
X 20 XER	118 160
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Stop light switch/Int. luz stop	24505
Stop light switch/Int. luz stop	24516
On clutch pedal/Int. pedal embrague	24790
Fan switch/Termocontacto ventilador	Cruise control/Control veloc.
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Climat
	Manual
	40510

**OPEL Cont.**

<b>Astra G CC 2.0 OPC</b>	<b>2002-05</b>
Z 20 LET/Z 20 LER	147 200
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24515
On clutch pedal/Int. pedal embrague	24790
Fan switch/Termocontacto ventilador	Ch. 32, 36, 35, 3H, 38, 3B ->, With/Con
Fan switch/Termocontacto ventilador	36260
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Climat
Rev. light switch/Int. luz marcha atrás	Manual
	40510
<b>Astra H 1.2, GTC</b>	<b>2005 -&gt;</b>
Z 12 XEP	59 80
Oil press. switch/Int. pres. aceite	12439
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.2, GTC</b>	<b>2006 -&gt;</b>
X 12 XE	48 65
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.3 CDTI, Caravan, GTC, Sedan</b>	<b>2005 -&gt;</b>
Z 13 DTH	66 90
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.4</b>	<b>2004-04</b>
Z 14 XEL	59 80
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.4, Caravan, GTC</b>	<b>2004 -&gt;</b>
Z 14 XEP	66 90
Oil press. switch/Int. pres. aceite	0.55 bar
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	12439
Stop light switch/Int. luz stop	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.6 CNG, Caravan, GTC</b>	<b>2005 -&gt;</b>
Z 16 YNG	69 94
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.6 LPG Caravan</b>	<b>2009 -&gt;</b>
Z 16 XER	85 116
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.6 Turbo, Caravan, GTC</b>	<b>2007 -&gt;</b>
Z 16 LET	132 180
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.6, Caravan, GTC, Sedan</b>	<b>2004 -&gt;</b>
Z 16 XE1/Z 16 XEP	77 105
Oil press. switch/Int. pres. aceite	Ch. 20EL5306 ->
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	-> Ch. 20EL5305, Gray/gris
Stop light switch/Int. luz stop	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.6, Caravan, GTC, Sedan</b>	<b>2006 -&gt;</b>
Z 16 XER	85 116
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.7 CDTi Sedan</b>	<b>2007 -&gt;</b>
Z 17 DTJ	81 110
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.7 CDTI, Caravan</b>	<b>2007 -&gt;</b>
A 17 DTJ/Z 17 DTJ	81 110
Oil press. switch/Int. pres. aceite	12438
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830
<b>Astra H 1.7 CDTI, Caravan, GTC</b>	<b>2004 -&gt;</b>
Z 17 DTL	59 80
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual
	40830

**OPEL Cont.**

<b>Astra H 1.7 CDTI, Caravan, GTC, Sedan</b>		2004 ->	
Z 17 DTH		74 101	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.7 CDTI, GTC</b>		2007 ->	
A 17 DTJ		81 110	
Oil press. switch/Int. pres. aceite		12438	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.7 CDTI, GTC</b>		2007 ->	
A 17 DTR		92 125	
Oil press. switch/Int. pres. aceite		12438	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.8, Caravan, GTC</b>		2004 ->	
Z 18 XE		92 125	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38235	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.8, Caravan, GTC, Sedan</b>		2005 ->	
Z 18 XER/A 18 XER		103 140	
Oil press. switch/Int. pres. aceite		12436	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.9 CDTI 16V, Caravan, GTC</b>		2004 ->	
Z 19 DTJ		88 120	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.9 CDTI Caravan</b>		2004 ->	
		103 140	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.9 CDTI, Caravan, GTC</b>		2004 ->	
Z 19 DTH		110 150	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.9 CDTI, Caravan, GTC</b>		2004 ->	
Z 19 DT		88 120	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 1.9 CDTI, Caravan, GTC</b>		2005 ->	
Z 19 DTL		74 100	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 2.0 Turbo, Caravan, GTC</b>		2004 ->	
Z 20 LEL		125 170	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 2.0 Turbo, Caravan, GTC, TwinTop</b>		2004 ->	
Z 20 LER		147 200	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra H 2.0 Turbo, GTC</b>		2005 ->	
Z 20 LEH		177 240	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Stop light switch/Int. luz stop		24795	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40511	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32, Manual	40830	
<b>Astra J</b>		2009 ->	
A 14 XEL		64 87	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J</b>		2009 ->	
A 14 XER		74 100	
Rev. light switch/Int. luz marcha atrás		40511	

**OPEL Cont.**

<b>Astra J</b>		2009 ->	
A 16 XER		85 115	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J</b>		2009 ->	
A 14 NET		103 140	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J</b>		2009 ->	
A 16 LET		132 180	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J</b>		2009 ->	
A 13 DTE		70 95	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J 1.7 CDTI</b>		2009 ->	
A 17 DTJ		81 110	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J 1.7 CDTI</b>		2009 ->	
A 17 DTR		92 125	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Astra J 2.0 CDTI</b>		2009 ->	
A 20 DTH		118 160	
Rev. light switch/Int. luz marcha atrás		40511	
<b>Calibra A 2.0 i 16V, 4x4</b>		1990-94	
C 20 XE		110 150	
Oil press. switch/Int. pres. aceite		12430	
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14010	
Stop light switch/Int. luz stop		24310	
Stop light switch/Int. luz stop		24515	
Temp. sending unit/Termo-Resistencia		32230	
Fan switch/Termocontacto ventilador		36260	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38040	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38235	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Calibra A 2.0 i 16V, 4x4</b>		1994-97	
X 20 XEV		100 136	
Oil press. switch/Int. pres. aceite		12430	
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14010	
Stop light switch/Int. luz stop		24310	
Stop light switch/Int. luz stop		24515	
Temp. sending unit/Termo-Resistencia		32230	
Fan switch/Termocontacto ventilador		36260	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38040	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38235	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Calibra A 2.0 i Turbo 4x4</b>		1992-97	
C 20 LET		150 204	
Oil press. switch/Int. pres. aceite		12430	
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14010	
Stop light switch/Int. luz stop		24310	
Stop light switch/Int. luz stop		24515	
Temp. sending unit/Termo-Resistencia		32230	
Fan switch/Termocontacto ventilador		36260	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38040	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38235	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Calibra A 2.0 i, 4x4</b>		1990-97	
C 20 NE		85 115	
Oil press. switch/Int. pres. aceite		12430	
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14010	
Stop light switch/Int. luz stop		24310	
Stop light switch/Int. luz stop		24515	
Temp. sending unit/Termo-Resistencia		32230	
Fan switch/Termocontacto ventilador		36260	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38040	
Fan switch/Termocontacto ventilador	Climat	38235	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Calibra A 2.5 i V6</b>		1993-97	
X 25 XE/C 25 XE		125 170	
Oil press. switch/Int. pres. aceite		12430	
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14010	
Stop light switch/Int. luz stop		24310	
Stop light switch/Int. luz stop		24515	
Temp. sending unit/Termo-Resistencia	C 25 XE	32230	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38225	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Campo 2.3, 4x4</b>		1991-94	
4 ZD1		69 94	
Oil press. switch/Int. pres. aceite		12540	
<b>Campo 2.3, 4x4</b>		1994-96	
23 P		72 98	
Oil press. switch/Int. pres. aceite		12540	
Temp. sending unit/Termo-Resistencia		31570	
Rev. light switch/Int. luz marcha atrás		41260	
<b>Campo 2.5 D, 4x4</b>		1991-94	
4 JA1		56 76	
Rev. light switch/Int. luz marcha atrás		41260	
<b>Campo 2.5 TD, 4x4</b>		1994 ->	
4 JA1T		56 76	
Rev. light switch/Int. luz marcha atrás		41260	
<b>Campo 3.1 TD, 4x4</b>		1992 ->	
4 JG2T		80 109	
Rev. light switch/Int. luz marcha atrás		41260	
<b>Combo 1.2</b>		1994-01	
C 12 NZ/X 12 SZ		33 45	
Oil press. switch/Int. pres. aceite		12430	
Temp. sending unit/Termo-Resistencia		32230	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Combo 1.3 CDTI 16V Furgón/Kombi</b>		2005 ->	
Z 13 DT		51 69	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Combo 1.3 CDTI 16V Tour</b>		2004 ->	
Y 13 DT/Z 13 DT		51 69	
Oil press. switch/Int. pres. aceite		12430	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790	
Rev. light switch/Int. luz marcha atrás		40830	

**OPEL Cont.**

<b>Combo 1.3 CDTI 16V, Furgón/Kombi, Tour</b>	<b>2005 -&gt;</b>	
Z 13 DTJ	55 75	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24790</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24795</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.4</b>	<b>1994-01</b>	
C 14 NZ/X 14 SZ	44 60	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	X14SZ
Fan switch/Termocontacto ventilador	<b>37280</b>	
Fan switch/Termocontacto ventilador	<b>38220</b>	Climat
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Combo 1.4</b>	<b>1994-01</b>	
C 14 SE	60 82	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	
Fan switch/Termocontacto ventilador	<b>38220</b>	Climat
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Combo 1.4 16V Furgón/Kombi, Tour</b>	<b>2004 -&gt;</b>	
Z 14 XEP	66 90	
Oil press. switch/Int. pres. aceite	<b>12436</b>	
On clutch pedal/Int. pedal embrague	<b>24790</b>	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.6 16V, Furgón/Kombi, Tour</b>	<b>2006 -&gt;</b>	
Z 16 YNG	69 94	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24790</b>	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.6 CNG 16V, Furgón/Kombi, Tour</b>	<b>2005 -&gt;</b>	
Z 16 YNG	71 97	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24790</b>	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.6, Furgón/Kombi, Tour</b>	<b>2001 -&gt;</b>	
Z 16 SE	64 87	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
On clutch pedal/Int. pedal embrague	<b>24499</b>	-> Ch. 33999999, 35, 37, With/Con cruise
On clutch pedal/Int. pedal embrague	<b>24790</b>	Ch. 43000001, 44, 46 ->, With/Con cruise
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.7 CDTI 16V Furgón/Kombi, Tour</b>	<b>2004 -&gt;</b>	
Z 17 DTH	74 101	
On clutch pedal/Int. pedal embrague	<b>24790</b>	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.7 D</b>	<b>1994-01</b>	
17 D (4EE1)/X 17 D (4EE1)	44 60	
Oil press. switch/Int. pres. aceite	<b>12230</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35790</b>	
Fan switch/Termocontacto ventilador	<b>36190</b>	X 17 D (4EE1)
Fan switch/Termocontacto ventilador	<b>36260</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	17 D (4EE1)
Fan switch/Termocontacto ventilador	<b>38030</b>	Without/sin A.A.
Fan switch/Termocontacto ventilador	<b>38040</b>	Climat
Fan switch/Termocontacto ventilador	<b>38210</b>	Without/sin A.A.
Fan switch/Termocontacto ventilador	<b>38235</b>	Climat
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.7 DI 16V, Furgón/Kombi, Tour</b>	<b>2001 -&gt;</b>	
Y 17 DTL	48 65	
On clutch pedal/Int. pedal embrague	<b>24499</b>	-> Ch. 33999999, 35, 37, With/Con cruise
On clutch pedal/Int. pedal embrague	<b>24790</b>	Ch. 43000001, 44, 46 ->, With/Con cruise
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Combo 1.7 DTI 16V Furgón/Kombi, Tour</b>	<b>2001 -&gt;</b>	
Y 17 DT	55 75	
On clutch pedal/Int. pedal embrague	<b>24499</b>	-> Ch. 33999999, 35, 37, With/Con cruise
On clutch pedal/Int. pedal embrague	<b>24790</b>	Ch. 43000001, 44, 46 ->, With/Con cruise
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>Corsa A 1.0, CC, TR, Furgón</b>	<b>1982-93</b>	
10 S	33 45	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> Ch. J4999999, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
<b>Corsa A 1.2 i, CC, TR</b>	<b>1989-93</b>	
C 12 NZ	33 45	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.2 N CC</b>	<b>1990-93</b>	
12 NV	38 52	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	2 terminals/bornes
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.2 S, CC, Furgón, TR</b>	<b>1982-93</b>	
12 ST	40 54	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> Ch. J4999999, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	2 terminals/bornes
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.2 S, CC, TR</b>	<b>1982-90</b>	
12 S	44 60	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> Ch. J4999999, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	2 terminals/bornes
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
<b>Corsa A 1.2, Furgón, CC</b>	<b>1982-90</b>	
E 12 GV/12 NC	33 45	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> Ch. J4999999, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	2 terminals/bornes
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	

**OPEL Cont.**

<b>Corsa A 1.3 i CC</b>	<b>1986-90</b>	
C 13 N	44 60	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.3, CC, Furgón, S, TR</b>	<b>1982-89</b>	
13 SB	51 70	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> Ch. J4999999, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.3, Furgón, CC</b>	<b>1985-89</b>	
13 NB	44 60	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> Ch. J4999999, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14690</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.4 i CC, TR</b>	<b>1989-93</b>	
C 14 NZ	44 60	
Oil press. switch/Int. pres. aceite	<b>12500</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
<b>Corsa A 1.4 S, CC, TR</b>	<b>1989-93</b>	
14 NV	53 72	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
<b>Corsa A 1.4 Si CC</b>	<b>1991-93</b>	
C 14 SE	60 82	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	
<b>Corsa A 1.5 D, CC, Furgón, TR</b>	<b>1987-93</b>	
15 D (4EC1)	37 50	
Oil press. switch/Int. pres. aceite	<b>12230</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37880</b>	-> Ch.K4000001
Fan switch/Termocontacto ventilador	<b>38030</b>	-> Ch.J4999999
Fan switch/Termocontacto ventilador	<b>38060</b>	Ch. K4000001 -> K4999999
Rev. light switch/Int. luz marcha atrás	<b>40380</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	Ch. K4000001 ->
<b>Corsa A 1.5 TD, CC, TR</b>	<b>1987-93</b>	
15 DT (T4EC1)	49 67	
Oil press. switch/Int. pres. aceite	<b>12230</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37880</b>	-> Ch.K4000001
Fan switch/Termocontacto ventilador	<b>38030</b>	-> Ch.J4999999
Fan switch/Termocontacto ventilador	<b>38060</b>	Ch. K4000001 -> K4999999
Rev. light switch/Int. luz marcha atrás	<b>40380</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	Ch. K4000001 ->
<b>Corsa A 1.6 GSI CC</b>	<b>1989-93</b>	
C 16 SEI	72 98	
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	Ch. K14000001 ->
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	Ch. K4000001 ->
Fan switch/Termocontacto ventilador	<b>37410</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40380</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	Ch. K4000001 ->
<b>Corsa A 1.6 GSI CC</b>	<b>1988-92</b>	
E 16 SE	74 100	
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	Ch. K14000001 ->
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	Ch. K4000001 ->
Fan switch/Termocontacto ventilador	<b>37410</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40380</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	Ch. K4000001 ->
<b>Corsa A 1.6 GSI CC</b>	<b>1988-92</b>	
C 16 NZ	55 75	
Oil press. switch/Int. pres. aceite	<b>12430</b>	Ch. K4000001 ->
Oil press. switch/Int. pres. aceite	<b>12500</b>	-> Ch. K4000000
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>	Ch. K14000001 ->
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	Ch. K4000001 ->
Fan switch/Termocontacto ventilador	<b>37410</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40380</b>	-> Ch. J4999999
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	Ch. K4000001 ->
<b>Corsa A CC</b>	<b>1992-93</b>	
C 16 SE	74 101	
Oil press. transmitter/Transm. pres. aceite	<b>14560</b>	2 terminals/bornes
<b>Corsa B 1.0 i 12V</b>	<b>1996-00</b>	
X 10 XE	40 54	
Oil press. switch/Int. pres. aceite	<b>12436</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	
Fan switch/Termocontacto ventilador	<b>38040</b>	Ch. W400133,W6024731 ->
Fan switch/Termocontacto ventilador	<b>38220</b>	-> Ch.W400132,W6024730
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	-> 12.1997
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	01.1998 ->
<b>Corsa B 1.2 i</b>	<b>1993-00</b>	
C 12 NZ/X 12 SZ	33 45	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
<b>Corsa B 1.2 i</b>	<b>1993-00</b>	
12 NZ	33 45	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24200</b>	
Temp. sending unit/Termo-Resistencia	<b>32230</b>	
Fan switch/Termocontacto ventilador	<b>37280</b>	
Fan switch/Termocontacto ventilador	<b>38220</b>	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	

**OPEL Cont.**

<b>Corsa B 1.2 i 16V</b>	<b>1998-00</b>
X 12 XE	48 65
Oil press. switch/Int. pres. aceite	12436
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.4 i</b>	<b>1993-00</b>
C 14 NZ/X 14 SZ	44 60
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa B 1.4 i 16V</b>	<b>1994-00</b>
X 14 XE	66 90
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.4 i 16V</b>	<b>1997-00</b>
C 14 SEL	63 86
Oil press. switch/Int. pres. aceite	12436
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa B 1.4 i Furgón</b>	<b>1999-00</b>
X 14 SZ	44 60
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.4 i 16V</b>	<b>1993-00</b>
C 14 SE	60 82
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.4 Si</b>	<b>1993-00</b>
C 14 SE	60 82
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.5 D</b>	<b>1993-00</b>
15 D (4EC1)	37 50
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Temp. s. warning lamp/Termocont. temp.	35790
Fan switch/Termocontacto ventilador	38030
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.5 TD</b>	<b>1993-00</b>
X 15 DT (T4EC1)/15 DT (T4EC1)	49 67
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Temp. s. warning lamp/Termocont. temp.	35790
Fan switch/Termocontacto ventilador	38030
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.6 GSI 16V</b>	<b>1993-00</b>
C 16 XE	80 109
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.6 i 16V</b>	<b>1994-00</b>
X 16 XE	78 106
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.6 i 16V</b>	<b>1997-00</b>
C 16 SEL	74 100
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador	38220
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa B 1.7 D, Furgón</b>	<b>1996-00</b>
17 D (4EE1)/X 17 D (4EE1)	44 60
Oil press. switch/Int. pres. aceite	12230
Stop light switch/Int. luz stop	24200
Temp. sending unit/Termo-Resistencia	32230
Temp. s. warning lamp/Termocont. temp.	35790
Fan switch/Termocontacto ventilador	38030
Fan switch/Termocontacto ventilador	38040
Fan switch/Termocontacto ventilador	38210
Fan switch/Termocontacto ventilador	38235
Rev. light switch/Int. luz marcha atrás	40510

**OPEL Cont.**

<b>Corsa C 1.0</b>	<b>2000 -&gt;</b>
Z 10 XE	43 58
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.0</b>	<b>2003 -&gt;</b>
Z 10 XEP	44 60
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.2 Furgón</b>	<b>2005 -&gt;</b>
Z 12 XEP	59 80
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.2 Twinport</b>	<b>2004 -&gt;</b>
Z 12 XEP	59 80
Oil press. switch/Int. pres. aceite	12436
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.2, Furgón</b>	<b>2000 -&gt;</b>
Z 12 XE	55 75
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.3 CDTI, 16V Furgón</b>	<b>2003 -&gt;</b>
Z 13 DT	51 70
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.4</b>	<b>2000 -&gt;</b>
Z 14 XE	66 90
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Temp. sending unit/Termo-Resistencia	32230
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa C 1.4, Furgón, Twinport</b>	<b>2003 -&gt;</b>
Z 14 XEP	66 90
Oil press. switch/Int. pres. aceite	12436
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.7 CDTI, Furgón</b>	<b>2003 -&gt;</b>
Z 17 DTH	74 100
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Corsa C 1.7 Di, Furgón</b>	<b>2000 -&gt;</b>
Y 17 DTL	48 65
Oil press. switch/Int. pres. aceite	12230
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa C 1.7 DTI, Furgón</b>	<b>2000 -&gt;</b>
Y 17 DT	55 75
Oil press. switch/Int. pres. aceite	12230
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa C 1.8</b>	<b>2000 -&gt;</b>
Z 18 XE	92 125
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24499
Stop light switch/Int. luz stop	24517
Stop light switch/Int. luz stop	24519
On clutch pedal/Int. pedal embrague	24790
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa D</b>	<b>2010 -&gt;</b>
A 13 DTR/Z 13 DTE	70 95
Rev. light switch/Int. luz marcha atrás	40511
<b>Corsa D</b>	<b>2010 -&gt;</b>
A 17 DTS	96 130
Rev. light switch/Int. luz marcha atrás	40511
<b>Corsa D</b>	<b>2010 -&gt;</b>
A 12 XEL	51 69
Rev. light switch/Int. luz marcha atrás	40511
<b>Corsa D</b>	<b>2010 -&gt;</b>
A 12 XER	63 86
Rev. light switch/Int. luz marcha atrás	40511
<b>Corsa D</b>	<b>2010 -&gt;</b>
A 14 XER	74 100
Rev. light switch/Int. luz marcha atrás	40511

**OPEL Cont.**

<b>Corsa D 1.0</b>	2006 ->	
Z 10 XEP	44 60	
Oil press. switch/Int. pres. aceite	12436	0.55 bar
Oil press. switch/Int. pres. aceite	12439	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.2</b>	2006 ->	
Z 12 XEP	59 80	
Oil press. switch/Int. pres. aceite	12436	0.55 bar
Oil press. switch/Int. pres. aceite	12439	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.2 ecoFLEX</b>	2009 ->	
Z 12 XEP	59 80	
Oil press. switch/Int. pres. aceite	12436	
Rev. light switch/Int. luz marcha atrás	40511	
<b>Corsa D 1.3 CDTI</b>	2006 ->	
A 13 DTC/Z 13 DTJ	55 75	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.3 CDTI</b>	2006 ->	
Z 13 DTH	66 90	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.4</b>	2006 ->	
Z 14 XEP	66 90	
Oil press. switch/Int. pres. aceite	12436	0.55 bar
Oil press. switch/Int. pres. aceite	12439	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.4 ecoFLEX</b>	2009 ->	
A 14 XEL	64 87	
Oil press. switch/Int. pres. aceite	12436	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.6 Turbo</b>	2007 ->	
A 16 LER/Z 16 LER	141 192	
Oil press. switch/Int. pres. aceite	12439	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.6 Turbo</b>	2007 ->	
Z 16 LEL/A 16 LEL	110 150	
Oil press. switch/Int. pres. aceite	12439	
On clutch pedal/Int. pedal embrague	24790	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Corsa D 1.7 CDTI</b>	2006 ->	
Z 17 DTR	92 125	
Oil press. switch/Int. pres. aceite	12438	
Stop light switch/Int. luz stop	24795	
Rev. light switch/Int. luz marcha atrás	40505	Gear box/Cambio F35, Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	40511	
Rev. light switch/Int. luz marcha atrás	40830	Gear box/Cambio F17/F23/F40/M32, Manual
<b>Frontera A 2.0 i Sport</b>	1992-98	
C 20 NE/X 20 SE	85 115	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	38310	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	41260	
<b>Frontera A 2.2 i</b>	1995-98	
X 22 XE	100 136	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24310	
Fan switch/Termocontacto ventilador	38310	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	41260	
<b>Frontera A 2.3 TD</b>	1992-98	
23 DTR	74 100	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	-> 08.1995
Fan switch/Termocontacto ventilador	36200	
Rev. light switch/Int. luz marcha atrás	41260	
<b>Frontera A 2.4 i</b>	1992-98	
C 24 NE	92 125	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24310	
Fan switch/Termocontacto ventilador	38310	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	41260	
<b>Frontera A 2.5 TDS, Sport</b>	1996-98	
25TDS (VM41B)	85 115	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Rev. light switch/Int. luz marcha atrás	41260	

**OPEL Cont.**

<b>Frontera A 2.8 TD, Sport</b>	1995-98	
28 TDI (4JB1T)	83 113	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Rev. light switch/Int. luz marcha atrás	41260	
<b>Frontera B 2.2 DTI</b>	1998-02	
X 22 DTH/Y 22 DTH	85 116	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24600	
Temp. sending unit/Termo-Resistencia	32230	
Rev. light switch/Int. luz marcha atrás	41260	Manual
<b>Frontera B 2.2 DTI</b>	2002 ->	
Y 22 DTH	88 120	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24600	
Temp. sending unit/Termo-Resistencia	32230	
Rev. light switch/Int. luz marcha atrás	41260	Manual
<b>Frontera B 2.2 i</b>	1998 ->	
X 22 SE/Y 22 SE	100 136	
Oil press. switch/Int. pres. aceite	12430	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24600	
Rev. light switch/Int. luz marcha atrás	41260	Manual
<b>Frontera B 3.2 i</b>	1998 ->	
Y 32 NE/6 VD1	151 205	
Oil press. switch/Int. pres. aceite	12430	
Oil press. transmitter/Transm. pres. aceite	14010	
Stop light switch/Int. luz stop	24600	
Rev. light switch/Int. luz marcha atrás	41260	Manual
<b>Kadett E 1.3 i Kat, Caravan, CC</b>	1985-91	
C 13 N	44 60	
Oil press. switch/Int. pres. aceite	12430	1 terminals/bornes
Oil press. switch/Int. pres. aceite	12500	3 terminals/bornes
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36220	Ch. JE222259,J2791968 ->
Fan switch/Termocontacto ventilador	37280	Ch. J5273428,J2791968 ->
Fan switch/Termocontacto ventilador	37410	-> Ch. J5273427,J2791967
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->
<b>Kadett E 1.3 N, Caravan, Combo</b>	1984-91	
13 N	44 60	
Oil press. switch/Int. pres. aceite	12500	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36220	Ch. JE222259,J2791968 ->
Fan switch/Termocontacto ventilador	37280	Ch. J5273428,J2791968 ->
Fan switch/Termocontacto ventilador	37410	-> Ch. J5273427,J2791967
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->
<b>Kadett E 1.3 N, CC, Van</b>	1984-91	
13 NB/13 N	44 60	
Oil press. switch/Int. pres. aceite	0.35 bar	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36220	Ch. JE222259,J2791968 ->
Fan switch/Termocontacto ventilador	37280	Ch. J5273428,J2791968 ->
Fan switch/Termocontacto ventilador	37410	-> Ch. J5273427,J2791967
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->
<b>Kadett E 1.3 S, Cabrio, Combo</b>	1986-93	
13 S	55 75	
Oil press. switch/Int. pres. aceite	12500	
<b>Kadett E 1.4 i, Cabrio, Caravan, CC, Combo</b>	1990-94	
C 14 NZ	44 60	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	36220	Ch. JE222259,J2791968 ->
Fan switch/Termocontacto ventilador	37280	Ch. J5273428,J2791968 ->
Fan switch/Termocontacto ventilador	37410	-> Ch. J5273427,J2791967
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->
<b>Kadett E 1.4 S CC</b>	1989-91	
C 14 SE	60 82	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	37280	Ch. J5273428,J2791968 ->
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->
<b>Kadett E 1.4 S, Caravan, CC, Combo, Cabrio</b>	1989-93	
14 NV	55 75	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24310	
Temp. sending unit/Termo-Resistencia	32230	
Fan switch/Termocontacto ventilador	37280	Ch. J5273428,J2791968 ->
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->
<b>Kadett E 1.5 TD, Caravan, CC</b>	1988-91	
15 DT (T4EC1)	53 72	
Oil press. switch/Int. pres. aceite	12230	
Stop light switch/Int. luz stop	24310	
Fan switch/Termocontacto ventilador	37880	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	38020	Ch. L1000001 ->
Fan switch/Termocontacto ventilador	38050	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40380	-> Ch. J2791967,J5273427
Rev. light switch/Int. luz marcha atrás	40510	Ch. J2791968,J5273428 ->



**OPEL Cont.**

<b>Meriva 1.6 16V</b>		2003-10
Z 16 XE		74 100
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24519
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Rev. light switch/Int. luz marcha atrás		40830
<b>Meriva 1.6 Turbo</b>		2005-10
Z 16 LET		132 180
Oil press. switch/Int. pres. aceite		12436
Stop light switch/Int. luz stop		24519
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Rev. light switch/Int. luz marcha atrás		40830
<b>Meriva 1.7 CDTI</b>		2003-10
Z 17 DTH		74 100
Stop light switch/Int. luz stop		24519
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Rev. light switch/Int. luz marcha atrás		40830
<b>Meriva 1.7 CDTI</b>		2006-10
A 17 DTR/Z 17 DTR		92 125
Oil press. switch/Int. pres. aceite		12438
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Rev. light switch/Int. luz marcha atrás		40830
<b>Meriva 1.7 DTI</b>		2003-10
Y 17 DT		55 75
Stop light switch/Int. luz stop		24519
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Rev. light switch/Int. luz marcha atrás		40830
<b>Meriva 1.8</b>		2003-10
Z 18 XE		92 125
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24519
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Rev. light switch/Int. luz marcha atrás		40830
<b>Meriva B</b>		2010 ->
A 14 XER		74 100
Rev. light switch/Int. luz marcha atrás		40511
<b>Meriva B</b>		2010 ->
A 14 NEL		88 120
Rev. light switch/Int. luz marcha atrás		40511
<b>Meriva B</b>		2010 ->
A 14 NET		103 140
Rev. light switch/Int. luz marcha atrás		40511
<b>Meriva B</b>		2010 ->
A 17 DT		74 100
Rev. light switch/Int. luz marcha atrás		40511
<b>Meriva B</b>		2010 ->
A 13 DTE		70 95
Rev. light switch/Int. luz marcha atrás		40511
<b>Meriva B</b>		2010 ->
A 17 DTC		81 110
Rev. light switch/Int. luz marcha atrás		40511
<b>Meriva B</b>		2010 ->
A 17 DTS		96 131
Rev. light switch/Int. luz marcha atrás		40511
<b>Monterey A 3.1 TD</b>		1991-98
4 JG2TC		84 114
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop	Without/Sin cruise control	24450
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32210
Rev. light switch/Int. luz marcha atrás		41260
<b>Monterey A 3.2</b>		1992-98
6VD1		130 177
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop	Without/Sin cruise control	24450
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		41260
<b>Monterey B 3.0 DTI</b>		1998-99
4 JX1		117 159
Stop light switch/Int. luz stop	Without/Sin cruise control	24450
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		32210
<b>Monterey B 3.5 V6 24V</b>		1998-99
6 VE1		158 215
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop	Without/Sin cruise control	24450
Stop light switch/Int. luz stop		24600
Temp. sending unit/Termo-Resistencia		31570
Rev. light switch/Int. luz marcha atrás		41260
<b>Movano 1.9 DTI</b>		2000-01
F9Q 770		59 80
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 1.9 DTI</b>		2001 ->
F9Q 772/F9Q 774		60 82
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.2 DTI</b>		2000 ->
G9T 722/G9T 720/G9T 750		66 90
Oil press. switch/Int. pres. aceite	Gray/gris	12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600

**OPEL Cont.**

<b>Movano 2.5 CDTI</b>		2006 ->
G9U 650/G9U 632		107 146
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 CDTI</b>		2006 ->
G9U 650/G9U 632		88 120
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 CDTI</b>		2006 ->
G9U 650		88 120
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 CDTI</b>		2006 ->
G9U 650		74 101
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 D</b>		1999-00
S8U 772/S8U 770		59 80
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Thermistor-Thermocont./Doble función		34450
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 DTI</b>		2001 ->
G9U 754/G9U 724/G9U 720		84 115
Oil press. switch/Int. pres. aceite		12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 DTI</b>		2003 ->
G9U 754		73 99
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.5 DTI Combi</b>		2001 ->
G9U 720		84 115
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 2.8 DTI</b>		1999-01
S9W 702		84 114
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Thermistor-Thermocont./Doble función		34450
Temp. s. warning lamp/Termocont. temp.		35890
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38110
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 3.0 DTI</b>		2003 ->
ZD3 202/ZD3 200		100 136
Oil press. switch/Int. pres. aceite		12555
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Movano 3.0 DTI</b>		2003 ->
ZD3 200		100 136
Oil press. switch/Int. pres. aceite		12555
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	L.H.D.	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Omega A 1.8 S, Caravan</b>		1986-94
18 SV		66 90
Oil press. switch/Int. pres. aceite		12430
Oil press. transmitter/Transm. pres. aceite	Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite	-> Ch. K1000098	14560
Stop light switch/Int. luz stop	-> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador		37410
Rev. light switch/Int. luz marcha atrás	Ch. K1000099 ->	41170
<b>Omega A 1.8, Caravan</b>		1987-94
E 18 NVR		65 88
Oil press. switch/Int. pres. aceite		12430
Oil press. transmitter/Transm. pres. aceite	Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite	-> Ch. K1000098	14560
Stop light switch/Int. luz stop	-> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador		37410
Rev. light switch/Int. luz marcha atrás	Ch. K1000099 ->	41170
<b>Omega A 1.8, Caravan</b>		1986-94
18 SEH		85 115
Oil press. switch/Int. pres. aceite		12430
Oil press. transmitter/Transm. pres. aceite	Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite	-> Ch. K1000098	14560
Stop light switch/Int. luz stop	-> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador		37410
Rev. light switch/Int. luz marcha atrás	Ch. K1000099 ->	41170



**OPEL Cont.**

<b>Omega A 2.0 i, Caravan</b>	<b>1986-94</b>
C 20 NE	85 115
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.0, Caravan</b>	<b>1990-94</b>
C 20 NEF	74 100
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.0, Caravan</b>	<b>1990-94</b>
C 20 NEJ	73 99
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.0, Caravan</b>	<b>1986-94</b>
20 SE	90 122
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.3 D, Caravan</b>	<b>1986-94</b>
23 YD	54 73
Oil press. switch/Int. pres. aceite	12430
Oil press. switch/Int. pres. aceite Ch. K1000099 ->	12480
Oil press. transmitter/Transm. pres. aceite Ch. J1232491 ->	14010
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Temp. s. warning lamp/Termocont. temp. -> Ch. J1232492 K1000098	35800
Fan switch/Termocontacto ventilador Ch. J1232491 ->	36010
Fan switch/Termocontacto ventilador Ch. K1000099 ->	36200
Fan switch/Termocontacto ventilador Ch. K1000099 ->	36265
Fan switch/Termocontacto ventilador	36265
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.3 TD Interc., Caravan</b>	<b>1988-94</b>
23 DTR	74 100
Oil press. switch/Int. pres. aceite	12430
Oil press. switch/Int. pres. aceite Ch. K1000099 ->	12480
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Temp. s. warning lamp/Termocont. temp. -> Ch. J1232492 K1000098	35800
Fan switch/Termocontacto ventilador Ch. J1232491 ->	36010
Fan switch/Termocontacto ventilador Ch. K1000099 ->	36200
Fan switch/Termocontacto ventilador	36265
Fan switch/Termocontacto ventilador Ch. K1000099 ->	36265
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.4 i, Caravan</b>	<b>1988-94</b>
C 24 NE	92 125
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 2.6 i, Caravan</b>	<b>1990-94</b>
C 26 NE	110 150
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite Ch. K1000099 ->	14010
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás Ch. K1000099 ->	41170
<b>Omega A 3.0 24V</b>	<b>1989-94</b>
C 30 SE	150 204
Oil press. switch/Int. pres. aceite N° 0109242 ->	12430
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000099	14010
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega A 3.0 24V Caravan</b>	<b>1989-94</b>
C 30 SEJ	147 200
Oil press. switch/Int. pres. aceite N° 0109242 ->	12430
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000099	14010
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás	41170

**OPEL Cont.**

<b>Omega A 3.0, Caravan</b>	<b>1987-90</b>
30 NE	130 177
Oil press. switch/Int. pres. aceite N° 0109242 ->	12430
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000099	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Temp. sending unit/Termo-Resistencia	32230
Temp. s. warning lamp/Termocont. temp.	35510
Fan switch/Termocontacto ventilador	36010
Fan switch/Termocontacto ventilador	36265
Fan switch/Termocontacto ventilador N° 0109242 ->	36265
Fan switch/Termocontacto ventilador	36265
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega A 3.0, Caravan</b>	<b>1987-94</b>
C 30 LE	115 156
Oil press. switch/Int. pres. aceite -> N° 0109241	11410
Oil press. switch/Int. pres. aceite N° 0109242 ->	12430
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000099	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	36010
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega A 3.0, Kat, Caravan</b>	<b>1987-94</b>
C 30 NE	130 177
Oil press. switch/Int. pres. aceite N° 0109242 ->	12430
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000099	14010
Oil press. transmitter/Transm. pres. aceite -> Ch. K1000098	14560
Stop light switch/Int. luz stop -> Ch. L1019854	24200
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	36010
Fan switch/Termocontacto ventilador N° 0109242 ->	36265
Fan switch/Termocontacto ventilador	36265
Fan switch/Termocontacto ventilador	36265
Fan switch/Termocontacto ventilador	37410
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega A 3.6 24V Lotus</b>	<b>1990-92</b>
C 36 GET	277 377
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite	14010
Stop light switch/Int. luz stop -> Ch. L1019854, Automatic	24200
<b>Omega B 2.0</b>	<b>1994-00</b>
20 SE	85 115
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague Ch. S1221921 ->, With/Con cruise control	24465
On clutch pedal/Int. pedal embrague Cruise control/Control veloc.	24499
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador Without/sin A.A.	38020
Fan switch/Termocontacto ventilador Climat	38040
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega B 2.0 16V, Caravan</b>	<b>1994-99</b>
X 20 XEV	100 136
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague Ch. S1221921 ->, With/Con cruise control	24465
On clutch pedal/Int. pedal embrague -> Ch. S1221920	24499
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador Without/sin A.A.	38020
Fan switch/Termocontacto ventilador Climat	38040
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega B 2.0 DTI 16V, Caravan</b>	<b>1997-00</b>
X 20 DTH	74 101
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop Ch. W1000001 ->, With/Con cruise control	24517
Temp. sending unit/Termo-Resistencia	32230
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega B 2.0, Caravan</b>	<b>1994-99</b>
X 20 SE	85 116
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague Ch. S1221921 ->, With/Con cruise control	24465
On clutch pedal/Int. pedal embrague -> Ch. S1221920	24499
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador Without/sin A.A.	38020
Fan switch/Termocontacto ventilador Climat	38040
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega B 2.2 16V, Caravan</b>	<b>1999-03</b>
Y 22 XE/Z 22 XE	106 144
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague Ch. S1221921 ->, With/Con cruise control	24465
Stop light switch/Int. luz stop	24517
Temp. sending unit/Termo-Resistencia	32230
Fan switch/Termocontacto ventilador	37280
Fan switch/Termocontacto ventilador Climat	38040
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega B 2.2 DTI 16V, Caravan</b>	<b>2000-03</b>
Y 22 DTH	88 120
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop Ch. W1000001 ->, With/Con cruise control	24517
Temp. sending unit/Termo-Resistencia	32230
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega B 2.2 DTI 16V, Caravan</b>	<b>2000-03</b>
Y 22 DTH	81 110
Oil press. switch/Int. pres. aceite	12430
<b>Omega B 2.5 DTI, Caravan</b>	<b>2001-03</b>
Y 25 DT	110 150
Oil press. switch/Int. pres. aceite	12410
On clutch pedal/Int. pedal embrague Ch. S1221921 ->	24465
Stop light switch/Int. luz stop	24530
Fan switch/Termocontacto ventilador Climat	37710
Fan switch/Termocontacto ventilador Without/sin A.A.	38020
Rev. light switch/Int. luz marcha atrás	41170



**OPEL Cont.**

<b>Signum 3.2 V6</b>	<b>2003 -&gt;</b>
Z 32 SE	155 211
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24795</b>
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Gear box/Cambio F35	
Gear box/Cambio F17/F23/F40/M32	
<b>Sintra 2.2 DTI</b>	<b>1997-99</b>
X 22 DTH	85 116
Oil press. switch/Int. pres. aceite	<b>12430</b>
Fan switch/Termocontacto ventilador	<b>36265</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Sintra 2.2 i 16V</b>	<b>1996-99</b>
X 22 XE	104 141
Oil press. switch/Int. pres. aceite	<b>12430</b>
Fan switch/Termocontacto ventilador	<b>36265</b>
Fan switch/Termocontacto ventilador	<b>36265</b>
Fan switch/Termocontacto ventilador	<b>38040</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Without/Sin A.A.	
Climat	
12.1998 ->, Manual	
01.1999 ->, Manual	
<b>Sintra 3.0 i 24V</b>	<b>1996-99</b>
X 30 XE	148 201
Oil press. switch/Int. pres. aceite	<b>12430</b>
Fan switch/Termocontacto ventilador	<b>36265</b>
Fan switch/Termocontacto ventilador	<b>36265</b>
Fan switch/Termocontacto ventilador	<b>38040</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Without/Sin A.A.	
Climat	
12.1998 ->, Manual	
01.1999 ->, Manual	
<b>Speedster 2.0 Turbo</b>	<b>2003 -&gt;</b>
Z 20 LET	147 200
Oil press. switch/Int. pres. aceite	<b>12430</b>
<b>Speedster 2.2</b>	<b>2000 -&gt;</b>
Z 22 SE	108 147
Stop light switch/Int. luz stop	<b>24210</b>
<b>Tigra 1.3 CDTI TwinTop</b>	<b>2004 -&gt;</b>
Z 13 DT	51 69
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24519</b>
On clutch pedal/Int. pedal embrague	<b>24790</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Cruise control/Control veloc.	
<b>Tigra 1.4 16V</b>	<b>1994-00</b>
X 14 XE	66 90
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24200</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38040</b>
Fan switch/Termocontacto ventilador	<b>38220</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Ch. W400133,W6024731 ->	
-> Ch.W400132,W6024730	
-> Ch. 12.1997	
Ch. 01.1998 ->	
<b>Tigra 1.4 16V</b>	<b>1997-00</b>
X 14 XE	63 86
Oil press. switch/Int. pres. aceite	<b>12436</b>
Stop light switch/Int. luz stop	<b>24200</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38040</b>
Fan switch/Termocontacto ventilador	<b>38220</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Ch. W400133,W6024731 ->	
-> Ch.W400132,W6024730	
-> Ch. 12.1997	
Ch. 01.1998 ->	
<b>Tigra 1.4 TwinTop</b>	<b>2004 -&gt;</b>
Z 14 XEP	66 90
Oil press. switch/Int. pres. aceite	<b>12439</b>
Stop light switch/Int. luz stop	<b>24519</b>
On clutch pedal/Int. pedal embrague	<b>24790</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Cruise control/Control veloc.	
<b>Tigra 1.6 16V</b>	<b>1994-98</b>
X 16 XE	78 106
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24200</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38220</b>
Fan switch/Termocontacto ventilador	<b>38220</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Climat	
-> Ch. 12.1997	
<b>Tigra 1.6 16V</b>	<b>1997-98</b>
C 16 SEL	74 100
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24200</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38220</b>
Fan switch/Termocontacto ventilador	<b>38220</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Climat	
-> Ch. 12.1997	
<b>Tigra 1.8 TwinTop</b>	<b>2004 -&gt;</b>
Z 18 XE	92 125
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24519</b>
On clutch pedal/Int. pedal embrague	<b>24790</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
Cruise control/Control veloc.	
<b>Vectra A 1.4 S, CC</b>	<b>1988-92</b>
14 NV	55 75
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>36180</b>
Fan switch/Termocontacto ventilador	<b>36210</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38225</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Ch. LV000001,L1000124 ->, Without/Sin	
-> Ch. KV999999,L100123	
-> Ch. KV999999,L1000123, Without/Sin	
Ch. LV000001,L1000001 ->, Climat	

**OPEL Cont.**

<b>Vectra A 1.6 i</b>	<b>1988-90</b>
E 16 NZ	55 75
Oil press. switch/Int. pres. aceite	<b>12430</b>
Oil press. switch/Int. pres. aceite	<b>12500</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>36180</b>
Fan switch/Termocontacto ventilador	<b>36210</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38225</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Ch. K4000001 ->	
-> Ch. K4000000	
Climat	
<b>Vectra A 1.6 i Kat, CC</b>	<b>1988-95</b>
C 16 NZ2/C 16 NZ	55 75
Oil press. switch/Int. pres. aceite	<b>12430</b>
Oil press. switch/Int. pres. aceite	<b>12500</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>36180</b>
Fan switch/Termocontacto ventilador	<b>36210</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38065</b>
Fan switch/Termocontacto ventilador	<b>38225</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Ch. K4000001 ->	
-> Ch. K4000000	
Climat	
<b>Vectra A 1.6 i, CC</b>	<b>1993-95</b>
X 16 SZ	52 71
Oil press. switch/Int. pres. aceite	<b>12430</b>
Oil press. switch/Int. pres. aceite	<b>12500</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>36180</b>
Fan switch/Termocontacto ventilador	<b>36210</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38065</b>
Fan switch/Termocontacto ventilador	<b>38225</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Ch. LV000001,L1000124 ->, Without/Sin	
-> Ch. KV999999,L100123	
-> Ch. KV999999,L1000123, Without/Sin	
-> Ch.K1999999, K5999999, KV9999999	
Ch. LV000001,L1000001 ->, Climat	
Climat	
<b>Vectra A 1.6 i, CC</b>	<b>1993-95</b>
16 LZ2	55 75
Oil press. switch/Int. pres. aceite	<b>12500</b>
Fan switch/Termocontacto ventilador	<b>38225</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Ch. LV000001,L1000001 ->, Climat	
Climat	
<b>Vectra A 1.6, CC</b>	<b>1988-93</b>
16 SV	60 82
Oil press. switch/Int. pres. aceite	<b>12430</b>
Oil press. switch/Int. pres. aceite	<b>12500</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>36180</b>
Fan switch/Termocontacto ventilador	<b>36210</b>
Fan switch/Termocontacto ventilador	<b>37280</b>
Fan switch/Termocontacto ventilador	<b>38225</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
Ch. LV000001,L1000124 ->, Without/Sin	
-> Ch. KV999999,L100123	
-> Ch. KV999999,L1000123, Without/Sin	
Ch. LV000001,L1000001 ->, Climat	
Climat	
<b>Vectra A 1.7 D, CC</b>	<b>1988-92</b>
17 D	42 57
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>38060</b>
Fan switch/Termocontacto ventilador	<b>38065</b>
Fan switch/Termocontacto ventilador	<b>38070</b>
Fan switch/Termocontacto ventilador	<b>38080</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Fan switch/Termocontacto ventilador	<b>38300</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
2 fans or speeds/Ventil. o veloc.	
Nº Ch. LV01,L10,L50	
Climat	
2 fans or speeds/Ventil. o veloc.	
<b>Vectra A 1.7 D, CC</b>	<b>1992-95</b>
17 DR	44 60
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>38060</b>
Fan switch/Termocontacto ventilador	<b>38065</b>
Fan switch/Termocontacto ventilador	<b>38070</b>
Fan switch/Termocontacto ventilador	<b>38080</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Fan switch/Termocontacto ventilador	<b>38300</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
2 fans or speeds/Ventil. o veloc.	
<b>Vectra A 1.7 TD, CC</b>	<b>1990-95</b>
17 DT (TC4EE1)/X 17 DT (TC4EE1)	60 82
Oil press. switch/Int. pres. aceite	<b>12430</b>
Oil press. transmitter/Transm. pres. aceite	<b>14010</b>
Stop light switch/Int. luz stop	<b>24310</b>
Stop light switch/Int. luz stop	<b>24500</b>
Stop light switch/Int. luz stop	<b>24515</b>
Temp. sending unit/Termo-Resistencia	<b>32230</b>
Fan switch/Termocontacto ventilador	<b>38060</b>
Fan switch/Termocontacto ventilador	<b>38065</b>
Fan switch/Termocontacto ventilador	<b>38070</b>
Fan switch/Termocontacto ventilador	<b>38080</b>
Fan switch/Termocontacto ventilador	<b>38235</b>
Fan switch/Termocontacto ventilador	<b>38300</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
2 terminals/bornes	
Climat	
-> Ch.KV999999,L1000123, Climat	
-> Ch.K1999999, K5999999, KV9999999	
2 fans or speeds/Ventil. o veloc.	
Nº Ch. LV01,L10,L50	
Climat	
2 fans or speeds/Ventil. o veloc.	



**OPEL Cont.**

<b>Vectra A 2000 16V, GT, 4x4</b>		1989-94
20 XEJ		110 150
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Climat	24310
Stop light switch/Int. luz stop		24500
Stop light switch/Int. luz stop		24515
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Ch. LV000001,L1000124 ->, Without/Sin	36180
Fan switch/Termocontacto ventilador	-> Ch. KV999999,L100123	36210
Fan switch/Termocontacto ventilador	Climat	36260
Fan switch/Termocontacto ventilador	-> Ch. KV999999,L1000123, Without/Sin	37280
Fan switch/Termocontacto ventilador	Ch. LV100001,L1000001 ->	38040
Fan switch/Termocontacto ventilador	-> Ch. KV199999, K5999999, KV9999999	38065
Fan switch/Termocontacto ventilador	Ch. LV000001,L1000124 ->	38210
Fan switch/Termocontacto ventilador	Ch. LV000001,L1000001 ->, Climat	38225
Fan switch/Termocontacto ventilador	Climat	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra A 2000/GT 16V Kat, 4x4</b>		1990-95
C 20 XE		110 150
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	Climat	24310
Stop light switch/Int. luz stop		24500
Stop light switch/Int. luz stop		24515
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Ch. LV000001,L1000124 ->, Without/Sin	36180
Fan switch/Termocontacto ventilador	-> Ch. KV999999,L100123	36210
Fan switch/Termocontacto ventilador	Climat	36260
Fan switch/Termocontacto ventilador	-> Ch. KV999999,L1000123, Without/Sin	37280
Fan switch/Termocontacto ventilador	Ch. LV100001,L1000001 ->	38040
Fan switch/Termocontacto ventilador	-> Ch. K1999999, K5999999, KV9999999	38065
Fan switch/Termocontacto ventilador	Ch. LV000001,L1000124 ->	38210
Fan switch/Termocontacto ventilador	Ch. LV000001,L1000001 ->, Climat	38225
Fan switch/Termocontacto ventilador	Climat	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 1.6 i 16V, Caravan, CC</b>		1995-02
Z 16 XE/X 16 XE/LY 16 XE		74 101
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. W1285446,W5276828	24310
Stop light switch/Int. luz stop	Ch. W1285447,W7154259 ->	24505
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia	Z16XE	32230
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37280
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	Climat	38360
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 1.6 i, Caravan, CC</b>		1995-03
X 16 SZR		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. W1285446,W5276828	24310
Stop light switch/Int. luz stop	Ch. W1285447,W7154259 ->	24505
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37280
Fan switch/Termocontacto ventilador	Climat	38360
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 1.6 i, Caravan, CC</b>		1995-03
16 LZ2		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. W1285446,W5276828	24310
Stop light switch/Int. luz stop	Ch. W1285447,W7154259 ->	24505
Stop light switch/Int. luz stop		24518
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37280
Fan switch/Termocontacto ventilador	Climat	38360
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 1.7 TD, Caravan, CC</b>		1995-98
X 17 DT (TC4EE1)		60 82
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop	Ch. W12854416,W5276825 ->	24310
Stop light switch/Int. luz stop	-> Ch. W1285447,W7154249	24505
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador		36700
Rev. light switch/Int. luz marcha atrás		40830
<b>Vectra B 1.8 i 16V, Caravan, CC</b>		1995-00
X 18 XE1		85 116
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. W1285446,W5276828	24310
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Ch. W1285447,W7154259 ->	24505
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38360
Rev. light switch/Int. luz marcha atrás	-> 12.1997	40510
Rev. light switch/Int. luz marcha atrás	01.1998 ->	40830
<b>Vectra B 1.8 i 16V, Caravan, CC</b>		2000-03
Z 18 XE		92 125
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38360
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 2.0 DI 16V</b>		1996-02
X 20 DTL		60 82
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24518
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37280
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	Without/sin A.A.	38350
Fan switch/Termocontacto ventilador	Climat	38360
Rev. light switch/Int. luz marcha atrás		40830

**OPEL Cont.**

<b>Vectra B 2.0 DTI 16V, Caravan, CC</b>		1997-02
Y 20 DTH/X 20 DTH		74 101
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24518
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Climat	36700
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 2.0 i 16V, Caravan, CC</b>		1995-00
X 20 XEV/C 20 SEL		100 136
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. W1285446,W5276828	24310
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Ch. W1285447,W7154259 ->	24505
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38360
Rev. light switch/Int. luz marcha atrás	-> 12.1997	40510
<b>Vectra B 2.0 i, Caravan, CC</b>		1995-02
20 NEJ		82 112
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24310
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38360
Rev. light switch/Int. luz marcha atrás		40830
<b>Vectra B 2.2 DTI 16V, Caravan, CC</b>		2000-03
Y 22 DTR		92 125
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Rev. light switch/Int. luz marcha atrás		40510
<b>Vectra B 2.2 i 16V, Caravan, CC</b>		2000-03
Z 22 SE		108 147
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24518
Fan switch/Termocontacto ventilador	Climat	38360
Rev. light switch/Int. luz marcha atrás	Manual	40510
<b>Vectra B 2.5 i V6, Caravan, CC</b>		1995-00
X 25 XE		125 170
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop	-> Ch. W1285446,W5276828	24310
On clutch pedal/Int. pedal embrague	With/Con cruise control	24465
Stop light switch/Int. luz stop	Ch. W1285447,W7154259 ->	24505
Stop light switch/Int. luz stop	4 terminals/bornes	24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37280
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	Without/sin A.A.	38350
Fan switch/Termocontacto ventilador	Climat	38360
<b>Vectra B 2.6 i V6, Caravan, CC</b>		2000-03
Y 26 SE		125 170
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24465
Stop light switch/Int. luz stop		24518
Temp. sending unit/Termo-Resistencia		32230
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37280
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	Without/sin A.A.	38350
Fan switch/Termocontacto ventilador	Climat	38360
Rev. light switch/Int. luz marcha atrás	Manual	40510
<b>Vectra B i 500 2.5, Caravan</b>		1998-00
X 25 XE		143 194
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	Without/sin A.A.	38350
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38360
<b>Vectra C 1.6 16V, Caravan, GTS</b>		2004 ->
Z 16 XE		74 100
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	3 terminals/bornes	38360
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32	40830
<b>Vectra C 1.6, Caravan, GTS</b>		2006 ->
Z 16 XEP		77 105
Oil press. switch/Int. pres. aceite		12436
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32	40830
<b>Vectra C 1.8</b>		2002 ->
Z 18 XEL		81 110
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32	40830
<b>Vectra C 1.8 16V, Caravan, GTS</b>		2002 ->
Z 18 XE		90 122
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24790
Stop light switch/Int. luz stop		24795
Fan switch/Termocontacto ventilador	Climat	38330
Fan switch/Termocontacto ventilador	3 terminals/bornes	38360
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32	40830



**OPEL Cont.**

<b>Zafira 1.6</b>	2005 ->
Z 16 XE1/Z 16 XEP	77 105
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.6</b>	2006 ->
Z 16 YNG	69 94
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.6</b>	2008 ->
A 16 XER/Z 16 XER	85 115
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.6 16V</b>	1999-05
Z 16 XE/X 16 XEL	74 101
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Stop light switch/Int. luz stop	24499
On clutch pedal/Int. pedal embrague	24516
Temp. sending unit/Termo-Resistencia	24790
Fan switch/Termocontacto ventilador	32230
Rev. light switch/Int. luz marcha atrás	38330
<b>Zafira 1.6 CNG</b>	40830
Z 16 YNG	2001-05
Oil press. switch/Int. pres. aceite	71 97
On clutch pedal/Int. pedal embrague	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Rev. light switch/Int. luz marcha atrás	24499
Rev. light switch/Int. luz marcha atrás	24790
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.7 CDTI</b>	2008 ->
A 17 DTJ/Z 17 DTJ	81 110
Oil press. switch/Int. pres. aceite	12438
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.7 CDTI</b>	2008 ->
A 17 DTR	92 125
Oil press. switch/Int. pres. aceite	12438
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.8</b>	2005 ->
Z 18 XEP/Z 18 XER/A 18 XER	103 140
Oil press. switch/Int. pres. aceite	12436
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Temp. sending unit/Termo-Resistencia	32705
Temp. sending unit/Termo-Resistencia	32705
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.8 16V</b>	1999-00
X 18 XE1	85 116
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Stop light switch/Int. luz stop	24499
Stop light switch/Int. luz stop	24505
On clutch pedal/Int. pedal embrague	24516
Temp. sending unit/Termo-Resistencia	24790
Rev. light switch/Int. luz marcha atrás	32230
Rev. light switch/Int. luz marcha atrás	-> Ch. W29,W59,W69
<b>Zafira 1.8 16V</b>	2000-05
Z 18 XE	92 125
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Stop light switch/Int. luz stop	24499
On clutch pedal/Int. pedal embrague	24516
Fan switch/Termocontacto ventilador	24790
Rev. light switch/Int. luz marcha atrás	38330
<b>Zafira 1.9 CDTI</b>	40830
Z 19 DTH	2005 ->
Oil press. switch/Int. pres. aceite	110 150
On clutch pedal/Int. pedal embrague	12430
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.9 CDTI</b>	2005 ->
Z 19 DTL	74 100
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 1.9 CDTI</b>	2005 ->
Z 19 DT	88 120
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830

**OPEL Cont.**

<b>Zafira 2.0</b>	2005 ->
Z 20 LER	147 200
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 2.0</b>	2006 ->
Z 20 LEH	177 241
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	24790
Stop light switch/Int. luz stop	24795
Rev. light switch/Int. luz marcha atrás	40511
Rev. light switch/Int. luz marcha atrás	40830
<b>Zafira 2.0 DI 16V</b>	1999-05
X 20 DTL	60 82
Oil press. switch/Int. pres. aceite	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Stop light switch/Int. luz stop	24499
On clutch pedal/Int. pedal embrague	24516
Fan switch/Termocontacto ventilador	24790
<b>Zafira 2.0 DTI 16V</b>	38330
Y 20 DTH	2000-05
Oil press. switch/Int. pres. aceite	74 101
On clutch pedal/Int. pedal embrague	12430
Stop light switch/Int. luz stop	-> Ch. 32000465, 2H999999, With/Con
On clutch pedal/Int. pedal embrague	24499
Rev. light switch/Int. luz marcha atrás	24516
<b>Zafira 2.0 OPC</b>	24790
Z 20 LET	2001-05
Oil press. switch/Int. pres. aceite	141 192
On clutch pedal/Int. pedal embrague	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Rev. light switch/Int. luz marcha atrás	24499
Rev. light switch/Int. luz marcha atrás	24790
<b>Zafira 2.0 OPC</b>	40830
Z 20 LET/Z 20 LER	2002-05
Oil press. switch/Int. pres. aceite	147 200
On clutch pedal/Int. pedal embrague	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Rev. light switch/Int. luz marcha atrás	24499
Rev. light switch/Int. luz marcha atrás	24790
<b>Zafira 2.2</b>	40830
Z 22 YH	2005 ->
On clutch pedal/Int. pedal embrague	110 150
Stop light switch/Int. luz stop	24790
Rev. light switch/Int. luz marcha atrás	24795
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40511
<b>Zafira 2.2 16V</b>	40830
Z 22 SE	2000-05
Oil press. switch/Int. pres. aceite	108 147
On clutch pedal/Int. pedal embrague	12430
Stop light switch/Int. luz stop	-> Ch. 32000465, 2H999999, With/Con
On clutch pedal/Int. pedal embrague	24499
Rev. light switch/Int. luz marcha atrás	24516
Rev. light switch/Int. luz marcha atrás	24790
<b>Zafira 2.2 DTI 16V</b>	40830
Y 22 DTR	2002-05
Oil press. switch/Int. pres. aceite	92 125
On clutch pedal/Int. pedal embrague	12430
On clutch pedal/Int. pedal embrague	-> Ch. 32000465, 2H999999, With/Con
Rev. light switch/Int. luz marcha atrás	24499
Rev. light switch/Int. luz marcha atrás	24790

**PAYKAN**

<b>1600 1.6</b>	1981 ->
Oil press. switch/Int. pres. aceite	48 65
	11420

**PEUGEOT**

<b>1007 1.4</b>	2005 ->
KFV (TU3JP)	54 75
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24898
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	4 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A., Blue/Azul
<b>1007 1.4 16V</b>	35290
KFU (ET3J4)	40492
Oil press. switch/Int. pres. aceite	2005 ->
Stop light switch/Int. luz stop	65 88
Stop light switch/Int. luz stop	12640
On clutch pedal/Int. pedal embrague	24898
Rev. light switch/Int. luz marcha atrás	24899
<b>1007 1.4 HDi</b>	40492
8HZ (DV4TD)/8HX (DV4TD)	2005 ->
Oil press. switch/Int. pres. aceite	50 68
Stop light switch/Int. luz stop	12640
Stop light switch/Int. luz stop	24898
On clutch pedal/Int. pedal embrague	24899
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.
<b>1007 1.6 16V</b>	24907
NFU (TU5JP4)	40492
Oil press. switch/Int. pres. aceite	2005 ->
Stop light switch/Int. luz stop	80 109
Stop light switch/Int. luz stop	12640
On clutch pedal/Int. pedal embrague	24898
Temp. s. warning lamp/Termocont. temp.	24899
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.
<b>1007 1.6 HDi</b>	24907
9HZ (DV6TED4)	40492
Oil press. switch/Int. pres. aceite	2007 ->
Stop light switch/Int. luz stop	80 109
On clutch pedal/Int. pedal embrague	12640
Rev. light switch/Int. luz marcha atrás	24898
Rev. light switch/Int. luz marcha atrás	24907
	40491





**PEUGEOT Cont.**

<b>106 II 1.6 i</b>	1996 ->	
NFW (TU5J2)/NFY (TU5J2)	74 101	
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12460
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>106 II 1.6 S16</b>	1996 ->	
NFX (TU5J4)	87 118	
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12460
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>107 1.0</b>	2005 ->	
1KR (384 F)	50 68	
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12550
Rev. light switch/Int. luz marcha atrás	Manual sequential/Secuencial	40847
Rev. light switch/Int. luz marcha atrás	Manual	40848
<b>107 1.4 HDi</b>	2005 ->	
8HT (DV4TD)	40 54	
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12640
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40848
<b>205 1.7 Diesel</b>	1994 ->	
161A (XUD7)	44 60	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.		35210
Temp. sending unit/Termo-Resistencia		35230
Fan switch/Termocontacto ventilador	Oil temp./Temp. aceite	37330
Fan switch/Termocontacto ventilador	95-86 °C	37400
Fan switch/Termocontacto ventilador	97-92 °C	37800
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37935
Rev. light switch/Int. luz marcha atrás	Only hot countries/Para paises calidos	40570
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40650
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>205 1.8 D Furgón</b>	1983-90	
	44 60	
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	35230
<b>205 I 1.1 CJ Cabrio</b>	1989-94	
HDZ (TU1M)	44 60	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Oil press. switch/Int. pres. aceite	Without/Sin A.A.	12260
Stop light switch/Int. luz stop		24080
Temp. sending unit/Termo-Resistencia		31370
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	35180
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	37920
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
Rev. light switch/Int. luz marcha atrás		41090
<b>205 I 1.4 CJ Cabrio</b>	1988-89	
150D (XY7)/150G (XY7)	44 60	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>205 I 1.4 CJ Cabrio</b>	1989-94	
K1D (TU3A)	49 67	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	35180
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	37920
Fan switch/Termocontacto ventilador	Climat	37935
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37940
Rev. light switch/Int. luz marcha atrás	Without/sin A.A.	40570
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40650
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650

**PEUGEOT Cont.**

<b>205 I 1.4 CJ Cabrio</b>	1991-94	
KDZ (TU3M)/KDY (TU3M)	55 75	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Stop light switch/Int. luz stop		24080
Temp. sending unit/Termo-Resistencia		31370
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	35180
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	37920
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Without/sin A.A.	37940
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>205 I 1.4 CJ Kat Cabrio</b>	1989-93	
KAY (TU3CP)	44 60	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	35180
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	37920
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Without/sin A.A.	37940
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
<b>205 I 1.4, CJ Cabrio</b>	1983-89	
150D (XY7)/150G (XY7)	44 60	
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Fan switch/Termocontacto ventilador	Without/sin A.A.	37940
<b>205 I 1.6 CJ Cabrio</b>	1992-94	
BDY (XU5M3Z)	65 88	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Oil press. switch/Int. pres. aceite	Without/Sin A.A.	12260
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Rev. light switch/Int. luz marcha atrás	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
Rev. light switch/Int. luz marcha atrás		41090
<b>205 I 1.6 CTI Cabrio</b>	1986-90	
180A (XU5J)/180Z (XU5J)	76 103	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Oil press. switch/Int. pres. aceite	Without/Sin A.A.	12260
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14500
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	35180
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	37920
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
Rev. light switch/Int. luz marcha atrás		41090
<b>205 I 1.9 CTI Cabrio</b>	1987-94	
DFZ (XU9J1)	75 102	
Oil press. switch/Int. pres. aceite	Climat, 0.50 bar	11270
Oil press. switch/Int. pres. aceite	Without/Sin A.A.	12260
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14500
Stop light switch/Int. luz stop		24080
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	35180
Temp. s. warning lamp/Termocont. temp.		35210
Fan switch/Termocontacto ventilador	95-86 °C	37330
Fan switch/Termocontacto ventilador	97-92 °C	37400
Fan switch/Termocontacto ventilador	87-83 °C/92-88 °C	37800
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37810
Fan switch/Termocontacto ventilador	93-88 °C/97-92 °C	37850
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	37920
Fan switch/Termocontacto ventilador	Climat	37930
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40650
Rev. light switch/Int. luz marcha atrás		41090
<b>205 I 1.9 CTI Cabrio</b>	1987-90	
DFZ (XU9J1)	74 101	
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	14500







**PEUGEOT Cont.**

<b>206 2.0 HDi, SW, 90</b>		<b>1999 -&gt;</b>
RHY (DW10TD)		66 90
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12460
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24880
Stop light switch/Int. luz stop	R.H.D., With/Con cruise control, ESP. 2	24885
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	24898
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>206 2.0 RC</b>		<b>2003 -&gt;</b>
RFK (EW10J4S)		130 177
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12460
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop	2 terminals/bornes	24897
Stop light switch/Int. luz stop	4 terminals/bornes	24898
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>206 2.0 S16</b>		<b>1999-00</b>
RFR (DEW10J4)		99 135
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12460
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24880
Stop light switch/Int. luz stop	4 terminals/bornes	24898
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>206 2.0 S16, CC, SW</b>		<b>2000 -&gt;</b>
RFN (EW10J4)		100 136
Oil press. switch/Int. pres. aceite		12640
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24880
Stop light switch/Int. luz stop	R.H.D., With/Con cruise control, ESP. 2	24885
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24896
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	24898
Fan switch/Termocontacto ventilador	Automatic	37940
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>207 1.4 16V</b>		<b>2006 -&gt;</b>
KFU (ET3J4)		65 88
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>207 1.4 16V, SW</b>		<b>2007 -&gt;</b>
EP3		70 95
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>207 1.4 HDi</b>		<b>2006 -&gt;</b>
8HZ (DV4TD)/8HR (DV4TD)		50 68
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>207 1.4, SW</b>		<b>2006 -&gt;</b>
KFV (TU3A)		54 72
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>207 1.6 16V</b>		<b>2006 -&gt;</b>
NFU (TU5JP4)		80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>207 1.6 16V RC, SW</b>		<b>2007 -&gt;</b>
5FY (EP6DTS)		128 174
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>207 1.6 16V Turbo, CC</b>		<b>2006 -&gt;</b>
EP6DT		110 150
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>207 1.6 16V VTI, CC, SW</b>		<b>2007 -&gt;</b>
EP6		88 120
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492

**PEUGEOT Cont.**

<b>207 1.6 HDi</b>		<b>2006 -&gt;</b>
9HY (DV6TED4)/9HZ (DV6TED4)		80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>207 1.6 HDi</b>		<b>2009 -&gt;</b>
		68 92
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>207 1.6 HDi 110</b>		<b>2009 -&gt;</b>
		82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>207 1.6 HDi SW</b>		<b>2009 -&gt;</b>
		68 92
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>207 1.6 HDi, CC, SW</b>		<b>2007 -&gt;</b>
9HZ (DV6TED4)		80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>207 1.6 HDi, CC, SW</b>		<b>2009 -&gt;</b>
		82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>207 1.6 HDi, SW</b>		<b>2006 -&gt;</b>
9HX (DV6ATED4)		66 90
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>3008 1.6 HDi</b>		<b>2009 -&gt;</b>
9HZ (DV6TED4)		80 109
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>3008 1.6 HDi</b>		<b>2010 -&gt;</b>
		82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>3008 1.6 THP</b>		<b>2009 -&gt;</b>
5FX (EP6DT)		110 150
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>3008 1.6 THP</b>		<b>2009 -&gt;</b>
5FV (EP6DT)		115 156
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>3008 1.6 VTI</b>		<b>2009 -&gt;</b>
5FS (EP6C)/EP6		88 120
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>3008 2.0 HDi</b>		<b>2009 -&gt;</b>
RHO (DW10DTE4)		110 150
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>3008 2.0 HDi</b>		<b>2009 -&gt;</b>
		120 165
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>306 1.1</b>		<b>1993-01</b>
HDZ (TU1M)		44 60
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
<b>306 1.4</b>		<b>1993-01</b>
KDX (TU3MC)/KFX/KFW. (TU3JP)		55 75
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Oil press. switch/Int. pres. aceite	KFX, KFW	12640
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40492
<b>306 1.4</b>		<b>1993-94</b>
		48 65
Stop light switch/Int. luz stop		24440
<b>306 1.4 Break</b>		<b>1997-02</b>
KFX (TU3JP)/KFW (TU3JP)		55 75
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>306 1.4 SL</b>		<b>1994-01</b>
KDX (TU3MC)/KFX/KFW. (TU3JP)		55 75
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Temp. sending unit/Termo-Resistencia	Climat	32290
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34110
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	35550
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37580
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	37935
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40492
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>306 1.6</b>		<b>2000-01</b>
		66 90
Stop light switch/Int. luz stop		24440

**PEUGEOT Cont.**

<b>306 1.6 SR, Break, Cabrio</b>		<b>1993-00</b>
NFZ (TU5JP)		65 89
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34440</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40492</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.6, Break, Fastback</b>		<b>2000-02</b>
NFT		72 98
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34440</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40492</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.8 16V, Break, Fastback</b>		<b>1997-01</b>
LFY (XU7JP4)		81 110
Oil press. switch/Int. pres. aceite	-> Nº Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.8 D</b>		<b>1993-01</b>
A9A (XUD7)		43 58
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Thermistor-Thermocont./Doble función		<b>34400</b>
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	<b>37920</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>306 1.8 D, Break</b>		<b>1997-00</b>
		44 60
Stop light switch/Int. luz stop		<b>24440</b>
<b>306 1.8 ST</b>		<b>1994-01</b>
LFZ (XU7JP)		74 101
Oil press. switch/Int. pres. aceite	-> Nº Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.8, Break, Cabrio</b>		<b>1993-02</b>
LFZ (XU7JP)		74 101
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>306 1.9 D</b>		<b>1993-01</b>
DJZ (XUD9Y)		47 64
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Thermistor-Thermocont./Doble función		<b>34400</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>306 1.9 D</b>		<b>1994-97</b>
XUD9TE		69 94
Stop light switch/Int. luz stop		<b>24440</b>
<b>306 1.9 D, Break</b>		<b>1998-01</b>
DHV (XUD9BSD)		55 75
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>306 1.9 D, Break</b>		<b>1998-01</b>
WJY (DW8B)/WJZ (DW8)		51 69
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Thermistor-Thermocont./Doble función	Climat	<b>34430</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34460</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>306 1.9 D, Break, Fastback</b>		<b>1994-02</b>
DJY (XUD9A)		50 68
Oil press. switch/Int. pres. aceite	-> Nº Vet 07847	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07848 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>

**PEUGEOT Cont.**

<b>306 1.9 DT, Fastback</b>		<b>1993-01</b>
DHY (XUD9TE)		66 90
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	<b>37920</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>306 1.9 SLD</b>		<b>1993-01</b>
DJZ (XUD9Y)		47 64
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	<b>37920</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>306 1.9 SLD</b>		<b>1994-01</b>
DJZ (XUD9Y)		47 64
Oil press. switch/Int. pres. aceite	-> Nº Vet 07847	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07848 ->	<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Thermistor-Thermocont./Doble función	Climat	<b>34400</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.9 SLD</b>		<b>1994-01</b>
DJY (XUD9A)		50 68
Oil press. switch/Int. pres. aceite	-> Nº Vet 07847	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07848 ->	<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Thermistor-Thermocont./Doble función	Climat	<b>34400</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	<b>37920</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.9 SRDT</b>		<b>1994-01</b>
DHY (XUD9TE)		66 90
Oil press. switch/Int. pres. aceite	-> Nº Vet 07847	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07848 ->	<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	<b>37920</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 1.9 STD</b>		<b>1994-95</b>
XUD9		51 69
Stop light switch/Int. luz stop		<b>24440</b>
<b>306 1.9 TD, Break</b>		<b>1997-02</b>
DHY (XUD9TE)		66 90
Oil press. switch/Int. pres. aceite	-> Nº Vet 07847	<b>12460</b>
Oil press. switch/Int. pres. aceite	Nº Vet 07848 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Climat, Only temperate countries/Paises	<b>37920</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08420 ->	<b>40650</b>
<b>306 2.0 Cabrio</b>		<b>1994-02</b>
RFX (XU10J2)		89 121
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>306 2.0 HDI 90, Break, Fastback</b>		<b>1999-01</b>
RHY (DW10TD)		66 90
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop		<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> Nº Vet 08420	<b>40650</b>
<b>306 2.0 S16</b>		<b>1996-01</b>
RFS (XU10J4RS)		120 163
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>306 2.0 S16, Fastback</b>		<b>1993-01</b>
RFY (XU10J4Z)		112 152
Stop light switch/Int. luz stop		<b>24440</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>306 2.0 S16, Fastback</b>		<b>1994-01</b>
RFT (XU10J4)		110 150
Stop light switch/Int. luz stop		<b>24440</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>



**PEUGEOT Cont.**

<b>307 2.0 HDi 135, Break, CC, SW</b>	2003 ->
RHR (DW10BTEd4)	100 136
Oil press. switch/Int. pres. aceite	12460
Oil press. switch/Int. pres. aceite	Nº Vet 07846
Stop light switch/Int. luz stop	12640
Stop light switch/Int. luz stop	4 terminals/bornes
On clutch pedal/Int. pedal embrague	24898
On clutch pedal/Int. pedal embrague	24899
Temp. sending unit/Termo-Resistencia	24905
Thermistor-Thermocont./Doble función	24907
Temp. s. warning lamp/Termocont. temp.	32290
Fan switch/Termocontacto ventilador	34110
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Without/Sin A.A.
	Automatic
	Nº Vet 08421 ->
	-> Nº Vet 08420
<b>307 2.0 HDi 90, Break, SW</b>	2000 ->
RHY (DW10TD)	66 90
Oil press. switch/Int. pres. aceite	12460
Oil press. switch/Int. pres. aceite	Nº Vet 07846
Stop light switch/Int. luz stop	12640
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes
Stop light switch/Int. luz stop	24898
On clutch pedal/Int. pedal embrague	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
On clutch pedal/Int. pedal embrague	24905
Temp. sending unit/Termo-Resistencia	Engine control/Gestión motor
Thermistor-Thermocont./Doble función	Climat
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	Automatic
Rev. light switch/Int. luz marcha atrás	Nº Vet 08421 ->
	-> Nº Vet 08420
<b>308 1.4 16V</b>	2009 ->
	72 98
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 1.4 16V, SW</b>	2007 ->
8FS (EP3)	70 95
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>308 1.6 16V</b>	2009 ->
EP6CDT	115 156
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 1.6 16V, SW</b>	2007 ->
EP6	88 120
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>308 1.6 16V, SW</b>	2007 ->
EP6DT	110 150
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>308 1.6 16V, SW</b>	2008 ->
5FY (EP6DTS)	128 174
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>308 1.6 16V, SW</b>	2007 ->
5FT (EP6DT)	103 140
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 1.6 GTi</b>	2010 ->
EP6CDTX	147 200
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 1.6 HDi</b>	2009 ->
	68 92
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 1.6 HDi</b>	2009 ->
	82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 1.6 HDi, SW</b>	2007 ->
9HX (DV6ATED4)/9HV (DV6ATED4)	66 90
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>308 1.6 HDi, SW</b>	2007 ->
9HZ (DV6TED4)	80 109
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>308 2.0 HDi</b>	2010 ->
	103 140
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 2.0 HDi, CC, SW</b>	2007 ->
RHR (DW10BTEd4)	100 136
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML
<b>308 2.0 HDi, CC, SW</b>	2007 ->
	103 140
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 CC 1.6 16V</b>	2009 ->
EP6DT	110 150
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 CC 1.6 16V</b>	2009 ->
EP6	88 120
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 CC 1.6 16V</b>	2009 ->
EP6CDT	115 156
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.

**PEUGEOT Cont.**

<b>308 CC 1.6 16V</b>	2009 ->
5FT (EP6DT)	103 140
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 CC 1.6 HDi</b>	2009 ->
	82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 SW 1.4 16V</b>	2009 ->
	72 98
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 SW 1.6 16V</b>	2009 ->
EP6CDT	115 156
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>308 SW 1.6 Bioflex</b>	2009 ->
NFU (TU5JP4)	82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul
<b>308 SW 1.6 HDi</b>	2009 ->
	82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
<b>309 I 1.1</b>	1985-89
E1	40 54
Oil press. switch/Int. pres. aceite	0.60 bar
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.3</b>	1985-89
G1A	47 64
Oil press. switch/Int. pres. aceite	0.60 bar
Fan switch/Termocontacto ventilador	Climat
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.4</b>	1989-89
K1D (TU3A)	49 67
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.4</b>	1989-89
KDZ (TU3M)/KDY (TU3M)	55 75
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.4</b>	1989-89
K2B (TU3S)	62 84
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.5</b>	1987-89
Y2/K	63 86
Oil press. switch/Int. pres. aceite	0.60 bar
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
<b>309 I 1.6</b>	1987-89
B1E (XU51C)	53 72
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. switch/Int. pres. aceite	12290
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.6</b>	1985-89
B1A (XU51C)	55 75
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. switch/Int. pres. aceite	11270
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.6</b>	1985-89
	59 80
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. switch/Int. pres. aceite	11270
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
<b>309 I 1.6</b>	1986-89
	69 94
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. switch/Int. pres. aceite	11270
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.6</b>	1986-89
	83 113
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.6 Kat</b>	1986-89
BAZ (XU5CP)	55 75
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. switch/Int. pres. aceite	11270
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
<b>309 I 1.9</b>	1986-89
DFZ (XU9J1)	72 98
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.9</b>	1985-89
D2B (XU9S)	75 102
Oil press. switch/Int. pres. aceite	0.50 bar
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3
<b>309 I 1.9</b>	1988-89
DDZ (XU9M)	80 109
Oil press. switch/Int. pres. aceite	0.50 bar
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
<b>309 I 1.9 D</b>	1986-89
D9A (XUD9)/162 (XUD9)	47 64
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3



**PEUGEOT Cont.**

<b>309 I 1.9 GTI</b>		<b>1988-89</b>
DKZ (XU9JAZ)		88 120
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37860</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>309 I 1.9 GTI</b>		<b>1986-89</b>
D6B (XU9JA (G-KAT))		94 128
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37860</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.1</b>		<b>1990-93</b>
HDZ (TU1M)		44 60
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Oil press. switch/Int. pres. aceite	0.60 bar	<b>11650</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.4</b>		<b>1989-93</b>
KDZ (TU3M)/KDY (TU3M)		55 75
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.4</b>		<b>1990-93</b>
K1D (TU3A)		49 67
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>309 II 1.6</b>		<b>1989-93</b>
BDY (XU5M2Z)/BDZ (XU5M)/BDY (XU5M3Z)		65 88
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.6</b>		<b>1989-93</b>
B2A (XU52C/K)		69 94
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.6</b>		<b>1989-93</b>
B2A (XU52C/K)		68 92
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.8 D</b>		<b>1989-93</b>
161A (XUD7)		44 60
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. sending unit/Termo-Resistencia	M 14x1,25, 112 °C	<b>35230</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.8 TD</b>		<b>1989-93</b>
A8B (XUD7TE)		57 78
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>309 II 1.9</b>		<b>1989-93</b>
DFZ (XU9J1)		72 98
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>309 II 1.9</b>		<b>1990-93</b>
DDZ (XU9M)		80 109
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.9 Diesel</b>		<b>1989-93</b>
D9A (XUD9)/D.JZ (XUD9Y)/162 (XUD9)		47 64
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. sending unit/Termo-Resistencia	M 14x1,25, 112 °C	<b>35230</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.9 GTI</b>		<b>1989-93</b>
DKZ (XU9JAZ)		88 120
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>309 II 1.9 GTI 16V</b>		<b>1990-93</b>
DFW (XU9J4Z)		108 147
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>309 II 1.9 GTI 16V</b>		<b>1989-90</b>
D6C (XU9J4)		116 158
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>4007 2.2 HDi</b>		<b>2007 -&gt;</b>
4HN (DW12MED4)		115 156
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24720</b>

**PEUGEOT Cont.**

<b>4007 2.4 16V</b>		<b>2008 -&gt;</b>
		125 170
Oil press. switch/Int. pres. aceite		<b>12830</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>40900</b>
<b>405 I 1.4, Break</b>		<b>1987-92</b>
TU 3		47 64
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop		<b>24340</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.		<b>35550</b>
Fan switch/Termocontacto ventilador		<b>37570</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>405 I 1.6</b>		<b>1987-92</b>
BDY (XU5M2Z)/BDZ (XU5M)		65 88
Oil press. switch/Int. pres. aceite		<b>12460</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.		<b>35550</b>
Fan switch/Termocontacto ventilador		<b>37570</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>405 I 1.6</b>		<b>1987-92</b>
B2A (XU52C/K)		69 94
Oil press. switch/Int. pres. aceite		<b>12460</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.		<b>35550</b>
Fan switch/Termocontacto ventilador		<b>37570</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>405 I 1.6 4x4</b>		<b>1988-92</b>
BDZ (XU5M)		65 88
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
<b>405 I 1.6 Break</b>		<b>1988-92</b>
BDY (XU5M2Z)/BDZ (XU5M)/BDY (XU5M3Z)		65 88
Oil press. switch/Int. pres. aceite		<b>12460</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.		<b>35550</b>
Fan switch/Termocontacto ventilador		<b>37570</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>405 I 1.6 Break</b>		<b>1988-92</b>
BAZ (XU5CP)		55 75
Oil press. switch/Int. pres. aceite		<b>12460</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.		<b>35550</b>
Fan switch/Termocontacto ventilador		<b>37570</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>405 I 1.6 Break</b>		<b>1988-92</b>
B2A (XU52C/K)		68 92
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
<b>405 I 1.6, Break</b>		<b>1987-92</b>
B1E (XU51C)		53 72
Oil press. switch/Int. pres. aceite		<b>12460</b>
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Stop light switch/Int. luz stop	Automatic	<b>24340</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función		<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Temp. s. warning lamp/Termocont. temp.		<b>35550</b>
Fan switch/Termocontacto ventilador		<b>37570</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>405 I 1.6, Break, SRI</b>		<b>1989-92</b>
BDZ (XU5M)		65 90
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes	<b>14500</b>
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>37935</b>
<b>405 I 1.8 D 4x4</b>		<b>1987-92</b>
A8A (XUD7TE)		66 90
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>
<b>405 I 1.8 DT 4x4 Break</b>		<b>1990-92</b>
A8A (XUD7TE)		66 90
Temp. s. warning lamp/Termocont. temp.	M 14x1,25, 112 °C	<b>35180</b>







**PEUGEOT Cont.**

<b>407 2.0 HDi, Coupe</b> RHH (DW10CTED4) On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 120 163 <b>24907</b>
<b>407 2.0, SW</b> RFN (EW10J4) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc. Gear box/Cambio BE3	<b>2004 -&gt;</b> 100 136 <b>12640</b> <b>24899</b> <b>24907</b> <b>40491</b>
<b>407 2.2 16V, Coupe, SW</b> 3FY (EW12J4) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2005 -&gt;</b> 120 163 <b>12640</b> <b>24899</b> <b>24907</b>
<b>407 2.2 HDi</b> 4HP (DW12BTED4) On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2008 -&gt;</b> 120 163 <b>24907</b>
<b>407 2.2 HDi 170, SW</b> 4HT (DW12BTED4) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2006 -&gt;</b> 125 170 <b>12640</b> <b>24899</b> <b>24907</b>
<b>407 2.2, SW</b> 3FZ (EW12J4) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2004 -&gt;</b> 116 158 <b>12640</b> <b>24899</b> <b>24907</b>
<b>407 2.7 HDi, Coupe, SW</b> UHZ (DT17) Stop light switch/Int. luz stop	Cruise control/Control veloc.	<b>2005 -&gt;</b> 150 204 <b>24899</b>
<b>407 3.0 V6, Coupe, SW</b> XFV (ES9A) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2004 -&gt;</b> 155 211 <b>12640</b> <b>24899</b> <b>24907</b>
<b>407 SW 2.0 HDi</b>  On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2008 -&gt;</b> 103 140 <b>24907</b>
<b>407 SW 2.0 HDi</b> RHH (DW10CTED4) On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 120 163 <b>24907</b>
<b>407 SW 2.2 HDi</b> 4HP (DW12BTED4) On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2008 -&gt;</b> 120 163 <b>24907</b>
<b>5008 1.6 16V</b> 5FS (EP6C)/EP6 On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 88 120 <b>24907</b>
<b>5008 1.6 16V</b> EP6CDT On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 115 156 <b>24907</b>
<b>5008 1.6 HDi</b> 9HZ (DV6TED4) On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 80 110 <b>24907</b>
<b>5008 2.0 HDi</b>  On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 110 150 <b>24907</b>
<b>5008 2.0 HDi</b> RHH (DW10CTED4) On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>2009 -&gt;</b> 120 163 <b>24907</b>
<b>504 1.8 Pick-up</b> XM7 Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás		<b>1987-89</b> 53 72 <b>37350</b> <b>40270</b>
<b>504 1.9 D, Pick-up</b> XD4x88 Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás		<b>1980-89</b> 40 54 <b>12270</b> <b>12340</b> <b>37350</b> <b>40270</b>
<b>504 2.3 D, Break, Pick-up</b> 134 (XD2) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás		<b>1980-89</b> 51 69 <b>12270</b> <b>12340</b> <b>37350</b> <b>40270</b>
<b>505 2.0</b> 106E (XN1A) Oil press. switch/Int. pres. aceite Temp. s. warning lamp/Termocont. temp. Rev. light switch/Int. luz marcha atrás	0.35 bar M 14x1,25, 112 °C	<b>1985-91</b> 72 98 <b>11410</b> <b>35180</b> <b>40270</b>
<b>505 2.2 GTI</b> 851B (ZDJL) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	0.35 bar With/Con ABS M 14x1,25, 112 °C 2 fans or speeds/Ventil. o veloc.	<b>1983-93</b> 90 122 <b>11410</b> <b>24340</b> <b>35180</b> <b>37860</b> <b>40270</b>
<b>505 2.2 GTI</b>  Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	<b>1983-93</b> 96 130 <b>37860</b> <b>40270</b>
<b>505 2.2, Break</b> 851X (ZDJL) Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. s. warning lamp/Termocont. temp. Rev. light switch/Int. luz marcha atrás	0.35 bar With/Con ABS M 14x1,25, 112 °C	<b>1986-93</b> 84 114 <b>11410</b> <b>24340</b> <b>35180</b> <b>40270</b>
<b>505 2.5 D Break</b> XD3T Rev. light switch/Int. luz marcha atrás		<b>1985-91</b> 70 95 <b>40595</b>

**PEUGEOT Cont.**

<b>505 2.5 Diesel, Break</b> 155 (XD3) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	0.50 bar With/Con ABS Oil temp./Temp. aceite 2 fans or speeds/Ventil. o veloc.	<b>1981-93</b> 55 75 <b>11270</b> <b>12270</b> <b>12340</b> <b>24340</b> <b>35190</b> <b>37350</b> <b>37860</b> <b>40270</b>
<b>505 2.5 Diesel, Break</b> 155 (XD3) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	0.50 bar	<b>1986-93</b> 51 70 <b>11270</b> <b>12270</b> <b>12340</b> <b>37350</b> <b>40270</b>
<b>505 2.5 Diesel, Break</b> 155 (XD3) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Temp. sending unit/Termo-Resistencia Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	0.50 bar Oil temp./Temp. aceite 2 fans or speeds/Ventil. o veloc.	<b>1981-90</b> 51 69 <b>11270</b> <b>12270</b> <b>12340</b> <b>35190</b> <b>37350</b> <b>37860</b> <b>40270</b>
<b>505 2.5 TD, Break</b> 152A (XD3T) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Temp. sending unit/Termo-Resistencia Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	0.50 bar Oil temp./Temp. aceite 2 fans or speeds/Ventil. o veloc.	<b>1983-93</b> 66 90 <b>11270</b> <b>12270</b> <b>12340</b> <b>35190</b> <b>37860</b> <b>40270</b>
<b>505 2.5 TD, Break</b> 152B (XD3TE) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Temp. sending unit/Termo-Resistencia Fan switch/Termocontacto ventilador	0.50 bar Oil temp./Temp. aceite 2 fans or speeds/Ventil. o veloc.	<b>1986-93</b> 77 105 <b>11270</b> <b>12270</b> <b>12340</b> <b>35190</b> <b>37860</b>
<b>505 2.5 Turbo Diesel</b> XD3T Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	0.50 bar With/Con ABS Oil temp./Temp. aceite 2 fans or speeds/Ventil. o veloc.	<b>1983-90</b> 70 95 <b>11270</b> <b>12270</b> <b>12340</b> <b>24340</b> <b>35190</b> <b>37860</b> <b>40270</b>
<b>505 2.8 GTI V6</b> 154X (ZN3J) Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás	With/Con ABS	<b>1986-93</b> 105 143 <b>24340</b> <b>40270</b>
<b>605 2.0</b> RFZ (XU10J2Z) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Thermistor-Thermocont./Doble función Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	-> N° Vet 07846 N° Vet 07847 -> Climat Without/Sin A.A. Only hot countries/Para paises calidos Gear box/Cambio ME, N° Vet 08421 -> Gear box/Cambio ME, -> N° Vet 08420 Gear box/Cambio BE3	<b>1989-99</b> 89 121 <b>12460</b> <b>12640</b> <b>24340</b> <b>32290</b> <b>34110</b> <b>35550</b> <b>37570</b> <b>37935</b> <b>40492</b> <b>40570</b> <b>40650</b>
<b>605 2.0</b> R5A (XU102C) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Thermistor-Thermocont./Doble función Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	-> N° Vet 07846 N° Vet 07847 -> Climat Without/Sin A.A. Only hot countries/Para paises calidos Gear box/Cambio ME, N° Vet 08421 -> Gear box/Cambio ME, -> N° Vet 08420 Gear box/Cambio BE3	<b>1989-99</b> 84 114 <b>12460</b> <b>12640</b> <b>24340</b> <b>32290</b> <b>34110</b> <b>35550</b> <b>37570</b> <b>37935</b> <b>40492</b> <b>40570</b> <b>40650</b>
<b>605 2.0</b> Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Thermistor-Thermocont./Doble función Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	-> N° Vet 07846 N° Vet 07847 -> Climat Without/Sin A.A. Only hot countries/Para paises calidos Gear box/Cambio ME, N° Vet 08421 -> Gear box/Cambio ME, -> N° Vet 08420 Gear box/Cambio BE3	<b>1990-99</b> 79 107 <b>12460</b> <b>12640</b> <b>24340</b> <b>32290</b> <b>34110</b> <b>35550</b> <b>37570</b> <b>37935</b> <b>40492</b> <b>40570</b> <b>40650</b>
<b>605 2.0 16V</b> RFV (XU10J4R) Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Temp. sending unit/Termo-Resistencia Thermistor-Thermocont./Doble función Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	-> N° Vet 07846 N° Vet 07847 -> Climat Without/Sin A.A. Only hot countries/Para paises calidos Gear box/Cambio ME, N° Vet 08421 -> Gear box/Cambio ME, -> N° Vet 08420 Gear box/Cambio BE3	<b>1994-99</b> 97 132 <b>12460</b> <b>12640</b> <b>24340</b> <b>32290</b> <b>34110</b> <b>35550</b> <b>37570</b> <b>37935</b> <b>40492</b> <b>40570</b> <b>40650</b>



**PEUGEOT Cont.**

<b>607 2.7 HDi 24V</b>		<b>2004 -&gt;</b>
DT17TED4		150 204
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
Temp. sending unit/Termo-Resistencia	Climat	<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Automatic	<b>37940</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	<b>40650</b>
<b>607 3.0 V6 24V</b>		<b>2000 -&gt;</b>
XFX (ES9J4S)		152 207
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop	R.H.D., 2 terminals/bornes	<b>24885</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	<b>24898</b>
Temp. sending unit/Termo-Resistencia		<b>32290</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34110</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37580</b>
Fan switch/Termocontacto ventilador	Automatic	<b>37940</b>
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	<b>40491</b>
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	<b>40650</b>
<b>607 3.0 V6 24V</b>		<b>2004 -&gt;</b>
XFV (ES9A)		155 211
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>806 1.8</b>		<b>1995-02</b>
LFW (XU7JP)		73 99
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>806 1.9 TD</b>		<b>1995-02</b>
DHX (XUD9TE)		66 90
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37920</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>806 1.9 TD</b>		<b>1997-02</b>
DHY (XUD9TE)		68 92
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35550</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37920</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>806 2.0</b>		<b>1994-02</b>
RFU (XU10J2)		89 121
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40650</b>
<b>806 2.0 16V</b>		<b>1998-00</b>
RFV (XU10J4R)		97 132
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop		<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>806 2.0 16V</b>		<b>2000-02</b>
RFN (EW10J4)		100 136
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>806 2.0 HDI</b>		<b>1999-02</b>
RHZ (DW10ATED)		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Stop light switch/Int. luz stop	L.H.D., With/Con cruise control, 2	<b>24885</b>
Stop light switch/Int. luz stop		<b>24896</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>806 2.0 HDI 16V</b>		<b>1999-02</b>
RHW (DW10ATED4)		80 109
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24896</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>806 2.0 Turbo</b>		<b>1994-02</b>
RGX (XU10J2TE)		108 147
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	<b>12460</b>
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	<b>12640</b>
Stop light switch/Int. luz stop	-> 12.2001	<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Thermistor-Thermocont./Doble función		<b>34435</b>
Fan switch/Termocontacto ventilador	Climat	<b>37930</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>806 2.1 td 12V</b>		<b>1996-99</b>
P8C (XUD11BTE)		80 109
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop		<b>24440</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37920</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>

**PEUGEOT Cont.**

<b>807 2.0</b>		<b>2002 -&gt;</b>
RFN (EW10J4)		100 136
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	Switch	<b>24885</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>807 2.0 16V</b>		<b>2005 -&gt;</b>
RFJ (EW10A)		103 140
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	With control switch	<b>24885</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	<b>40491</b>
<b>807 2.0 HDi</b>		<b>2002 -&gt;</b>
RHK (DW10UTED4)/RHT/RHM/RHW. (DW10ATED4)		79 107
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	With control switch	<b>24885</b>
On clutch pedal/Int. pedal embrague	RHT (DW10ATED4). Cruise control/Control	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>807 2.0 HDI</b>		<b>2006 -&gt;</b>
RHR (DW10BTED4)		100 136
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>807 2.2</b>		<b>2002 -&gt;</b>
3FZ (EW12J4)		116 158
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	Switch	<b>24885</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>807 2.2 HDi</b>		<b>2002 -&gt;</b>
4HX (DW12TED4/FAP)		94 128
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	With control switch	<b>24885</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>807 2.2 HDi</b>		<b>2006 -&gt;</b>
4HT (DW12BTED4)		125 170
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>807 3.0 V6</b>		<b>2002 -&gt;</b>
XFX (ES9J4S)		150 204
Oil press. switch/Int. pres. aceite		<b>12640</b>
Stop light switch/Int. luz stop	With control switch	<b>24885</b>
Stop light switch/Int. luz stop		<b>24896</b>
Stop light switch/Int. luz stop		<b>24899</b>
<b>Bipper 1.4</b>		<b>2008 -&gt;</b>
KFV (TU3A)		54 73
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24792</b>
Stop light switch/Int. luz stop		<b>24795</b>
<b>Bipper 1.4 HDi</b>		<b>2008 -&gt;</b>
8HS (DV4TD)		50 68
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24792</b>
Stop light switch/Int. luz stop		<b>24795</b>
<b>Boxer 1.9 D</b>		<b>1994-02</b>
D8C (XUD9AU)		51 69
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24415</b>
Thermistor-Thermocont./Doble función		<b>34400</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Boxer 1.9 D</b>		<b>1999-02</b>
DJY (XUD9A)		50 68
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24415</b>
Thermistor-Thermocont./Doble función		<b>34400</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Boxer 1.9 TD</b>		<b>1994-02</b>
DHY (XUD9TE)		66 90
Oil press. switch/Int. pres. aceite	-> 12.1996	<b>12460</b>
Oil press. switch/Int. pres. aceite	01.1997 ->	<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24415</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Boxer 1.9 TD</b>		<b>1999-02</b>
XUD9TE		66 90
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24415</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Boxer 1.9 TD, 4x4</b>		<b>1994-02</b>
D8C (XUD9UTF)		68 92
Oil press. switch/Int. pres. aceite	-> 12.1996	<b>12460</b>
Oil press. switch/Int. pres. aceite	01.1997 ->	<b>12640</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24415</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	<b>35610</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37900</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>Boxer 2.0</b>		<b>2002 -&gt;</b>
RFL (XU10J2J)		81 110
Oil press. switch/Int. pres. aceite		<b>12640</b>
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	<b>24411</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24412</b>
Stop light switch/Int. luz stop		<b>24413</b>

**PEUGEOT Cont.**

<b>Boxer 2.0 HDi</b>	2002 ->	
RHV (DW10TD)/RHV (DW10UTD)	62 84	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Boxer 2.0 HDi</b>	2001-02	
RHV (DW10UTD)	62 84	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	
<b>Boxer 2.0 i, 4x4</b>	1994-02	
RFW (XU10J2)	80 109	
Oil press. switch/Int. pres. aceite	12460	-> 09.1998
Oil press. switch/Int. pres. aceite	12640	09.1998 ->
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	
Fan switch/Termocontacto ventilador	37910	Climat
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML
<b>Boxer 2.2 HDi</b>	2002 ->	
4HY (DW12UTD)	74 101	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Fan switch/Termocontacto ventilador	37900	2 fans o speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	37910	Climat
<b>Boxer 2.2 HDi 100</b>	2006 ->	
4HV	74 101	
Oil press. switch/Int. pres. aceite	12610	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Boxer 2.2 HDi 120</b>	2006 ->	
4HU	88 120	
Oil press. switch/Int. pres. aceite	12610	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Boxer 2.5 D, 4x4</b>	1994-02	
T9A (DJ5)	63 86	
Oil press. switch/Int. pres. aceite	12460	-> 05.1998
Oil press. switch/Int. pres. aceite	12640	05.1998 ->
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	
Temp. s. warning lamp/Termocont. temp.	35600	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	35610	CEE 19-5
Fan switch/Termocontacto ventilador	37900	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML
<b>Boxer 2.5 TD, 4x4</b>	1994-02	
T8A (DJ5T)	76 103	
Oil press. switch/Int. pres. aceite	12460	-> 05.1998
Oil press. switch/Int. pres. aceite	12640	05.1998 ->
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	
Thermistor-Thermocont./Doble función	34425	
Temp. s. warning lamp/Termocont. temp.	35600	Without/Sin A.A.
Temp. s. warning lamp/Termocont. temp.	35610	CEE 19-5
Fan switch/Termocontacto ventilador	37900	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML
<b>Boxer 2.5 TDI, 4x4</b>	1997-02	
THX (DJ5TD)	79 107	
Oil press. switch/Int. pres. aceite	12460	-> 05.1998
Oil press. switch/Int. pres. aceite	12640	05.1998 ->
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	
Temp. s. warning lamp/Termocont. temp.	35295	White/Blanco
Temp. s. warning lamp/Termocont. temp.	35295	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	35600	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37900	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML
<b>Boxer 2.8 HDi</b>	2004 ->	
8140.43N	107 146	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Boxer 2.8 HDi, 4x4</b>	2000-02	
8140.43S (F28DTCR)	94 128	
Oil press. switch/Int. pres. aceite	12430	
On clutch pedal/Int. pedal embrague	24411	Engine control/Gestión motor
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24415	
Fan switch/Termocontacto ventilador	37910	Climat
<b>Boxer 3.0 HDi 145</b>	2010 ->	
	107 146	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
<b>Boxer 3.0 HDi 160</b>	2006 ->	
F1CE0481D	116 156	
Oil press. switch/Int. pres. aceite	12431	
On clutch pedal/Int. pedal embrague	24412	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24413	
Rev. light switch/Int. luz marcha atrás	40510	
<b>Expert 1.6</b>	1996 ->	
222A2 (1580 SPI)	58 79	
Oil press. switch/Int. pres. aceite	12430	
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40491	Gear box/Cambio BE3
<b>Expert 1.6 HDi 90, Tepee</b>	2007 ->	
9HU (DV6UTD4)	66 90	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	
Rev. light switch/Int. luz marcha atrás	40491	Gear box/Cambio BE3

**PEUGEOT Cont.**

<b>Expert 1.8</b>	1996-00	
LFZ (XU7JP)	74 101	
Oil press. switch/Int. pres. aceite	12460	-> N° Vet 07846
Oil press. switch/Int. pres. aceite	12640	N° Vet 07847 ->
Stop light switch/Int. luz stop	24440	
Rev. light switch/Int. luz marcha atrás	40491	N° Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40650	-> N° Vet 08420
<b>Expert 1.9 D</b>	1996 ->	
D9B (XUD9AU)	51 70	
Oil press. switch/Int. pres. aceite	12460	-> N° Vet 07846
Oil press. switch/Int. pres. aceite	12640	N° Vet 07847 ->
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
Fan switch/Termocontacto ventilador	37920	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40491	N° Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40650	-> N° Vet 08420
<b>Expert 1.9 D 70</b>	1998 ->	
WJY (DW8B)/WJZ (DW8)	51 69	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
Thermistor-Thermocont./Doble función	34430	Climat
Thermistor-Thermocont./Doble función	34460	Without/Sin A.A.
Fan switch/Termocontacto ventilador	37920	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40491	N° Vet 08421 ->
Rev. light switch/Int. luz marcha atrás	40650	-> N° Vet 08420
<b>Expert 1.9 TD</b>	1996 ->	
D8B (XUD9TE)	68 92	
Oil press. switch/Int. pres. aceite	12460	-> N° Vet 07846
Oil press. switch/Int. pres. aceite	12640	N° Vet 07847 ->
Stop light switch/Int. luz stop	24440	-> 12.2001
On clutch pedal/Int. pedal embrague	24880	With/Con cruise control
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	35610	CEE 19-5
Fan switch/Termocontacto ventilador	37920	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML
<b>Expert 1.9 TD</b>	1996 ->	
DHX (XUD9TE)	66 90	
Oil press. switch/Int. pres. aceite	12460	-> N° Vet 07846
Oil press. switch/Int. pres. aceite	12640	N° Vet 07847 ->
Stop light switch/Int. luz stop	24440	-> 12.2001
On clutch pedal/Int. pedal embrague	24880	With/Con cruise control
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	35610	CEE 19-5
Fan switch/Termocontacto ventilador	37920	2 fans o speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML
<b>Expert 2.0</b>	2000 ->	
RFN (EW10J4)	100 136	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
<b>Expert 2.0 16V, Tepee</b>	2007 ->	
RFJ (EW10A)/RFH (EW10A)	103 140	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24899	
Rev. light switch/Int. luz marcha atrás	40491	Gear box/Cambio BE3
<b>Expert 2.0 HDi</b>	2000 ->	
RHZ (DW10ATED)	80 109	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
<b>Expert 2.0 HDi</b>	2000 ->	
RHX (DW10BTED)	69 94	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24880	With/Con cruise control
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
<b>Expert 2.0 HDi</b>	2000 ->	
RHW (DW10ATED4)	80 109	
Oil press. switch/Int. pres. aceite	12640	
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24885	With/Con cruise control, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
<b>Expert 2.0 HDi 120</b>	2007 ->	
RHK (DW10UTED4)	88 120	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	
<b>Expert 2.0 HDi 140</b>	2007 ->	
RHR (DW10BTED4)	100 136	
Oil press. switch/Int. pres. aceite	12640	
On clutch pedal/Int. pedal embrague	24896	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24899	
<b>J5 1.9 D</b>	1990 ->	
D9B (XUD9A)	51 70	
Temp. s. warning lamp/Termocont. temp.	35150	
<b>J5 2.5 D, 4x4</b>	1981-90	
CRD93 (U25/661)	54 73	
Oil press. switch/Int. pres. aceite	11260	
Oil press. switch/Int. pres. aceite	11270	0.50 bar
Temp. s. warning lamp/Termocont. temp.	35150	
<b>J5 2.5 D, 4x4</b>	1990 ->	
CRD93 (U25/661)	54 73	
Oil press. switch/Int. pres. aceite	11260	
Oil press. switch/Int. pres. aceite	11270	0.50 bar
Temp. s. warning lamp/Termocont. temp.	35150	
<b>J5 2.5 TD, 4x4</b>	1990 ->	
CRD93LS (U25/673)	70 95	
Oil press. switch/Int. pres. aceite	11260	
Oil press. switch/Int. pres. aceite	11270	0.50 bar
Temp. s. warning lamp/Termocont. temp.	35150	
<b>Partner 1.1</b>	1996 ->	
HDZ (TU1M)	44 60	
Oil press. switch/Int. pres. aceite	11270	0.50 bar
Stop light switch/Int. luz stop	24440	-> 12.2001
Stop light switch/Int. luz stop	24897	01.2002 ->, 2 terminals/bornes
Thermistor-Thermocont./Doble función	34440	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	40570	Gear box/Cambio MA, ME, MG, ML



**PEUGEOT Cont.**

<b>Partner 1.1 CombiSpace</b> HDZ (TU1M)/HFX (TU1JP)		1996 -> 44 60
Oil press. switch/Int. pres. aceite	HDZ (TU1M), 0.50 bar	11270
Oil press. switch/Int. pres. aceite	HFX (TU1JP)	12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>Partner 1.4</b>		2002-06 54 73
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
<b>Partner 1.4 BiFuel</b> KFW (TU3JP)		2003 -> 55 75
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	2 terminals/bornes	24897
Stop light switch/Int. luz stop	4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24907
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
<b>Partner 1.4, CombiSpace</b> KFX (TU3JP)/TU32		1996 -> 55 75
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>Partner 1.4, CombiSpace</b> KFX (TU3JP)/TU32/KFW (TU3JP)		1996 -> 55 75
Oil press. switch/Int. pres. aceite	TU32, KFX (TU3JP), 0.50 bar	11270
Oil press. switch/Int. pres. aceite	KFW (TU3JP)	12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Stop light switch/Int. luz stop	KFW (TU3JP), 11.2002 ->, 4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24907
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34440
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>Partner 1.6</b> 5FS (EP6C)		2010 -> 88 120
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>Partner 1.6</b>		2010 -> 72 98
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>Partner 1.6 16V CombiSpace</b> NFU (TU5JP4)		2001 -> 80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24906
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24907
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.6 HDi</b>		2010 -> 82 112
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>Partner 1.6 HDi 75, CombiSpace</b> 9HW (DV6BTE4)		2006 -> 55 75
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	2 terminals/bornes	24897
Stop light switch/Int. luz stop	4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>Partner 1.6 HDi 90, CombiSpace</b> 9HX (DV6ATE4)		2006 -> 66 90
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	2 terminals/bornes	24897
Stop light switch/Int. luz stop	4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.6 HDi, Tepee</b> 9HT (DV6BTE4)		2008 -> 55 75
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.6 HDi, Tepee</b> 9HX (DV6ATE4)		2008 -> 66 90
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.6 HDi, Tepee</b> 9HT (DV6BTE4)		2008 -> 80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.6, Tepee</b> NFR (TU5JP4B)		2008 -> 66 90
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.6, Tepee</b> NFU (TU5JP4)		2008 -> 80 109
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24899
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A., Blue/Azul	35290

**PEUGEOT Cont.**

<b>Partner 1.8 CombiSpace</b> LFX (XU7JB)		1997 -> 66 90
Oil press. switch/Int. pres. aceite	-> N° Vet 07846	12460
Oil press. switch/Int. pres. aceite	N° Vet 07847 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>Partner 1.8 D</b> A9A (XUD7)		1996 -> 43 58
Oil press. switch/Int. pres. aceite	-> N° Vet 07842	12460
Oil press. switch/Int. pres. aceite	N° Vet 07843 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Fan switch/Termocontacto ventilador	Climat	37680
Fan switch/Termocontacto ventilador	Climat	37930
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>Partner 1.9 D</b> DJY (XUD9A)		1996 -> 51 69
Oil press. switch/Int. pres. aceite	-> N° Vet 07842	12460
Oil press. switch/Int. pres. aceite	N° Vet 07843 ->	12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Thermistor-Thermocont./Doble función		34400
Fan switch/Termocontacto ventilador	Climat	37680
Fan switch/Termocontacto ventilador	Climat	37930
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>Partner 1.9 D</b> WJY (DW8B)/WJZ (DW8)		1998 -> 51 69
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
Thermistor-Thermocont./Doble función	Climat	34430
Thermistor-Thermocont./Doble función	Without/Sin A.A.	34460
Fan switch/Termocontacto ventilador	Climat	37680
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>Partner 1.9 D 4x4, CombiSpace</b> WJY (DW8B)		2004 -> 51 69
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	2 terminals/bornes	24897
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio BE3	40491
<b>Partner 1.9 D CombiSpace</b> XUD9		1996-98 51 69
Oil press. switch/Int. pres. aceite	-> N° Vet 07842	12460
Oil press. switch/Int. pres. aceite	N° Vet 07843 ->	12640
Stop light switch/Int. luz stop		24440
Thermistor-Thermocont./Doble función		34400
Fan switch/Termocontacto ventilador	Climat	37680
Fan switch/Termocontacto ventilador	Climat	37930
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>Partner 2.0 HDi, 4x4</b> RHY (DW10TD)		2000 -> 66 90
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop	-> 12.2001	24440
Stop light switch/Int. luz stop	01.2002 ->, 2 terminals/bornes	24897
Stop light switch/Int. luz stop	11.2002 ->, 4 terminals/bornes	24898
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24905
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24906
On clutch pedal/Int. pedal embrague	Engine control/Gestión motor	24907
Fan switch/Termocontacto ventilador	Climat	37680
Rev. light switch/Int. luz marcha atrás	N° Vet 08421 ->	40491
Rev. light switch/Int. luz marcha atrás	-> N° Vet 08420	40650
<b>RCZ 1.6 16V</b> EP6CDT		2010 -> 115 156
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>RCZ 1.6 16V</b> EP6CDTX		2010 -> 147 200
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907
<b>RCZ 2.0 HDi</b>		2010 -> 120 163
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24907

**PIAGGIO**

<b>Porter 1.0</b> CB41		1995-98 33 45
Temp. sending unit/Termo-Resistencia		31570
<b>Porter 1.0</b> CB41		1993-94 33 45
Rev. light switch/Int. luz marcha atrás		40981
<b>Porter 1.0</b> CB42		1994 -> 35 48
Temp. sending unit/Termo-Resistencia		31570

**PONTI**

<b>Firebird 3.4 Cabrio</b>		1993 -> 119 162
Temp. sending unit/Termo-Resistencia	-> 01.1997	32711
<b>Firebird '89 3.2 Trans Am</b> LHU		1991-93 104 141
Temp. sending unit/Termo-Resistencia	01.1993 ->	32711

**PORSCHE**

<b>911 3.2</b> 930.25		1986-89 160 218
Oil press. transmitter/Transm. pres. aceite		14660

**PORSCHE Cont.**

911 3.2 SC Carrera		1983-89
930.20		170 231
Oil press. transmitter/Transm. pres. aceite		14660
911 3.3 Turbo		1990-93
M 30.69		235 320
Oil press. switch/Int. pres. aceite	0.40 bar	11070
911 3.3 Turbo S		1991-92
M 30.69S		261 355
Oil press. switch/Int. pres. aceite	0.40 bar	11070
911 3.4 Carrera 4, Cabrio		1997-01
M 96.01/M 96.04		221 301
Rev. light switch/Int. luz marcha atrás		40830
911 3.4 Carrera 4, Cabrio		2001-05
		235 320
Rev. light switch/Int. luz marcha atrás		40830
911 3.4 Carrera, Cabrio		1997-01
M 96.01/M 96.04		221 301
Rev. light switch/Int. luz marcha atrás		40830
911 3.4 Carrera, Cabrio		2001-05
		235 320
Rev. light switch/Int. luz marcha atrás		40830
911 3.6 Carrera 4, Cabrio		1988-94
M 64.01		184 250
Oil press. switch/Int. pres. aceite	0.40 bar	11070
911 3.6 Carrera 4, Cabrio		2001-05
M 96.03		235 320
Rev. light switch/Int. luz marcha atrás		40830
911 3.6 Carrera 4S, Cabrio		2002-05
M 96.03		254 345
Rev. light switch/Int. luz marcha atrás		40830
911 3.6 Carrera RS		1991-93
64.03		191 260
Oil press. switch/Int. pres. aceite	0.40 bar	11070
911 3.6 Carrera S, Cabrio		2002-05
M 96.03		254 345
Rev. light switch/Int. luz marcha atrás		40830
911 3.6 Carrera, Cabrio		1989-94
M 64.01/M 64.02		184 250
Oil press. switch/Int. pres. aceite	0.40 bar	11070
911 3.6 Carrera, Cabrio		2001-05
M 96.03		235 320
Rev. light switch/Int. luz marcha atrás		40830
911 3.6 Targa		2001-05
M 96.03		235 320
Rev. light switch/Int. luz marcha atrás		40830
911 3.6 Turbo		1993-93
M 64.50		265 360
Oil press. switch/Int. pres. aceite	0.40 bar	11070
924 2.0		1975-89
XJ/XK		92 125
Oil press. switch/Int. pres. aceite	>> 06.1985	11060
Oil press. switch/Int. pres. aceite	07.1981 >>	11070
Stop light switch/Int. luz stop		24180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
Rev. light switch/Int. luz marcha atrás		40310
928 4.9 S		1985-94
M 28.46/M 28.45		212 288
Oil press. transmitter/Transm. pres. aceite		14990
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
928 4.9 S, S4		1986-91
M 28.41/M 28.42		235 320
Oil press. transmitter/Transm. pres. aceite		14990
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
928 5.0 GT		1989-91
M 28.47		243 330
Oil press. transmitter/Transm. pres. aceite		14990
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
928 5.0 S4 Kat		1986-91
M 28.41/M 28.42		235 320
Oil press. transmitter/Transm. pres. aceite		14990
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
928 5.4 GTS		1991-95
M 28.49/M 28.50		257 350
Oil press. transmitter/Transm. pres. aceite		14990
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
944 2.5		1987-90
M 44.05/M 44.09/M 44.10		118 160
Oil press. transmitter/Transm. pres. aceite		14990
Stop light switch/Int. luz stop		24180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
Rev. light switch/Int. luz marcha atrás		40310
944 2.5 Turbo		1987-91
M 44.52		184 250
Oil press. transmitter/Transm. pres. aceite		14990
Stop light switch/Int. luz stop		24180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
Rev. light switch/Int. luz marcha atrás		40310
944 2.7		1988-89
M 44.12/M 44.11		121 165
Oil press. transmitter/Transm. pres. aceite		14990
Stop light switch/Int. luz stop		24180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
Rev. light switch/Int. luz marcha atrás		40310
944 3.0 S2		1988-91
M 44.41		155 211
Oil press. transmitter/Transm. pres. aceite		14990
Stop light switch/Int. luz stop		24180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37820
Rev. light switch/Int. luz marcha atrás		40310
968 3.0		1991-95
M 44.43/M 44.44		176 239
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
968 3.0 Cabrio		1991-95
M 44.43/M 44.44		176 239
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
Boxster 2.5		1996-99
M 96.20		150 204

**PORSCHE Cont.**

Rev. light switch/Int. luz marcha atrás		40715
Boxster 2.7		1999-02
M 96.22		162 220
Rev. light switch/Int. luz marcha atrás		40715
Boxster 2.7		2002 ->
M 96.23		168 228
Rev. light switch/Int. luz marcha atrás		40715
Boxster 2.7		2004 ->
M 96.25		176 240
Rev. light switch/Int. luz marcha atrás		40715
Boxster 2.7		2006 ->
M 97.20		180 245
Rev. light switch/Int. luz marcha atrás		40715
Boxster S 3.2		1999-02
M 96.21		185 252
Rev. light switch/Int. luz marcha atrás		40715
Boxster S 3.2		2002 ->
M 96.24		191 260
Rev. light switch/Int. luz marcha atrás		40715
Boxster S 3.2		2004 ->
M 96.24		196 266
Rev. light switch/Int. luz marcha atrás		40715
Boxster S 3.2		2004 ->
M 96.26		206 280
Rev. light switch/Int. luz marcha atrás		40715
Boxster S 3.4		2006 ->
M 97.21		217 295
Rev. light switch/Int. luz marcha atrás		40715
Cayenne 3.2		2003 ->
M02.2Y		184 250
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Cayenne S 4.5		2002 ->
M 48.00		250 340
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Cayenne Turbo 4.5		2002 ->
M 48.50		331 450
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Cayenne Turbo S 4.5		2004 ->
M 48.50S		368 500
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Cayenne Turbo S 4.5		2006 ->
		383 521
Oil press. switch/Int. pres. aceite	Open/Conecta	12890

**PROTON**

Persona 300 316 GLXi		1996 ->
		83 113
Rev. light switch/Int. luz marcha atrás		41240
Persona 300 318 16V GTI		1996 ->
4 G 93		99 135
Rev. light switch/Int. luz marcha atrás		41240
Persona 400 415 GLi/GLSi, Fastback		1994 ->
4 G 15		66 90
Rev. light switch/Int. luz marcha atrás		41240
Persona 400 416 GLXi		1994 ->
4 G 92		83 113
Rev. light switch/Int. luz marcha atrás		41240
Persona 400 418, GLXi		1996 ->
		85 115
Rev. light switch/Int. luz marcha atrás		41240
Persona 400 420 D Fastback		1996 ->
4 D 68 T		60 82
Rev. light switch/Int. luz marcha atrás		41240
Persona 400 420 GLS D, Fastback		1996 ->
4 D 68		48 65
Rev. light switch/Int. luz marcha atrás		41240
Persona 400 420 TD		1996 ->
4 D 68 T		60 82
Rev. light switch/Int. luz marcha atrás		41240

**PUCH**

230 GE		1993 ->
M 102.996		92 125
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24470
Temp. sending unit/Termo-Resistencia		32220
230 GE		1990-93
M 102.989		93 126
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24470
Temp. sending unit/Termo-Resistencia		32220
Temp. s. warning lamp/Termocont. temp.		35770
Rev. light switch/Int. luz marcha atrás		40740
230 GE		1982-92
M 102.987/M 102.981		92 125
Oil press. switch/Int. pres. aceite		10200
Stop light switch/Int. luz stop		24470
Temp. sending unit/Termo-Resistencia		32220
Temp. s. warning lamp/Termocont. temp.		35770
280 GE		1984-89
M 110.994		110 150
Oil press. switch/Int. pres. aceite		10250
Stop light switch/Int. luz stop		24470
Temp. sending unit/Termo-Resistencia		32220
290 GD/G 290 D		1992 ->
OM 602.942		70 95
Temp. sending unit/Termo-Resistencia		32220
300 GE		1990 ->
M 103.987		125 170
Oil press. transmitter/Transm. pres. aceite		14730
Stop light switch/Int. luz stop		24470
Temp. sending unit/Termo-Resistencia		32220





**RENAULT Cont.**

<b>19 II 1.9 dT, Chamade</b>		<b>1992-95</b>
F8Q 744		66 90
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24220</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Thermistor-Thermocont./Doble función		<b>34100</b>
Temp. s. warning lamp/Termocont. temp.		<b>35700</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37990</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>19 II Chamade 1.4</b>		<b>1994-95</b>
E6J 700		57 78
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
<b>21 1.4, Sedan</b>		<b>1988-93</b>
C2J 770		51 69
Oil press. switch/Int. pres. aceite		<b>12350</b>
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función	-> Ch. S00000072,U00000204	<b>34040</b>
Thermistor-Thermocont./Doble función	Ch. U00000205,S00000073 ->	<b>34070</b>
Temp. s. warning lamp/Termocont. temp.	-> Ch. S00000072,U00000204	<b>35250</b>
Temp. s. warning lamp/Termocont. temp.		<b>35390</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>21 1.7 Kombi</b>		<b>1986-89</b>
F2N 750		54 73
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función		<b>34010</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
Temp. s. warning lamp/Termocont. temp.		<b>35690</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>
<b>21 1.7 Sedan</b>		<b>1986-94</b>
F3N 726 /F2N 750		54 73
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Thermistor-Thermocont./Doble función		<b>34010</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
Temp. s. warning lamp/Termocont. temp.		<b>35690</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>
<b>21 1.7, Kombi</b>		<b>1988-93</b>
F3N 726		54 73
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Thermistor-Thermocont./Doble función		<b>34010</b>
Temp. s. warning lamp/Termocont. temp.		<b>35690</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>
<b>21 1.7, Kombi, Sedan</b>		<b>1986-94</b>
F3N 723/F3N 722		69 94
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función	-> Ch. U00001771	<b>34040</b>
Thermistor-Thermocont./Doble función	Ch. U00001771 ->	<b>34070</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>
<b>21 1.7, Kombi, Sedan</b>		<b>1989-94</b>
F3N 723/F3N 722		66 90
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función	-> Ch. U00001771	<b>34040</b>
Thermistor-Thermocont./Doble función	Ch. U00001771 ->	<b>34070</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>
<b>21 1.7, Kombi, Sedan</b>		<b>1986-93</b>
F2N 712		55 75
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función		<b>34010</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
Temp. s. warning lamp/Termocont. temp.		<b>35690</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>
<b>21 1.7, Kombi, Sedan</b>		<b>1987-89</b>
F2N 752		64 87
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función	-> Ch. U00001771	<b>34040</b>
Thermistor-Thermocont./Doble función	Ch. U00001771 ->	<b>34070</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Temp. s. warning lamp/Termocont. temp.	125 °C, Without/Sin A.A., M 14x1,25	<b>35360</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40700</b>

**RENAULT Cont.**

<b>21 1.7, Kombi, Sedan</b>		<b>1986-93</b>
F2N 710		65 88
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop		<b>24230</b>
Thermistor-Thermocont./Doble función		<b>34010</b>
Temp. s. warning lamp/Termocont. temp.		<b>35690</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>21 1.9 D, Kombi, Sedan</b>		<b>1986-94</b>
F8Q 710		47 64
Oil press. switch/Int. pres. aceite		<b>12360</b>
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop		<b>24230</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Thermistor-Thermocont./Doble función	Climat	<b>34100</b>
Temp. s. warning lamp/Termocont. temp.	Without/Sin A.A.	<b>35250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>21 2.0 Kombi</b>		<b>1991-93</b>
J6R 759/J6R 758/J6R 792		75 102
Oil press. switch/Int. pres. aceite		<b>12490</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Rev. light switch/Int. luz marcha atrás	4WD	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	J6R 759, J6R 792	<b>41090</b>
Rev. light switch/Int. luz marcha atrás	J6R 758	<b>41180</b>
Rev. light switch/Int. luz marcha atrás	J6R 758, With/Con cable	<b>41190</b>
<b>21 2.0 Sedan</b>		<b>1986-93</b>
J6R 793/J6R 759/J6R 758/J6R 792		75 102
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop		<b>24230</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Temp. s. warning lamp/Termocont. temp.		<b>35250</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Fan switch/Termocontacto ventilador	05.1987 ->	<b>37510</b>
Fan switch/Termocontacto ventilador	05.1987 ->, Climat	<b>37870</b>
Fan switch/Termocontacto ventilador	05.1989 ->, Automatic	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	J6R 792	<b>41180</b>
Rev. light switch/Int. luz marcha atrás	J6R 759	<b>41190</b>
<b>21 2.0 Sedan</b>		<b>1991-93</b>
		78 106
Oil press. switch/Int. pres. aceite		<b>12360</b>
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop	-> Ch. U00001771	<b>24230</b>
Thermistor-Thermocont./Doble función	Without/Sin A.A.	<b>34040</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Fan switch/Termocontacto ventilador	Climat	<b>37250</b>
Rev. light switch/Int. luz marcha atrás	4WD	<b>40600</b>
Rev. light switch/Int. luz marcha atrás		<b>41180</b>
<b>21 2.0 Turbo Sedan, 4x4</b>		<b>1987-93</b>
J7R 752		129 175
Oil press. switch/Int. pres. aceite		<b>12360</b>
Oil press. transmitter/Transm. pres. aceite		<b>14110</b>
Oil press. transmitter/Transm. pres. aceite	01.1990 ->	<b>14970</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24220</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24230</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Thermistor-Thermocont./Doble función		<b>34040</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Fan switch/Termocontacto ventilador	06.1987 ->	<b>37510</b>
Fan switch/Termocontacto ventilador	-> 04.1989, Climat	<b>37870</b>
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	4WD, Without/Sin cable	<b>41180</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>41190</b>
Rev. light switch/Int. luz marcha atrás	4WD, With/Con cable	<b>41230</b>
<b>21 2.0 Turbo Sedan, 4x4</b>		<b>1990-92</b>
J7R 756		119 162
Oil press. switch/Int. pres. aceite		<b>12360</b>
Oil press. transmitter/Transm. pres. aceite		<b>14970</b>
Stop light switch/Int. luz stop	L.H.D.	<b>24220</b>
Stop light switch/Int. luz stop	R.H.D.	<b>24230</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Thermistor-Thermocont./Doble función		<b>34040</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>37870</b>
Rev. light switch/Int. luz marcha atrás	4WD	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>41180</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>41190</b>
Rev. light switch/Int. luz marcha atrás	4WD, With/Con cable	<b>41230</b>
<b>21 2.0, Kombi, Sedan</b>		<b>1986-92</b>
J7R 750/J7R 751		86 117
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Rev. light switch/Int. luz marcha atrás	4WD, Without/Sin cable	<b>40600</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>41180</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>41190</b>
Rev. light switch/Int. luz marcha atrás	4WD, With/Con cable	<b>41230</b>
<b>21 2.0, Kombi, Sedan, 4x4</b>		<b>1989-94</b>
J7R 740		99 135
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop		<b>24230</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Temp. s. warning lamp/Termocont. temp.		<b>35250</b>
Temp. s. warning lamp/Termocont. temp.		<b>35280</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Fan switch/Termocontacto ventilador	With/Con cable	<b>37510</b>
Fan switch/Termocontacto ventilador	Climat	<b>37870</b>
Fan switch/Termocontacto ventilador	Automatic, Climat	<b>37980</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>41180</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>41190</b>



**RENAULT Cont.**

<b>25 2.7 V6 Injection</b>		<b>1984-89</b>
Z7V 711/Z7V 709/Z7V 708		104 141
Rev. light switch/Int. luz marcha atrás	01.1989 ->	<b>41180</b>
<b>25 2.8 V6</b>		<b>1987-90</b>
Z7W 700		115 156
Rev. light switch/Int. luz marcha atrás	01.1989 ->	<b>41180</b>
<b>25 2.8 V6 Injection</b>		<b>1987-92</b>
Z7W 706/Z7W 707/Z7W 709		110 150
Rev. light switch/Int. luz marcha atrás	01.1989 ->	<b>41180</b>
<b>4 0.8, Furgón</b>		<b>1983-89</b>
800 705/B1B 707		21 29
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>4 1.0</b>		<b>1985-93</b>
689 710		31 42
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>4 1.0, Furgón</b>		<b>1987-93</b>
C1C 708		25 34
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>4 1.1</b>		<b>1978-90</b>
C1E 714/C1E 719/688 712		25 34
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>4 1.1</b>		<b>1986-90</b>
C1E 714		32 44
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>4 1.1 Furgón</b>		<b>1976-89</b>
C1E 714/C1E 718/C1E 719/688 711/688 712		25 34
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>4 1.1 Furgón</b>		<b>1982-89</b>
C1E 718/C1E 719		26 35
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24080</b>
Temp. s. warning lamp/Termocont. temp.		<b>35080</b>
Fan switch/Termocontacto ventilador		<b>37320</b>
<b>9 1.4 Turbo</b>		<b>1986-89</b>
C1J 764/C1J 760		85 116
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24230</b>
Temp. sending unit/Termo-Resistencia		<b>30260</b>
Temp. s. warning lamp/Termocont. temp.		<b>35200</b>
Fan switch/Termocontacto ventilador		<b>37340</b>
Rev. light switch/Int. luz marcha atrás		<b>41090</b>
<b>Avantime 2.0 16V Turbo</b>		<b>2001-03</b>
F4R 760/F4R 761		120 163
Oil press. switch/Int. pres. aceite		<b>12636</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24860</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Avantime 2.2 dCi</b>		<b>2002-03</b>
G9T 712		110 150
Oil press. switch/Int. pres. aceite		<b>12636</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24860</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Avantime 3.0 V6</b>		<b>2001-03</b>
L7X 720/L7X 721		152 207
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24860</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.2 16V Grandtour</b>		<b>2008 -&gt;</b>
D4F 764		58 78
Oil press. switch/Int. pres. aceite		<b>12700</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.2 16V Grandtour</b>		<b>2008 -&gt;</b>
D4F 784		74 101
Oil press. switch/Int. pres. aceite		<b>12700</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.2 16V Grandtour, Hi-Flex</b>		<b>2008 -&gt;</b>
D4F 740		55 75
Oil press. switch/Int. pres. aceite		<b>12700</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.5 dCi Grandtour</b>		<b>2008 -&gt;</b>
K9K 768		50 68
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>

**RENAULT Cont.**

<b>Clio 1.5 dCi Grandtour</b>		<b>2008 -&gt;</b>
K9K 766		63 86
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.5 dCi Grandtour</b>		<b>2008 -&gt;</b>
K9K 772		76 103
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.5 dCi Grandtour</b>		<b>2008 -&gt;</b>
K9K 764		78 106
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.6 16V Grandtour</b>		<b>2008 -&gt;</b>
K4M 800/K4M 801		82 112
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Clio 1.6 16V Grandtour</b>		<b>2008 -&gt;</b>
K4M 862		94 128
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>
<b>Clio I 1.1, Furgón</b>		<b>1991-98</b>
C1E 700		34 46
Oil press. switch/Int. pres. aceite		<b>12350</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Temp. s. warning lamp/Termocont. temp.		<b>35390</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2</b>		<b>1990-98</b>
E7F 750/E7F 700/E7F 708		43 58
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Thermistor-Thermocont./Doble función		<b>34100</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2</b>		<b>1996-98</b>
D7F 730		43 58
Oil press. switch/Int. pres. aceite		<b>12350</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Temp. s. warning lamp/Termocont. temp.		<b>35390</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2</b>		<b>1991-98</b>
E7F 706		40 54
Oil press. switch/Int. pres. aceite		<b>12350</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Thermistor-Thermocont./Doble función		<b>34100</b>
Temp. s. warning lamp/Termocont. temp.		<b>35250</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2</b>		<b>1996-98</b>
D7F 730		40 54
Oil press. switch/Int. pres. aceite		<b>12350</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Thermistor-Thermocont./Doble función		<b>34100</b>
Temp. s. warning lamp/Termocont. temp.		<b>35250</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2</b>		<b>1990-96</b>
C3G 720		40 54
Oil press. switch/Int. pres. aceite		<b>12350</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Thermistor-Thermocont./Doble función		<b>34100</b>
Temp. s. warning lamp/Termocont. temp.		<b>35250</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2</b>		<b>1990-96</b>
E5F 710		44 60
Temp. s. warning lamp/Termocont. temp.		<b>35250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.2 Furgón</b>		<b>1991-98</b>
E7F 750		44 60
Oil press. switch/Int. pres. aceite		<b>12350</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Temp. s. warning lamp/Termocont. temp.		<b>35390</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Clio I 1.4</b>		<b>1991-98</b>
E7J 719 /E7J 601 /E7J 718/E7J 754		58 79
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Automatic transmission	<b>24700</b>
Thermistor-Thermocont./Doble función		<b>34100</b>
Fan switch/Termocontacto ventilador		<b>37250</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>

**RENAULT Cont.**

<b>Clio I 1.4</b>		1991-98
E7J 710 /E7J 711		59 80
Oil press. switch/Int. pres. aceite		12370
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34100
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.4</b>		1991-98
E7J 756/E7J 757		55 75
Oil press. switch/Int. pres. aceite		12370
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34100
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.7</b>		1991-93
F2N 770		68 92
Oil press. switch/Int. pres. aceite		12490
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34040
Temp. s. warning lamp/Termocont. temp.		35690
Fan switch/Termocontacto ventilador		37250
Fan switch/Termocontacto ventilador	With/Con cable	37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.8</b>		1991-98
F3P 710 /F3P 714		65 88
Oil press. switch/Int. pres. aceite	-> 12.1995	12490
Oil press. switch/Int. pres. aceite	01.1996 ->	12520
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34040
Fan switch/Termocontacto ventilador	-> 12.1995	37250
Fan switch/Termocontacto ventilador	01.1996 ->	37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.8</b>		1994-98
F3P 755 /F3P 754		66 90
Oil press. switch/Int. pres. aceite	-> 12.1995	12490
Oil press. switch/Int. pres. aceite	01.1996 ->	12520
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34040
Fan switch/Termocontacto ventilador	-> 12.1995	37250
Fan switch/Termocontacto ventilador	01.1996 ->	37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.8</b>		1991-98
F3P 710		70 95
Oil press. switch/Int. pres. aceite	-> 12.1995	12490
Oil press. switch/Int. pres. aceite	01.1996 ->	12520
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34040
Fan switch/Termocontacto ventilador	-> 12.1995	37250
Fan switch/Termocontacto ventilador	01.1996 ->	37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.8 16V</b>		1991-96
F7P 722		99 135
Oil press. switch/Int. pres. aceite		12490
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34100
Temp. s. warning lamp/Termocont. temp.		35710
Fan switch/Termocontacto ventilador		37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.8 Rsi</b>		1995-98
F3P 758		79 107
Oil press. switch/Int. pres. aceite	-> 12.1995	12490
Oil press. switch/Int. pres. aceite	01.1996 ->	12520
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34040
Fan switch/Termocontacto ventilador	-> 12.1995	37250
Fan switch/Termocontacto ventilador	01.1996 ->	37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.8 Rsi</b>		1993-95
F3P 712		80 109
Oil press. switch/Int. pres. aceite		12490
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34040
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.9 D</b>		1991-98
F8Q 730/F8Q 732		48 64
Oil press. switch/Int. pres. aceite	-> 12.1995	12490
Oil press. switch/Int. pres. aceite	01.1996 ->	12520
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Thermistor-Thermocont./Doble función		34100
Temp. s. warning lamp/Termocont. temp.		35700
Fan switch/Termocontacto ventilador		37250
Fan switch/Termocontacto ventilador	With/Con cable	37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio I 1.9 D</b>		1997-98
F8Q 678		40 54
Oil press. switch/Int. pres. aceite		12520
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Temp. s. warning lamp/Termocont. temp.		35700
Fan switch/Termocontacto ventilador		37670
Rev. light switch/Int. luz marcha atrás		40600

**RENAULT Cont.**

<b>Clio I Williams</b>		1994-98
F7R 700		108 147
Oil press. switch/Int. pres. aceite		12490
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Temp. s. warning lamp/Termocont. temp.		35710
Fan switch/Termocontacto ventilador		37670
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.1 Furgón</b>		1998 ->
D7F 722/D7F 720		43 58
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.2</b>		1998 ->
D7F 710/D7F 766/D7F 720/D7F 726		43 58
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Temp. s. warning lamp/Termocont. temp.		35750
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.2</b>		1999-01
D7F 722		44 60
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop		24890
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.2 16V</b>		2001 ->
D4F 714/D4F 712/D4F 722		55 75
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	Automatic	24895
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás	D4F722	40999
<b>Clio II 1.2 Furgón</b>		1999-03
D7F 726/D7F 746		44 60
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.4</b>		1998-05
E7J 780		55 75
Oil press. switch/Int. pres. aceite		12370
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Temp. s. warning lamp/Termocont. temp.		35250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.4 16V</b>		1999-00
K4J 712/K4J 713		70 95
Oil press. switch/Int. pres. aceite		12370
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.4 16V</b>		2000 ->
K4J 712/K4J 711/K4J 710/K4J 713/K4J 700		72 98
Oil press. switch/Int. pres. aceite		12370
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.5 D</b>		2004 ->
K9K 714		50 68
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop		24900
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio II 1.5 dCi</b>		2001 ->
K9K 704/K9K 700		48 65
Oil press. switch/Int. pres. aceite		12630
Oil press. switch/Int. pres. aceite		12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.5 dCi</b>		2001 ->
K9K 702		60 82
Oil press. switch/Int. pres. aceite		12630
Oil press. switch/Int. pres. aceite	0,50 bar	12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.5 dCi</b>		2004 ->
K9K 712		74 100
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.5 dCi</b>		2001-04
K9K 702		59 80
Oil press. switch/Int. pres. aceite		12636
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.5 dCi</b>		2005 ->
K9K 740		47 64
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	4 terminals/bornes	24900
<b>Clio II 1.5 dCi</b>		2007 ->
K9K 718		62 84
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	4 terminals/bornes	24900
<b>Clio II 1.5 dCi Furgón</b>		2003 ->
K9K 702/K9K 710/K9K 716		60 82
Oil press. switch/Int. pres. aceite		12636
Rev. light switch/Int. luz marcha atrás		40600



**RENAULT Cont.**

<b>Clio II 1.6</b>		<b>1998-05</b>
K7M 744/K7M 745		66 90
Oil press. switch/Int. pres. aceite		12370
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Thermistor-Thermocont./Doble función		34100
Temp. s. warning lamp/Termocont. temp.		35250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.6 16V</b>		<b>1998 -&gt;</b>
K4M 748/K4M 744/K4M 708/K4M 745		79 107
Oil press. switch/Int. pres. aceite	K4M 748, K4M 708	12630
Oil press. switch/Int. pres. aceite	K4M 745, K4M 744	12636
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.9 D</b>		<b>1998-05</b>
F8Q 630		47 64
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Temp. sending unit/Termo-Resistencia		32600
Thermistor-Thermocont./Doble función		34350
Temp. s. warning lamp/Termocont. temp.		35700
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.9 D</b>		<b>1998 -&gt;</b>
F8Q 662/F8Q 630		47 64
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24895
Temp. sending unit/Termo-Resistencia		32600
Thermistor-Thermocont./Doble función		34350
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.9 D</b>		<b>2000-01</b>
F8Q 632		48 65
Stop light switch/Int. luz stop		24890
Temp. s. warning lamp/Termocont. temp.		35700
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 1.9 dTi</b>		<b>1999-05</b>
F9Q 780		59 80
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop	Automatic	24891
Stop light switch/Int. luz stop		24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 2.0 16V Sport</b>		<b>2000 -&gt;</b>
F4R 730		124 169
Oil press. switch/Int. pres. aceite	0.20 bar	12630
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 2.0 16V Sport</b>		<b>2004 -&gt;</b>
F4R 738		132 179
Oil press. switch/Int. pres. aceite	0.20 bar	12630
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Stop light switch/Int. luz stop	Manual	24890
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
<b>Clio II 3.0 V6 Sport</b>		<b>2000-02</b>
L7X 760		166 226
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop		24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio II 3.0 V6 Sport</b>		<b>2002 -&gt;</b>
L7X 762		187 254
Oil press. switch/Int. pres. aceite		12630
Stop light switch/Int. luz stop	Manual	24890
Stop light switch/Int. luz stop		24891
Stop light switch/Int. luz stop	Automatic	24895
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.2 16V</b>		<b>2005 -&gt;</b>
D4F 764		58 78
Oil press. switch/Int. pres. aceite		12700
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.2 16V</b>		<b>2005 -&gt;</b>
D4F 740		48 65
Oil press. switch/Int. pres. aceite		12700
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.2 16V</b>		<b>2007 -&gt;</b>
D4F 784		74 101
Oil press. switch/Int. pres. aceite		12700
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999

**RENAULT Cont.**

<b>Clio III 1.2 16V, Hi-Flex</b>		<b>2005 -&gt;</b>
D4F 740/D4F 742		55 75
Oil press. switch/Int. pres. aceite		12700
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.4 16V</b>		<b>2005 -&gt;</b>
K4J 780		72 98
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.5 dCi</b>		<b>2005 -&gt;</b>
K9K 768		50 68
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Oil press. switch/Int. pres. aceite	0.60 bar	12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.5 dCi</b>		<b>2005 -&gt;</b>
K9K 766		63 86
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Oil press. switch/Int. pres. aceite	0.60 bar	12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.5 dCi</b>		<b>2005 -&gt;</b>
K9K 764		78 106
Oil press. switch/Int. pres. aceite	0.50 bar	12636
Oil press. switch/Int. pres. aceite	0.60 bar	12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.5 dCi</b>		<b>2005 -&gt;</b>
K9K 772		76 103
Oil press. switch/Int. pres. aceite		12636
Stop light switch/Int. luz stop		24900
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.5 dCi</b>		<b>2005-06</b>
K9K 752		48 65
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.6 16V</b>		<b>2005 -&gt;</b>
K4M 804		65 88
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.6 16V</b>		<b>2005 -&gt;</b>
K4M 800/K4M 801		82 112
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 1.6 16V GT</b>		<b>2009 -&gt;</b>
K4M 862		94 128
Stop light switch/Int. luz stop		24900
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 2.0 16V</b>		<b>2006 -&gt;</b>
M4R 700/M4R 701		102 139
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 2.0 16V Sport</b>		<b>2006 -&gt;</b>
F4R 830		145 197
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Clio III 2.0 16V Sport</b>		<b>2008 -&gt;</b>
F4R 830		148 200
Stop light switch/Int. luz stop		24900
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999

**RENAULT Cont.**

<b>Espace I 2.0</b>	<b>1984-90</b>
J6R 234/J6R 236	80 109
Oil press. switch/Int. pres. aceite	11410
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24520
Temp. sending unit/Termo-Resistencia	32240
Thermistor-Thermocont./Doble función	34040
Fan switch/Termocontacto ventilador	37250
Rev. light switch/Int. luz marcha atrás	41080
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace I 2.0</b>	<b>1988-90</b>
J6R 734	74 101
Oil press. switch/Int. pres. aceite	11410
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24520
Temp. sending unit/Termo-Resistencia	32240
Fan switch/Termocontacto ventilador	37250
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace I 2.0 i, Quadra</b>	<b>1988-92</b>
J7R 760	87 118
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24520
Temp. sending unit/Termo-Resistencia	32240
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace I 2.1 TD</b>	<b>1984-90</b>
J8S 774/J8S 240	65 88
Oil press. switch/Int. pres. aceite	11620
Oil press. switch/Int. pres. aceite	12380
Oil press. transmitter/Transm. pres. aceite	14970
Stop light switch/Int. luz stop	24520
Temp. sending unit/Termo-Resistencia	32240
Thermistor-Thermocont./Doble función	34040
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41080
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace I 2.2, Quadra</b>	<b>1986-90</b>
J7T 770	79 108
Oil press. switch/Int. pres. aceite	11410
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24520
Temp. sending unit/Termo-Resistencia	32240
Thermistor-Thermocont./Doble función	34040
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41080
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace I 2.2, Quadra</b>	<b>1986-90</b>
J7T 770	79 108
Oil press. switch/Int. pres. aceite	11410
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24520
Temp. sending unit/Termo-Resistencia	32240
Thermistor-Thermocont./Doble función	34040
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41080
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace II 2.0</b>	<b>1991-96</b>
J7R 768	76 103
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32240
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37510
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace II 2.1 TD</b>	<b>1991-96</b>
J8S 776/J8S 772/J8S 778/J8S 610	65 88
Oil press. switch/Int. pres. aceite	12380
Oil press. transmitter/Transm. pres. aceite	14970
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32240
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37510
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace II 2.1 TD</b>	<b>1994-96</b>
J8S 612	66 90
Oil press. switch/Int. pres. aceite	12380
Oil press. transmitter/Transm. pres. aceite	14970
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32240
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37510
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace II 2.2</b>	<b>1991-96</b>
J7T 772/J7T 776/J7T 773	79 108
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32240
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37510
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace II 2.2 4x4</b>	<b>1991-96</b>
J7T 772/J7T 773	79 108
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32240
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37510
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41180
<b>Espace II 2.8 V6</b>	<b>1991-96</b>
Z7W 717/Z7W 712/Z7W 713	110 150
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24700
Temp. s. warning lamp/Termocont. temp.	35250
Fan switch/Termocontacto ventilador	37510
Fan switch/Termocontacto ventilador	37870
Rev. light switch/Int. luz marcha atrás	41230

**RENAULT Cont.**

<b>Espace III 1.9 dTi</b>	<b>1999-02</b>
F9Q 722	72 98
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Temp. sending unit/Termo-Resistencia	32600
Thermistor-Thermocont./Doble función	34230
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 2.0</b>	<b>1996-00</b>
F3R 769/F3R 728/F3R 742/F3R 729/F3R 768	84 114
Oil press. switch/Int. pres. aceite	12490
Oil press. switch/Int. pres. aceite	12630
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Temp. sending unit/Termo-Resistencia	32600
Thermistor-Thermocont./Doble función	34230
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 2.0</b>	<b>2001-02</b>
F4R 701/F4R 700	102 139
Oil press. switch/Int. pres. aceite	12630
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Temp. sending unit/Termo-Resistencia	32600
Thermistor-Thermocont./Doble función	34230
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 2.0 16V</b>	<b>1998-02</b>
F4R 701/F4R 700	103 140
Oil press. switch/Int. pres. aceite	12630
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 2.2 12V TD</b>	<b>1996-00</b>
G8T 716/G8T 714/G8T 760	83 113
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Thermistor-Thermocont./Doble función	34230
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 2.2 dCi</b>	<b>2000-02</b>
G9T 710/G9T 642	95 130
Oil press. switch/Int. pres. aceite	12370
Oil press. switch/Int. pres. aceite	12636
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Thermistor-Thermocont./Doble función	34230
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 2.2 dCi</b>	<b>2000-02</b>
G9T 710	85 115
Oil press. switch/Int. pres. aceite	12636
<b>Espace III 3.0</b>	<b>1996-98</b>
Z7X 775	123 167
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Thermistor-Thermocont./Doble función	34300
Temp. s. warning lamp/Termocont. temp.	35720
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace III 3.0 V6 24V</b>	<b>1998-02</b>
L7X 727	140 190
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24220
Stop light switch/Int. luz stop	24480
Stop light switch/Int. luz stop	24700
On clutch pedal/Int. pedal embrague	24860
Temp. sending unit/Termo-Resistencia	32490
Thermistor-Thermocont./Doble función	34460
Fan switch/Termocontacto ventilador	37250
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	40600
<b>Espace IV 1.9 dCi</b>	<b>2002 -&gt;</b>
F9Q 680/F9Q 820/F9Q 826	88 120
Oil press. switch/Int. pres. aceite	12636
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Stop light switch/Int. luz stop	24903
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999

**RENAULT Cont.**

<b>Espace IV 1.9 dCi</b>	<b>2003-05</b>	
F9Q 820	85 116	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.0</b>	<b>2002 -&gt;</b>	
F4R 790/F4R 792/F4R 791	100 136	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Gray/gris. Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.0</b>	<b>2005 -&gt;</b>	
F4R 897/F4R 796/F4R 797	125 170	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.0</b>	<b>2002-05</b>	
F4R 790	98 133	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Espace IV 2.0 dCi</b>	<b>2006 -&gt;</b>	
M9R 740/M9R 760	110 150	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.0 dCi</b>	<b>2006 -&gt;</b>	
M9R 760	127 173	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.0 Turbo</b>	<b>2002 -&gt;</b>	
F4R 796/F4R 795/F4R 794/F4R 797	120 163	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Gray/gris. Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	F4R 794, 795, 797, 4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.2 dCi</b>	<b>2002 -&gt;</b>	
G9T 742/G9T 743	110 150	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
On clutch pedal/Int. pedal embrague	<b>24891</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24900</b>	
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40998</b>	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	<b>40999</b>	
<b>Espace IV 2.2 dCi</b>	<b>2006 -&gt;</b>	
G9T 645	102 139	
Oil press. switch/Int. pres. aceite	<b>12636</b>	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
<b>Espace IV 3.0 dCi</b>	<b>2002 -&gt;</b>	
P9X 701/P9X 715	130 177	
Stop light switch/Int. luz stop	<b>24891</b>	Gray/gris
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
<b>Espace IV 3.0 dCi</b>	<b>2006 -&gt;</b>	
P9X 715	133 181	
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
<b>Espace IV 3.5 V6</b>	<b>2002 -&gt;</b>	
V4Y 715/V4Y 711	177 241	
Oil press. switch/Int. pres. aceite	<b>12420</b>	
Stop light switch/Int. luz stop	<b>24891</b>	Gray/gris
Stop light switch/Int. luz stop	<b>24895</b>	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	<b>24903</b>	4 terminals/bornes
<b>Express 1.0 Furgón</b>	<b>1986-92</b>	
Oil press. switch/Int. pres. aceite	27 37	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12370</b>	10.1986 ->
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35200</b>	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	10.1986 ->
Fan switch/Termocontacto ventilador	<b>37250</b>	06.1987 ->
Fan switch/Termocontacto ventilador	<b>37320</b>	-> 05.1987
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	06.1988 ->
Rev. light switch/Int. luz marcha atrás	<b>41090</b>	-> 05.1988

**RENAULT Cont.**

<b>Express 1.1 Furgón</b>	<b>1987-91</b>	
C1E 756	33 45	
Oil press. switch/Int. pres. aceite	<b>12370</b>	
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	
Fan switch/Termocontacto ventilador	<b>37250</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.1 Furgón</b>	<b>1985-95</b>	
C1E 752/ 762/ 750/ 754/ 760/ 792	33 45	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12370</b>	10.1986 ->
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35200</b>	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	10.1986 ->
Fan switch/Termocontacto ventilador	<b>37250</b>	06.1987 ->
Fan switch/Termocontacto ventilador	<b>37320</b>	-> 05.1987
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	06.1988 ->
Rev. light switch/Int. luz marcha atrás	<b>41090</b>	-> 05.1988
<b>Express 1.2 Furgón</b>	<b>1991-98</b>	
C3G 712/C3G 710	40 55	
Oil press. switch/Int. pres. aceite	<b>12370</b>	
Stop light switch/Int. luz stop	<b>24220</b>	Manual
Stop light switch/Int. luz stop	<b>24700</b>	Automatic transmission
Temp. sending unit/Termo-Resistencia	<b>35250</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35390</b>	
Fan switch/Termocontacto ventilador	<b>37250</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.4 Furgón</b>	<b>1986-91</b>	
C2J 784	44 60	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12370</b>	10.1986 ->
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35200</b>	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	10.1986 ->
Fan switch/Termocontacto ventilador	<b>37250</b>	06.1987 ->
Fan switch/Termocontacto ventilador	<b>37320</b>	-> 05.1987
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	06.1988 ->
Rev. light switch/Int. luz marcha atrás	<b>41090</b>	-> 05.1988
<b>Express 1.4 Furgón</b>	<b>1988-98</b>	
C3J 762/C3J 700/C3J 702/C3J 760	43 58	
Oil press. switch/Int. pres. aceite	<b>12370</b>	
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	
Fan switch/Termocontacto ventilador	<b>37250</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.4 Furgón</b>	<b>1991-98</b>	
E7J 720/E7J 773/E7J 724/E7J 726	55 75	
Oil press. switch/Int. pres. aceite	<b>12370</b>	
Stop light switch/Int. luz stop	<b>24230</b>	Manual
Stop light switch/Int. luz stop	<b>24700</b>	Automatic transmission
Temp. sending unit/Termo-Resistencia	<b>35250</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35390</b>	
Fan switch/Termocontacto ventilador	<b>37250</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.4 Furgón</b>	<b>1994-98</b>	
E7J 728	58 79	
Oil press. switch/Int. pres. aceite	<b>12370</b>	
Stop light switch/Int. luz stop	<b>24230</b>	
Thermistor-Thermocont./Doble función	<b>34100</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	
Fan switch/Termocontacto ventilador	<b>37250</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.4 Furgón</b>	<b>1985-91</b>	
C1J 780/C1J 768	43 58	
Oil press. switch/Int. pres. aceite	<b>11410</b>	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	<b>12370</b>	10.1986 ->
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35200</b>	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	10.1986 ->
Fan switch/Termocontacto ventilador	<b>37250</b>	06.1987 ->
Fan switch/Termocontacto ventilador	<b>37320</b>	-> 05.1987
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	06.1988 ->
Rev. light switch/Int. luz marcha atrás	<b>41090</b>	-> 05.1988
<b>Express 1.6 D Furgón</b>	<b>1986-98</b>	
F8M 730/F8M 760/F8M 736/F8M 720	40 55	
Oil press. switch/Int. pres. aceite	<b>11620</b>	
Stop light switch/Int. luz stop	<b>24230</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35250</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35360</b>	125 °C, Without/Sin A.A., M 14x1,25
Temp. s. warning lamp/Termocont. temp.	<b>35700</b>	01.1991 ->
Fan switch/Termocontacto ventilador	<b>37250</b>	
Fan switch/Termocontacto ventilador	<b>37670</b>	01.1991 ->
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.9 D Furgón</b>	<b>1991-98</b>	
F8Q 774/F8Q 722/F8Q 776/F8Q 724	47 64	
Oil press. switch/Int. pres. aceite	<b>12380</b>	
Stop light switch/Int. luz stop	<b>24230</b>	Manual
Stop light switch/Int. luz stop	<b>24700</b>	Automatic transmission
Temp. sending unit/Termo-Resistencia	<b>35250</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35700</b>	
Fan switch/Termocontacto ventilador	<b>37670</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Express 1.9 D Furgón</b>	<b>1994-98</b>	
F8Q 682/F8Q 640	40 54	
Oil press. switch/Int. pres. aceite	<b>12380</b>	
Stop light switch/Int. luz stop	<b>24230</b>	Manual
Stop light switch/Int. luz stop	<b>24700</b>	Automatic transmission
Temp. sending unit/Termo-Resistencia	<b>35250</b>	
Temp. s. warning lamp/Termocont. temp.	<b>35700</b>	
Fan switch/Termocontacto ventilador	<b>37670</b>	
Rev. light switch/Int. luz marcha atrás	<b>40600</b>	
<b>Fluence 1.5 dCi</b>	<b>2010 -&gt;</b>	
K9K 834	66 90	
Oil press. switch/Int. pres. aceite	<b>12701</b>	
Stop light switch/Int. luz stop	<b>24900</b>	

**RENAULT Cont.**

<b>Fluence 1.6 16V</b>		2010 ->	
Oil press. switch/Int. pres. aceite		81 110	
Rev. light switch/Int. luz marcha atrás		12701	
<b>Fluence 2.0 16V</b>		40999	
		2010 ->	
Stop light switch/Int. luz stop		103 140	
<b>Grand Scénic II 1.5 dCi</b>		24900	
K9K 729/K9K 728		2004 ->	
Oil press. switch/Int. pres. aceite		74 101	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24900	
Stop light switch/Int. luz stop		24901	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	24902	
Rev. light switch/Int. luz marcha atrás		40998	
<b>Grand Scénic II 1.6</b>		40999	
K4M 761/K4M 782		2004 ->	
Oil press. switch/Int. pres. aceite		83 113	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24900	
Stop light switch/Int. luz stop		24901	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	24902	
Rev. light switch/Int. luz marcha atrás		40998	
<b>Grand Scénic II 1.9 dCi</b>		40999	
F9Q 812		2004 ->	
Oil press. switch/Int. pres. aceite		88 120	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24700	
Stop light switch/Int. luz stop		24901	
Rev. light switch/Int. luz marcha atrás		24902	
Rev. light switch/Int. luz marcha atrás		40825	
<b>Grand Scénic II 1.9 dCi</b>		41255	
F9Q E 804		2005 ->	
Stop light switch/Int. luz stop		81 110	
Rev. light switch/Int. luz marcha atrás		24700	
<b>Grand Scénic II 1.9 dCi</b>		40600	
F9Q J 803/F9Q 818/F9Q 816/F9Q EE 804		2005 ->	
Oil press. switch/Int. pres. aceite	0.50 bar	96 131	
Oil press. switch/Int. pres. aceite	0.60 bar	12636	
Stop light switch/Int. luz stop		12701	
Stop light switch/Int. luz stop		24700	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24900	
Rev. light switch/Int. luz marcha atrás		24901	
Rev. light switch/Int. luz marcha atrás		40825	
<b>Grand Scénic II 2.0</b>		41255	
F4R 771/F4R 770		2004 ->	
Oil press. switch/Int. pres. aceite		99 135	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24900	
Stop light switch/Int. luz stop		24901	
Rev. light switch/Int. luz marcha atrás		24902	
Rev. light switch/Int. luz marcha atrás		40825	
<b>Grand Scénic II 2.0</b>		41255	
F4R 776		2004 ->	
Oil press. switch/Int. pres. aceite		120 163	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24900	
Stop light switch/Int. luz stop		24901	
Rev. light switch/Int. luz marcha atrás		24902	
Rev. light switch/Int. luz marcha atrás		40825	
<b>Grand Scénic II 2.0 dCi</b>		41255	
M9R 721/M9R 700		2005 ->	
Oil press. switch/Int. pres. aceite		110 150	
Stop light switch/Int. luz stop		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24900	
Stop light switch/Int. luz stop		24901	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	24902	
Rev. light switch/Int. luz marcha atrás		40998	
<b>Grand Scénic III 1.4 16V</b>		40999	
H4J 700		2009 ->	
Stop light switch/Int. luz stop		96 131	
<b>Grand Scénic III 1.5 dCi</b>		24900	
K9K 832		2009 ->	
Oil press. switch/Int. pres. aceite		78 106	
Stop light switch/Int. luz stop		12701	
<b>Grand Scénic III 1.9 dCi</b>		24900	
F9Q 870		2009 ->	
Oil press. switch/Int. pres. aceite	0.50 bar	96 131	
Oil press. switch/Int. pres. aceite	0.60 bar	12636	
Stop light switch/Int. luz stop		12701	
<b>Grand Scénic III 2.0 dCi</b>		24900	
M9R 615		2009 ->	
Oil press. switch/Int. pres. aceite		110 150	
Stop light switch/Int. luz stop		12701	
<b>Grand Scénic III 2.0 dCi</b>		24900	
M9R 610		2009 ->	
Oil press. switch/Int. pres. aceite		118 160	
Stop light switch/Int. luz stop		12701	
<b>Kangoo 1.2 16V</b>		24900	
D4F 714/D4F 716/D4F 712		2001 ->	
Oil press. switch/Int. pres. aceite		55 75	
Stop light switch/Int. luz stop	Manual	12635	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24890	
Stop light switch/Int. luz stop	Automatic	24891	
Rev. light switch/Int. luz marcha atrás		24895	
<b>Kangoo 1.2 16V Express</b>		40600	
D4F 714/D4F 712		2001 ->	
Oil press. switch/Int. pres. aceite		55 75	
Stop light switch/Int. luz stop	Manual	12635	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24890	
Stop light switch/Int. luz stop	Automatic	24891	
Rev. light switch/Int. luz marcha atrás		24895	

**RENAULT Cont.**

<b>Kangoo 1.2, Express</b>		1997 ->	
D7F 710/ 744/ 722/ 720/ 726/ 746		43 58	
Oil press. switch/Int. pres. aceite		12635	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Temp. s. warning lamp/Termocont. temp.		35750	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.4</b>		1997 ->	
E7J 634/K7J 701/E7J 635/E7J 780/K7J 700		55 75	
Oil press. switch/Int. pres. aceite		12370	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Thermistor-Thermocont./Doble función	10.1998 ->	34100	
Temp. s. warning lamp/Termocont. temp.	-> 10.1998	35250	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.4 Express</b>		1997 ->	
E7J 634/K7J 701/E7J 635/E7J 780		55 75	
Oil press. switch/Int. pres. aceite		12635	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Temp. s. warning lamp/Termocont. temp.		35250	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.5 dCi</b>		2008 ->	
K9K 806/K9K 804		76 103	
Oil press. switch/Int. pres. aceite		12701	
<b>Kangoo 1.5 dCi, Be Bop, Express</b>		2008 ->	
K9K 806		76 103	
Oil press. switch/Int. pres. aceite		12701	
<b>Kangoo 1.5 dCi, Express</b>		2001 ->	
K9K 704/K9K 700		48 65	
Oil press. switch/Int. pres. aceite		12630	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.5 dCi, Express</b>		2002 ->	
K9K 702/K9K 710		60 82	
Oil press. switch/Int. pres. aceite		12630	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.5 dCi, Express</b>		2002 ->	
K9K 704		42 57	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.5 dCi, Express</b>		2005 ->	
K9K 714		50 68	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.5 dCi, Express</b>		2005 ->	
K9K 718		62 84	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual	24890	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.5 dCi, Express</b>		2008 ->	
K9K 802		63 86	
Oil press. switch/Int. pres. aceite		12701	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901	
Stop light switch/Int. luz stop		24902	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Kangoo 1.5 dCi, Express</b>		2008 ->	
K9K 802/K9K 800		63 86	
Oil press. switch/Int. pres. aceite		12701	
Rev. light switch/Int. luz marcha atrás		40999	
<b>Kangoo 1.6 16V Bivalent</b>		2005 ->	
		60 82	
Oil press. switch/Int. pres. aceite		12635	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.6 16V, Express</b>		2001 ->	
K4M 752		70 95	
Oil press. switch/Int. pres. aceite		12635	
Oil press. switch/Int. pres. aceite	0.50 bar	12636	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.6 16V, Express, 4x4</b>		2001 ->	
K4M 750/K4M 753/K4M 752		70 95	
Oil press. switch/Int. pres. aceite		12635	
Oil press. switch/Int. pres. aceite		12636	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.6 Be Bop</b>		2009 ->	
K4M 830		78 106	
Oil press. switch/Int. pres. aceite		12701	
<b>Kangoo 1.6, Express</b>		2008 ->	
K7M 750		64 87	
Oil press. switch/Int. pres. aceite		12702	
Rev. light switch/Int. luz marcha atrás		40999	

**RENAULT Cont.**

<b>Kangoo 1.9 dCi 4x4, Express</b>		2001 ->	
F9Q 790/F9Q 782		59 80	
Oil press. switch/Int. pres. aceite		12635	
Oil press. switch/Int. pres. aceite	0.50 bar	12636	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.9 dCi 4x4, Express</b>		2003 ->	
F9Q 790		62 84	
Oil press. switch/Int. pres. aceite		12635	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo 1.9 dTi, Express</b>		2000 ->	
F9Q 780		59 80	
Oil press. switch/Int. pres. aceite		12370	
Stop light switch/Int. luz stop	Manual	24220	
Stop light switch/Int. luz stop	Without/Sin cruise control, Automatic	24480	
Stop light switch/Int. luz stop	With/Con cruise control, Automatic	24700	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24860	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Temp. sending unit/Termo-Resistencia		32600	
Thermistor-Thermocont./Doble función		34230	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo D 55 1.9, Express</b>		1997 ->	
F8Q 662		40 54	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Temp. sending unit/Termo-Resistencia		32600	
Thermistor-Thermocont./Doble función		34350	
Fan switch/Termocontacto ventilador		37250	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Kangoo D 65 1.9, Express</b>		1997 ->	
F8Q 632/F8Q 630		47 64	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual	24890	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Automatic	24895	
Temp. sending unit/Termo-Resistencia		32600	
Thermistor-Thermocont./Doble función		34350	
Fan switch/Termocontacto ventilador		37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Koleos 2.0 dCi</b>		2008 ->	
M9R G 832/M9R D 833/M9R 832		110 150	
Oil press. switch/Int. pres. aceite		12701	
<b>Koleos 2.0 dCi 4x4</b>		2008 ->	
M9R G 832/M9R 832		110 150	
Oil press. switch/Int. pres. aceite		12701	
<b>Koleos 2.0 dCi 4x4</b>		2008 ->	
M9R 830		127 173	
Oil press. switch/Int. pres. aceite		12701	
<b>Laguna 1.6 16V, Grandtour</b>		1997-01	
K4M 720/K4M 724		79 107	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.8</b>		1993-01	
F3P 720/F3P 724		66 90	
Oil press. switch/Int. pres. aceite	-> 06.1998	12490	
Oil press. switch/Int. pres. aceite	-> 06.1998	12520	
Oil press. switch/Int. pres. aceite	07.1998 ->	12630	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Thermistor-Thermocont./Doble función	06.1995 ->	34350	
Thermistor-Thermocont./Doble función	-> 05.1995	34460	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.8</b>		1995-98	
F3P 676		70 95	
Oil press. switch/Int. pres. aceite		12630	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.8</b>		1995-01	
F3P 674		69 94	
Oil press. switch/Int. pres. aceite		12630	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.8 16V, Grandtour</b>		1998-01	
F4P 760		88 120	
Oil press. switch/Int. pres. aceite		12520	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	

**RENAULT Cont.**

<b>Laguna 1.8, Grandtour</b>		1995-01	
F3P 678/F3P 670		66 90	
Oil press. switch/Int. pres. aceite	-> 06.1998	12490	
Oil press. switch/Int. pres. aceite	-> 06.1998	12520	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Thermistor-Thermocont./Doble función		34350	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.8, Grandtour</b>		1995-01	
F3P 720/F3P 724		69 94	
Oil press. switch/Int. pres. aceite		12520	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Thermistor-Thermocont./Doble función		34070	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.9 dCi, Grandtour</b>		1999-01	
F9Q 718		79 107	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual	24220	
Stop light switch/Int. luz stop	With/Con cruise control, Automatic	24700	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24860	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Without/Sin cruise control, Automatic	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 1.9 dTi, Grandtour</b>		1997-01	
F9Q 717/F9Q 716/F9Q 710		72 98	
Oil press. switch/Int. pres. aceite	-> 06.1998	12490	
Oil press. switch/Int. pres. aceite	07.1998 ->	12630	
Stop light switch/Int. luz stop	Manual	24220	
Stop light switch/Int. luz stop	With/Con cruise control, Automatic	24700	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24860	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	Without/Sin cruise control, Automatic	24895	
Temp. sending unit/Termo-Resistencia		32600	
Thermistor-Thermocont./Doble función		34230	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 2.0</b>		1993-01	
F3R 611		70 95	
Oil press. switch/Int. pres. aceite		12490	
Oil press. switch/Int. pres. aceite		12520	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Temp. sending unit/Termo-Resistencia		32600	
Thermistor-Thermocont./Doble función		34350	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 2.0</b>		1999-01	
F3R 611		80 109	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 2.0</b>		1999-01	
F4R 780		102 139	
Oil press. switch/Int. pres. aceite		12630	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 2.0</b>		1995-01	
N7Q 700/N7Q 704		103 140	
Thermistor-Thermocont./Doble función		34390	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 2.0 16V Turbo Coupe</b>		2008 ->	
F4Rt 811/F4R 811		125 170	
Oil press. switch/Int. pres. aceite		12701	
Stop light switch/Int. luz stop		24900	
<b>Laguna 2.0 16V, Grandtour</b>		1995-01	
N7Q 700/N7Q 704		102 139	
Oil press. switch/Int. pres. aceite		12520	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Temp. sending unit/Termo-Resistencia		32370	
Thermistor-Thermocont./Doble función	Brown/Marrón	34390	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Laguna 2.0 16V, Grandtour</b>		1999-01	
F4R 780		103 140	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop		24220	
Stop light switch/Int. luz stop	R.H.D., Automatic	24700	
On clutch pedal/Int. pedal embrague	R.H.D. Cruise control/Control veloc.	24860	
Stop light switch/Int. luz stop	L.H.D., Automatic	24895	
Temp. sending unit/Termo-Resistencia		32490	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	37250	
Fan switch/Termocontacto ventilador	Climat	38110	
Rev. light switch/Int. luz marcha atrás		40600	

**RENAULT Cont.**

<b>Laguna 2.0 dCi Coupe</b> M9R 816/M9Rk 806 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop	2008 -> 127 173 12701 24900	
<b>Laguna 2.0 dCi Coupe</b> M9Rk 802/M9Rk 805/M9Ra 742 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop	2007 -> 110 150 12701 24900	
<b>Laguna 2.0, Grandtour</b> F3R 722/F3R 723 Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Thermistor-Thermocont./Doble función Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1993-01 83 113 12490 12520 24220 24700 24860 24891 24895 34070 37250 38110 40600	R.H.D., Automatic R.H.D. Cruise control/Control veloc. Cruise control/Control veloc. L.H.D., Automatic  Without/Sin A.A. Climat
<b>Laguna 2.0, Grandtour</b> F3R 768 Oil press. switch/Int. pres. aceite Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1995-01 84 114 12630 38110 40600	2 fans or speeds/Ventil. o veloc.
<b>Laguna 2.2 D, Grandtour</b> G8T 706/G8T 752/G8T 794/G8T 790 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Thermistor-Thermocont./Doble función Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1993-01 61 83 12370 24220 24700 24860 24891 24895 34230 37250 38110 40600	Manual With/Con cruise control, Automatic Cruise control/Control veloc. L.H.D., Cruise control/Control veloc. Without/Sin cruise control, Automatic  Without/Sin A.A. 2 fans or speeds/Ventil. o veloc.
<b>Laguna 2.2 dT, Grandtour</b> G8T 760 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Thermistor-Thermocont./Doble función Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1996-01 83 113 12370 24220 24700 24860 24895 34230 37250 38110 40600	Manual With/Con cruise control, Automatic Cruise control/Control veloc. Without/Sin cruise control, Automatic  Without/Sin A.A. 2 fans or speeds/Ventil. o veloc.
<b>Laguna 3.0</b> Z7X 765/Z7X 760 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Thermistor-Thermocont./Doble función Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1993-01 123 167 12380 24220 24700 24860 24895 34300 35720 37250 38110 40600	R.H.D., Automatic R.H.D. Cruise control/Control veloc. L.H.D., Automatic  Without/Sin A.A. Climat
<b>Laguna 3.0 24V, Grandtour</b> L7X 700/L7X 701 Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Thermistor-Thermocont./Doble función Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1997-01 140 190 12460 12640 24220 24700 24860 24895 34460 37250 38110 40600	-> 12.1998 01.1999 ->  R.H.D., Automatic R.H.D. Cruise control/Control veloc. L.H.D., Automatic  Without/Sin A.A. Climat
<b>Laguna 3.0 Grandtour</b> Z7X 765 Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Temp. s. warning lamp/Termocont. temp. Fan switch/Termocontacto ventilador Fan switch/Termocontacto ventilador Rev. light switch/Int. luz marcha atrás	1996-01 123 167 24220 24700 24860 24895 35720 37250 38110 40600	R.H.D., Automatic R.H.D. Cruise control/Control veloc. L.H.D., Automatic  Without/Sin A.A. Climat
<b>Laguna 3.5 V6 Coupe</b> V4Y 713 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop	2008 -> 175 238 12555 24900	
<b>Laguna II 1.6 16V, Grandtour</b> K4M 711/K4M 714/K4M 710 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 79 107 12636 24700 24891 24895 40998 40999	Gray/gris Automatic, 3 terminals/bornes Gray/gris. Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes K7J 710
<b>Laguna II 1.6 16V, Grandtour</b> K4M 716 Oil press. switch/Int. pres. aceite Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2005 -> 82 112 12636 12701 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes

**RENAULT Cont.**

<b>Laguna II 1.8 16V</b> F4P 774/ 770/ 773/ 771/ 775 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 85 116 12636 24700 24891 24895 24900 24901 24903 40998 40999	Automatic, 3 terminals/bornes Gray/gris. Cruise control/Control veloc. L.H.D., 4 terminals/bornes  Cruise control/Control veloc. F4P 773, 4 terminals/bornes 3 Terminals/bornes
<b>Laguna II 1.8 16V Grandtour</b> F4P 774/F4P 773/F4P 771 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 85 116 12636 24700 24891 24895 24900 24901 24903 40998 40999	Automatic, 3 terminals/bornes Gray/gris. Cruise control/Control veloc. L.H.D., 4 terminals/bornes  Cruise control/Control veloc. F4P 773, 4 terminals/bornes 3 Terminals/bornes
<b>Laguna II 1.8 16V, Grandtour</b> F4P 774/F4P 773 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 89 121 12636 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Gray/gris. Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes K7J 710
<b>Laguna II 1.8 16V, Grandtour</b> F4P 770/F4P 773 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 88 120 12636 24700 24891 24895 24900 24901 24903 40998 40999	Automatic, 3 terminals/bornes Gray/gris. Cruise control/Control veloc. L.H.D., 4 terminals/bornes  Cruise control/Control veloc. F4P 773, 4 terminals/bornes 3 Terminals/bornes
<b>Laguna II 1.9 dCi</b> F9Q 674/F9Q 758 Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2005 -> 81 110 24700 24891 24895 40600	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes
<b>Laguna II 1.9 dCi Grandtour</b> F9Q 674 Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2005 -> 81 110 24700 24891 24895 40600	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes
<b>Laguna II 1.9 dCi, Grandtour</b> F9Q 756/F9Q 670/F9Q 750 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 88 120 12636 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Gray/gris. Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes K7J 710
<b>Laguna II 1.9 dCi, Grandtour</b> F9Q 752 Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 77 105 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes
<b>Laguna II 1.9 dCi, Grandtour</b> F9Q 754/F9Q 752 Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 74 100 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes
<b>Laguna II 1.9 dCi, Grandtour</b> F9Q 754 Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2004 -> 68 92 12701 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes
<b>Laguna II 1.9 dCi, Grandtour</b> F9Q 758/F9Q 759 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2005 -> 96 130 12701 24700 24891 24895 40998 40600	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes
<b>Laguna II 1.9 dCi, Grandtour</b> F9Q 718/F9Q 754 Oil press. switch/Int. pres. aceite Stop light switch/Int. luz stop On clutch pedal/Int. pedal embrague Stop light switch/Int. luz stop Rev. light switch/Int. luz marcha atrás Rev. light switch/Int. luz marcha atrás	2001 -> 79 107 12630 24700 24891 24895 40998 40999	Automatic, 3 terminals/bornes Cruise control/Control veloc. L.H.D., 4 terminals/bornes 3 Terminals/bornes



**RENAULT Cont.**

<b>Logan 1.5 dCi, Kombi</b>		<b>2007 -&gt;</b>	
		50 68	
Oil press. switch/Int. pres. aceite		<b>12703</b>	
Stop light switch/Int. luz stop	Manual	<b>24890</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Logan 1.6</b>		<b>2007 -&gt;</b>	
<b>K4M 690</b>		77 105	
Oil press. switch/Int. pres. aceite		<b>12703</b>	
Stop light switch/Int. luz stop	Manual	<b>24890</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Logan 1.6 Kombi</b>		<b>2007 -&gt;</b>	
<b>K4M 697</b>		77 105	
Oil press. switch/Int. pres. aceite		<b>12703</b>	
Stop light switch/Int. luz stop	Manual	<b>24890</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Logan 1.6, Kombi</b>		<b>2004 -&gt;</b>	
<b>K7M 710</b>		64 87	
Oil press. switch/Int. pres. aceite		<b>12702</b>	
Oil press. switch/Int. pres. aceite		<b>12703</b>	
Stop light switch/Int. luz stop	Manual	<b>24890</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24903</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Master I 2.4 D</b>		<b>1986-89</b>	
<b>S8U 731</b>		53 72	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master I 28-35 2.5 TD</b>		<b>1989-98</b>	
<b>8140.27.2580/S9U 702</b>		72 98	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master I 28-35 2.0</b>		<b>1986-98</b>	
<b>J5R 718</b>		58 79	
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>	
Thermistor-Thermocont./Doble función	01.1987 ->	<b>34010</b>	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master I 28-35 2.0</b>		<b>1986-98</b>	
<b>J5R 728</b>		58 79	
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>	
Thermistor-Thermocont./Doble función	01.1987 ->	<b>34010</b>	
<b>Master I 28-35 2.1 D</b>		<b>1980-98</b>	
<b>J8S 330</b>		44 60	
Thermistor-Thermocont./Doble función	-> 12.1989	<b>34010</b>	
<b>Master I 28-35 2.4 D</b>		<b>1980-89</b>	
<b>8140.61.2300/S8U 731</b>		52 71	
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master I 28-35 2.5 D</b>		<b>1989-98</b>	
<b>8140.67.2510/S8U 742</b>		55 75	
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master I 30 2.2</b>		<b>1980-98</b>	
<b>J7T 782/J7T 788</b>		67 91	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master I 35 2.5 TD</b>		<b>1989-98</b>	
<b>8140.27.2500/S9U 714/8140.27.2510</b>		69 94	
Rev. light switch/Int. luz marcha atrás		<b>41080</b>	
<b>Master II 1.9 dCi 80</b>		<b>2001 -&gt;</b>	
<b>F9Q 772/F9Q 774</b>		60 82	
Oil press. switch/Int. pres. aceite		<b>12630</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	<b>24891</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Master II 1.9 dTi</b>		<b>2000 -&gt;</b>	
<b>F9Q 770</b>		59 80	
Oil press. switch/Int. pres. aceite		<b>12630</b>	
On clutch pedal/Int. pedal embrague	Gray/gris. Cruise control/Control veloc.	<b>24891</b>	
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	<b>24895</b>	
<b>Master II 2.2 dCi 90</b>		<b>2000 -&gt;</b>	
<b>G9T 722/G9T 720/G9T 750</b>		66 90	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
Stop light switch/Int. luz stop		<b>24891</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Master II 2.5 D</b>		<b>1998-01</b>	
<b>S8U 770</b>		59 80	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
Thermistor-Thermocont./Doble función		<b>34450</b>	
Fan switch/Termocontacto ventilador		<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
<b>Master II 2.5 dCi 120</b>		<b>2001 -&gt;</b>	
<b>G9U 754/G9U 720</b>		84 115	
Oil press. switch/Int. pres. aceite		<b>12636</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
Stop light switch/Int. luz stop		<b>24891</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Master II 2.8 dTi</b>		<b>1998-01</b>	
<b>S9W 702</b>		84 114	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
Thermistor-Thermocont./Doble función		<b>34450</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35890</b>	
Fan switch/Termocontacto ventilador		<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	

**RENAULT Cont.**

<b>Master III 2.5 dCi</b>		<b>2006 -&gt;</b>	
<b>G9U 754</b>		74 101	
Oil press. switch/Int. pres. aceite		<b>12636</b>	
Oil press. switch/Int. pres. aceite		<b>12701</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>	
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	<b>24895</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Master III 2.5 dCi</b>		<b>2006 -&gt;</b>	
<b>G9U 650</b>		88 120	
Oil press. switch/Int. pres. aceite		<b>12701</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>	
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	<b>24895</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Master III 2.5 dCi</b>		<b>2006 -&gt;</b>	
<b>G9U 632</b>		107 146	
Oil press. switch/Int. pres. aceite		<b>12701</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>	
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	<b>24895</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Master III 2.5 dCi 100</b>		<b>2003 -&gt;</b>	
<b>G9U 754</b>		73 99	
Oil press. switch/Int. pres. aceite		<b>12636</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Master III 3.0 dCi 140</b>		<b>2003 -&gt;</b>	
<b>ZD3 202</b>		100 136	
Oil press. switch/Int. pres. aceite		<b>12555</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Master III 3.0 dCi 140</b>		<b>2003 -&gt;</b>	
<b>ZD3 202/ZD3 200</b>		100 136	
Oil press. switch/Int. pres. aceite		<b>12555</b>	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	<b>24890</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Master IV 2.3 dCi</b>		<b>2010 -&gt;</b>	
<b>M9T 692/M9T 690</b>		92 125	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Master IV 2.3 dCi FWD</b>		<b>2010 -&gt;</b>	
<b>M9T 698</b>		107 146	
Rev. light switch/Int. luz marcha atrás		<b>40999</b>	
<b>Megane I 1.4 16V</b>		<b>1999 -&gt;</b>	
<b>K4J 714/K4J 750</b>		70 95	
Oil press. switch/Int. pres. aceite		<b>12630</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Megane I 1.4 e Grandtour</b>		<b>1999 -&gt;</b>	
<b>E7J 626</b>		55 75	
Oil press. switch/Int. pres. aceite		<b>12370</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Thermistor-Thermocont./Doble función		<b>34100</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Megane I 1.4 e Classic</b>		<b>1996 -&gt;</b>	
<b>E7J 626/E7J 764</b>		55 75	
Oil press. switch/Int. pres. aceite		<b>12370</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Thermistor-Thermocont./Doble función		<b>34100</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Megane I 1.4 Eco</b>		<b>1996-99</b>	
<b>E7J 624</b>		52 71	
Oil press. switch/Int. pres. aceite		<b>12370</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Thermistor-Thermocont./Doble función		<b>34100</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Megane I 1.6 16V, Classic, Cabrio, Coach</b>		<b>1999-03</b>	
<b>K4M 700/K4M 708/K4M 701</b>		79 107	
Oil press. switch/Int. pres. aceite		<b>12630</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Stop light switch/Int. luz stop	Automatic	<b>24895</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35910</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Megane I 1.6 16V, Grandtour</b>		<b>1999 -&gt;</b>	
<b>K4M 704/K4M 700/K4M 708/K4M 701</b>		79 107	
Oil press. switch/Int. pres. aceite		<b>12630</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Stop light switch/Int. luz stop	Automatic	<b>24895</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	
<b>Megane I 1.6 e Cabrio, Coach, Grandtour</b>		<b>1996 -&gt;</b>	
<b>K7M 702/K7M 703</b>		66 90	
Oil press. switch/Int. pres. aceite		<b>12370</b>	
Stop light switch/Int. luz stop		<b>24700</b>	
Thermistor-Thermocont./Doble función		<b>34100</b>	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>	
Fan switch/Termocontacto ventilador	Climat	<b>38110</b>	
Rev. light switch/Int. luz marcha atrás		<b>40600</b>	







**RENAULT Cont.**

<b>Megane II 1.9 dCi, Kombi, Sedan</b>	2005 ->	
F9Q 818/F9Q 804	81 110	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24700	
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Rev. light switch/Int. luz marcha atrás	40600	F9Q 804
Rev. light switch/Int. luz marcha atrás	40825	
Rev. light switch/Int. luz marcha atrás	41255	
<b>Megane II 1.9 dCi, Kombi, Sedan</b>	2002-05	
F9Q 808	66 90	
Stop light switch/Int. luz stop	24900	
<b>Megane II 2.0 16V</b>	2002 ->	
F4R 770	99 135	
Oil press. switch/Int. pres. aceite	12636	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24700	
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40600	
Rev. light switch/Int. luz marcha atrás	40825	
Rev. light switch/Int. luz marcha atrás	41255	
<b>Megane II 2.0 16V Turbo, Coupe-Cabrio</b>	2004 ->	
F4R 776	120 163	
Oil press. switch/Int. pres. aceite	12636	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40825	
Rev. light switch/Int. luz marcha atrás	41255	
<b>Megane II 2.0 dCi</b>	2007 ->	
M9R 724	127 173	
Oil press. switch/Int. pres. aceite	12701	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40998	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	40999	
<b>Megane II 2.0 dCi, Coupe-Cabrio, Kombi</b>	2005 ->	
M9R 722/M9R 700	110 150	
Oil press. switch/Int. pres. aceite	12701	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40998	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	40999	
<b>Megane II 2.0 Renault Sport</b>	2004 ->	
F4R 774/F4Ri 774	165 224	
Oil press. switch/Int. pres. aceite	12636	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40825	
Rev. light switch/Int. luz marcha atrás	41255	
<b>Megane II 2.0, Coupe-Cabrio, Kombi</b>	2003 ->	
F4R 771/F4R 770	99 135	
Oil press. switch/Int. pres. aceite	12636	
Oil press. switch/Int. pres. aceite	12701	
On clutch pedal/Int. pedal embrague	24891	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24895	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40825	
Rev. light switch/Int. luz marcha atrás	41255	
<b>Megane III 1.4 Tce, Coupe, Kombi</b>	2009 ->	
H4J 700	96 131	
Stop light switch/Int. luz stop	24900	
<b>Megane III 1.5 dCi Kombi</b>	2009 ->	
K9K 834	66 90	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Megane III 1.5 dCi, Kombi</b>	2009 ->	
K9K 836	81 110	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Megane III 1.6 16V Coupe</b>	2008 ->	
K4M 858/K4M 866	81 110	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24700	3 terminals/bornes
Stop light switch/Int. luz stop	24900	
<b>Megane III 1.6 16V, Kombi</b>	2008 ->	
K4M 858	81 110	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24700	3 terminals/bornes
Stop light switch/Int. luz stop	24900	
<b>Megane III 1.9 dCi, Coupe, Kombi, Sedan</b>	2008 ->	
F9Q 872/F9Q 870	96 131	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24700	3 terminals/bornes
Stop light switch/Int. luz stop	24900	
<b>Megane III 2.0 16V, Coupe, Kombi</b>	2008 ->	
F4R 870	132 180	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Megane III 2.0 CVT</b>	2009 ->	
M4R 711	103 140	
Stop light switch/Int. luz stop	24900	
<b>Megane III 2.0 CVT Coupe</b>	2009 ->	
M4R 711/M4R F 713	103 140	
Stop light switch/Int. luz stop	24900	
<b>Megane III 2.0 dCi Coupe, Kombi</b>	2009 ->	
M9R 615	110 150	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	

**RENAULT Cont.**

<b>Megane III 2.0 dCi, Coupe, Kombi</b>	2009 ->	
M9R 610	118 160	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Megane Scenic 1.4 i</b>	1997-99	
E7J 764	55 75	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24700	
Thermistor-Thermocont./Doble función	34100	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 1.6 e</b>	1997-99	
K7M 702/K7M 703	66 90	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24700	
Thermistor-Thermocont./Doble función	34100	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 1.6 i</b>	1997-99	
K7M 720	55 75	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24700	
Thermistor-Thermocont./Doble función	34100	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 1.9 D</b>	1997-99	
F8Q 790	47 64	
Oil press. switch/Int. pres. aceite	12520	
Stop light switch/Int. luz stop	24700	
Temp. sending unit/Termo-Resistencia	32600	
Thermistor-Thermocont./Doble función	34350	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 1.9 dT</b>	1997-99	
F8Q 786/F8Q 784	66 90	
Oil press. switch/Int. pres. aceite	12490	-> 08.1997
Oil press. switch/Int. pres. aceite	12630	09.1997 ->
Stop light switch/Int. luz stop	24700	
Temp. sending unit/Termo-Resistencia	32600	
Thermistor-Thermocont./Doble función	34350	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 1.9 dTi</b>	1997-99	
F9Q 730/F9Q 734	72 98	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24220	Manual
Stop light switch/Int. luz stop	24480	Without/Sin cruise control, Automatic
Stop light switch/Int. luz stop	24700	With/Con cruise control, Automatic
On clutch pedal/Int. pedal embrague	24860	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32600	
Thermistor-Thermocont./Doble función	34230	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 2.0 i</b>	1997-99	
F3R 751/F3R 750	84 114	
Oil press. switch/Int. pres. aceite	12490	-> 08.1997
Oil press. switch/Int. pres. aceite	12630	09.1997 ->
Stop light switch/Int. luz stop	24220	Manual
Stop light switch/Int. luz stop	24480	Without/Sin cruise control, Automatic
Stop light switch/Int. luz stop	24700	With/Con cruise control, Automatic
On clutch pedal/Int. pedal embrague	24860	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32600	
Thermistor-Thermocont./Doble función	34100	
Thermistor-Thermocont./Doble función	34230	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Megane Scenic 2.0 i</b>	1999-99	
F3R 796	80 109	
Stop light switch/Int. luz stop	24700	
Thermistor-Thermocont./Doble función	34100	
Fan switch/Termocontacto ventilador	37250	Without/Sin A.A.
Fan switch/Termocontacto ventilador	38110	Climat
Rev. light switch/Int. luz marcha atrás	40600	
<b>Modus 1.2</b>	2005 ->	
D4F 740	48 65	
Oil press. switch/Int. pres. aceite	12700	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24903	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40999	
<b>Modus 1.2</b>	2004 ->	
D4F 764	58 78	
Oil press. switch/Int. pres. aceite	12700	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24903	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40999	
<b>Modus 1.2 16V</b>	2007 ->	
D4F 784	74 101	
Oil press. switch/Int. pres. aceite	12700	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24903	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40600	
<b>Modus 1.2, Hi-Flex</b>	2004 ->	
D4F 740	55 75	
Oil press. switch/Int. pres. aceite	12700	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24903	4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40999	



**RENAULT Cont.**

<b>Safrane II 2.9 24V</b>		<b>1999-00</b>
L7X 713		140 190
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Geared/Reductor	<b>24480</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Temp. s. warning lamp/Termocont. temp.		<b>35720</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Fan switch/Termocontacto ventilador	Automatic	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Safrane II 3.0 V6</b>		<b>1996-00</b>
Z7X 721/Z7X 723/Z7X 722		123 167
Oil press. switch/Int. pres. aceite		<b>12380</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Geared/Reductor	<b>24480</b>
Stop light switch/Int. luz stop	Automatic	<b>24700</b>
Temp. sending unit/Termo-Resistencia		<b>32240</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>32490</b>
Temp. s. warning lamp/Termocont. temp.		<b>35720</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	Climat	<b>37980</b>
Fan switch/Termocontacto ventilador	Automatic	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.4 16V</b>		<b>1999-03</b>
K4J 714/K4J 750		70 95
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.6 16V</b>		<b>1999-03</b>
K4M 704/K4M 700/K4M 708/K4M 701		79 107
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.8 16V</b>		<b>2001-03</b>
F4P 722/F4P 720		85 115
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.8 4x4</b>		<b>2000-01</b>
F4P 722		85 116
Stop light switch/Int. luz stop		<b>24700</b>
<b>Scénic I 1.9 dCi</b>		<b>1999-03</b>
F9Q 733/F9Q 732		75 102
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.9 dCi RX4</b>		<b>2000-03</b>
F9Q 740		75 102
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24891</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.9 dTi</b>		<b>1999-03</b>
F9Q 734/F9Q 731/F9Q 736		72 98
Oil press. switch/Int. pres. aceite		<b>12370</b>
Stop light switch/Int. luz stop	Manual	<b>24220</b>
Stop light switch/Int. luz stop	Without/Sin cruise control, Automatic	<b>24480</b>
Stop light switch/Int. luz stop	With/Con cruise control, Automatic	<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24860</b>
Temp. sending unit/Termo-Resistencia		<b>32600</b>
Thermistor-Thermocont./Doble función		<b>34230</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>37250</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 1.9 dTi</b>		<b>2001-03</b>
F9Q 744		59 80
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 2.0 16V</b>		<b>2000-03</b>
F4R 741/F4R 740/F4R 746		102 139
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
Stop light switch/Int. luz stop		<b>24891</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 2.0 16V IDE</b>		<b>1999-03</b>
F4R 741/F4R 740/F4R 744		103 140
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24891</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic I 2.0 16V RX4</b>		<b>2000-03</b>
F4R 746/F4R 744		102 139
Oil press. switch/Int. pres. aceite		<b>12630</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38110</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic II 1.4</b>		<b>2003 -&gt;</b>
K4J 740/K4J 730		72 98
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	K4J 730	<b>24901</b>
Stop light switch/Int. luz stop	Cruise control/Control veloc.	<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40998</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40999</b>

**RENAULT Cont.**

<b>Scénic II 1.5 dCi</b>		<b>2003 -&gt;</b>
K9K 722		60 82
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.5 dCi</b>		<b>2003 -&gt;</b>
K9K 729/K9K 728		74 101
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.5 dCi</b>		<b>2005 -&gt;</b>
K9K 722/K9K 724		63 86
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.5 dCi</b>		<b>2005 -&gt;</b>
K9K P 732/K9K 732		78 106
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40825</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.5 dCi</b>		<b>2007 -&gt;</b>
K9K 728		76 103
Stop light switch/Int. luz stop		<b>24900</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.6</b>		<b>2003 -&gt;</b>
K4M 761/K4M 782		83 113
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.6 16V</b>		<b>2007 -&gt;</b>
K4M C 813/K4M 812/K4M 9 766		82 112
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	<b>40998</b>
Rev. light switch/Int. luz marcha atrás		<b>40999</b>
<b>Scénic II 1.9 D</b>		<b>2006 -&gt;</b>
F9Q J 803/F9Q 812		85 116
Stop light switch/Int. luz stop		<b>24900</b>
<b>Scénic II 1.9 dCi</b>		<b>2003 -&gt;</b>
F9Q 812		88 120
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40825</b>
Rev. light switch/Int. luz marcha atrás		<b>41255</b>
<b>Scénic II 1.9 dCi</b>		<b>2005 -&gt;</b>
F9Q J 803/F9Q 804		96 131
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Rev. light switch/Int. luz marcha atrás		<b>40825</b>
Rev. light switch/Int. luz marcha atrás		<b>41255</b>
<b>Scénic II 1.9 dCi</b>		<b>2005 -&gt;</b>
F9Q E 804/F9Q 803		81 110
Oil press. switch/Int. pres. aceite		<b>12701</b>
Stop light switch/Int. luz stop		<b>24700</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Rev. light switch/Int. luz marcha atrás		<b>40600</b>
<b>Scénic II 2.0</b>		<b>2003 -&gt;</b>
F4R 771/F4R 770		99 135
Oil press. switch/Int. pres. aceite		<b>12636</b>
Oil press. switch/Int. pres. aceite		<b>12701</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24891</b>
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	<b>24895</b>
Stop light switch/Int. luz stop		<b>24900</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24901</b>
Stop light switch/Int. luz stop		<b>24902</b>
Rev. light switch/Int. luz marcha atrás		<b>40825</b>
Rev. light switch/Int. luz marcha atrás		<b>41255</b>

**RENAULT Cont.**

<b>Scénic II 2.0 16V Turbo</b>	2004 ->	
F4R 776	120 163	
Oil press. switch/Int. pres. aceite	12636	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40825	
Rev. light switch/Int. luz marcha atrás	41255	
<b>Scénic II 2.0 dCi</b>	2005 ->	
M9R 721/M9R 700	110 150	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
On clutch pedal/Int. pedal embrague	24901	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24902	
Rev. light switch/Int. luz marcha atrás	40998	3 Terminals/bornes
Rev. light switch/Int. luz marcha atrás	40999	
<b>Scénic III 1.4 16V</b>	2009 ->	
H4J 700	96 131	
Stop light switch/Int. luz stop	24900	
<b>Scénic III 1.5 dCi</b>	2009 ->	
K9K 832	78 106	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
Rev. light switch/Int. luz marcha atrás	40999	
<b>Scénic III 1.9 dCi</b>	2009 ->	
F9Q 870	96 131	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Scénic III 2.0 dCi</b>	2009 ->	
M9R 615	110 150	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Scénic III 2.0 dCi</b>	2009 ->	
M9R 610	118 160	
Oil press. switch/Int. pres. aceite	12701	
Stop light switch/Int. luz stop	24900	
<b>Super 5 1.1</b>	1986-95	
C1E 752/C1E 750/C1E 756/C1E 760	33 45	
Oil press. switch/Int. pres. aceite	11410	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	12370	10.1986 ->
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35200	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	10.1986 ->	
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.2</b>	1987-90	
C1G 722/C1G 702/C1G 720	40 55	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35250	
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.4</b>	1984-89	
C2J 789/ 700/ 780/ 781/ 788/ 798	52 71	
Oil press. switch/Int. pres. aceite	11410	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	12370	10.1986 ->
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35200	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	35250	10.1986 ->
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.4</b>	1987-90	
C2J 784	44 60	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35250	
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.4</b>	1987-89	
C2J 782	49 67	
Oil press. switch/Int. pres. aceite	12370	
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35250	
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.4</b>	1985-96	
C3J 700/C3J 702/C3J 760	43 58	
Oil press. switch/Int. pres. aceite	11410	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	12370	10.1986 ->
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35200	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	35250	10.1986 ->
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.4 Turbo</b>	1985-90	
C1J 784/C1J 782/C1J 788	88 120	
Oil press. switch/Int. pres. aceite	11410	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	12370	10.1986 ->
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35200	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	35250	10.1986 ->
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988

**RENAULT Cont.**

<b>Super 5 1.4 Turbo GT</b>	1985-91	
840 730	118 160	
Oil press. switch/Int. pres. aceite	11410	-> 09.1986, 0.35 bar
Oil press. switch/Int. pres. aceite	12370	10.1986 ->
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35200	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	35250	10.1986 ->
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.6 D</b>	1985-96	
F8M 730/F8M 720	40 55	
Oil press. switch/Int. pres. aceite	11620	-> 09.1986
Oil press. switch/Int. pres. aceite	12380	10.1986 ->
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35200	-> 09.1986
Temp. s. warning lamp/Termocont. temp.	35250	10.1986 ->
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.7</b>	1987-95	
F2N 742/F2N 740	64 87	
Oil press. switch/Int. pres. aceite	12380	
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35250	
Temp. s. warning lamp/Termocont. temp.	35280	125 °C, Without/Sin A.A., M 14x1,25
Temp. s. warning lamp/Termocont. temp.	35360	
Fan switch/Termocontacto ventilador	37250	
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Super 5 1.7</b>	1986-95	
F3N 716 /F3N 717	54 73	
Oil press. switch/Int. pres. aceite	12380	
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35250	
Temp. s. warning lamp/Termocont. temp.	35280	125 °C, Without/Sin A.A., M 14x1,25
Temp. s. warning lamp/Termocont. temp.	35360	
Fan switch/Termocontacto ventilador	37250	
Fan switch/Termocontacto ventilador	37320	06.1987 ->
Rev. light switch/Int. luz marcha atrás	40600	-> 05.1987
Rev. light switch/Int. luz marcha atrás	41090	06.1988 ->
<b>Super 5 1.7 i</b>	1986-91	
F3N 722/F3N 702	69 94	
Oil press. switch/Int. pres. aceite	12380	
Stop light switch/Int. luz stop	24230	
Temp. s. warning lamp/Termocont. temp.	35250	
Temp. s. warning lamp/Termocont. temp.	35280	125 °C, Without/Sin A.A., M 14x1,25
Temp. s. warning lamp/Termocont. temp.	35360	
Fan switch/Termocontacto ventilador	37250	06.1987 ->
Fan switch/Termocontacto ventilador	37320	-> 05.1987
Rev. light switch/Int. luz marcha atrás	40600	06.1988 ->
Rev. light switch/Int. luz marcha atrás	41090	-> 05.1988
<b>Thalia 1.2 16V</b>	2002 ->	
D4F 712	55 75	
Oil press. switch/Int. pres. aceite	12635	
Rev. light switch/Int. luz marcha atrás	40600	
<b>Thalia 1.4</b>	2000 ->	
K7J 700	55 75	
Oil press. switch/Int. pres. aceite	12636	
Stop light switch/Int. luz stop	24890	Manual, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	24891	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24895	L.H.D., 4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40600	
<b>Thalia 1.4 16V</b>	2000 ->	
K4J 712	72 98	
Oil press. switch/Int. pres. aceite	12630	
Stop light switch/Int. luz stop	24890	Manual, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	24891	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24895	L.H.D., 4 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40600	
Rev. light switch/Int. luz marcha atrás	40999	
<b>Thalia 1.5 dCi</b>	2002 ->	
K9K 700	48 65	
Oil press. switch/Int. pres. aceite	12630	
Stop light switch/Int. luz stop	24890	Manual, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	24891	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24895	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	24900	2 terminals/bornes
Rev. light switch/Int. luz marcha atrás	40600	
<b>Thalia 1.5 dCi</b>	2001 ->	
K9K 702	60 82	
Stop light switch/Int. luz stop	24891	
Rev. light switch/Int. luz marcha atrás	40600	
<b>Thalia 1.5 dCi</b>	2005 ->	
K9K 740	47 64	
Stop light switch/Int. luz stop	24890	Manual, 2 terminals/bornes
Stop light switch/Int. luz stop	24895	L.H.D., 4 terminals/bornes
Stop light switch/Int. luz stop	24900	
Rev. light switch/Int. luz marcha atrás	40999	
<b>Trafic 1.4</b>	1980-89	
847 701/847 700/C1J 700	35 48	
Temp. s. warning lamp/Termocont. temp.	35200	
Fan switch/Termocontacto ventilador	36060	
<b>Trafic 1.4</b>	1980-89	
847 701/847 700/C1J 700	35 48	
Temp. s. warning lamp/Termocont. temp.	35200	
<b>Trafic 1.4</b>	1980-89	
847 700/C1J 700	35 48	
Temp. s. warning lamp/Termocont. temp.	35200	
<b>Trafic 1.4</b>	1989-91	
C1J 700	35 48	
Oil press. switch/Int. pres. aceite	11410	0.35 bar
Stop light switch/Int. luz stop	24230	
Thermistor-Thermocont./Doble función	34040	
Temp. s. warning lamp/Termocont. temp.	35390	
Fan switch/Termocontacto ventilador	37250	
Rev. light switch/Int. luz marcha atrás	41180	

**RENAULT Cont.**

<b>Trafic 1.7</b>	1992-94
F1N 724	50 68
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24230
Thermistor-Thermocont./Doble función	34040
Fan switch/Termocontacto ventilador	36060
Fan switch/Termocontacto ventilador	37250
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 1.7</b>	1992-94
F1N 720	50 68
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24230
Thermistor-Thermocont./Doble función	34040
Fan switch/Termocontacto ventilador	37250
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 1.7</b>	1989-94
F1N 722	50 68
Oil press. switch/Int. pres. aceite	12380
Stop light switch/Int. luz stop	24230
Thermistor-Thermocont./Doble función	34040
Fan switch/Termocontacto ventilador	37250
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 1.9 D</b>	1997-01
F8Q 606	44 60
Oil press. switch/Int. pres. aceite	12630
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 2.0</b>	1989-90
J5R 716	59 80
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00246915,F00027335
Thermistor-Thermocont./Doble función	Ch. F00027336,F00246916 ->
Temp. s. warning lamp/Termocont. temp.	32240
Fan switch/Termocontacto ventilador	34130
Rev. light switch/Int. luz marcha atrás	35250
<b>Trafic 2.0 [RWD]</b>	1989-90
J5R 726	59 80
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00246915,F00027335
Thermistor-Thermocont./Doble función	Ch. F00027336,F00246916 ->
Temp. s. warning lamp/Termocont. temp.	32240
Fan switch/Termocontacto ventilador	34130
Rev. light switch/Int. luz marcha atrás	35250
<b>Trafic 2.1 D</b>	1989-94
852 750/852 720	43 58
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00705888
Thermistor-Thermocont./Doble función	Ch. F007050889 ->
Fan switch/Termocontacto ventilador	34100
Rev. light switch/Int. luz marcha atrás	37250
<b>Trafic 2.1 D</b>	1989-94
852 750	43 58
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00705888
Thermistor-Thermocont./Doble función	Ch. F007050889 ->
Fan switch/Termocontacto ventilador	34100
Rev. light switch/Int. luz marcha atrás	37250
<b>Trafic 2.1 D</b>	1989-94
852 720	43 58
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00705888
Thermistor-Thermocont./Doble función	Ch. F007050889 ->
Fan switch/Termocontacto ventilador	34100
Rev. light switch/Int. luz marcha atrás	37250
<b>Trafic 2.1 D, [RWD]</b>	1989-94
852 720	43 58
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00705888
Thermistor-Thermocont./Doble función	Ch. F007050889 ->
Fan switch/Termocontacto ventilador	34100
Rev. light switch/Int. luz marcha atrás	37250
<b>Trafic 2.1 D, 4x4</b>	1989-94
J7T 780	70 95
Oil press. switch/Int. pres. aceite	12370
Stop light switch/Int. luz stop	24230
Temp. sending unit/Termo-Resistencia	-> Ch. F00246915,F00027335
Thermistor-Thermocont./Doble función	Ch. F00027336,F00246916 ->
Temp. s. warning lamp/Termocont. temp.	32240
Fan switch/Termocontacto ventilador	34130
Rev. light switch/Int. luz marcha atrás	35250
<b>Trafic 2.2, 4x4</b>	1994-97
J7T 600	74 101
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 2.5 D</b>	1998-01
S8U 780/S8U 758	55 75
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 2.5 D, 4x4</b>	1989-01
8140.67.2550/.2500/.2580/S8U 750/ 752/ 758	55 75
Fan switch/Termocontacto ventilador	36060
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 2.5 D, 4x4</b>	1994-99
S8U 758	58 79
Rev. light switch/Int. luz marcha atrás	41180
<b>Trafic 2.5 D, 4x4</b>	1989-94
S8U 750	56 76
Rev. light switch/Int. luz marcha atrás	41180

**RENAULT Cont.**

<b>Trafic II 1.9 dCi 100</b>	2001 ->
F9Q 760	74 101
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Trafic II 1.9 dCi 80</b>	2001 ->
F9Q 762	60 82
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40600
<b>Trafic II 2.0</b>	2001 ->
F4R 722/F4R 720	88 120
Oil press. switch/Int. pres. aceite	12630
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Trafic II 2.0</b>	2001 ->
F4R 720	88 120
Oil press. switch/Int. pres. aceite	12630
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Trafic II 2.0</b>	2001 ->
F4R 720	88 120
Oil press. switch/Int. pres. aceite	12630
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Trafic II 2.0 16V</b>	2006 ->
F4R 820	86 117
Oil press. switch/Int. pres. aceite	12630
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40600
<b>Trafic II 2.0 dCi 115</b>	2006 ->
M9R 780	84 114
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40600
<b>Trafic II 2.0 dCi 90</b>	2006 ->
M9R 782	66 90
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40600
<b>Trafic II 2.0 dCi 90</b>	2006 ->
M9R 782/M9R 780	66 90
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40600
<b>Trafic II 2.5 dCi 135</b>	2003 ->
G9U 730	99 135
Oil press. switch/Int. pres. aceite	12636
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40998
Rev. light switch/Int. luz marcha atrás	40999
<b>Trafic II 2.5 dCi 145</b>	2006 ->
G9U 630	107 146
Oil press. switch/Int. pres. aceite	12701
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	24891
Stop light switch/Int. luz stop	24895
Stop light switch/Int. luz stop	24900
Rev. light switch/Int. luz marcha atrás	40600
<b>Twingo 1.2</b>	1993-96
C3G 702/C3G 700	40 55
Oil press. switch/Int. pres. aceite	Climat
Stop light switch/Int. luz stop	Manual
Stop light switch/Int. luz stop	Automatic transmission
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes
Temp. sending unit/Termo-Resistencia	32520
Temp. s. warning lamp/Termocont. temp.	35390
Temp. s. warning lamp/Termocont. temp.	C3G 702
Fan switch/Termocontacto ventilador	35750
Fan switch/Termocontacto ventilador	38260
Rev. light switch/Int. luz marcha atrás	40600

**RENAULT Cont.**

<b>Twingo 1.2</b>		1996 ->
D7F 700/D7F 701		40 54
Oil press. switch/Int. pres. aceite		12350
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	24895
Temp. sending unit/Termo-Resistencia		32520
Temp. s. warning lamp/Termocont. temp.		35390
Temp. s. warning lamp/Termocont. temp.		35750
Fan switch/Termocontacto ventilador		37250
Fan switch/Termocontacto ventilador	Climat	38260
Rev. light switch/Int. luz marcha atrás		40600
<b>Twingo 1.2</b>		1996 ->
D7F 700/ 702/ 704/ 701/ 703		43 58
Oil press. switch/Int. pres. aceite		12350
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	24895
Temp. sending unit/Termo-Resistencia		32520
Temp. s. warning lamp/Termocont. temp.		35390
Temp. s. warning lamp/Termocont. temp.	D7F 703, 704	35750
Fan switch/Termocontacto ventilador		37250
Fan switch/Termocontacto ventilador	Climat	38260
Rev. light switch/Int. luz marcha atrás		40600
<b>Twingo 1.2</b>		2007 ->
D7F 800		43 58
Oil press. switch/Int. pres. aceite		12700
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999
<b>Twingo 1.2 16V</b>		2001 ->
D4F 704/D4F 702		55 75
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	24895
Stop light switch/Int. luz stop		24900
Temp. s. warning lamp/Termocont. temp.		35750
Rev. light switch/Int. luz marcha atrás		40600
<b>Twingo 1.2 16V</b>		2004 ->
D4F 708		44 60
Oil press. switch/Int. pres. aceite		12635
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890
Stop light switch/Int. luz stop	L.H.D., 4 terminals/bornes	24895
Stop light switch/Int. luz stop		24900
Temp. s. warning lamp/Termocont. temp.		35750
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Twingo 1.2 16V</b>		2007 ->
D4F 772		56 76
Oil press. switch/Int. pres. aceite		12700
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999
<b>Twingo 1.2 Furgón</b>		1996 ->
D7F 700/ 702/ 704/ 706/ 701/ 703		43 58
Oil press. switch/Int. pres. aceite		12350
Stop light switch/Int. luz stop	Manual	24220
Stop light switch/Int. luz stop	Automatic transmission	24700
Temp. sending unit/Termo-Resistencia		32520
Temp. s. warning lamp/Termocont. temp.		35390
Fan switch/Termocontacto ventilador		37250
Rev. light switch/Int. luz marcha atrás		40600
<b>Twingo 1.2 Turbo</b>		2007 ->
D4F 780		74 100
Oil press. switch/Int. pres. aceite		12700
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Twingo 1.5 dCi</b>		2007 ->
K9K 740		47 64
Oil press. switch/Int. pres. aceite		12701
Oil press. switch/Int. pres. aceite		12703
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999
<b>Twingo 1.5 dCi</b>		2008 ->
K9K 718		62 84
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40999
<b>Twingo 1.6 RS</b>		2008 ->
K4M 754/K4M 854		98 133
Stop light switch/Int. luz stop	4 terminals/bornes	24903
<b>Vel Satis 2.0</b>		2005 ->
F4R 867		108 147
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	4 terminals/bornes	24903
<b>Vel Satis 2.0 16 V Turbo</b>		2004 ->
F4R 766/F4R 767		125 170
Oil press. switch/Int. pres. aceite		12701
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	-> 04.2005	24895
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
<b>Vel Satis 2.0 16V Turbo</b>		2002 ->
F4R 762/F4R 763		120 163
Oil press. switch/Int. pres. aceite		12636
On clutch pedal/Int. pedal embrague	Manual, Gray/gris. Cruise control/Control veloc.	24891
Stop light switch/Int. luz stop	-> 04.2005	24895
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999

**RENAULT Cont.**

<b>Vel Satis 2.0 dCi</b>		2005 ->
M9R 760		110 150
Stop light switch/Int. luz stop		24900
Stop light switch/Int. luz stop	4 terminals/bornes	24903
<b>Vel Satis 2.0 dCi</b>		2006 ->
M9R 760		127 173
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop		24900
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Vel Satis 2.2 dCi</b>		2002 ->
G9T 703/G9T 702		110 150
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	Manual, Gray/gris	24891
Stop light switch/Int. luz stop	-> 04.2005	24895
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Vel Satis 2.2 dCi</b>		2004 ->
G9T 600/G9T 606/G9T 700		102 140
Oil press. switch/Int. pres. aceite		12636
Oil press. switch/Int. pres. aceite		12701
Stop light switch/Int. luz stop	-> 04.2005	24895
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24901
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás	3 Terminals/bornes	40998
Rev. light switch/Int. luz marcha atrás		40999
<b>Vel Satis 2.2 dCi</b>		2004 ->
G9T 600		85 116
Stop light switch/Int. luz stop	-> 04.2005	24895
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
<b>Vel Satis 3.0 dCi</b>		2002 ->
P9X 701		130 177
Stop light switch/Int. luz stop	Manual, Gray/gris	24891
Stop light switch/Int. luz stop	-> 04.2005	24895
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
<b>Vel Satis 3.0 dCi</b>		2006 ->
P9X 715		133 181
Stop light switch/Int. luz stop		24895
Stop light switch/Int. luz stop	4 terminals/bornes	24903
<b>Vel Satis 3.5 V6</b>		2002 ->
V4Y 701/V4Y 711		177 241
Oil press. switch/Int. pres. aceite		12420
Stop light switch/Int. luz stop	Manual, Gray/gris	24891
Stop light switch/Int. luz stop	-> 04.2005	24895
Stop light switch/Int. luz stop	04.2005 ->, 4 terminals/bornes	24903
Rev. light switch/Int. luz marcha atrás		40600
<b>ROVER</b>		
<b>100 114 D</b>		1992-94
TUD 3		38 52
Oil press. switch/Int. pres. aceite		12460
Stop light switch/Int. luz stop		24300
Thermistor-Thermocont./Doble función		34110
Fan switch/Termocontacto ventilador	-> Ch. A687992	36080
Fan switch/Termocontacto ventilador	Ch. A687993 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>111 C/L/S</b>		1990-98
11 K2D/11 K2A		44 60
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24300
Temp. sending unit/Termo-Resistencia		32520
Fan switch/Termocontacto ventilador	-> Ch. A687992	36080
Fan switch/Termocontacto ventilador	Ch. A687993 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>111 Cabrio</b>		1994 ->
11 K2D		44 60
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24300
Temp. sending unit/Termo-Resistencia		32520
Fan switch/Termocontacto ventilador	-> Ch. A687992	36080
Fan switch/Termocontacto ventilador	Ch. A687993 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>114 Cabrio</b>		1994 ->
14 K2D/14 K2A		55 75
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24300
Temp. sending unit/Termo-Resistencia		32520
Fan switch/Termocontacto ventilador	-> Ch. A687992	36080
Fan switch/Termocontacto ventilador	Ch. A687993 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>114 Gsi, Cabrio</b>		1994-95
14 K4F		75 103
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24300
Temp. sending unit/Termo-Resistencia		32520
Fan switch/Termocontacto ventilador	-> Ch. A687992	36080
Fan switch/Termocontacto ventilador	Ch. A687993 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>114 GTI 16V</b>		1991-98
14 K4F		76 103
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24300
Temp. sending unit/Termo-Resistencia		32520
Fan switch/Termocontacto ventilador	-> Ch. A687992	36080
Fan switch/Termocontacto ventilador	Ch. A687993 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570



**ROVER Cont.**

<b>114 GTI 16V</b>		<b>1990-91</b>
14 K4C/14 K4D		69 94
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24300</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Fan switch/Termocontacto ventilador	-> Ch. A687992	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. A687993 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>114 GTI/GT 16V Kat</b>		<b>1990-98</b>
14 K4C/14 K4D		66 90
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24300</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Fan switch/Termocontacto ventilador	-> Ch. A687992	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. A687993 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>114 S/L/GTA</b>		<b>1990-98</b>
14 K2D/14 K2A		55 75
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24300</b>
Temp. sending unit/Termo-Resistencia		<b>32520</b>
Fan switch/Termocontacto ventilador	-> Ch. A687992	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. A687993 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>115 D</b>		<b>1994-98</b>
TUD 5		42 57
Oil press. switch/Int. pres. aceite		<b>12460</b>
Stop light switch/Int. luz stop		<b>24300</b>
Fan switch/Termocontacto ventilador	-> Ch. A687992	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. A687993 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>211</b>		<b>1998-00</b>
11 K2D		44 60
Oil press. switch/Int. pres. aceite		<b>12410</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>213 S</b>		<b>1985-89</b>
EV 2		54 73
Oil press. switch/Int. pres. aceite		<b>12230</b>
Stop light switch/Int. luz stop		<b>24300</b>
Temp. sending unit/Termo-Resistencia		<b>32310</b>
Fan switch/Termocontacto ventilador		<b>37450</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>214</b>		<b>1993-95</b>
14 K2D/14 K2A		55 75
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Temp. sending unit/Termo-Resistencia		<b>32570</b>
Fan switch/Termocontacto ventilador		<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>214 1.4 Cabrio</b>		<b>1992-99</b>
14 K4C/14 K4D		66 90
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>214 1.4 Cabrio</b>		<b>1990-92</b>
14 K4C		70 95
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>214 1.4i 16V Cabrio</b>		<b>1993-99</b>
14 K4F		76 103
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>214 GSi/Si</b>		<b>1992-95</b>
14 K4F		76 103
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Temp. sending unit/Termo-Resistencia		<b>32570</b>
Fan switch/Termocontacto ventilador	-> Ch. 378086	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. 378087 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>214 GSi/Si</b>		<b>1990-95</b>
14 K4C		70 95
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Temp. sending unit/Termo-Resistencia		<b>32570</b>
Fan switch/Termocontacto ventilador	-> Ch. 378086	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. 378087 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>214 i</b>		<b>1995-00</b>
14 K2F		55 75
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>214 Si</b>		<b>1995-00</b>
14 K4F		76 103
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>214 Si/Gsi</b>		<b>1989-95</b>
14 K4C/14 K4D		66 90
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Temp. sending unit/Termo-Resistencia		<b>32570</b>
Fan switch/Termocontacto ventilador	-> Ch. 378086	<b>36080</b>
Fan switch/Termocontacto ventilador	Ch. 378087 ->	<b>36290</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>

**ROVER Cont.**

<b>216 1.6 i 16V Cabrio</b>		<b>1996-99</b>
16 K4F		82 111
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>216 1.6i Cabrio</b>		<b>1992-99</b>
D 16 A8		90 122
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>216 Coupe</b>		<b>1992-99</b>
D 16 A8		90 122
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>216 GSi</b>		<b>1989-95</b>
D 16 Z2		82 112
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>216 GTi</b>		<b>1990-95</b>
D 16 A8		90 122
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>216 Si</b>		<b>1995-00</b>
16 K4F		82 112
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>216, Vitesse</b>		<b>1985-89</b>
16 H		75 83
Oil press. switch/Int. pres. aceite		<b>11420</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>218 D</b>		<b>1991-95</b>
Oil press. switch/Int. pres. aceite	0.50 bar	52 71
Stop light switch/Int. luz stop		<b>11270</b>
Temp. sending unit/Termo-Resistencia		<b>24610</b>
Temp. s. warning lamp/Termocont. temp.		<b>32530</b>
Fan switch/Termocontacto ventilador		<b>35260</b>
Rev. light switch/Int. luz marcha atrás		<b>36080</b>
<b>218 K Vi</b>		<b>1995-00</b>
18 K4K		107 146
Oil press. switch/Int. pres. aceite	M 12x1,5	<b>12410</b>
Oil press. switch/Int. pres. aceite	0.35 bar	<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	<b>40570</b>
<b>218 TD</b>		<b>1991-95</b>
XUD 7TE		65 88
Oil press. switch/Int. pres. aceite	0.50 bar	<b>11270</b>
Stop light switch/Int. luz stop		<b>24610</b>
Temp. sending unit/Termo-Resistencia		<b>32530</b>
Temp. s. warning lamp/Termocont. temp.		<b>35260</b>
Fan switch/Termocontacto ventilador		<b>36080</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>220 D/SD</b>		<b>1995-00</b>
20 T2R		63 86
Oil press. switch/Int. pres. aceite		<b>12410</b>
Temp. sending unit/Termo-Resistencia		<b>32730</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>220 Gsi Coupe</b>		<b>1994-99</b>
20 T4H		100 136
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Fan switch/Termocontacto ventilador	Climat	<b>36080</b>
Fan switch/Termocontacto ventilador	Only cold countries/Para paises frios	<b>36300</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>36310</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>220 GTi</b>		<b>1993-95</b>
20 T4H		100 136
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Fan switch/Termocontacto ventilador	Climat	<b>36080</b>
Fan switch/Termocontacto ventilador	Only cold countries/Para paises frios	<b>36300</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>36310</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>220 GTi</b>		<b>1991-95</b>
20 M4F		103 140
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Fan switch/Termocontacto ventilador	Climat	<b>36080</b>
Fan switch/Termocontacto ventilador	Only cold countries/Para paises frios	<b>36300</b>
Fan switch/Termocontacto ventilador	Only hot countries/Para paises calidos	<b>36310</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>220 Sdi</b>		<b>1995-00</b>
20 T2N		77 105
Oil press. switch/Int. pres. aceite		<b>12410</b>
Temp. sending unit/Termo-Resistencia		<b>32730</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>220 Turbo, Coupe</b>		<b>1992-99</b>
20 T4G		147 200
Oil press. switch/Int. pres. aceite		<b>12470</b>
Stop light switch/Int. luz stop		<b>24610</b>
Fan switch/Termocontacto ventilador		<b>36080</b>
Rev. light switch/Int. luz marcha atrás		<b>40580</b>
<b>25 1.1 16V</b>		<b>2004 -&gt;</b>
11 K4F		55 75
Oil press. switch/Int. pres. aceite		<b>12410</b>
<b>25 1.4 16V</b>		<b>1999 -&gt;</b>
14 K4M		62 84
Oil press. switch/Int. pres. aceite		<b>12410</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>
<b>25 1.4 16V</b>		<b>1999 -&gt;</b>
14 K4F		76 103
Oil press. switch/Int. pres. aceite		<b>12410</b>
Rev. light switch/Int. luz marcha atrás		<b>40730</b>

**ROVER Cont.**

<b>25 1.6 16V</b>		1999 ->
16 K4F		80 109
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás	-> Ch. 3D720772	40570
Rev. light switch/Int. luz marcha atrás	Ch. 3D720772 ->	40730
<b>25 1.8 16V</b>		1999 ->
18 K4F		85 116
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás		40580
<b>25 1.8 16V</b>		2000 ->
18 K4K		107 146
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás		40580
<b>25 2.0 iDT</b>		1999 ->
20 T2N		74 101
Oil press. switch/Int. pres. aceite	M 12x1,5	12410
Oil press. switch/Int. pres. aceite	0.35 bar	12470
Stop light switch/Int. luz stop	With/Con cruise control	24610
Temp. sending unit/Termo-Resistencia		32470
Temp. sending unit/Termo-Resistencia		32730
Fan switch/Termocontacto ventilador	-> Ch. YD471564	36080
Rev. light switch/Int. luz marcha atrás		40580
<b>400 1.6 i Tourer</b>		1994-98
D 16 Z2		82 112
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop	5 doors/p.	24550
Stop light switch/Int. luz stop	4 doors/p.	24610
On clutch pedal/Int. pedal embrague	Without/Sin cruise control	24630
Temp. sending unit/Termo-Resistencia		32350
Temp. s. warning lamp/Termocont. temp.		35260
Fan switch/Termocontacto ventilador		36440
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>400 1.6 i Tourer</b>		1994-98
D 16 A8		90 122
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop	Without/Sin cruise control	24610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24630
Temp. sending unit/Termo-Resistencia		31620
Temp. s. warning lamp/Termocont. temp.		35260
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>400 1.8 i Tourer</b>		1996-98
18 K4K		107 146
Oil press. switch/Int. pres. aceite	M 12x1,5	12410
Oil press. switch/Int. pres. aceite	0.35 bar	12470
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32530
Temp. s. warning lamp/Termocont. temp.		35260
Fan switch/Termocontacto ventilador		36080
Rev. light switch/Int. luz marcha atrás		40580
<b>400 1.8 TD Tourer</b>		1993-98
XUD 7TE		65 88
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Rev. light switch/Int. luz marcha atrás		40580
<b>400 2.0 i Tourer</b>		1994-98
20 T4H		100 136
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás		40580
<b>414</b>		1993-95
14 K4C		70 95
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32570
Fan switch/Termocontacto ventilador	-> Ch. 378086	36080
Fan switch/Termocontacto ventilador	Ch. 378087 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>414 GSI/Si</b>		1990-95
14 K4C/14 K4D		66 90
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32570
Fan switch/Termocontacto ventilador	-> Ch. 378086	36080
Fan switch/Termocontacto ventilador	Ch. 378087 ->	36290
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>414 GSI/Si Kat</b>		1993-95
14 K4F		76 103
Oil press. switch/Int. pres. aceite	M 12x1,5	12410
Oil press. switch/Int. pres. aceite	0.35 bar	12470
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32310
Fan switch/Termocontacto ventilador		37720
Rev. light switch/Int. luz marcha atrás		40580
<b>414 Si</b>		1995-00
14 K4F		76 103
Oil press. switch/Int. pres. aceite	M 12x1,5	12410
Oil press. switch/Int. pres. aceite	0.35 bar	12470
Stop light switch/Int. luz stop	Without/Sin cruise control	24610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24630
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>416 GSI</b>		1990-95
D 16 Z2		82 112
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32310
Fan switch/Termocontacto ventilador		37720
Rev. light switch/Int. luz marcha atrás		40580
<b>416 GSI/GSE</b>		1990-95
D 16 A7		85 116
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32310
Fan switch/Termocontacto ventilador		37720
Rev. light switch/Int. luz marcha atrás		40580

**ROVER Cont.**

<b>416 GTI</b>		1990-95
D 16 A8		90 122
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32310
Fan switch/Termocontacto ventilador		37720
Rev. light switch/Int. luz marcha atrás		40580
<b>416 GTI/GTE</b>		1990-95
D 16 A9		96 131
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		32310
Fan switch/Termocontacto ventilador		37720
Rev. light switch/Int. luz marcha atrás		40580
<b>416 Si</b>		1995-00
16 K4F		82 112
Oil press. switch/Int. pres. aceite		12410
Stop light switch/Int. luz stop	5 doors/p.	24550
Stop light switch/Int. luz stop	4 doors/p.	24610
On clutch pedal/Int. pedal embrague	Without/Sin cruise control	24630
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador		36440
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>416 Si</b>		1995-00
D 16 Y2		83 113
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop	Without/Sin cruise control	24610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24630
Temp. sending unit/Termo-Resistencia		31620
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MA, ME, MG, ML	40570
<b>418 D</b>		1991-95
		49 67
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Rev. light switch/Int. luz marcha atrás		40580
<b>418 TD</b>		1991-95
XUD 7TE		65 88
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Temp. s. warning lamp/Termocont. temp.		35260
Rev. light switch/Int. luz marcha atrás		40580
<b>420 D</b>		1995-00
20 T2R		63 86
Oil press. switch/Int. pres. aceite		12410
Temp. sending unit/Termo-Resistencia		32730
Rev. light switch/Int. luz marcha atrás		40580
<b>420 Di</b>		1995-00
20 T2N		77 105
Oil press. switch/Int. pres. aceite		12410
Temp. sending unit/Termo-Resistencia		32730
Rev. light switch/Int. luz marcha atrás		40580
<b>420 GSI/SLI/GTi/Vite</b>		1993-95
20 T4H		100 136
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop	Without/Sin cruise control	24610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24630
Rev. light switch/Int. luz marcha atrás		40580
<b>420 GTi/GSi/Vitesse</b>		1992-95
20 M4F		103 140
Oil press. switch/Int. pres. aceite	M 12x1,5	12410
Oil press. switch/Int. pres. aceite	0.35 bar	12470
Stop light switch/Int. luz stop	Without/Sin cruise control	24610
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24630
Rev. light switch/Int. luz marcha atrás		40580
<b>420 Si Lux</b>		1995-00
20 T4H		100 136
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás		40580
<b>420 Turbo</b>		1993-95
20 T4G		147 200
Oil press. switch/Int. pres. aceite		12470
Stop light switch/Int. luz stop		24610
Temp. sending unit/Termo-Resistencia		31620
Fan switch/Termocontacto ventilador		36080
Rev. light switch/Int. luz marcha atrás		40580
<b>45 1.4</b>		2000 ->
14 K4F		76 103
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás	-> Ch. 3D618245	40570
Rev. light switch/Int. luz marcha atrás	Ch. 3D618246 ->	40730
<b>45 1.6, Sedan</b>		2000 ->
16 K4F		80 109
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás	-> Ch. 3D618245	40570
Rev. light switch/Int. luz marcha atrás	Ch. 3D618246 ->	40730
<b>45 1.8, Sedan</b>		2000 ->
18 K4F		86 117
Oil press. switch/Int. pres. aceite		12410
Rev. light switch/Int. luz marcha atrás		40580
<b>45 2.0 iDT</b>		2000-05
20 T2N		74 101
Oil press. switch/Int. pres. aceite	M 12x1,5	12410
Oil press. switch/Int. pres. aceite	0.35 bar	12470
Stop light switch/Int. luz stop	With/Con cruise control	24610
Temp. sending unit/Termo-Resistencia		32470
Temp. sending unit/Termo-Resistencia		32730
Fan switch/Termocontacto ventilador		36080
Rev. light switch/Int. luz marcha atrás	-> Ch. YD471564	40580
<b>45 2.0 V6, Sedan</b>		2000 ->
20 K4F		110 150
Oil press. switch/Int. pres. aceite		12410
<b>618 i/Si</b>		1996-99
F 18 A3		85 115
Oil press. switch/Int. pres. aceite		12230
Stop light switch/Int. luz stop	-> Ch. 246796	24550
Stop light switch/Int. luz stop	Ch. 246797 ->, Without/Sin cruise control	24610
Temp. sending unit/Termo-Resistencia		32350
Fan switch/Termocontacto ventilador		36390
Fan switch/Termocontacto ventilador		36460
Rev. light switch/Int. luz marcha atrás		40580

**ROVER Cont.**

<b>620 Sci</b>	<b>1994-99</b>
20 T2N	77 105
Temp. sending unit/Termo-Resistencia	<b>32730</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>620 Si</b>	<b>1993-99</b>
F 20 Z1	96 131
Oil press. switch/Int. pres. aceite	<b>12230</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24610</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>620 Ti Vitesse</b>	<b>1994-99</b>
20 T4G	147 200
Oil press. switch/Int. pres. aceite	<b>12470</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24610</b>
Temp. sending unit/Termo-Resistencia	<b>31620</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>623 Si</b>	<b>1993-99</b>
H 23 A3	116 158
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24550</b>
Stop light switch/Int. luz stop	<b>24610</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36390</b>
Fan switch/Termocontacto ventilador	<b>36460</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>75 1.8 , Tourer</b>	<b>1999 -&gt;</b>
K 1.8	88 120
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 1.8 Turbo, Tourer</b>	<b>2003 -&gt;</b>
	110 150
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 2.0 CDT, Tourer</b>	<b>1999 -&gt;</b>
M 47 R	85 115
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 2.0 CDTi, Tourer</b>	<b>2003 -&gt;</b>
204D2	96 131
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 2.0 V6, Tourer</b>	<b>1999 -&gt;</b>
20 K4F	110 150
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 2.5 V6</b>	<b>1999-01</b>
KV 6	129 175
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 2.5 V6</b>	<b>2001 -&gt;</b>
25 K4F	130 177
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>75 2.5 V6 Tourer</b>	<b>2001 -&gt;</b>
KV 6	130 177
Oil press. switch/Int. pres. aceite	<b>12410</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>820</b>	<b>1988-91</b>
	74 100
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>820 16V Turbo</b>	<b>1992-99</b>
T 16	132 180
Oil press. switch/Int. pres. aceite	<b>12470</b>
Stop light switch/Int. luz stop	<b>24610</b>
On clutch pedal/Int. pedal embrague	<b>24630</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
01.1997 ->	<b>40580</b>
<b>820 E</b>	<b>1986-91</b>
20 HS	88 120
Oil press. switch/Int. pres. aceite	<b>11420</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>820 i/Si</b>	<b>1988-91</b>
20 HD	103 140
Oil press. switch/Int. pres. aceite	<b>11280</b>
Temp. sending unit/Termo-Resistencia	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>820 I/Si</b>	<b>1992-99</b>
20 T4H	100 136
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>820 SE/Si</b>	<b>1986-91</b>
20 HS	88 120
Temp. sending unit/Termo-Resistencia	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>820 Si</b>	<b>1988-91</b>
20 HD M 16	98 133
Temp. sending unit/Termo-Resistencia	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>820 Sport</b>	<b>1994-96</b>
20 T4G	145 197
Oil press. switch/Int. pres. aceite	<b>12470</b>
Stop light switch/Int. luz stop	<b>24610</b>
On clutch pedal/Int. pedal embrague	<b>24630</b>
Temp. sending unit/Termo-Resistencia	<b>32350</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
With/Con cruise control	<b>40580</b>
-> Ch. 246796. Cruise control/Control veloc.	

**ROVER Cont.**

<b>825 D/SD</b>	<b>1990-99</b>
425 SL1RR/492 4 SHIRG	87 118
Oil press. switch/Int. pres. aceite	<b>11060</b>
Stop light switch/Int. luz stop	<b>24610</b>
On clutch pedal/Int. pedal embrague	Without/Sin cruise control
Fan switch/Termocontacto ventilador	Cruise control/Control veloc.
<b>825 SD Coupe</b>	<b>24630</b>
425 SL1RR/492 4 SHIRG	<b>36080</b>
Oil press. switch/Int. pres. aceite	<b>1993-99</b>
Stop light switch/Int. luz stop	87 118
On clutch pedal/Int. pedal embrague	<b>11060</b>
Fan switch/Termocontacto ventilador	<b>24610</b>
	<b>24630</b>
	<b>36080</b>
<b>825 Si Lux, Coupe</b>	<b>1996-99</b>
25 K4F	129 175
Oil press. switch/Int. pres. aceite	<b>10610</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>825 Si/Sterling</b>	<b>1987-91</b>
C 25 A2	127 173
Oil press. switch/Int. pres. aceite	<b>10610</b>
<b>825 Si/Sterling</b>	<b>1986-91</b>
C 25 A1	110 150
Oil press. switch/Int. pres. aceite	<b>10610</b>
<b>827 24V Coupe</b>	<b>1992-99</b>
C 27 A1	124 169
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24610</b>
Temp. sending unit/Termo-Resistencia	Without/Sin cruise control
Fan switch/Termocontacto ventilador	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Fan switch/Termocontacto ventilador	<b>36420</b>
<b>827 24V I/Si Kat</b>	<b>1992-99</b>
C 27 A1	124 169
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24610</b>
On clutch pedal/Int. pedal embrague	Without/Sin cruise control
Temp. sending unit/Termo-Resistencia	Cruise control/Control veloc.
Fan switch/Termocontacto ventilador	<b>24630</b>
Fan switch/Termocontacto ventilador	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Fan switch/Termocontacto ventilador	<b>36420</b>
<b>827 Si/Sterling Kat</b>	<b>1988-99</b>
C 27 A1	124 169
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24610</b>
On clutch pedal/Int. pedal embrague	Without/Sin cruise control
Temp. sending unit/Termo-Resistencia	Cruise control/Control veloc.
Fan switch/Termocontacto ventilador	<b>24630</b>
Fan switch/Termocontacto ventilador	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Fan switch/Termocontacto ventilador	<b>36420</b>
<b>827 Si/Sterling, Vitesse/SLI</b>	<b>1988-91</b>
C 27 A2	130 177
Temp. sending unit/Termo-Resistencia	<b>32310</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>827 Vitesse Kat</b>	<b>1988-91</b>
C 27 A1	124 169
Oil press. switch/Int. pres. aceite	<b>10610</b>
Temp. sending unit/Termo-Resistencia	<b>32450</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Coupe 1.6 16V</b>	<b>1996-99</b>
16 K4F	82 111
Oil press. switch/Int. pres. aceite	<b>12410</b>
Oil press. switch/Int. pres. aceite	M 12x1,5
Stop light switch/Int. luz stop	0.35 bar
Rev. light switch/Int. luz marcha atrás	<b>12470</b>
	<b>24610</b>
	Gear box/Cambio MA, ME, MG, ML
	<b>40570</b>
<b>Coupe 1.8 16V</b>	<b>1996-99</b>
18 K4K	107 145
Oil press. switch/Int. pres. aceite	<b>12410</b>
Oil press. switch/Int. pres. aceite	M 12x1,5
Stop light switch/Int. luz stop	0.35 bar
Rev. light switch/Int. luz marcha atrás	<b>12470</b>
	<b>24610</b>
	<b>40580</b>
<b>Maestro 1.3</b>	<b>1990-95</b>
	51 69
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 660755
Rev. light switch/Int. luz marcha atrás	Ch. 660756 ->
<b>Maestro 1.3</b>	<b>1990-95</b>
	49 67
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 660755
Rev. light switch/Int. luz marcha atrás	Ch. 660756 ->
<b>Maestro 1.6</b>	<b>1990-95</b>
	63 86
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 660755
Rev. light switch/Int. luz marcha atrás	Ch. 660756 ->
<b>Maestro 2.0 D</b>	<b>1990-92</b>
	44 60
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Maestro 2.0 TD</b>	<b>1990-95</b>
BB	60 82
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>

**ROVER Cont.**

<b>Mini MK I 1000</b>	<b>1992-93</b>
99 HD 81	30 41
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Mini MK I 1300</b>	<b>1991-91</b>
12 A2A	45 61
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Mini MK I 1300</b>	<b>1992-95</b>
12 A2D	39 53
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Mini MK I 1300</b>	<b>1992 -&gt;</b>
12 A2B	37 50
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Mini MK I 1300, Cabrio</b>	<b>1992 -&gt;</b>
12 A2E/12 A2L	46 63
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Mini MK I 1300, Cabrio</b>	<b>1992-95</b>
12 A2E	46 63
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Temp. sending unit/Termo-Resistencia	<b>31490</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
<b>Montego 2.0 D Turbo</b>	<b>1988-95</b>
BB	60 82
Oil press. switch/Int. pres. aceite	<b>11420</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Montego 2.0 Gti, Estate</b>	<b>1988-91</b>
	86 117
Oil press. switch/Int. pres. aceite	<b>11280</b>
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Montego 2.0 GTI/LXI Estate</b>	<b>1990-93</b>
20 H	75 102
Oil press. switch/Int. pres. aceite	<b>11420</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Montego 2.0 i Kat</b>	<b>1990-94</b>
20 H	75 102
Oil press. switch/Int. pres. aceite	<b>13420</b>
Stop light switch/Int. luz stop	<b>24300</b>
Fan switch/Termocontacto ventilador	<b>36080</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Montego 2.0 Turbo-D Estate</b>	<b>1993-93</b>
BB	60 82
Oil press. switch/Int. pres. aceite	<b>11420</b>
Rev. light switch/Int. luz marcha atrás	<b>40580</b>
<b>Streetwise 1.4</b>	<b>2003 -&gt;</b>
14 K4F	76 103
Oil press. switch/Int. pres. aceite	<b>12410</b>
<b>Streetwise 1.4</b>	<b>2003 -&gt;</b>
14 K4M	62 84
Oil press. switch/Int. pres. aceite	<b>12410</b>
<b>Streetwise 2.0 TD</b>	<b>2003 -&gt;</b>
20 T2N	74 101
Oil press. switch/Int. pres. aceite	<b>12410</b>

**SAAB**

<b>900 I 2.0 -16, Cabrio, Combi Coupe</b>	<b>1989-93</b>
B202I	93 126
Oil press. switch/Int. pres. aceite	0.35 bar <b>11410</b>
Temp. sending unit/Termo-Resistencia	<b>32070</b>
Fan switch/Termocontacto ventilador	<b>36320</b>
<b>900 I 2.0 i, Combi Coupe</b>	<b>1985-90</b>
B201	81 110
Oil press. switch/Int. pres. aceite	0.35 bar <b>11410</b>
Stop light switch/Int. luz stop	<b>24640</b>
Fan switch/Termocontacto ventilador	<b>36320</b>
<b>900 I 2.0 i, Combi Coupe</b>	<b>1980-90</b>
Bl 20/B201XI	85 115
Oil press. switch/Int. pres. aceite	0.35 bar <b>11410</b>
<b>900 I 2.0 S Turbo-16</b>	<b>1992-93</b>
B202S	107 146
Oil press. switch/Int. pres. aceite	0.35 bar <b>11410</b>
Stop light switch/Int. luz stop	<b>24640</b>
Temp. sending unit/Termo-Resistencia	<b>32070</b>
<b>900 I 2.0 S Turbo-16, Cabrio, Combi Coupe</b>	<b>1991-94</b>
B202S	104 141
Oil press. switch/Int. pres. aceite	0.35 bar <b>11410</b>
Stop light switch/Int. luz stop	<b>24640</b>
Temp. sending unit/Termo-Resistencia	<b>32070</b>
Fan switch/Termocontacto ventilador	<b>36320</b>
<b>900 I 2.0 Turbo, Combi Coupe</b>	<b>1986-91</b>
B201XL	103 140
Oil press. switch/Int. pres. aceite	0.35 bar <b>11410</b>
<b>900 I 2.0 Turbo-16 Combi Coupe</b>	<b>1993-94</b>
B202L	132 180

**SAAB Cont.**

Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
<b>900 I 2.0 Turbo-16 S Kat Combi Coupe</b>		<b>1989-93</b>
B202XL		125 170
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
<b>900 I 2.0 Turbo-16 S, Cabrio, Coupe, Kat</b>		<b>1984-94</b>
B202XL		129 175
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
<b>900 I 2.0 Turbo-16, Cabrio, Combi</b>		<b>1985-94</b>
B202XL		118 160
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
<b>900 I 2.1 -16, Cabrio, Combi Coupe</b>		<b>1990-94</b>
B212I		100 136
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Fan switch/Termocontacto ventilador		<b>36320</b>
<b>900 II 2.0 -16 Turbo, Cabrio, Coupe</b>		<b>1993-98</b>
B204L		136 185
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>900 II 2.0 i, Coupe, Cabrio</b>		<b>1993-98</b>
B204I		96 131
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>900 II 2.3 -16, Cabrio, Coupe</b>		<b>1993-98</b>
B234I		110 150
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>900 II 2.5 -24 V6, Cabrio, Coupe</b>		<b>1993-98</b>
B258I		125 170
Oil press. switch/Int. pres. aceite		<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.0 -16</b>		<b>1989-93</b>
B202I		94 128
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
<b>9000 2.0 -16 CD</b>		<b>1993-98</b>
B204S/B204E		110 150
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	B204E, 01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	B204E, 01.1995 ->	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.0 -16 CD, Fastback</b>		<b>1993-98</b>
B204I		96 131
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.0 -16 ND Turbo</b>		<b>1993-98</b>
B204S/B204E/B202S		110 150
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia	B204E, 01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	B204E, 01.1995 ->	<b>32741</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.0 -16 Turbo</b>		<b>1984-93</b>
B202XL		118 160
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
<b>9000 2.0 -16 Turbo</b>		<b>1984-91</b>
B202XL		129 175
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
<b>9000 2.0 -16 Turbo</b>		<b>1989-92</b>
B202		127 172
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
<b>9000 2.0 -16 Turbo CD</b>		<b>1988-93</b>
B202XL		120 163
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia		<b>32070</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
<b>9000 2.0 -16 Turbo CD</b>		<b>1988-98</b>
B202L		136 185
Stop light switch/Int. luz stop		<b>24640</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>

**SAAB Cont.**

<b>9000 2.0 -16 Turbo CD</b>		<b>1992-98</b>
B204E/B202S		108 147
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	B204E, 01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	B204E, 01.1995 ->	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 Aero CS</b>		<b>1993-98</b>
B234R		162 220
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 Aero CS</b>		<b>1993-98</b>
B234R		165 224
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 CD Turbo</b>		<b>1990-98</b>
B234L		147 200
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32740</b>
Temp. sending unit/Termo-Resistencia	2 fans or speeds/Ventil. o veloc.	<b>32741</b>
Fan switch/Termocontacto ventilador		<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 CD, Fastback</b>		<b>1989-98</b>
B234I		107 146
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 CDE Eco-Power</b>		<b>1993-98</b>
B234E		125 170
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>36730</b>
Fan switch/Termocontacto ventilador		<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 CDE, Fastback</b>		<b>1993-98</b>
B234I		108 147
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 Turbo</b>		<b>1990-98</b>
B234L		143 195
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32740</b>
Temp. sending unit/Termo-Resistencia		<b>32741</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>36730</b>
Fan switch/Termocontacto ventilador		<b>38400</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 2.3 -16 Turbo CSE</b>		<b>1993-98</b>
B234L		147 200
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Stop light switch/Int. luz stop		<b>24640</b>
Temp. sending unit/Termo-Resistencia	01.1995 ->	<b>32740</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Fan switch/Termocontacto ventilador		<b>36730</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9000 3.0 -24 V6 CD/CDE</b>		<b>1994-98</b>
B308I		155 211
Oil press. switch/Int. pres. aceite		<b>12430</b>
Temp. sending unit/Termo-Resistencia	-> 01.1995	<b>32741</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 1.8 i, Kombi</b>		<b>2004 -&gt;</b>
Z18XE		90 122
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 1.8 T BioPower, Cabrio</b>		<b>2009 -&gt;</b>
B207L		129 175
Rev. light switch/Int. luz marcha atrás		<b>40505</b>
<b>9-3 1.8 T, Cabrio, Kombi</b>		<b>2002 -&gt;</b>
		110 150
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 1.9 TiD, Cabrio, Kombi</b>		<b>2004 -&gt;</b>
Z19DTH		110 150
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 1.9 TiD, Kombi</b>		<b>2004 -&gt;</b>
Z19DT		88 120
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>

**SAAB Cont.**

<b>9-3 1.9 TTiD, Cabrio, Kombi</b>		<b>2007 -&gt;</b>
Z 19 DTR		132 180
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 2.0 i, Cabrio</b>		<b>1998-02</b>
B204I		96 131
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite		<b>12650</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.0 SE Turbo, Cabrio</b>		<b>1998-02</b>
B204R		147 200
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite		<b>12650</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.0 T</b>		<b>2009 -&gt;</b>
		177 241
Rev. light switch/Int. luz marcha atrás		<b>40505</b>
<b>9-3 2.0 T Kombi</b>		<b>2005 -&gt;</b>
B207E		110 150
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 2.0 T, BioPower, Cabrio, Kombi</b>		<b>2002 -&gt;</b>
B207L		129 175
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 2.0 T, Cabrio, Kombi, XWD</b>		<b>2002 -&gt;</b>
B207R		154 210
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 2.0 Turbo, Cabrio</b>		<b>1998-02</b>
B205L/B204L		136 185
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite		<b>12650</b>
Temp. sending unit/Termo-Resistencia	B204L	<b>32740</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.0 Turbo, Cabrio</b>		<b>1998-02</b>
B204E		113 154
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite		<b>12650</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.0 Turbo, Cabrio</b>		<b>1999-02</b>
B205R		151 205
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite		<b>12650</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.0 Turbo, Cabrio</b>		<b>2001-02</b>
B205E		110 150
Oil press. switch/Int. pres. aceite		<b>12650</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.2 TiD</b>		<b>1998-00</b>
X 22 DTH/D223L		85 115
Oil press. switch/Int. pres. aceite		<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>32230</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.2 TiD</b>		<b>2000-02</b>
D223L		92 125
Oil press. switch/Int. pres. aceite		<b>12430</b>
Temp. sending unit/Termo-Resistencia		<b>32230</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.2 TiD</b>		<b>2002 -&gt;</b>
D223L		92 125
Oil press. switch/Int. pres. aceite		<b>12430</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>
<b>9-3 2.3 i, Cabrio</b>		<b>1998-02</b>
B234I		110 150
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Oil press. switch/Int. pres. aceite		<b>12650</b>
Temp. sending unit/Termo-Resistencia		<b>32740</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.3, Turbo, Cabrio</b>		<b>1998-02</b>
B235R		165 224
Oil press. switch/Int. pres. aceite		<b>12650</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>9-3 2.3, Turbo, Cabrio</b>		<b>1999-02</b>
B235R		169 230
Oil press. switch/Int. pres. aceite		<b>12650</b>
<b>9-3 2.8 Turbo V6 Cabrio</b>		<b>2009 -&gt;</b>
		203 276
Rev. light switch/Int. luz marcha atrás		<b>40505</b>
<b>9-3 2.8 Turbo V6 XWD, Cabrio, Kombi</b>		<b>2008 -&gt;</b>
B284R		206 280
Rev. light switch/Int. luz marcha atrás		<b>40505</b>
<b>9-3 2.8 Turbo V6, Cabrio, Kombi</b>		<b>2005 -&gt;</b>
LP9		184 250
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24790</b>
Stop light switch/Int. luz stop		<b>24795</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40830</b>

**SAAB Cont.**

<b>9-3 2.8 Turbo V6, Cabrio, Kombi</b>	<b>2007 -&gt;</b>	
B284L	188 256	
On clutch pedal/Int. pedal embrague	<b>24790</b>	Cruise control/Control veloc.
Stop light switch/Int. luz stop	<b>24795</b>	
Rev. light switch/Int. luz marcha atrás	<b>40505</b>	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	Manual 6 speed/vel.
<b>9-3X 1.9 TTiD</b>	<b>2009 -&gt;</b>	
Z 19 DTR	132 180	
Rev. light switch/Int. luz marcha atrás	<b>40505</b>	
<b>9-3X 2.0 T, BioPower</b>	<b>2009 -&gt;</b>	
B207R	154 209	
Rev. light switch/Int. luz marcha atrás	<b>40505</b>	
<b>9-5 1.9 TiD, Kombi</b>	<b>2006 -&gt;</b>	
Z19DTH	110 150	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.0 T Biopower, Kombi</b>	<b>2005 -&gt;</b>	
	132 179	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
<b>9-5 2.0 T Kombi</b>	<b>1998 -&gt;</b>	
B204R	141 192	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.0 t, Kombi</b>	<b>1997 -&gt;</b>	
B205E	110 150	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.0 Turbo SE</b>	<b>1998-00</b>	
B205E	141 192	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
<b>9-5 2.0, Kombi</b>	<b>2000 -&gt;</b>	
B205L	136 185	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.2 TiD, Kombi</b>	<b>2002 -&gt;</b>	
D223L	88 120	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3 t BioPower Kombi</b>	<b>2006 -&gt;</b>	
	154 210	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
<b>9-5 2.3 T, Kombi</b>	<b>1997 -&gt;</b>	
B235E	125 170	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3 T, Kombi</b>	<b>2001 -&gt;</b>	
B235E	136 185	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3 Turbo, Kombi</b>	<b>1999-01</b>	
B235R	169 230	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3 Turbo, Kombi</b>	<b>2001 -&gt;</b>	
B235R	184 250	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3 Turbo, Kombi</b>	<b>2003 -&gt;</b>	
B235L	162 220	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Stop light switch/Int. luz stop	<b>24510</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3 Turbo, Kombi</b>	<b>2006 -&gt;</b>	
B235R	191 260	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 2.3, Kombi</b>	<b>2003-05</b>	
	224 305	
Oil press. switch/Int. pres. aceite	<b>12650</b>	
<b>9-5 3.0 TiD, Kombi</b>	<b>2001 -&gt;</b>	
D308L	130 177	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>	
<b>9-5 3.0 V6t, Kombi</b>	<b>1998 -&gt;</b>	
B308E	147 200	
Oil press. switch/Int. pres. aceite	<b>12430</b>	
Stop light switch/Int. luz stop	<b>24510</b>	Automatic
Rev. light switch/Int. luz marcha atrás	<b>40510</b>	

**SEAT**

<b>Alhambra 1.8 T 20V</b>	<b>1997-10</b>	
AWC/AJH	110 150	
Oil press. switch/Int. pres. aceite	-> 08.2000	
Oil press. switch/Int. pres. aceite	AJH	<b>11690</b>
Oil press. switch/Int. pres. aceite	08.2000 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	-> 08.2000, 1.80 bar	<b>12880</b>
Stop light switch/Int. luz stop	-> 08.2000, 2 terminals/bornes	<b>12910</b>
Stop light switch/Int. luz stop	08.2000 ->, 4 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24760</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite. -> 08.2000	<b>24762</b>
Temp. s. warning lamp/Termocont. temp.	-> 08.2000	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	<b>35350</b>
Temp. s. warning lamp/Termocont. temp.	-> 08.2000, 4 terminals/bornes	<b>35580</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>35590</b>
Rev. light switch/Int. luz marcha atrás		<b>38180</b>
		<b>40660</b>

**SEAT Cont.**

<b>Alhambra 1.9 TDI</b>	<b>1996-10</b>	
ANU/1Z/AHU	66 90	
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12930</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.		<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	<b>35580</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
<b>Alhambra 1.9 TDI</b>	<b>1996-00</b>	
AVG/AFN	81 110	
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12930</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.		<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	<b>35580</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
<b>Alhambra 1.9 TDI</b>	<b>2002-08</b>	
ASZ	96 131	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Alhambra 1.9 TDI</b>	<b>2005-07</b>	
ARL/BTB	110 150	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	BTB, 4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Alhambra 1.9 TDI, 4motion</b>	<b>2000-10</b>	
BVK/AUY	85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Alhambra 2.0 i</b>	<b>1996-10</b>	
ATM/ADY	85 115	
Oil press. switch/Int. pres. aceite	ADY, -> 08.2000, -> Ch. 7M-X-505549	<b>11690</b>
Oil press. switch/Int. pres. aceite	ADY, Ch. 7M-X-505550 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	08.2000 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	ADY, Ch. 7M-X-505550 ->	<b>12883</b>
Oil press. switch/Int. pres. aceite	-> 08.2000, -> Ch. 7M-X-505549	<b>12910</b>
Stop light switch/Int. luz stop	-> 08.2000, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite. -> 08.2000	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	-> 08.2000	<b>35350</b>
Temp. s. warning lamp/Termocont. temp.	80 °C	<b>35525</b>
Temp. s. warning lamp/Termocont. temp.	-> 08.2000, 4 terminals/bornes	<b>35590</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
<b>Alhambra 2.0 TDI</b>	<b>2005-10</b>	
BRT	103 140	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Alhambra 2.8 V6, 4motion</b>	<b>2000-10</b>	
AYL/AUE	150 204	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 1.4 16V</b>	<b>2006 -&gt;</b>	
CGGB/BXW	63 86	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 1.4 TSI</b>	<b>2007 -&gt;</b>	
CAXC	92 125	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 1.6</b>	<b>2004 -&gt;</b>	
BGU/CCSA/BSF/CMXA/BSE	75 102	
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 1.8 TFSI</b>	<b>2007 -&gt;</b>	
BZB/CDAA/BYT	118 160	
Oil press. switch/Int. pres. aceite		<b>12880</b>
Rev. light switch/Int. luz marcha atrás	Open/Conecta	<b>40675</b>
<b>Altea 1.9 TDI</b>	<b>2004 -&gt;</b>	
BXE/BKC/BJB/BLS	77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**SEAT Cont.**

<b>Altea 2.0 FSI</b>		<b>2004-09</b>
BLR/BLY/BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite	Ch. 5P-5-067001 ->	<b>12850</b>
Oil press. switch/Int. pres. aceite		<b>12850</b>
Oil press. switch/Int. pres. aceite	BLR, BLY, -> Ch. 5P-5-067000, Black/Negro	<b>12895</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 2.0 TDI</b>		<b>2004-09</b>
AZV		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 2.0 TDI</b>		<b>2006 -&gt;</b>
CEGA/BMN		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	BMN, -> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 2.0 TDI</b>		<b>2005 -&gt;</b>
BMM		103 140
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 2.0 TDI 16V</b>		<b>2004 -&gt;</b>
CFHC/CBDB/BKD		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea 2.0 TFSI</b>		<b>2006-09</b>
BWA		147 200
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 1.4 16V</b>		<b>2006 -&gt;</b>
CGGB/BXW		63 86
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 1.4 TSI</b>		<b>2007 -&gt;</b>
CAXC		92 125
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 1.6</b>		<b>2006 -&gt;</b>
CCSA/BSF/CMXA/BSE		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 1.6 LPG</b>		<b>2009 -&gt;</b>
CHGA		75 102
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 1.8 TFSI</b>		<b>2007 -&gt;</b>
BZB/CDAA/BYT		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 1.9 TDI</b>		<b>2006 -&gt;</b>
BXE/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 2.0 FSI</b>		<b>2006-09</b>
BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 2.0 TDI</b>		<b>2007 -&gt;</b>
CEGA/BMN		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
<b>Altea XL 2.0 TDI 16V</b>		<b>2006 -&gt;</b>
CFHC/CBDB/BKD		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 2.0 TDI 4x4</b>		<b>2007 -&gt;</b>
CEGA/BMN/CFJA		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
<b>Altea XL 2.0 TDI, 4x4</b>		<b>2006 -&gt;</b>
BMM		103 140
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Altea XL 2.0 TFSI 4x4</b>		<b>2007-09</b>
BWA		147 200
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**SEAT Cont.**

<b>Arosa 1.0</b>		<b>1997-04</b>
AER/ANV/ALD/ALL/AUC		37 50
Oil press. switch/Int. pres. aceite	07.1999 ->	<b>12881</b>
Oil press. switch/Int. pres. aceite	-> 07.1999	<b>12935</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	-> Ch. 6H-2-009068, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6H-2-009069 ->	<b>24760</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	-> Ch. 6H-X-060000	<b>35650</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Arosa 1.0</b>		<b>1998-00</b>
AHT		37 50
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Arosa 1.4</b>		<b>1997-04</b>
AEX/AKV/ANW/AKK/APQ/AUD		44 60
Oil press. switch/Int. pres. aceite	07.1999 ->	<b>12881</b>
Oil press. switch/Int. pres. aceite	-> 07.1999	<b>12935</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	-> Ch. 6H-2-009068, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6H-2-009069 ->	<b>24760</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	-> Ch. 6H-X-060000, Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Arosa 1.4 16V</b>		<b>2000-04</b>
AFK/AUB/AQQ		74 100
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	-> Ch. 6H-2-009068, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6H-2-009069 ->	<b>24760</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Arosa 1.4 TDI</b>		<b>2000-04</b>
AMF		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	-> Ch. 6H-2-009068, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6K-2-199601 ->	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 6H-2-009069 ->	<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Arosa 1.7 SDI</b>		<b>1997-04</b>
AKU		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	-> Ch. 6H-2-009068, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6H-2-009069 ->	<b>24761</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24772</b>
Stop light switch/Int. luz stop		<b>24773</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Cordoba 1.0 16V</b>		<b>2000-02</b>
AST/AVZ		51 69
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6K-2-199601 ->	<b>24760</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Cordoba 1.0 Fastback</b>		<b>1999-02</b>
ANV/ALD/AUC		37 50
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 6K-2-199601 ->	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Cordoba 1.0 i</b>		<b>1996-99</b>
AER		37 50
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes	<b>35580</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40665</b>
<b>Cordoba 1.2</b>		<b>2002-06</b>
AZQ/BME		47 64
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 6L-3-106135	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 6L-3-106136 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>







**SEAT Cont.**

<b>Cordoba 1.9 TDI, Fastback, Vario</b>		<b>1999-02</b>
ASK/ASV		81 110
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	Ch. 6K-2-199601 ->	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Cordoba 1.9 TDI, Vario</b>		<b>1996-99</b>
1Z/AHU		66 90
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-068400, 0.25 bar	11690
Oil press. switch/Int. pres. aceite	Ch. 6K-X-068401 ->	12870
Oil press. switch/Int. pres. aceite	AHU, Ch. 6K-X-068401 ->	12882
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-068400, 0.90 bar	12930
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Cordoba 1.9 TDI, Vario</b>		<b>1997-99</b>
AFN		81 110
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-068400, 0.25 bar	11690
Oil press. switch/Int. pres. aceite	Ch. 6K-X-068401 ->	12870
Oil press. switch/Int. pres. aceite	Ch. 6K-X-068401 ->	12882
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-068400, 0.90 bar	12930
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Cordoba 1.9 TDI, Vario</b>		<b>1999-02</b>
AGR/ALH		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	Ch. 6K-2-199601 ->	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Cordoba 2.0</b>		<b>2002-09</b>
AZL/BBX		85 115
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Rev. light switch/Int. luz marcha atrás		40675
<b>Cordoba 2.0 i</b>		<b>1993-99</b>
2E/AGG		85 115
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-068400, 0.25 bar	11690
Oil press. switch/Int. pres. aceite	1.20 bar	12560
Oil press. switch/Int. pres. aceite	Ch. 6K-X-068401 ->	12870
Oil press. switch/Int. pres. aceite	AGG, Ch. 6K-X-068401 ->	12883
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	-> 05.1996, -> Ch. 6K-X-068400, 1.80 bar	12910
Oil press. transmitter/Transm. pres. aceite		14740
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35350
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35640
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Cordoba 2.0 i 16V</b>		<b>1996-99</b>
ABF		110 150
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-068400	11690
Oil press. switch/Int. pres. aceite	1.20 bar	12560
Oil press. switch/Int. pres. aceite	Ch. 6K-X-068401 ->	12870
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Oil press. transmitter/Transm. pres. aceite		14740
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31610
Temp. sending unit/Termo-Resistencia		32110
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Temp. s. warning lamp/Termocont. temp.	With/Con A.A.	38180
Fan switch/Termocontacto ventilador		40660
Rev. light switch/Int. luz marcha atrás		40665
<b>Ibiza 1.0 9</b>		<b>1986-93</b>
146 A 000		32 44
Oil press. switch/Int. pres. aceite		11200
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360

**SEAT Cont.**

<b>Ibiza 1.0 9</b>		<b>1990-93</b>
146 A 000/09 NCA		29 40
Oil press. switch/Int. pres. aceite		11200
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31140
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.2</b>		<b>1984-93</b>
021 A 1000		44 60
Oil press. switch/Int. pres. aceite	-> 12.1987	11200
Oil press. switch/Int. pres. aceite	01.1988 ->	11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.2</b>		<b>1984-93</b>
021 A 1000		47 64
Oil press. switch/Int. pres. aceite	-> 12.1987	11200
Oil press. switch/Int. pres. aceite	01.1988 ->	11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.2 i</b>		<b>1989-93</b>
021 C.1000		52 71
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.5</b>		<b>1984-93</b>
021 A 2000		63 85
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.5 i</b>		<b>1986-93</b>
021 B.2000		74 100
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.5 i</b>		<b>1986-93</b>
021 D.2000		65 89
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.5 i Kat</b>		<b>1986-93</b>
021 C.2000		66 90
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.7</b>		<b>1991-93</b>
021 B.3000		76 103
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360
<b>Ibiza 1.7</b>		<b>1991-93</b>
021 A.3000		72 98
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop		24280
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador	2 terminals/bornes	37260
Fan switch/Termocontacto ventilador	3 terminals/bornes	37840
Rev. light switch/Int. luz marcha atrás		40360





**SEAT Cont.**

<b>Ibiza IV 1.4 16V</b>		<b>2002-07</b>
BBY/BKY		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	2 terminals/bornes	36270
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40655
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.4 16V</b>		<b>2006 -&gt;</b>
BXW		63 86
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.4 TDI</b>		<b>2002-05</b>
AMF		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.4 TDI</b>		<b>2005 -&gt;</b>
BNM		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	2 terminals/bornes	36270
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40655
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.4 TDI</b>		<b>2005 -&gt;</b>
BMS/BNV		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	2 terminals/bornes	36270
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40655
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.6</b>		<b>2003 -&gt;</b>
BAH		74 101
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.6 16V</b>		<b>2006 -&gt;</b>
BTS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.8 T Cupra R</b>		<b>2004-08</b>
BBU/BLZ		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.8 T FR</b>		<b>2003-08</b>
BKV/BJX		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Oil press. switch/Int. pres. aceite	0.50 bar	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.9 SDI</b>		<b>2002-05</b>
ASY		47 64
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.9 TDI</b>		<b>2002 -&gt;</b>
BMT/AXR/ATD		74 100
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.9 TDI</b>		<b>2002 -&gt;</b>
BLT/ASZ		96 131
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza IV 1.9 TDI Cupra R</b>		<b>2004-08</b>
BPX/BUK		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675

**SEAT Cont.**

<b>Ibiza IV 2.0</b>		<b>2002 -&gt;</b>
AZL/BBX		85 116
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Oil press. switch/Int. pres. aceite	BBX	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza V 1.2, Sportcoupe</b>		<b>2008 -&gt;</b>
BZG/CGPA		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza V 1.4 TDI, Sportcoupe</b>		<b>2008 -&gt;</b>
BMS		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza V 1.4, Sportcoupe</b>		<b>2008 -&gt;</b>
CGGB/BXW		63 85
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza V 1.6, Sportcoupe</b>		<b>2008 -&gt;</b>
BTS		77 105
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza V 1.9 TDI, Sportcoupe</b>		<b>2008 -&gt;</b>
BXJ		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Ibiza V 1.9 TDI, Sportcoupe</b>		<b>2008 -&gt;</b>
BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Inca 1.4 16V</b>		<b>2000-03</b>
AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop	-> Ch. 9K-2-020000, 2 terminals/bornes	24420
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,	24762
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Inca 1.4 i</b>		<b>1995-03</b>
AEX/AKV/APQ/AUD		44 60
Oil press. switch/Int. pres. aceite	AEX, APQ, AKV, -> Ch. 9K-X-005000	11690
Oil press. switch/Int. pres. aceite	AEX, APQ, AKV, Ch. 9K-X-005001 ->	12870
Oil press. switch/Int. pres. aceite	AUD	12881
Stop light switch/Int. luz stop	-> Ch. 9K-2-020000	24280
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,	24762
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	Climat	35320
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	38180
Rev. light switch/Int. luz marcha atrás	With/Con A.A.	40660
Rev. light switch/Int. luz marcha atrás		40670
<b>Inca 1.6 i</b>		<b>1995-98</b>
1F		55 75
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.80 bar	12910
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,	24762
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35350
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Inca 1.6 i</b>		<b>1995-98</b>
ALM/AEE		55 75
Oil press. switch/Int. pres. aceite		11690
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,	24762
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35350
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670

**SEAT Cont.**

<b>Inca 1.7 D</b>	<b>1996-03</b>
AHB	42 57
Oil press. switch/Int. pres. aceite	-> Ch. 9K-X-005000
Oil press. switch/Int. pres. aceite	Ch. 9K-X-005001 ->
Oil press. switch/Int. pres. aceite	0.70 bar
Oil press. switch/Int. pres. aceite	0.90 bar
Stop light switch/Int. luz stop	-> Ch. 9K-2-020000
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	
<b>Inca 1.9 D</b>	<b>1995-03</b>
1Y	47 64
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	Automatic
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Inca 1.9 SDI</b>	<b>1995-03</b>
AYQ/AEY	47 64
Oil press. switch/Int. pres. aceite	-> Ch. 9K-X-005000
Oil press. switch/Int. pres. aceite	Ch. 9K-X-005001 ->
Oil press. switch/Int. pres. aceite	0.70 bar
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Stop light switch/Int. luz stop	Ch. 9K-3-000001 ->, 4 terminals,
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	Automatic
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Inca 1.9 TDI</b>	<b>1996-03</b>
ALH	66 90
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	Automatic
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Leon 1.4 16V</b>	<b>1999-06</b>
AHW/AXP/BCA/APE/AUA	55 75
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	
Rev. light switch/Int. luz marcha atrás	
<b>Leon 1.4 16V</b>	<b>2006 -&gt;</b>
CGGB/BXW	63 86
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	<b>12881</b>
Stop light switch/Int. luz stop	<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 1P-6-038500
Fan switch/Termocontacto ventilador	<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>38185</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.4 TSI</b>	<b>2007 -&gt;</b>
CAXC	92 125
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	<b>12881</b>
Stop light switch/Int. luz stop	<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 1P-6-038500
Rev. light switch/Int. luz marcha atrás	<b>24763</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.6</b>	<b>1999-06</b>
AKL/APF/AEH	74 100
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	
Rev. light switch/Int. luz marcha atrás	

**SEAT Cont.**

<b>Leon 1.6</b>	<b>2005 -&gt;</b>
CCSA/BSF/CMXA/BSE	75 102
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	<b>12880</b>
Stop light switch/Int. luz stop	<b>24761</b>
Stop light switch/Int. luz stop	<b>24763</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.6</b>	<b>2005-06</b>
BGU/BFQ	75 102
Oil press. switch/Int. pres. aceite	Open/Conecta
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	
<b>Leon 1.6 16V</b>	<b>2000-06</b>
AUS/ATN/BCB/AZD	77 105
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	
Rev. light switch/Int. luz marcha atrás	
<b>Leon 1.8 20V</b>	<b>1999-06</b>
AGN/APG	92 125
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	
Rev. light switch/Int. luz marcha atrás	
<b>Leon 1.8 20V T</b>	<b>1999-06</b>
APP/AUQ	132 180
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>38185</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.8 20V T 4</b>	<b>1999-06</b>
AJQ/ARY	132 180
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>38185</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.8 T Cupra R</b>	<b>2002-06</b>
AMK	154 209
Oil press. switch/Int. pres. aceite	Open/Conecta
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>38185</b>
Rev. light switch/Int. luz marcha atrás	<b>40665</b>
<b>Leon 1.8 T Cupra R</b>	<b>2003-06</b>
BAM	165 225
Oil press. switch/Int. pres. aceite	Open/Conecta
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>38185</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.8 TSI</b>	<b>2007 -&gt;</b>
BZB/CDAA	118 160
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	BZB
Stop light switch/Int. luz stop	<b>12880</b>
Stop light switch/Int. luz stop	<b>24761</b>
Rev. light switch/Int. luz marcha atrás	<b>24763</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.9 SDI</b>	<b>1999-06</b>
AQM	50 68
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
Fan switch/Termocontacto ventilador	<b>24760</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	<b>38180</b>
Rev. light switch/Int. luz marcha atrás	<b>38185</b>
Rev. light switch/Int. luz marcha atrás	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	<b>40675</b>
<b>Leon 1.9 TDI</b>	<b>1999-06</b>
AGR/ALH	66 90
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	-> Ch. 6K-X-448600
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	
Rev. light switch/Int. luz marcha atrás	

**SEAT Cont.**

<b>Leon 1.9 TDI</b>		<b>1999-06</b>
AHF/ASV		81 110
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	2 terminals/bornes	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 1.9 TDI</b>		<b>2003-06</b>
ASZ		96 130
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24772
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	-> Ch. 6K-X-448600	36270
Fan switch/Termocontacto ventilador	2 terminals/bornes	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 1.9 TDI</b>		<b>2005 -&gt;</b>
BXE/BKC/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	-> Ch. 1P-6-038500	24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 1.9 TDI</b>		<b>2005-06</b>
AXR		74 100
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 1.9 TDI</b>		<b>2007 -&gt;</b>
BXF		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	-> Ch. 1P-6-038500	24763
<b>Leon 1.9 TDI, Syncro</b>		<b>2001-06</b>
ARL		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24772
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	-> Ch. 6K-X-448600	36270
Fan switch/Termocontacto ventilador	2 terminals/bornes	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 FSI</b>		<b>2005-10</b>
BLR/BLY/BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite		12850
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TDI</b>		<b>2006 -&gt;</b>
CEGA/BMN/CFJA		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	BMN	24761
Stop light switch/Int. luz stop	-> Ch. 1P-6-038500	24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TDI</b>		<b>2005 -&gt;</b>
BMM		103 140
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TDI</b>		<b>2005-10</b>
AZV		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TDI 16V</b>		<b>2005 -&gt;</b>
CFHC/BKD		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TFSI</b>		<b>2005-06</b>
BWA1		136 185
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TFSI</b>		<b>2005-09</b>
BWA		147 200
Oil press. switch/Int. pres. aceite		12850
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.0 TFSI</b>		<b>2006 -&gt;</b>
BWJ/CDLD		177 240
Oil press. switch/Int. pres. aceite	BWJ	12850
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Leon 2.8 Cupra 4</b>		<b>2001-06</b>
AUE		150 204
Oil press. switch/Int. pres. aceite	0.25 bar	12870
Oil press. switch/Int. pres. aceite	1.40 bar	12880
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Fan switch/Termocontacto ventilador	2 terminals/bornes	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40665

**SEAT Cont.**

<b>Malaga 1.2</b>		<b>1985-93</b>
021 A 1000		44 60
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.2</b>		<b>1984-93</b>
021 A 1000		47 64
Oil press. switch/Int. pres. aceite		11260
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.2 i</b>		<b>1989-93</b>
021 C.1000		52 71
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.5</b>		<b>1985-93</b>
021 A 2000		63 85
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.5 i</b>		<b>1987-93</b>
021 B.2000		74 100
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.5 i Kat</b>		<b>1986-93</b>
021 A 2000/021 C.2000/021 D.2000		66 90
Oil press. switch/Int. pres. aceite		11260
Oil press. transmitter/Transm. pres. aceite		14780
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Temp. s. warning lamp/Termocont. temp.		35420
Fan switch/Termocontacto ventilador		37310
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.7 D</b>		<b>1985-93</b>
022 A.5000		40 54
Oil press. switch/Int. pres. aceite		11260
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Fan switch/Termocontacto ventilador		37270
Rev. light switch/Int. luz marcha atrás		40360
<b>Malaga 1.7 D</b>		<b>1990-93</b>
022 A.5000		42 57
Oil press. switch/Int. pres. aceite		11260
Stop light switch/Int. luz stop	Without/Sin check control	24280
Stop light switch/Int. luz stop	Check control	24290
Temp. sending unit/Termo-Resistencia		31050
Fan switch/Termocontacto ventilador		37270
Rev. light switch/Int. luz marcha atrás		40360
<b>Marbella 0.8, Furgón</b>		<b>1986-93</b>
08 NCA		25 34
Oil press. switch/Int. pres. aceite		11200
Stop light switch/Int. luz stop		24010
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37260
Rev. light switch/Int. luz marcha atrás		40360
<b>Marbella 0.9 Kat, Furgón</b>		<b>1990-96</b>
100 GL 7000/09 NCB		29 40
Oil press. switch/Int. pres. aceite		11200
Stop light switch/Int. luz stop		24010
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37260
Rev. light switch/Int. luz marcha atrás		40360
<b>Marbella 0.9 Kat, Furgón</b>		<b>1987-93</b>
09 NCB		29 40
Oil press. switch/Int. pres. aceite		11200
Stop light switch/Int. luz stop		24010
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37260
Rev. light switch/Int. luz marcha atrás		40360
<b>Marbella 0.9, Furgón</b>		<b>1987-93</b>
09 NCA		29 40
Oil press. switch/Int. pres. aceite		11200
Stop light switch/Int. luz stop		24010
Temp. s. warning lamp/Termocont. temp.		35070
Fan switch/Termocontacto ventilador		37260
Rev. light switch/Int. luz marcha atrás		40360







**SEAT Cont.**

<b>Toledo II 1.9 SDI</b>		1999-04
AQM		50 68
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo II 1.9 TDI</b>		1999-06
AGR/ALH		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo II 1.9 TDI</b>		1999-06
AHF/ASV		81 110
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo II 1.9 TDI</b>		2000-06
ARL		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
<b>Toledo II 1.9 TDI</b>		2003-06
ASZ		96 130
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
<b>Toledo II 2.3 V5</b>		1999-01
AGZ		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Oil press. switch/Int. pres. aceite	Open/Conecta	12882
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	4 terminals/bornes	24760
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24772
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador		36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo II 2.3 V5 20V</b>		2001-06
AQN		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 1.6</b>		2004-09
BGU/CCSA/BSF/BSE		75 102
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 1.8 TFSI</b>		2007 ->
BZB/CDAA/BYT		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	BZB, -> Ch. 5P-6-042000	24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 1.9 TDI</b>		2004 ->
BXE/BKC/BJB/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 2.0 FSI</b>		2004 ->
BLR/BLY/BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite	Ch. 5P-5-067001 ->	12850
Oil press. switch/Int. pres. aceite	BLR, BLY, -> Ch. 5P-5-067000, Black/Negro	12895
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 2.0 TDI</b>		2006-09
CEGA/BMN		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	BMN, -> Ch. 5P-6-042000	24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 2.0 TDI</b>		2005-09
BMM		103 140
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 2.0 TDI</b>		2004-09
AZV		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	-> Ch. 5P-6-042000	24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Toledo III 2.0 TDI 16V</b>		2004-09
BKD		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675

**SEAT Cont.**

<b>Toledo III 2.0 TFSI</b>		2005-09
BWA		147 200
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>SKODA</b>		
<b>105,120 1.0 105 S,L,LS</b>		1976-90
742,10		34 46
Oil press. switch/Int. pres. aceite		11060
<b>105,120 1.0 105 S,L,LS</b>		1988-90
742,10		32 44
Oil press. switch/Int. pres. aceite		11060
<b>105,120 1.0 105 S,L,LS</b>		1983-90
742,10		33 45
Oil press. switch/Int. pres. aceite		11060
<b>105,120 1.2 120 L</b>		1976-90
		38 52
Oil press. switch/Int. pres. aceite		11060
<b>105,120 1.2 120 L</b>		1983-90
742,12		38 52
Oil press. switch/Int. pres. aceite		11060
<b>105,120 1.2 120 L</b>		1987-90
742,12		35 48
Oil press. switch/Int. pres. aceite		11060
<b>105,120 1.2 120 LS, GLS</b>		1976-90
742,12 X		43 58
Oil press. switch/Int. pres. aceite		11060
<b>130 G, GL</b>		1988-91
		46 63
Oil press. switch/Int. pres. aceite		11060
<b>130 GL</b>		1987-91
		39 53
Oil press. switch/Int. pres. aceite		11060
<b>130 GL</b>		1988-91
135/8		43 58
Oil press. switch/Int. pres. aceite		11060
<b>130 L, GL</b>		1985-91
742,13		45 61
Oil press. switch/Int. pres. aceite		11060
<b>Fabia 1.0</b>		1999-02
AQV/ARV		37 50
Oil press. switch/Int. pres. aceite	AQV	12860
Oil press. switch/Int. pres. aceite	ARV	12860
Oil press. switch/Int. pres. aceite	ATY	12860
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	AQV, ARV	24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100000	40675
Rev. light switch/Int. luz marcha atrás	Ch. 6Y-1-100001 ->	40676
<b>Fabia 1.2, Combi</b>		2006 ->
BBM/CHFA		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.2, Combi</b>		2007 ->
CEVA/BZG/CGPA/CHTA		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.2, Combi, Praktik, Sedan</b>		2002-08
AWY/BMD		40 54
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.2, Combi, Praktik, Sedan</b>		2003-08
AZQ/BME		47 64
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.2, Combi, Praktik, Sedan</b>		2001-07
AWY/BMD		40 54
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 16V, Combi, Sedan</b>		1999-08
BBZ/AUB		74 100
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675

**SKODA Cont.**

<b>Fabia 1.4 16V, Combi, Sedan</b>		<b>1999-08</b>
BBY/BKY/AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 16V, Combi, Sedan</b>		<b>2006-07</b>
BUD		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 Sedan</b>		<b>2001-07</b>
AME/AQW		50 68
Oil press. switch/Int. pres. aceite	AQW	12860
Oil press. switch/Int. pres. aceite	AME	12860
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100000	40675
Rev. light switch/Int. luz marcha atrás	Ch. 6Y-1-100001 ->	40676
<b>Fabia 1.4 TDI, Combi</b>		<b>2007 -&gt;</b>
BNM		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 TDI, Combi</b>		<b>2007 -&gt;</b>
BMS/BNV		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 TDI, Combi, Praktik, Sedan</b>		<b>2005-08</b>
BNM		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 TDI, Combi, Sedan</b>		<b>2003-07</b>
AMF		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4 TDI, Combi, Sedan</b>		<b>2005-08</b>
BNV		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4, Combi</b>		<b>2007 -&gt;</b>
CGGB/BXW		63 86
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.4, Combi, Praktik</b>		<b>1999-08</b>
AME/ATZ/AQW		50 68
Oil press. switch/Int. pres. aceite	AQW	12860
Oil press. switch/Int. pres. aceite	ATZ	12860
Oil press. switch/Int. pres. aceite	AME	12860
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100000	40675
Rev. light switch/Int. luz marcha atrás	Ch. 6Y-1-100001 ->	40676
<b>Fabia 1.4, Combi, Sedan</b>		<b>2000-02</b>
AZF/AZE		44 60
Oil press. switch/Int. pres. aceite	AZF	12860
Oil press. switch/Int. pres. aceite	AZE	12860
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100000	40675
Rev. light switch/Int. luz marcha atrás	Ch. 6Y-1-100001 ->	40676
<b>Fabia 1.6, Combi</b>		<b>2007 -&gt;</b>
BTS/CFNA		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675

**SKODA Cont.**

<b>Fabia 1.9 SDI, Combi, Praktik, Sedan</b>		<b>1999-08</b>
ASY		47 64
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.9 TDI RS</b>		<b>2003-08</b>
BLT/ASZ		96 130
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 1.9 TDI, Combi</b>		<b>2007 -&gt;</b>
BSW/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
<b>Fabia 1.9 TDI, Combi, Sedan</b>		<b>2000-08</b>
AXR/ATD		74 100
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40660
<b>Fabia 2.0</b>		<b>1999-08</b>
AQY/AZL		85 116
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fabia 2.0, Combi, Sedan</b>		<b>2000-07</b>
AZL		85 116
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Favorit 1.3 135</b>		<b>1990-94</b>
781.135		44 60
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 135</b>		<b>1991-94</b>
781.135		42 57
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 135 X,LX,GLX</b>		<b>1990-94</b>
781.135E		40 54
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 135, 135L</b>		<b>1989-94</b>
781.135		43 58
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 136</b>		<b>1990-94</b>
136 L		45 61
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 Forman</b>		<b>1991-95</b>
781.135		44 60
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 Forman</b>		<b>1991-95</b>
OHC		45 61
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 Forman</b>		<b>1991-95</b>
781.135E		40 54
Oil press. switch/Int. pres. aceite		11060
Oil press. switch/Int. pres. aceite	0.50 bar	11270
<b>Favorit 1.3 Pick-up</b>		<b>1992-97</b>
135B		40 54
Oil press. switch/Int. pres. aceite		11060
<b>Favorit 1.3 Pick-up</b>		<b>1991-97</b>
781.135		42 57
Oil press. switch/Int. pres. aceite		11060
<b>Favorit 1.3, Forman, Pick-up</b>		<b>1994-94</b>
136B		50 68
Oil press. switch/Int. pres. aceite		11060
<b>Felicia I 1.3, Kombi</b>		<b>1994-98</b>
AMJ/135 L		43 58
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
<b>Felicia I 1.3, Kombi LX</b>		<b>1994-98</b>
135B/AMG		40 54
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
<b>Felicia I 1.3, Kombi LXI</b>		<b>1994-98</b>
136B/AMH		50 68
Oil press. switch/Int. pres. aceite	0.50 bar	11270
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655
<b>Felicia I 1.6 Fun</b>		<b>1997 -&gt;</b>
AEE		55 75
Rev. light switch/Int. luz marcha atrás	-> Ch. 6Y-1-100635	40655



**SKODA Cont.**

<b>Octavia 1.9 TDI</b>	2005 ->	
AXR	74 100	
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 1.9 TDI 4x4 Combi</b>	1999-00	
AGR	66 90	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Ch. 1U-X-133669 ->	40675
Rev. light switch/Int. luz marcha atrás	-> Ch. 1U-X-133668	41270
<b>Octavia 1.9 TDI 4x4 Combi</b>	2000 ->	
ATD	74 100	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40660
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 1.9 TDI 4x4 Combi</b>	2004-10	
BXE/BKC/BLS	77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 1.9 TDI Combi</b>	2000 ->	
AXR/ATD	74 100	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
<b>Octavia 1.9 TDI, Combi</b>	1996 ->	
AGR/ALH	66 90	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Ch. 1U-X-133668 ->	40675
Rev. light switch/Int. luz marcha atrás	-> Ch. 1U-X-133669	41270
<b>Octavia 1.9 TDI, Combi</b>	1997 ->	
AHF/ASV	81 110	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Ch. 1U-X-133668 ->	40675
Rev. light switch/Int. luz marcha atrás	-> Ch. 1U-X-133669	41270
<b>Octavia 1.9 TDI, Combi</b>	2003 ->	
ASZ	96 130	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	Ch. 1U-3 ->, 4 terminals, Green/Verde	24762
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 1.9 TDI, Combi</b>	2004-10	
BXE/BKC/BJB/BLS	77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0</b>	1999 ->	
APK/AZH/AQY/AEG	85 116	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Ch. 1U-X-133668 ->	40675
Rev. light switch/Int. luz marcha atrás	-> Ch. 1U-X-133669	41270
<b>Octavia 2.0 4x4 Combi</b>	2001 ->	
AZH/AZJ/AQY/AEG	85 116	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	Ch. 1U-3 ->, 4 terminals, Green/Verde	24762
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Ch. 1U-X-133669 ->	40675
Rev. light switch/Int. luz marcha atrás	-> Ch. 1U-X-133668	41270
<b>Octavia 2.0 Combi</b>	1999 ->	
APK/AZH/AZJ/AQY/AEG	85 116	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Ch. 1U-X-133669 ->	40675
Rev. light switch/Int. luz marcha atrás	-> Ch. 1U-X-133668	41270

**SKODA Cont.**

<b>Octavia 2.0 FSI 4x4 Combi</b>	2004 ->	
BVX/BLX	110 150	
Oil press. switch/Int. pres. aceite	Ch. 1Z-58029801 ->	12850
Oil press. switch/Int. pres. aceite	-> Ch. 1Z-58029800	12895
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0 FSI, Combi</b>	2004 ->	
BLY/BLR/BVZ/BVY	110 150	
Oil press. switch/Int. pres. aceite	Ch. 1Z-58029801 ->	12850
Oil press. switch/Int. pres. aceite	BLR, BLY, -> Ch. 1Z-58029800	12895
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0 RS, Combi</b>	2005 ->	
BWA/CCZA	147 200	
Oil press. switch/Int. pres. aceite	BWA	12850
Oil press. switch/Int. pres. aceite	CCZA	12875
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0 TDI 16V, Combi</b>	2004 ->	
CFHC/CLCB/BKD	103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0 TDI 16V, Combi</b>	2004-10	
AZV	100 136	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0 TDI, 4x4, Combi</b>	2006 ->	
BMM	103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia 2.0 TDI, Combi</b>	2006 ->	
CEGA/BMN	125 170	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Rev. light switch/Int. luz marcha atrás		40675
<b>Octavia RS 1.8 T, Combi</b>	2001 ->	
AUQ	132 180	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	-> Ch. 1U-3, 4 terminals/bornes	24760
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
<b>Praktik 1.2</b>	2007 ->	
BZG/CGPA	51 70	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Praktik 1.4</b>	2007 ->	
CGGB/BXW	63 86	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Praktik 1.4 TDI</b>	2007 ->	
BMS/BNV	59 80	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
<b>Praktik 1.4 TDI</b>	2007 ->	
BNM	51 70	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
<b>Rapid 1.2</b>	1983-90	
	43 58	
Oil press. switch/Int. pres. aceite		11060
<b>Rapid 1.3</b>	1987-91	
	39 53	
Oil press. switch/Int. pres. aceite		11060
<b>Rapid 1.3 S</b>	1984-90	
135/8	43 58	
Oil press. switch/Int. pres. aceite		11060
<b>Roomster 1.2</b>	2006-07	
BME	47 64	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Roomster 1.2</b>	2007 ->	
BZG/CGPA	51 70	
Stop light switch/Int. luz stop		24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
<b>Roomster 1.4</b>	2006 ->	
CGGB/BXW	63 86	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675

**SKODA Cont.**

<b>Roomster 1.4 TDI</b>		2006 ->	
BNM		51 70	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Roomster 1.4 TDI</b>		2006 ->	
BMS/BNV		59 80	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
<b>Roomster 1.6</b>		2006 ->	
BTS/CFNA		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Roomster 1.9 TDI</b>		2006 ->	
BSW/BLS		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
<b>Superb 1.4 TSI, Kombi</b>		2008 ->	
CAXC		92 125	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Superb 1.8 T</b>		2002-08	
AWT		110 150	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop	-> Ch. 3U-29018401, 4 terminals	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>Superb 1.8 TSI</b>		2008 ->	
BZB/CDA		118 160	
Oil press. switch/Int. pres. aceite		12875	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Superb 1.8 TSI, 4x4, Kombi</b>		2008 ->	
CDA		118 160	
Oil press. switch/Int. pres. aceite		12875	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Superb 1.9 TDI</b>		2002-08	
AWX/AVF		96 130	
Oil press. switch/Int. pres. aceite	Open/Conecta	12882	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>Superb 1.9 TDI</b>		2002-05	
AVB		74 101	
Oil press. switch/Int. pres. aceite	Open/Conecta	12882	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
Stop light switch/Int. luz stop	-> Ch. 3U-29018401, 4 terminals	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>Superb 1.9 TDI</b>		2005-07	
BSV		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12882	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
Stop light switch/Int. luz stop	-> Ch. 3U-29018401, 4 terminals	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>Superb 1.9 TDI</b>		2008 ->	
BXE/BLS		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Superb 2.0</b>		2002-08	
AZM		85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>Superb 2.0 TDI</b>		2005-08	
BSS		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12882	
Oil press. switch/Int. pres. aceite	0.70 bar	12890	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>Superb 2.0 TDI, 4x4, Kombi</b>		2008 ->	
CFGB/CBBB		125 170	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Superb 2.0 TDI, Kombi</b>		2008 ->	
BMP		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Superb 2.5 TDI</b>		2002-03	
AYM		114 155	
Oil press. switch/Int. pres. aceite	Open/Conecta	12882	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	

**SKODA Cont.**

<b>Superb 2.5 TDI</b>		2003-08	
BDG		120 163	
Oil press. switch/Int. pres. aceite	Open/Conecta	12882	
Stop light switch/Int. luz stop	-> Ch. 3U-29018401, 4 terminals	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40715	
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	41303	
<b>Superb 2.8 V6</b>		2002-08	
AMX		142 193	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop	4 terminals/bornes	24565	
Stop light switch/Int. luz stop	Ch. 3U-29018402 ->	24761	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391	
Rev. light switch/Int. luz marcha atrás		40715	
<b>Superb 3.6 V6 4x4, Kombi</b>		2008 ->	
CDVA		191 260	
Oil press. switch/Int. pres. aceite		12884	
Rev. light switch/Int. luz marcha atrás		40675	

**SMART (MCC)**

<b>Cabrio 0.6</b>		2000-04	
M 160 E6AL B03		40 55	
Temp. sending unit/Termo-Resistencia		32710	
<b>Cabrio 0.6</b>		2001-04	
M 160 E6AL B05		45 61	
Temp. sending unit/Termo-Resistencia		32710	
<b>Cabrio 0.6</b>		2002-04	
		52 71	
Temp. sending unit/Termo-Resistencia		32710	
<b>Cabrio 0.8 CDI</b>		2001-04	
OM 660 DE 8LA		30 41	
Temp. sending unit/Termo-Resistencia		32710	
<b>City-Coupe 0.6</b>		1998-04	
M 160 E6AL B04		33 45	
Temp. sending unit/Termo-Resistencia		32710	
<b>City-Coupe 0.6</b>		1998-04	
M 160 E6AL B03		40 55	
Temp. sending unit/Termo-Resistencia		32710	
<b>City-Coupe 0.6</b>		2001-04	
M 160 E6AL B05		45 61	
Temp. sending unit/Termo-Resistencia		32710	
<b>City-Coupe 0.6</b>		2002-04	
		52 71	
Temp. sending unit/Termo-Resistencia		32710	
<b>City-Coupe 0.8 CDI</b>		1999-04	
OM 660 DE 8LA		30 41	
Temp. sending unit/Termo-Resistencia		32710	
<b>Forfour 1.1</b>		2004 ->	
		55 75	
Stop light switch/Int. luz stop	L.H.D.	24895	
<b>Forfour 1.1</b>		2005 ->	
		47 64	
Stop light switch/Int. luz stop	L.H.D.	24895	
<b>Forfour 1.3</b>		2004 ->	
		70 95	
Stop light switch/Int. luz stop	L.H.D.	24895	
<b>Forfour 1.5</b>		2004 ->	
M 135.950		80 109	
Stop light switch/Int. luz stop	L.H.D.	24895	
<b>Forfour 1.5 Brabus</b>		2005 ->	
		130 177	
Stop light switch/Int. luz stop	L.H.D.	24895	
<b>Forfour 1.5 CDI</b>		2004 ->	
OM 639.939		50 68	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	L.H.D.	24895	
<b>Forfour 1.5 CDI</b>		2004 ->	
OM 639.939		70 95	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	24891	
Stop light switch/Int. luz stop	L.H.D.	24895	

**SSANGYONG**

<b>Korando 2.9 D, Cabrio</b>		1996 ->	
MB-OM 662		72 98	
Oil press. switch/Int. pres. aceite		10200	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 2.9 TD, Cabrio</b>		1998 ->	
		88 120	
Oil press. switch/Int. pres. aceite		10200	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 3.2</b>		1996 ->	
M 104.995		154 209	
Temp. sending unit/Termo-Resistencia		32220	
<b>Korando 3.2, Cabrio</b>		1999 ->	
M 104.995		156 212	
Oil press. switch/Int. pres. aceite		10200	
Temp. sending unit/Termo-Resistencia		32220	

**SUBARU**

<b>Forester 2.0</b>		1997-02	
EJ20		90 122	
Oil press. switch/Int. pres. aceite		11610	
Stop light switch/Int. luz stop	Without/Sin cruise control	24450	
Temp. sending unit/Termo-Resistencia		31570	
Rev. light switch/Int. luz marcha atrás		40880	
<b>Forester 2.0</b>		1998 ->	
EJ20		92 125	
Oil press. switch/Int. pres. aceite		11610	
Stop light switch/Int. luz stop	Without/Sin cruise control	24450	
Temp. sending unit/Termo-Resistencia		31570	
Rev. light switch/Int. luz marcha atrás		40880	

**SUBARU Cont.**

<b>Forester 2.0 S Turbo</b>	1998-01
EJ20	125 170
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40850
<b>Forester 2.0 S Turbo</b>	2001-02
EJ205	130 177
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40850
<b>Forester 2.0 S Turbo</b>	2002 ->
EJ20	130 177
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40850
<b>Impreza 1.6 i, 4WD, Sedan</b>	1992-00
EJ16	66 90
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 1.6 i, 4WD, Sedan</b>	1998-00
EJ161	70 95
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 1.6, 4WD, Coupe</b>	1996-00
EJ161	66 90
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 1.6, AWD, Sedan, S.W.</b>	2000 ->
EJ16	70 95
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 1.8 i 4WD S.W.</b>	1992-00
EJ18	76 103
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Impreza 1.8 i 4WD Sedan</b>	1992-00
EJ18/EJ18E	76 103
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Impreza 2.0 16V AWD S.W.</b>	1998-00
EJ20	92 125
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 4WD, Coupe, S.W.</b>	1995-00
EJ20	85 115
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 i 4WD Sedan</b>	1995-00
EJ20	85 115
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 i 4WD Sedan</b>	1998-00
EJ20	92 125
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 i Turbo 4WD S.W.</b>	1994-00
EJ20 (Turbo)	155 211
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 Turbo 4WD Coupe</b>	1996-00
EJ20G	155 211
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 Turbo GT 4WD Sedan</b>	1994-00
EJ20 (Turbo)	155 211
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0 Turbo GT 4WD, Sedan, S.W.</b>	1998-00
EJ205	160 218
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Impreza 2.0, Sedan, S.W.</b>	2000 ->
EJ20	92 125
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Justy i 1000, 4WD</b>	1984-90
EF10	40 54
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24330
<b>Justy i 1000, 4WD</b>	1987-95
EF10	37 50
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24330
<b>Justy i 1200 4WD</b>	1990-94
EF12	55 75
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24330
<b>Justy i 1200 4WD</b>	1986-90
EF12	50 68
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24330
<b>Justy i 1200, 4WD</b>	1987-95
EF12	49 67
Oil press. switch/Int. pres. aceite	10610
Stop light switch/Int. luz stop	24330
Rev. light switch/Int. luz marcha atrás	40860
<b>Justy II 1.3 4x4</b>	2001-03
G13BB	63 86
Oil press. switch/Int. pres. aceite	11610
<b>Justy II 1.3 GX 4x4</b>	1995-03
EF13	50 68
Rev. light switch/Int. luz marcha atrás	40770

**SUBARU Cont.**

<b>Legacy I 1800, 4WD, S.W.</b>	1989-94
EJ18 SPI	76 103
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40850
<b>Legacy I 2000 4WD, S.W.</b>	1991-94
EJ20 EMPI	85 116
Oil press. switch/Int. pres. aceite	11610
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40850
Rev. light switch/Int. luz marcha atrás	40850
<b>Legacy I 2000 S.W.</b>	1991-93
EJ20 EMPI	85 116
Oil press. switch/Int. pres. aceite	11610
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40850
<b>Legacy I 2000 Turbo 4WD</b>	1992-94
EJ20-GN	147 200
Oil press. switch/Int. pres. aceite	11610
<b>Legacy I 2200 4WD, Super S.W.</b>	1989-94
EJ22 EMPI	100 136
Oil press. switch/Int. pres. aceite	11610
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40850
Rev. light switch/Int. luz marcha atrás	40850
<b>Legacy II 2.0 i</b>	1994-99
EJ20E	85 116
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy II 2.0 i 4WD, S.W.</b>	1994-99
EJ20	85 116
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy II 2.0 i 4WD, S.W.</b>	1994-98
EJ20 EMPI	85 116
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy II 2.2 i 4WD, S.W.</b>	1994-99
EJ22 EMPI	94 128
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy II 2.2 i 4WD, S.W.</b>	1996-99
EJ22 EMPI	96 131
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy II 2.5 i 4WD, S.W.</b>	1996-99
EJ25D	110 150
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Temp. sending unit/Termo-Resistencia	31570
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy III 2.0, S.W.</b>	1998-03
EJ20	92 125
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy III 2.5, S.W.</b>	1998-03
EJ25	115 156
Rev. light switch/Int. luz marcha atrás	40880
<b>Legacy IV 2.0, S.W.</b>	2003 ->
EJ20	101 138
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24450
<b>Legacy IV 2.5, S.W.</b>	2003 ->
EJ25	121 165
Rev. light switch/Int. luz marcha atrás	40880
<b>Leone II 1300</b>	1984-91
EA65	48 65
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 4WD</b>	1988-90
EA82	72 98
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 4WD Kat, Super, S.W.</b>	1986-92
EA82	70 95
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 4WD, S.W.</b>	1984-90
EA82	66 90
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 4WD, S.W.</b>	1988-90
EA82	88 120
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 Super 4WD, S.W.</b>	1989-90
EA82	96 131
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 Turbo 4WD</b>	1989-90
EA82	96 131
Rev. light switch/Int. luz marcha atrás	40870
<b>Leone II 1800 Turbo 4WD, Super, S.W.</b>	1984-90
EA82	100 136
Rev. light switch/Int. luz marcha atrás	40870
<b>Libero 1.2 4WD Bus</b>	1986-00
EF12	38 52
Oil press. switch/Int. pres. aceite	10610

**SUBARU Cont.**

<b>Libero 1.2 i 4WD Bus</b>	<b>1991-00</b>
EF12	40 54
Oil press. switch/Int. pres. aceite	<b>10610</b>
<b>XT Coupe Turbo 4WD</b>	<b>1988-90</b>
EA82	88 120
Temp. sending unit/Termo-Resistencia	<b>31310</b>
Fan switch/Termocontacto ventilador	<b>37640</b>
<b>XT Coupe Turbo 4WD</b>	<b>1987-90</b>
EA82	96 131
Temp. sending unit/Termo-Resistencia	<b>31310</b>
Fan switch/Termocontacto ventilador	<b>37640</b>
<b>XT Coupe Turbo 4WD</b>	<b>1984-90</b>
EA82	100 136
Temp. sending unit/Termo-Resistencia	<b>31310</b>
Fan switch/Termocontacto ventilador	<b>37640</b>

**SUZUKI**

<b>Alto II 0.8</b>	<b>1986-93</b>
F8B	29 39
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Alto III 1.0</b>	<b>1994-02</b>
G10B	39 53
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Alto III 1.0</b>	<b>2000 -&gt;</b>
G10BB/G10B	43 58
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Alto IV 1.1</b>	<b>2002 -&gt;</b>
F10DN/F10D	46 63
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Alto V 1.0</b>	<b>2009 -&gt;</b>
K10B	50 68
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Baleno 1.3 16V Kombi</b>	<b>1997-02</b>
G13BB	63 86
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.3 i 16V, Fastback</b>	<b>1995-02</b>
G13B	63 85
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.3, Fastback</b>	<b>1996-02</b>
G13BA	52 71
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.6 i 16V, 4x4, Fastback, Kombi</b>	<b>1995-02</b>
G16B	72 98
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.6 i 16V, 4x4, Kombi</b>	<b>1996-02</b>
	73 99
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.8 GT, Fastback</b>	<b>1996-02</b>
J18A	89 121
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.8 i 16V Kombi</b>	<b>1996-02</b>
J18A	89 121
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Baleno 1.9 TD, Fastback, Kombi</b>	<b>1998-02</b>
	55 75
Oil press. switch/Int. pres. aceite	<b>12460</b>
Temp. s. warning lamp/Termocont. temp. Without/Sin A.A.	<b>35600</b>
Temp. s. warning lamp/Termocont. temp.	<b>35610</b>
<b>Carry 1.3 16V Furgón</b>	<b>2000 -&gt;</b>
G13BB	58 79
Stop light switch/Int. luz stop	<b>24720</b>
<b>Carry 1.3 Furgón</b>	<b>1999 -&gt;</b>
G13B	58 79
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>Grand Vitara 1.6</b>	<b>1998 -&gt;</b>
G16B	69 94
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40765</b>
<b>Grand Vitara 1.6 Allrad</b>	<b>2005 -&gt;</b>
M16A	78 106
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Grand Vitara 1.9 DDiS</b>	<b>2005 -&gt;</b>
	95 129
Oil press. switch/Int. pres. aceite	<b>12636</b>
Oil press. switch/Int. pres. aceite	<b>12701</b>
<b>Grand Vitara 2.0</b>	<b>1998 -&gt;</b>
J20A	94 128
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40765</b>
<b>Grand Vitara 2.0 Allroad</b>	<b>2005 -&gt;</b>
J20A	103 140
Rev. light switch/Int. luz marcha atrás	<b>40835</b>

**SUZUKI Cont.**

<b>Grand Vitara 2.0 HDI 110</b>	<b>2001 -&gt;</b>
RHW	80 109
Oil press. switch/Int. pres. aceite	<b>12640</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>32160</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Grand Vitara 2.0 TD, Intercooler</b>	<b>1998 -&gt;</b>
RF	64 87
Stop light switch/Int. luz stop	<b>24720</b>
<b>Grand Vitara 2.5 V6 24V</b>	<b>1998 -&gt;</b>
H 25 A	106 144
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Grand Vitara 2.5 V6 24V</b>	<b>2001 -&gt;</b>
H 25 A	116 158
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Grand Vitara 2.7 XL-7</b>	<b>2001 -&gt;</b>
	127 173
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Grand Vitara 2.7 XL-7</b>	<b>2003 -&gt;</b>
H 27 A	135 184
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Ignis 1.3, 4WD</b>	<b>2000-03</b>
M13A	61 83
Oil press. switch/Int. pres. aceite	<b>10610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Ignis II 1.3 DDiS</b>	<b>2003 -&gt;</b>
Z13DT	51 70
Oil press. switch/Int. pres. aceite	<b>12430</b>
Stop light switch/Int. luz stop	<b>24519</b>
On clutch pedal/Int. pedal embrague	<b>24790</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>Ignis II 1.3, 4x4</b>	<b>2003 -&gt;</b>
M13A	69 94
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24519</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Ignis II 1.5 Sport</b>	<b>2003 -&gt;</b>
M15A	80 109
Stop light switch/Int. luz stop	<b>24519</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Ignis II 1.5, 4x4</b>	<b>2003 -&gt;</b>
M15A	73 99
Stop light switch/Int. luz stop	<b>24519</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Jimny 1.3 16V 4x4</b>	<b>2005 -&gt;</b>
M13A	63 86
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Jimny 1.3 16V, 4WD</b>	<b>1998 -&gt;</b>
G13BB	59 80
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
<b>Jimny 1.3 16V, 4WD</b>	<b>2001 -&gt;</b>
M13A	60 82
Oil press. switch/Int. pres. aceite	<b>10610</b>
<b>Jimny 1.5 DDiS 4WD</b>	<b>2003 -&gt;</b>
K9K 700	48 65
Oil press. switch/Int. pres. aceite	<b>12636</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Jimny 1.5 DDiS 4x4</b>	<b>2005 -&gt;</b>
K9K 266	63 86
Oil press. switch/Int. pres. aceite	<b>12636</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Liana 1.3</b>	<b>2002 -&gt;</b>
M13A	66 90
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Liana 1.3 Kombi</b>	<b>2001 -&gt;</b>
	66 90
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Liana 1.4 DDiS, Kombi</b>	<b>2004 -&gt;</b>
8HY	66 90
Oil press. switch/Int. pres. aceite	<b>12640</b>
Rev. light switch/Int. luz marcha atrás	<b>40491</b>
<b>Liana 1.6 Kombi, 4WD</b>	<b>2001 -&gt;</b>
	76 103
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Liana 1.6, 4WD</b>	<b>2002 -&gt;</b>
	76 103
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Liana 1.6, 4WD, Kombi</b>	<b>2002 -&gt;</b>
M16A	78 106
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Samurai 1.0</b>	<b>1988 -&gt;</b>
F10A	33 45
Rev. light switch/Int. luz marcha atrás	<b>40270</b>
Rev. light switch/Int. luz marcha atrás	<b>40390</b>
<b>Samurai 1.3</b>	<b>1988 -&gt;</b>
G13BA	51 70
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40270</b>
Rev. light switch/Int. luz marcha atrás	<b>40390</b>
Rev. light switch/Int. luz marcha atrás	<b>40765</b>

Cruise control/Control veloc.

Gear box/Cambio BE3

4WD

4WD  
With/Con cable



**SUZUKI Cont.**

<b>Samurai 1.3</b>		1988 ->
G13A		44 60
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia	-> 01.1990	31630
Rev. light switch/Int. luz marcha atrás	4WD	40390
Rev. light switch/Int. luz marcha atrás		40765
<b>Samurai 1.3</b>		1988 ->
G13A		47 64
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia	-> 01.1990	31630
Rev. light switch/Int. luz marcha atrás	4WD	40390
Rev. light switch/Int. luz marcha atrás		40765
<b>Samurai 1.9 TD</b>		1998 ->
XUD9		46 63
Oil press. switch/Int. pres. aceite	0.50 bar	12460
Oil press. switch/Int. pres. aceite	0.20 bar	12630
Stop light switch/Int. luz stop		24720
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	35610
Rev. light switch/Int. luz marcha atrás	4WD	40390
Rev. light switch/Int. luz marcha atrás	With/Con cable	40765
<b>Samurai 1.9 TD</b>		1998 ->
		47 64
Oil press. switch/Int. pres. aceite		12460
Temp. s. warning lamp/Termocont. temp.	CEE 19-5	35610
Rev. light switch/Int. luz marcha atrás		40765
<b>SJ 413 1.3</b>		1986-90
G13A		44 60
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31630
Rev. light switch/Int. luz marcha atrás	4WD	40390
<b>Splash 1.2</b>		2008 ->
K12B		63 86
Rev. light switch/Int. luz marcha atrás		40835
<b>Splash 1.3 CDTI</b>		2008 ->
Z13DTJ/D13A		55 75
Rev. light switch/Int. luz marcha atrás		40835
<b>Super Carry 1.0 Bus</b>		1992-99
F10A		31 42
Oil press. switch/Int. pres. aceite		11610
<b>Super Carry 1.0 Bus</b>		1985-99
F10A		33 45
Oil press. switch/Int. pres. aceite		11610
<b>Super Carry 1.0 Bus</b>		1994-99
F10A		30 41
Oil press. switch/Int. pres. aceite		11610
<b>Swift 1.3 i Cabrio</b>		1991-96
G13BA		50 68
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	Automatic	36510
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift 1.0</b>		1983-89
G10A/G10		37 50
Oil press. switch/Int. pres. aceite		10610
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift 1.0 Turbo</b>		1985-89
		52 71
Oil press. switch/Int. pres. aceite		10610
<b>Swift 1.1.3</b>		1986-89
G13A		47 64
Oil press. switch/Int. pres. aceite		10610
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift 1.1.3</b>		1984-89
G13A		50 68
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift 1.1.3</b>		1984-89
G13A		54 73
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift 1.1.3 GTi/GXi</b>		1986-89
G13B		74 101
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.0 Fastback</b>		1989-01
G10A		37 50
Oil press. switch/Int. pres. aceite		10610
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		36500
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.0 i Fastback</b>		1991-01
G10A		39 53
Oil press. switch/Int. pres. aceite		10610
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		36500
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.0 i Fastback</b>		1989-91
G10A		40 54
Oil press. switch/Int. pres. aceite		10610
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		36500
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.3 4WD Fastback</b>		1989-01
G13A		50 68
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40770

**SUZUKI Cont.**

<b>Swift II 1.3 Fastback</b>		1989-01
G13A		50 68
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.3 GTi Fastback</b>		1989-01
G13B		74 101
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	Automatic	36510
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.3 Sedan</b>		1989-01
G13A		50 68
Oil press. switch/Int. pres. aceite		10610
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.3, 4WD, Fastback, Sedan</b>		1989-91
G13A		52 71
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.6 i, 4WD</b>		1990-01
G16B		68 92
Oil press. switch/Int. pres. aceite		10610
Temp. sending unit/Termo-Resistencia		31630
Fan switch/Termocontacto ventilador		36510
Fan switch/Termocontacto ventilador		36520
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift II 1.6, 4WD</b>		1989-91
G16B		70 95
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31570
Temp. sending unit/Termo-Resistencia		31630
Fan switch/Termocontacto ventilador		36510
Fan switch/Termocontacto ventilador	Yellow/amarillo	36520
Rev. light switch/Int. luz marcha atrás		40770
<b>Swift III 1.3 4x4</b>		2006 ->
M13A		66 90
Oil press. switch/Int. pres. aceite		11610
Rev. light switch/Int. luz marcha atrás		40835
<b>Swift III 1.3 DDiS</b>		2005 ->
Z13DT		51 69
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague		24790
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc. Manual	40830
Rev. light switch/Int. luz marcha atrás		40845
<b>Swift III 1.3, 4x4</b>		2005 ->
M13A		68 92
Oil press. switch/Int. pres. aceite		11610
Rev. light switch/Int. luz marcha atrás	Manual	40835
Rev. light switch/Int. luz marcha atrás		40845
<b>Swift III 1.5</b>		2005 ->
M15A		75 102
Oil press. switch/Int. pres. aceite		11610
Rev. light switch/Int. luz marcha atrás	Manual	40835
Rev. light switch/Int. luz marcha atrás		40845
<b>Swift III 1.6</b>		2006 ->
M16A		92 125
Rev. light switch/Int. luz marcha atrás	Manual	40835
Rev. light switch/Int. luz marcha atrás		40845
<b>SX4 1.5</b>		2006 ->
M15A		73 99
Oil press. switch/Int. pres. aceite		11610
On clutch pedal/Int. pedal embrague		24790
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.	40835
<b>SX4 1.6 VVT, 4x4</b>		2006 ->
M16A		79 107
Oil press. switch/Int. pres. aceite		11610
On clutch pedal/Int. pedal embrague		24790
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.	40835
<b>SX4 1.6 VVT, 4x4</b>		2009 ->
M16A		88 120
On clutch pedal/Int. pedal embrague		24790
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.	40835
<b>SX4 1.9 DDiS, 4x4</b>		2006 ->
D19AA		88 120
Oil press. switch/Int. pres. aceite		12430
On clutch pedal/Int. pedal embrague		24790
Rev. light switch/Int. luz marcha atrás	Cruise control/Control veloc.	40835
<b>Vitara 1.6</b>		1988-91
G16A		60 82
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31630
Rev. light switch/Int. luz marcha atrás		40760
Rev. Light switch/Int. Luz marcha atrás	Differential lock/Bloqueo de diferencial	40780
<b>Vitara 1.6 16V</b>		1990-99
G16B		71 97
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31630
Temp. sending unit/Termo-Resistencia		31670
Temp. sending unit/Termo-Resistencia	02.1992 ->	31670
Temp. s. warning lamp/Termocont. temp.		35670
Rev. light switch/Int. luz marcha atrás		40760
Rev. Light switch/Int. Luz marcha atrás	Differential lock/Bloqueo de diferencial	40780
<b>Vitara 1.6, Cabrio</b>		1988-98
G16A		59 80
Oil press. switch/Int. pres. aceite		10610
Stop light switch/Int. luz stop		24720
Temp. sending unit/Termo-Resistencia		31630
Rev. light switch/Int. luz marcha atrás		40760
Rev. Light switch/Int. Luz marcha atrás	Differential lock/Bloqueo de diferencial	40780

**SUZUKI Cont.**

<b>Vitara 1.9 D, Cabrio</b>	<b>1995-98</b>
XUD9A	50 68
Oil press. switch/Int. pres. aceite	<b>12460</b>
Stop light switch/Int. luz stop	<b>24720</b>
Thermistor-Thermocont./Doble función	<b>34400</b>
Rev. light switch/Int. luz marcha atrás	<b>40760</b>
Rev. Light switch/Int. Luz marcha atrás	<b>40780</b>
Differential lock/Bloqueo de diferencial	
<b>Vitara 1.9 D, Cabrio</b>	<b>1996-99</b>
XUD9SD	55 75
Oil press. switch/Int. pres. aceite	<b>12460</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. s. warning lamp/Termocont. temp.	CEE 19-5
Rev. light switch/Int. luz marcha atrás	<b>35610</b>
Rev. Light switch/Int. Luz marcha atrás	<b>40760</b>
Differential lock/Bloqueo de diferencial	
Rev. light switch/Int. luz marcha atrás	<b>40780</b>
Rev. light switch/Int. luz marcha atrás	<b>40790</b>
<b>Vitara 2.0 16V, Cabrio</b>	<b>1996-99</b>
J20A	97 132
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40765</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
4WD	
<b>Vitara 2.0 TD, Intercooler</b>	<b>1994-98</b>
RF	52 71
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Vitara 2.0 TD, Intercooler</b>	<b>1995-98</b>
RF	64 87
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
<b>Vitara 2.0 V6 24V</b>	<b>1994-98</b>
H 20 A	100 136
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40765</b>
Rev. light switch/Int. luz marcha atrás	<b>40766</b>
4WD	
<b>Vitara 2.5 V6 24V</b>	<b>1995-98</b>
	118 160
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>Wagon R 1.0</b>	<b>2003-05</b>
	39 53
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Wagon R+ 1.0</b>	<b>1998-00</b>
	48 65
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Wagon R+ 1.2, 4WD</b>	<b>1998-00</b>
	51 69
Oil press. switch/Int. pres. aceite	<b>10610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40770</b>
<b>Wagon R+ 1.3</b>	<b>2000 -&gt;</b>
G13BB	56 76
Oil press. switch/Int. pres. aceite	<b>10610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Wagon R+ 1.3 4WD</b>	<b>2001 -&gt;</b>
	56 76
Oil press. switch/Int. pres. aceite	<b>11610</b>
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>Wagon R+ 1.3 DDiS</b>	<b>2003 -&gt;</b>
Z13DT	51 70
Oil press. switch/Int. pres. aceite	<b>12430</b>
On clutch pedal/Int. pedal embrague	<b>24790</b>
Cruise control/Control veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>Wagon R+ 1.3, 4WD</b>	<b>2003 -&gt;</b>
M13A	69 94
Oil press. switch/Int. pres. aceite	<b>11610</b>
On clutch pedal/Int. pedal embrague	<b>24790</b>
Cruise control/Control veloc.	
Rev. light switch/Int. luz marcha atrás	<b>40835</b>
<b>X-90 1.6 i 16V, 4x4</b>	<b>1995 -&gt;</b>
G16B	71 97
Oil press. switch/Int. pres. aceite	<b>11610</b>
Stop light switch/Int. luz stop	<b>24720</b>
Rev. light switch/Int. luz marcha atrás	<b>40765</b>

**TOYOTA**

<b>1000 1.0, Furgón</b>	<b>1969 -&gt;</b>
2K	33 45
Oil press. switch/Int. pres. aceite	<b>11610</b>
<b>4 Runner 2.7 i 4x4</b>	<b>1995-96</b>
3RZ-FE	112 152
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Stop light switch/Int. luz stop	<b>24690</b>
Temp. sending unit/Termo-Resistencia	<b>32650</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>4 Runner 3.0 V6</b>	<b>1990-95</b>
3VZ-E	105 143
Stop light switch/Int. luz stop	<b>24680</b>
Stop light switch/Int. luz stop	<b>24720</b>
Temp. sending unit/Termo-Resistencia	<b>31330</b>
Temp. sending unit/Termo-Resistencia	<b>32640</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>4 Runner 3.4 i 4x4</b>	<b>1995-96</b>
5VZ-FE	136 185
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Stop light switch/Int. luz stop	<b>24690</b>
Temp. sending unit/Termo-Resistencia	<b>31570</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Auris 1.33 Dual-VVTi</b>	<b>2009 -&gt;</b>
1NR-FE	74 101
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Rev. light switch/Int. luz marcha atrás	<b>40848</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>

**TOYOTA Cont.**

<b>Auris 1.4 D-4D</b>	<b>2007 -&gt;</b>
1ND-TV	66 90
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Without/Sin cable	
Manual sequential/secuencial, 5 speed/vel.	<b>40847</b>
With/Con cable	<b>40848</b>
Manual sequential/secuencial, 6 speed/vel.	<b>41302</b>
<b>Auris 1.4 VVTi</b>	<b>2007 -&gt;</b>
4ZZ-FE	71 97
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Without/Sin cable	
With/Con cable	<b>40848</b>
<b>Auris 1.6</b>	<b>2009 -&gt;</b>
1ZR-FAE	97 132
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Without/Sin cable	
Manual sequential/secuencial, 5 speed/vel.	<b>40847</b>
With/Con cable	<b>40848</b>
Manual sequential/secuencial, 6 speed/vel.	<b>41302</b>
<b>Auris 1.6 VVTi</b>	<b>2007 -&gt;</b>
1ZR-FE	91 124
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Without/Sin cable	
Manual sequential/secuencial	<b>40847</b>
With/Con cable	<b>40848</b>
12.2008 ->, Manual sequential/secuencial	<b>41302</b>
<b>Auris 2.0 D-4D</b>	<b>2007 -&gt;</b>
1AD-FTV	93 126
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Without/Sin cable	
Rev. light switch/Int. luz marcha atrás	<b>40848</b>
<b>Auris 2.2 D</b>	<b>2007 -&gt;</b>
2AD-FHV	130 177
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Without/Sin cable	
Rev. light switch/Int. luz marcha atrás	<b>40848</b>
<b>Avensis 1.6 VVT-i, Kombi, Sedan</b>	<b>2003 -&gt;</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 1.6 VVT-i, Liftback, S.W.</b>	<b>2000-03</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Rev. light switch/Int. luz marcha atrás	<b>40845</b>
<b>Avensis 1.6, Liftback, S.W.</b>	<b>1997-00</b>
4A-FE	74 101
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Fan switch/Termocontacto ventilador	<b>36712</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 1.6, Liftback, S.W.</b>	<b>1997-00</b>
4A-FE	81 110
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Fan switch/Termocontacto ventilador	<b>36712</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 1.6, Sedan, Station Wagon</b>	<b>2009 -&gt;</b>
1ZR-FAE	97 132
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>
Manual 6 speed/vel.	<b>41302</b>
<b>Avensis 1.8 VVT-i, Liftback, S.W.</b>	<b>2000-03</b>
1ZZ-FE	95 129
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Rev. light switch/Int. luz marcha atrás	<b>40845</b>
<b>Avensis 1.8, Kombi, Sedan</b>	<b>2003 -&gt;</b>
1ZZ-FE	95 129
Oil press. switch/Int. pres. aceite	<b>12550</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 1.8, Liftback, S.W.</b>	<b>1997-00</b>
7A-FE	81 110
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Fan switch/Termocontacto ventilador	<b>36712</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 1.8, Sedan, S.W.</b>	<b>2009 -&gt;</b>
2ZR-FAE	108 147
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>
Manual 6 speed/vel.	<b>41302</b>
<b>Avensis 1.9 D, Liftback, S.W.</b>	<b>2002-03</b>
1CD-FTV	85 115
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 2.0 D, Sedan, S.W.</b>	<b>2009 -&gt;</b>
1AD-FTV	93 126
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
Rev. light switch/Int. luz marcha atrás	<b>41302</b>
Manual 6 speed/vel.	<b>41302</b>
<b>Avensis 2.0 D-4D, Kombi, Sedan</b>	<b>2006 -&gt;</b>
1AD-FTV	93 126
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 2.0 D-4D, Kombi, Sedan, Verso</b>	<b>2001 -&gt;</b>
1CD-FTV	85 116
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Fan switch/Termocontacto ventilador	<b>36545</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>
<b>Avensis 2.0 D-4D, Liftback, S.W.</b>	<b>1999-03</b>
1CD-FTV	81 110
Oil press. switch/Int. pres. aceite	<b>12550</b>
Stop light switch/Int. luz stop	<b>24680</b>
Fan switch/Termocontacto ventilador	<b>36545</b>
Rev. light switch/Int. luz marcha atrás	<b>40846</b>

**TOYOTA Cont.**

<b>Avensis 2.0 TD, Liftback, S.W.</b>	1997-03
2C-TE	66 90
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	31330
Fan switch/Termocontacto ventilador	36545
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.0 VVT-i Verso</b>	2001 ->
1AZ-FE	110 150
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.0 VVT-i, Liftback, S.W.</b>	2000-03
1AZ-FSE	110 150
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.0, Kombi, Sedan</b>	2003 ->
1AZ-FSE	108 147
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.0, Liftback, S.W.</b>	1997-00
3S-FE	94 128
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Fan switch/Termocontacto ventilador	36545
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.0, Sedan, S.W.</b>	2009 ->
3ZR-FAE	112 152
Rev. light switch/Int. luz marcha atrás	40846
Rev. light switch/Int. luz marcha atrás	41302
Rev. light switch/Int. luz marcha atrás	41302
Manual 6 speed/vel.	41302
<b>Avensis 2.2 D, Sedan, S.W.</b>	2009 ->
2AD-FHV/2AD-FTV	110 150
Rev. light switch/Int. luz marcha atrás	41302
Rev. light switch/Int. luz marcha atrás	41302
<b>Avensis 2.2 D, Sedan, S.W.</b>	2009 ->
2AD-FHV	130 177
Rev. light switch/Int. luz marcha atrás	41302
Rev. light switch/Int. luz marcha atrás	41302
Manual 6 speed/vel.	41302
<b>Avensis 2.2 D-4D, Kombi, Sedan</b>	2005 ->
2AD-FTV	110 150
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.2 D-CAT, Kombi, Sedan</b>	2005 ->
2AD-FHV	130 177
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.4, Kombi, Sedan</b>	2003 ->
2AZ-FSE	125 170
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Avensis 2.4, Kombi, Sedan</b>	2003 ->
2AZ-FSE	120 163
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Aygo 1.0</b>	2005 ->
1KR-FE	50 68
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40847
Rev. light switch/Int. luz marcha atrás	40848
Manual sequential/Secuencial	40848
<b>Aygo 1.4 HDi</b>	2005 ->
2WZ-TV	40 54
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40848
<b>Camry 2.0 GII 16V, S.W.</b>	1986-91
3S-FE	89 121
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36170
Rev. light switch/Int. luz marcha atrás	40840
11.1987 ->	40840
<b>Camry 2.0 Turbo-D, S.W.</b>	1986-91
2C-T	62 84
Oil press. switch/Int. pres. aceite	11060
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40840
<b>Camry 2.0 Turbo-D, S.W.</b>	1988-91
2C-T	63 86
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40840
<b>Camry 2.0, S.W.</b>	1986-91
3S-FE	94 128
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36170
Rev. light switch/Int. luz marcha atrás	40840
11.1987 ->	40840
<b>Camry 2.2</b>	1996-01
5S-FE	96 131
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Camry 2.2</b>	2000-01
5S-FE	93 126
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Camry 2.2, S.W.</b>	1991-96
5S-FE	100 136
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40846
<b>Camry 2.4 VVT-i</b>	2001 ->
2AZ-FE	112 152
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Camry 2.5 V6 GXI</b>	1988-91
2VZ-FE	118 160
Oil press. switch/Int. pres. aceite	11610
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36170
Rev. light switch/Int. luz marcha atrás	40846

**TOYOTA Cont.**

<b>Camry 3.0 24V</b>	1996-01
1MZ-FE	140 190
Oil press. switch/Int. pres. aceite	12550
<b>Camry 3.0 V6</b>	1996-01
1MZ-FE	135 184
Oil press. switch/Int. pres. aceite	12550
<b>Camry 3.0 V6</b>	2001 ->
1MZ-FE	137 186
Oil press. switch/Int. pres. aceite	12550
<b>Camry 3.0, S.W.</b>	1991-96
3VZ-FE	138 188
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6 16V, Sedan</b>	1994-97
4A-FE	85 116
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6 16V, Sedan</b>	1995-97
4A-FE	78 106
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6 GII, Sportswagon</b>	1992-97
4A-FE	79 107
Oil press. switch/Int. pres. aceite	12240
Oil press. switch/Int. pres. aceite	06.1992 ->
Stop light switch/Int. luz stop	12550
Temp. sending unit/Termo-Resistencia	24680
Temp. sending unit/Termo-Resistencia	06.1992 ->
Fan switch/Termocontacto ventilador	32650
Rev. light switch/Int. luz marcha atrás	36710
40846	40846
<b>Carina E 1.6 i Sportswagon</b>	1995-97
4A-FE	73 99
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6, Sedan</b>	1993-97
4A-FE	79 107
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6, Sedan</b>	1993-97
4A-FE	73 99
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6, Sedan</b>	1995-97
4A-FE	78 106
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.6, Sedan</b>	1993-97
4A-FE	85 116
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.8</b>	1995-97
7A-FE	79 107
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.8 i 16V Sedan</b>	1995-97
7A-FE	79 107
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 1.8 i Sportswagon</b>	1995-97
7A-FE	79 107
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 2.0 D, Sedan, Sportswagon</b>	1992-96
2C	54 73
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	31330
Fan switch/Termocontacto ventilador	36540
Fan switch/Termocontacto ventilador	37730
Rev. light switch/Int. luz marcha atrás	40846
<b>Carina E 2.0 GII, Sportswagon</b>	1992-97
3S-FE	98 133
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	31330
Temp. sending unit/Termo-Resistencia	06.1992 ->
Fan switch/Termocontacto ventilador	32640
Rev. light switch/Int. luz marcha atrás	36540
40846	40846
<b>Carina E 2.0 GTi 16V, Sedan</b>	1994-97
3S-GE	129 175
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32640
Fan switch/Termocontacto ventilador	36540
Rev. light switch/Int. luz marcha atrás	40846

**TOYOTA Cont.**

<b>Carina E 2.0 GTi, Sedan</b>		<b>1992-94</b>
3S-GE		116 158
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia	-> 05.1992	31330
Temp. sending unit/Termo-Resistencia	06.1992 ->	32640
Fan switch/Termocontacto ventilador		36540
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina E 2.0 i, Sedan, Sportswagon</b>		<b>1992-97</b>
3S-FE		93 126
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		32640
Fan switch/Termocontacto ventilador		36540
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina E 2.0 Sedan</b>		<b>1993-97</b>
3S-FE		98 133
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		32640
Fan switch/Termocontacto ventilador		36540
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina E 2.0 TD, Sedan, Sportswagon</b>		<b>1996-97</b>
2C-T		61 83
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		31330
Fan switch/Termocontacto ventilador		36540
Fan switch/Termocontacto ventilador		37730
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 1.6</b>		<b>1987-92</b>
4A-FE		72 98
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 1.6, Sedan, S.W.</b>		<b>1987-90</b>
4A-F		66 90
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 1.6, Station Wagon</b>		<b>1987-92</b>
4A-FE		75 102
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 2.0 D, Sedan, S.W.</b>		<b>1987-92</b>
2C-L		54 73
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 2.0 D, Sedan, S.W.</b>		<b>1988-93</b>
2C-L		54 73
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 2.0 GLI, Sedan</b>		<b>1987-92</b>
3S-FE		89 121
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	-> 02.1992	36170
Rev. light switch/Int. luz marcha atrás		40846
<b>Carina II 2.0 S.W.</b>		<b>1987-92</b>
3S-FE		89 121
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	-> 02.1992	36170
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 1.6 GT 16V, Liftback</b>		<b>1985-89</b>
4A-GEL		91 124
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40840
<b>Celica 1.6 GT Liftback</b>		<b>1987-89</b>
4A-GELC		85 116
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36170
Rev. light switch/Int. luz marcha atrás		40840
<b>Celica 1.6 STI Coupe</b>		<b>1989-94</b>
4A-FE		77 105
Oil press. switch/Int. pres. aceite	0.30 bar	12240
Stop light switch/Int. luz stop	-> 08.1990	24680
Stop light switch/Int. luz stop	09.1990 ->	24720
Temp. sending unit/Termo-Resistencia		31570
Fan switch/Termocontacto ventilador		36160
Fan switch/Termocontacto ventilador	09.1991 ->	36710
Fan switch/Termocontacto ventilador	-> 08.1991	37660
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 1.6, Liftback</b>		<b>1986-90</b>
4A-L		63 86
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	08.1987 ->	36170
Rev. light switch/Int. luz marcha atrás		40840
<b>Celica 1.8 16V TS</b>		<b>1999 -&gt;</b>
2ZZ-GE		141 192
Oil press. switch/Int. pres. aceite		12550
Rev. light switch/Int. luz marcha atrás		40845
<b>Celica 1.8 16V VT-i</b>		<b>1999 -&gt;</b>
1ZZ-FE		105 143
Oil press. switch/Int. pres. aceite		12550
Rev. light switch/Int. luz marcha atrás		40845
<b>Celica 1.8 i 16V</b>		<b>1993-99</b>
7A-FE		85 116
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		32650
Fan switch/Termocontacto ventilador		36710
Rev. light switch/Int. luz marcha atrás		40846

**TOYOTA Cont.**

<b>Celica 2.0 GT, Cabrio, Liftback</b>		<b>1985-89</b>
3S-GEL		110 150
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	01.1988 ->	36170
Rev. light switch/Int. luz marcha atrás	-> 08.1987	40840
Rev. light switch/Int. luz marcha atrás	08.1987 ->	40846
<b>Celica 2.0 GT, Cabrio, Liftback</b>		<b>1985-90</b>
3S-GELC		103 140
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	01.1988 ->	36170
Rev. light switch/Int. luz marcha atrás	-> 08.1987	40840
Rev. light switch/Int. luz marcha atrás	08.1987 ->	40846
<b>Celica 2.0 GT, Cabrio, Liftback</b>		<b>1986-90</b>
3S-GEL		110 150
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	01.1988 ->	36170
Rev. light switch/Int. luz marcha atrás	-> 08.1987	40840
Rev. light switch/Int. luz marcha atrás	08.1987 ->	40846
<b>Celica 2.0 GT, Cabrio, Liftback</b>		<b>1986-90</b>
3S-GEL		110 150
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador	01.1988 ->	36170
Rev. light switch/Int. luz marcha atrás	-> 08.1987	40840
Rev. light switch/Int. luz marcha atrás	08.1987 ->	40846
<b>Celica 2.0 GTi, Cabrio, Coupe</b>		<b>1989-94</b>
3S-GE		115 156
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 2.0 i 16V</b>		<b>1993-99</b>
3S-GE		129 175
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		32640
Fan switch/Termocontacto ventilador		36540
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 2.0 i 16V, Cabrio</b>		<b>1996-99</b>
3S-GE		125 170
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		32640
Fan switch/Termocontacto ventilador		36540
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 2.0 i Turbo 4WD, Coupe</b>		<b>1989-94</b>
3S-GTE		150 204
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	-> 08.1990	24680
Stop light switch/Int. luz stop	09.1990 ->	24720
Temp. sending unit/Termo-Resistencia	-> 10.1992	31330
Temp. sending unit/Termo-Resistencia	11.1992 ->	32640
Fan switch/Termocontacto ventilador	-> 08.1991	36540
Fan switch/Termocontacto ventilador	09.1991 ->	36570
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 2.0 i Turbo 4WD, Coupe</b>		<b>1989-94</b>
3S-GTE		153 208
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop	-> 08.1990	24680
Stop light switch/Int. luz stop	09.1990 ->	24720
Temp. sending unit/Termo-Resistencia	-> 10.1992	31330
Temp. sending unit/Termo-Resistencia	11.1992 ->	32640
Fan switch/Termocontacto ventilador	-> 08.1991	36540
Fan switch/Termocontacto ventilador	09.1991 ->	36570
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 2.0 i Turbo 4WD, Coupe</b>		<b>1994-99</b>
3S-GTE		178 242
Oil press. switch/Int. pres. aceite		12550
Stop light switch/Int. luz stop		24680
Temp. sending unit/Termo-Resistencia		32640
Fan switch/Termocontacto ventilador		36540
Rev. light switch/Int. luz marcha atrás		40846
<b>Celica 2.0 i Turbo 4x4 Coupe</b>		<b>1988-90</b>
3S-GTE		136 185
Stop light switch/Int. luz stop		24720
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3 12V, Compact, Liftback, Wagon</b>		<b>1992-95</b>
2E		53 72
Fan switch/Termocontacto ventilador		36560
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3 i, Compact, S.W.</b>		<b>1989-92</b>
2E-E		55 75
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36170
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3 i, Liftback</b>		<b>1987-92</b>
2E-E/2E		55 75
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36160
Fan switch/Termocontacto ventilador		36170
Fan switch/Termocontacto ventilador		36560
Fan switch/Termocontacto ventilador		40846
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3 XLI 16V, Compact, Wagon</b>		<b>1992-95</b>
4E-FE		65 88
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3 XLI, Compact, Liftback, Wagon</b>		<b>1992-97</b>
4E-FE		65 88
Oil press. switch/Int. pres. aceite		12550
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3 XLI, Compact, Liftback, Wagon</b>		<b>1995-97</b>
4E-FE		55 75
Rev. light switch/Int. luz marcha atrás		40846
<b>Corolla 1.3, Compact, S.W.</b>		<b>1987-89</b>
2E		55 75
Oil press. switch/Int. pres. aceite		11610
Stop light switch/Int. luz stop		24720
Fan switch/Termocontacto ventilador		36170
Fan switch/Termocontacto ventilador		36560
Rev. light switch/Int. luz marcha atrás		40846

**TOYOTA Cont.**

<b>Corolla 1.4 D, Kombi, Sedan</b>	<b>2004 -&gt;</b>
1ND-TV	66 90
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.4 VVT-i, Kombi, Sedan, Verso</b>	<b>2002 -&gt;</b>
4ZZ-FE	71 97
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.4 VVT-i, Kombi, Sedan, Verso</b>	<b>2002-04</b>
4ZZ-FE	71 97
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.4, Compact, Liftback, Wagon</b>	<b>1997-00</b>
4E-FE	63 86
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.4, Compact, Liftback, Wagon</b>	<b>2000-02</b>
4ZZ-FE	71 97
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 16V, Wagon</b>	<b>2000-02</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 Aut., Compact, Liftback, Wagon</b>	<b>1997-00</b>
4A-FE	79 107
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 GLI Liftback</b>	<b>1992-97</b>
4A-FE	84 114
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 GTI, Compact, Liftback</b>	<b>1987-92</b>
4A-GE	85 116
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36120
Rev. light switch/Int. luz marcha atrás	40840
<b>Corolla 1.6 i, 4WD</b>	<b>1989-93</b>
4A-FE	77 105
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36120
Rev. light switch/Int. luz marcha atrás	40840
<b>Corolla 1.6 Si, Compact, Wagon</b>	<b>1992-97</b>
4A-FE	84 114
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 Verso</b>	<b>2004 -&gt;</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 VVT-i Verso</b>	<b>2002-04</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 VVT-i, Kombi, Sedan</b>	<b>2002 -&gt;</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6 XLI, 4x4, S.W.</b>	<b>1988-92</b>
4A-FE	77 105
Fan switch/Termocontacto ventilador	36120
<b>Corolla 1.6, Compact, Liftback</b>	<b>1989-92</b>
4A-FE	77 105
Fan switch/Termocontacto ventilador	36120
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6, Compact, Liftback</b>	<b>2000-02</b>
3ZZ-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6, Compact, Liftback, S.W.</b>	<b>1987-92</b>
4A-F	66 90
Stop light switch/Int. luz stop	24720
Fan switch/Termocontacto ventilador	36120
Fan switch/Termocontacto ventilador	36560
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.6, Compact, Liftback, Wagon</b>	<b>1997-00</b>
4A-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	32650
Fan switch/Termocontacto ventilador	36710
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 16V 4WD Wagon</b>	<b>1995-97</b>
7A-FE	81 110
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 AWD Wagon</b>	<b>1997-02</b>
7A-FE	81 110
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 D, Compact, Liftback, S.W.</b>	<b>1989-93</b>
1C	49 67
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40846

**TOYOTA Cont.**

<b>Corolla 1.8 D, Compact, Liftback, S.W.</b>	<b>1987-93</b>
1C	47 64
Stop light switch/Int. luz stop	24720
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 GT, Compact, Liftback</b>	<b>1992-95</b>
7A-FE	86 117
Oil press. switch/Int. pres. aceite	12550
Fan switch/Termocontacto ventilador	36160
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 GT, Compact, Liftback</b>	<b>1992-95</b>
7A-FE	86 117
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 Verso</b>	<b>2004 -&gt;</b>
1ZZ-FE	95 129
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 VVT-i Verso</b>	<b>2002-04</b>
1ZZ-FE	99 135
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 VVTL-i TS</b>	<b>2002 -&gt;</b>
2ZZ-GE	141 192
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.8 VVTL-i TS</b>	<b>2005 -&gt;</b>
2ZZ-GE	165 224
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 1.9 D, Compact, Liftback, Wagon</b>	<b>2000-02</b>
1WZ	51 69
Oil press. switch/Int. pres. aceite	12640
Stop light switch/Int. luz stop	24680
Fan switch/Termocontacto ventilador	36540
Rev. light switch/Int. luz marcha atrás	40491
<b>Corolla 2.0 D, Compact, Liftback, Wagon</b>	<b>1992-97</b>
2C	53 72
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.0 D, Compact, Liftback, Wagon</b>	<b>1997-00</b>
2C-E	53 72
Oil press. switch/Int. pres. aceite	12240
Oil press. switch/Int. pres. aceite	04.1998 -> 0,30 bar
Stop light switch/Int. luz stop	24680
Temp. sending unit/Termo-Resistencia	31330
Fan switch/Termocontacto ventilador	36540
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.0 D-4D</b>	<b>2002 -&gt;</b>
1CD-FTV	81 110
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.0 D-4D Verso</b>	<b>2002-04</b>
1CD-FTV	66 90
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.0 D-4D, Compact, Kombi, Liftback, Sedan, Wagon</b>	<b>2000-02</b>
1CD-FTV	66 90
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.0 D-4D, Kombi, Sedan</b>	<b>2002 -&gt;</b>
1CD-FTV	66 90
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.0 D-4D, Kombi, Sedan, Verso</b>	<b>2003 -&gt;</b>
1CD-FTV	85 116
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.2 D-4D Verso</b>	<b>2005 -&gt;</b>
2AD-FHV	130 177
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Corolla 2.2 D-4D Verso</b>	<b>2005 -&gt;</b>
2AD-FTV	100 136
Oil press. switch/Int. pres. aceite	12550
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace II 1.8, Wagon, Furgón</b>	<b>1983-89</b>
2Y	58 79
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40840
<b>Hiace II 2.0</b>	<b>1985-89</b>
3Y	65 88
Oil press. switch/Int. pres. aceite	11610
Rev. light switch/Int. luz marcha atrás	40840
<b>Hiace III 2.0</b>	<b>1989-95</b>
1RZ	74 101
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	05.1992 -> 0,30 bar
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace III 2.4 D</b>	<b>1989-95</b>
2L	55 75
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace III 2.4 D</b>	<b>1993-95</b>
2L	57 78
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace III 2.4 D 4WD</b>	<b>1989-95</b>
2L	55 75
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace III 2.4, 4WD</b>	<b>1989-95</b>
2RZ-E	88 120
Oil press. switch/Int. pres. aceite	11610
Oil press. switch/Int. pres. aceite	05.1992 -> 0,30 bar
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace IV 2.4 D</b>	<b>1995 -&gt;</b>
2L	58 79
Rev. light switch/Int. luz marcha atrás	40846
<b>Hiace IV 2.4 D Wagon</b>	<b>1999 -&gt;</b>
2L	55 75
Rev. light switch/Int. luz marcha atrás	40846

**TOYOTA Cont.**

<b>Hiace IV 2.4 TD, 4WD</b>	1995 ->	
2L-T	66 90	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hiace IV 2.4, 4WD</b>	1995-98	
2RZ-E	85 115	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hiace IV 2.5 D-4D</b>	2001 ->	
2KD-FTV	65 88	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hiace IV 2.5 D-4D, 4WD</b>	2001 ->	
2KD-FTV	75 102	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hiace IV 2.7, 4WD</b>	1998-01	
3RZ-FE	105 143	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hiace IV 2.7, 4WD</b>	2001 ->	
3RZ-FE	106 144	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hilux 1.8 Pick-up</b>	1988-94	
2Y	61 83	
Oil press. switch/Int. pres. aceite	11610	-> 08.1992
Oil press. switch/Int. pres. aceite	12550	
Stop light switch/Int. luz stop	24680	-> 08.1990
Stop light switch/Int. luz stop	24720	09.1990 ->
Temp. sending unit/Termo-Resistencia	31330	-> 08.1992
Temp. sending unit/Termo-Resistencia	32640	09.1992 ->
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux 2.2 4WD Pick-up</b>	1987-89	
4Y	69 94	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24680	
Temp. sending unit/Termo-Resistencia	31330	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux 2.4 D Pick-up</b>	1998-02	
2L	55 75	
Oil press. switch/Int. pres. aceite	12240	0.30 bar
Stop light switch/Int. luz stop	24680	
On clutch pedal/Int. pedal embrague	24720	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux 2.4 i 4WD Pick-up</b>	1989 ->	
22RE	84 114	
Oil press. switch/Int. pres. aceite	12550	
Stop light switch/Int. luz stop	24680	
On clutch pedal/Int. pedal embrague	24720	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32650	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux 2.4 i 4WD Pick-up</b>	1989 ->	
22R	84 114	
Oil press. switch/Int. pres. aceite	12550	
Stop light switch/Int. luz stop	24680	
Stop light switch/Int. luz stop	24720	
Temp. sending unit/Termo-Resistencia	32650	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux 2.4 i 4WD Pick-up</b>	1997 ->	
2RZ-FE	103 140	
Oil press. switch/Int. pres. aceite	12550	
Stop light switch/Int. luz stop	24680	
Temp. sending unit/Termo-Resistencia	32650	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux 2.5 D Pick-up 4x4</b>	2005 ->	
2KD-FTV	75 102	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hilux 2.5 D-4D Pick-up</b>	2006 ->	
2KD-FTV	75 102	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Hilux II 2.4 D Pick-up</b>	1992 ->	
2L	59 80	
Oil press. switch/Int. pres. aceite	12240	0.30 bar
Stop light switch/Int. luz stop	24680	
On clutch pedal/Int. pedal embrague	24720	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux II 2.4 D Pick-up, 4WD</b>	1994 ->	
2L	58 79	
Oil press. switch/Int. pres. aceite	12240	0.30 bar
Stop light switch/Int. luz stop	24680	
On clutch pedal/Int. pedal embrague	24720	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux II 2.4 D Pick-up, 4WD</b>	1988 ->	
2L	61 83	
Oil press. switch/Int. pres. aceite	12240	0.30 bar
Stop light switch/Int. luz stop	24680	
On clutch pedal/Int. pedal embrague	24720	Cruise control/Control veloc.
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable

**TOYOTA Cont.**

<b>Hilux II 2.4 TD Pick-up 4WD</b>	1998-02	
2L-T	66 90	
Oil press. switch/Int. pres. aceite	12240	0.30 bar
Stop light switch/Int. luz stop	24680	
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Hilux II 2.5 D-4D 4WD Pick-up</b>	2001 ->	
2KD-FTV	75 102	
Rev. light switch/Int. luz marcha atrás	40840	
<b>Hilux II 2.5 D-4D Pick-up</b>	2001 ->	
2KD-FTV	65 88	
Rev. light switch/Int. luz marcha atrás	40840	
<b>IQ</b>	2009 ->	
1ND-TV	66 90	
Oil press. switch/Int. pres. aceite	12550	
<b>IQ 1.0</b>	2009 ->	
1KR-FE	50 68	
Oil press. switch/Int. pres. aceite	12550	
<b>Land Cruiser 2.4</b>	1984-93	
22R	77 105	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	-> 01.1990
Rev. light switch/Int. luz marcha atrás	40846	01.1990 ->
<b>Land Cruiser 2.4</b>	1984-93	
22R	81 110	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	-> 01.1990
Rev. light switch/Int. luz marcha atrás	40846	01.1990 ->
<b>Land Cruiser 2.4</b>	1988-96	
22RE	84 114	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	-> 01.1990
Rev. light switch/Int. luz marcha atrás	40846	01.1990 ->
<b>Land Cruiser 2.4 TD</b>	1985-90	
2L-T	63 86	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	-> 01.1990
Rev. light switch/Int. luz marcha atrás	40846	01.1990 ->
<b>Land Cruiser 2.4 TD</b>	1990-93	
2L-T	66 90	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Land Cruiser 2.4 TD</b>	1990-93	
2L-T	66 90	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Land Cruiser 2.4 TD Hardtop</b>	1990-96	
2L-T	66 90	
Stop light switch/Int. luz stop	24680	-> 08.1990
Stop light switch/Int. luz stop	24720	09.1990 ->
Temp. sending unit/Termo-Resistencia	31330	-> 08.1992
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40840	
Rev. light switch/Int. luz marcha atrás	40846	Without/Sin cable
<b>Land Cruiser 3.0 D-4D</b>	2004 ->	
1KD-FTV	122 166	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Land Cruiser 3.0 D-4D, 90</b>	2000 ->	
1KD-FTV	120 163	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Land Cruiser 3.0 TD 90</b>	1996 ->	
1KZ-TE	92 125	
Oil press. switch/Int. pres. aceite	12550	
Stop light switch/Int. luz stop	24680	
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Land Cruiser 3.0 TD, Hardtop</b>	1993-96	
1KZ-T	92 125	
Oil press. switch/Int. pres. aceite	11610	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Land Cruiser 3.4 D</b>	1984-96	
3B	70 95	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24720	
Rev. light switch/Int. luz marcha atrás	40840	
<b>Land Cruiser 3.4 i 24V 90</b>	1996 ->	
5VZ-FE	131 178	
Oil press. switch/Int. pres. aceite	12550	
Stop light switch/Int. luz stop	24680	
Stop light switch/Int. luz stop	24690	With/Con cruise control
Temp. sending unit/Termo-Resistencia	32640	
Rev. light switch/Int. luz marcha atrás	40846	
<b>Land Cruiser 4.0</b>	1987-89	
3F-E	115 156	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24330	
Rev. light switch/Int. luz marcha atrás	40840	
<b>Land Cruiser 4.0</b>	1990-92	
3F-E	115 156	
Stop light switch/Int. luz stop	24720	
<b>Land Cruiser 4.0</b>	2003 ->	
1GR-FE	183 249	
Oil press. switch/Int. pres. aceite	12550	
<b>Land Cruiser 4.0 Turbo-D</b>	1985-89	
12HT	100 136	
Oil press. switch/Int. pres. aceite	11610	
Stop light switch/Int. luz stop	24330	
Rev. light switch/Int. luz marcha atrás	40840	

**TOYOTA Cont.**

<b>Land Cruiser 4.2 D 80</b>		<b>1990-97</b>
1H-Z		99 135
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>40845</b>
<b>Land Cruiser 4.2 TD</b>		<b>1990 -&gt;</b>
1H-Z		96 131
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
<b>Land Cruiser 4.2 TD 100</b>		<b>1998 -&gt;</b>
1HD-FTE		150 204
Stop light switch/Int. luz stop	With/Con cruise control	<b>24690</b>
Temp. sending unit/Termo-Resistencia		<b>32640</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>40845</b>
<b>Land Cruiser 4.2 TD 24V 80</b>		<b>1995-97</b>
1HD-FT		125 170
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>32640</b>
<b>Land Cruiser 4.2 TD 80</b>		<b>1990-97</b>
1HD-T		123 167
Stop light switch/Int. luz stop	-> 09.1990	<b>24680</b>
Stop light switch/Int. luz stop	09.1990 ->	<b>24720</b>
Temp. sending unit/Termo-Resistencia	-> 08.1992	<b>31330</b>
Temp. sending unit/Termo-Resistencia	09.1992 ->	<b>32640</b>
Rev. light switch/Int. luz marcha atrás		<b>40845</b>
<b>Land Cruiser 4.2 TD 80</b>		<b>1992-97</b>
1HD-T		118 160
Stop light switch/Int. luz stop		<b>24720</b>
Temp. sending unit/Termo-Resistencia		<b>32640</b>
Rev. light switch/Int. luz marcha atrás		<b>40845</b>
<b>Land Cruiser 4.7 100</b>		<b>1998 -&gt;</b>
2UZ-FE		173 235
Stop light switch/Int. luz stop		<b>24690</b>
Temp. sending unit/Termo-Resistencia		<b>32650</b>
<b>Land Cruiser 4.7 100</b>		<b>2002 -&gt;</b>
2UZ-FE		175 238
Stop light switch/Int. luz stop		<b>24690</b>
Temp. sending unit/Termo-Resistencia		<b>32650</b>
<b>Liteace 1.5</b>		<b>1985-91</b>
5K		51 69
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40846</b>
<b>Liteace 1.5</b>		<b>1989-95</b>
5K		52 71
Oil press. switch/Int. pres. aceite	-> 08.1993	<b>11610</b>
Oil press. switch/Int. pres. aceite	09.1993 ->	<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40846</b>
<b>Liteace 2.0 D</b>		<b>1988-92</b>
2C		53 72
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Liteace 2.0 D</b>		<b>1992-94</b>
2C		53 72
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Liteace 2.0 D</b>		<b>1992-94</b>
2C		51 69
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Liteace 2.2</b>		<b>1992-95</b>
4Y-EC		72 98
Oil press. switch/Int. pres. aceite	-> 09.1993	<b>11610</b>
Oil press. switch/Int. pres. aceite	09.1993 ->	<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Modell F 2.0</b>		<b>1988-90</b>
3Y		66 90
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Modell F 2.2</b>		<b>1987-90</b>
4Y-EC		72 98
Oil press. switch/Int. pres. aceite		<b>11610</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>MR 2 1.6 16V</b>		<b>1984-90</b>
4A-GELC		85 116
Stop light switch/Int. luz stop		<b>24330</b>
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
<b>MR 2 1.6 16V</b>		<b>1984-90</b>
4A-GEL		91 124
Stop light switch/Int. luz stop		<b>24330</b>
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
<b>MR 2 1.8 16V VT-i</b>		<b>2000 -&gt;</b>
1ZZ-FE		103 140
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Rev. light switch/Int. luz marcha atrás	Manual	<b>40845</b>
Rev. light switch/Int. luz marcha atrás	Manual gearbox sequential/Manual secuencial	<b>40846</b>
Rev. light switch/Int. luz marcha atrás		<b>40847</b>
<b>MR 2 2.0 16V</b>		<b>1989-00</b>
3S-GE		115 156
Oil press. switch/Int. pres. aceite	-> 10.1992	<b>11610</b>
Oil press. switch/Int. pres. aceite	11.1992 ->	<b>12550</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>MR 2 2.0 16V</b>		<b>1989-00</b>
3S-GE		129 175
Oil press. switch/Int. pres. aceite	-> 10.1992	<b>11610</b>
Oil press. switch/Int. pres. aceite	11.1992 ->	<b>12550</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>MR 2 2.0 16V</b>		<b>1989-00</b>
3S-GE		125 170
Oil press. switch/Int. pres. aceite	-> 10.1992	<b>11610</b>
Oil press. switch/Int. pres. aceite	11.1992 ->	<b>12550</b>
Stop light switch/Int. luz stop		<b>24720</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>

**TOYOTA Cont.**

<b>Paseo 1.5 16V, Cabrio, Coupe</b>		<b>1995-99</b>
5E-FE		66 90
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Temp. sending unit/Termo-Resistencia	-> 04.1997	<b>31570</b>
Temp. sending unit/Termo-Resistencia	05.1997 ->	<b>32650</b>
Fan switch/Termocontacto ventilador		<b>36160</b>
Fan switch/Termocontacto ventilador		<b>36710</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Picnic 2.0</b>		<b>2001-01</b>
3S-FE		90 122
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Temp. sending unit/Termo-Resistencia		<b>32650</b>
Fan switch/Termocontacto ventilador		<b>36540</b>
<b>Picnic 2.0 16V</b>		<b>1996-01</b>
3S-FE		94 128
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Temp. sending unit/Termo-Resistencia		<b>32650</b>
Fan switch/Termocontacto ventilador		<b>36540</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Picnic 2.2 D</b>		<b>1997-01</b>
3C-TE		66 90
Oil press. switch/Int. pres. aceite	-> 03.1998	<b>12550</b>
Temp. sending unit/Termo-Resistencia		<b>32640</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Previa 2.0 D-4D</b>		<b>2001 -&gt;</b>
1CD-FTV		85 116
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Previa 2.4 16V</b>		<b>2000 -&gt;</b>
2AZ-FE		115 156
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Previa 2.4, 4WD</b>		<b>1990-00</b>
2TZ-FE		97 132
Oil press. switch/Int. pres. aceite	-> 10.1991	<b>11610</b>
Oil press. switch/Int. pres. aceite	11.1991 ->	<b>12550</b>
Stop light switch/Int. luz stop		<b>24720</b>
<b>Prius</b>		<b>2009 -&gt;</b>
2ZR-FXE		73 99
Oil press. switch/Int. pres. aceite		<b>12550</b>
<b>Prius 1.5 Liftback</b>		<b>2003 -&gt;</b>
1NZ-FXE		57 78
Oil press. switch/Int. pres. aceite		<b>12550</b>
<b>Prius 1.5 Sedan</b>		<b>2000-04</b>
1NZ-FXE		53 72
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop	Without/Sin cruise control	<b>24680</b>
Stop light switch/Int. luz stop	With/Con cruise control	<b>24690</b>
<b>Rav 4 I 2.0 16V, Cabrio</b>		<b>1994-00</b>
3S-FE		94 129
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Temp. sending unit/Termo-Resistencia	-> 08.1997	<b>32640</b>
Temp. sending unit/Termo-Resistencia	09.1997 ->	<b>32650</b>
Fan switch/Termocontacto ventilador		<b>36540</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 II 1.8 VVT-i</b>		<b>2001 -&gt;</b>
1ZZ-FE		92 125
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 II 2.0 D-4D 4WD</b>		<b>2001 -&gt;</b>
1CD-FTV		85 116
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 II 2.0 VVT-i 4WD</b>		<b>2000 -&gt;</b>
1AZ-FE		110 150
Oil press. switch/Int. pres. aceite		<b>12550</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 III 2.0 VVT-i</b>		<b>2006 -&gt;</b>
1AZ-FE		112 152
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 III 2.0, FWD</b>		<b>2008 -&gt;</b>
3ZR-FAE		116 158
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 III 2.2 D-4D</b>		<b>2006 -&gt;</b>
2AD-FTV		100 136
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Rav 4 III 2.2 D-CAT</b>		<b>2006 -&gt;</b>
2AD-FHV		130 177
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Starlet 1.0</b>		<b>1984-89</b>
1E-L		40 54
Fan switch/Termocontacto ventilador		<b>36160</b>
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
<b>Starlet 1.0</b>		<b>1989-92</b>
1E		40 54
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>36160</b>
Fan switch/Termocontacto ventilador	-> 01.1992	<b>36170</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Starlet 1.3</b>		<b>1984-89</b>
2E-LC		55 75
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
<b>Starlet 1.3</b>		<b>1996-99</b>
4E-FE		55 75
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>

**TOYOTA Cont.**

<b>Starlet 1.3 12V</b>		<b>1989-96</b>
2E-E		55 75
Oil press. switch/Int. pres. aceite	-> 11.1992	<b>11610</b>
Oil press. switch/Int. pres. aceite	12.1992 ->	<b>12550</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador		<b>36160</b>
Fan switch/Termocontacto ventilador	-> 01.1992	<b>36170</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Starlet 1.3 12V</b>		<b>1989-92</b>
2E-E/2E		55 75
Oil press. switch/Int. pres. aceite		<b>11610</b>
Stop light switch/Int. luz stop		<b>24720</b>
Fan switch/Termocontacto ventilador	-> 01.1992	<b>36170</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Starlet 1.5 D</b>		<b>1986-89</b>
1N		40 54
Rev. light switch/Int. luz marcha atrás		<b>40840</b>
<b>Starlet 1.5 D</b>		<b>1989-96</b>
1N		40 54
Oil press. switch/Int. pres. aceite		<b>11610</b>
Fan switch/Termocontacto ventilador	-> 01.1992	<b>36170</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Supra 3.0 i Bi-Turbo</b>		<b>1993-98</b>
2JZ-GTE		243 330
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40845</b>
<b>Urban Cruiser 1.33</b>		<b>2009 -&gt;</b>
1NR-FE		74 101
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
Rev. light switch/Int. luz marcha atrás		<b>41302</b>
<b>Urban Cruiser 1.4 D-4D, 4x4</b>		<b>2009 -&gt;</b>
1ND-TV		66 90
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.0 16V</b>		<b>1999 -&gt;</b>
1SZ-FE		50 68
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36711</b>
Rev. light switch/Int. luz marcha atrás		<b>40845</b>
<b>Yaris 1.0 16V</b>		<b>2003 -&gt;</b>
1SZ-FE		48 65
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36711</b>
Rev. light switch/Int. luz marcha atrás		<b>40845</b>
<b>Yaris 1.0 VVT-i</b>		<b>2006 -&gt;</b>
1KR-FE		51 69
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás	Manual sequential/Secuencial	<b>40847</b>
Rev. light switch/Int. luz marcha atrás		<b>40848</b>
<b>Yaris 1.3</b>		<b>2002 -&gt;</b>
2SZ-FE		64 87
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.3 Verso</b>		<b>1999 -&gt;</b>
2NZ-FE		62 84
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.3 VVT-i</b>		<b>2006 -&gt;</b>
2SZ-FE		64 87
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás	Manual sequential/Secuencial	<b>40847</b>
Rev. light switch/Int. luz marcha atrás		<b>40848</b>
<b>Yaris 1.3, Verso</b>		<b>1999 -&gt;</b>
2NZ-FE		63 86
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.4 D-4D, Verso</b>		<b>2001 -&gt;</b>
1ND-TV		55 75
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.5 TS</b>		<b>2003 -&gt;</b>
1NZ-FE		77 105
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.5 Verso</b>		<b>2000 -&gt;</b>
1NZ-FE		78 106
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.5 Verso</b>		<b>2003 -&gt;</b>
1NZ-FE		77 105
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.5 VVT-i TS</b>		<b>2001 -&gt;</b>
1NZ-FE		78 106
Oil press. switch/Int. pres. aceite		<b>12550</b>
Stop light switch/Int. luz stop		<b>24680</b>
Fan switch/Termocontacto ventilador		<b>36545</b>
Rev. light switch/Int. luz marcha atrás		<b>40846</b>
<b>Yaris 1.8 VVTi</b>		<b>2007 -&gt;</b>
2ZR-FE		98 133
Rev. light switch/Int. luz marcha atrás	Without/Sin cable	<b>40846</b>
Rev. light switch/Int. luz marcha atrás		<b>40848</b>

**TOYOTA Cont.**

<b>Yaris D-4D</b>		<b>2006 -&gt;</b>
1ND-TV		66 90
Oil press. switch/Int. pres. aceite		<b>12550</b>
Rev. light switch/Int. luz marcha atrás	Manual sequential/Secuencial	<b>40846</b>
Rev. light switch/Int. luz marcha atrás	-> 02.2009, Manual sequential/Secuencial	<b>40847</b>
Rev. light switch/Int. luz marcha atrás		<b>40848</b>
Rev. light switch/Int. luz marcha atrás	02.2009 ->, Manual sequential/Secuencial	<b>41302</b>

**VAUXHALL**

<b>Agila 1.0 12V</b>		<b>2000-05</b>
Z 10 XE		43 58
Oil press. switch/Int. pres. aceite		<b>12436</b>
Oil press. switch/Int. pres. aceite	0.55 bar	<b>12439</b>
Rev. light switch/Int. luz marcha atrás		<b>40835</b>
<b>Agila 1.0 12V</b>		<b>2000-06</b>
Z 10 XEP		44 60
Oil press. switch/Int. pres. aceite		<b>12439</b>
Rev. light switch/Int. luz marcha atrás		<b>40835</b>
<b>Agila 1.2 16V</b>		<b>2000 -&gt;</b>
Z 12 XE		55 75
Oil press. switch/Int. pres. aceite		<b>12439</b>
Rev. light switch/Int. luz marcha atrás		<b>40835</b>
<b>Agila 1.2 16V Twinport</b>		<b>2004-06</b>
Z 12 XEP		59 80
Oil press. switch/Int. pres. aceite		<b>12439</b>
Rev. light switch/Int. luz marcha atrás		<b>40835</b>
<b>Arena 2.5 D, Van</b>		<b>1998-01</b>
S8U 780/S8U 782/S8U 758		55 75
Rev. light switch/Int. luz marcha atrás		<b>41080</b>
<b>Astra Mk II 1.2, Estate, CC</b>		<b>1984-91</b>
12 S		44 60
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.3, CC, Estate, Belmont</b>		<b>1984-91</b>
13 S		55 75
Stop light switch/Int. luz stop		<b>24310</b>
<b>Astra Mk II 1.4 i CC</b>		<b>1990-91</b>
C 14 NZ		44 60
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.4 i, CC, Belmont</b>		<b>1990-91</b>
C 14 NZ		44 60
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	<b>38235</b>
<b>Astra Mk II 1.4 S CC</b>		<b>1990-91</b>
14 NV		55 75
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24310</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	<b>38235</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.6 Belmont</b>		<b>1985-91</b>
16 S/16 SH		66 90
Stop light switch/Int. luz stop		<b>24310</b>
<b>Astra Mk II 1.6 D, Belmont, CC, Estate</b>		<b>1984-91</b>
16 DA		40 54
Stop light switch/Int. luz stop		<b>24310</b>
<b>Astra Mk II 1.6 i Cabrio</b>		<b>1991-93</b>
E 16 NZ		55 75
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.6 i Kat Cabrio</b>		<b>1987-93</b>
C 16 NZ/C 16 LZ		55 75
Oil press. switch/Int. pres. aceite		<b>12430</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.6, CC, Estate, Cabrio</b>		<b>1984-91</b>
16 SV		60 82
Oil press. switch/Int. pres. aceite		<b>12430</b>
Oil press. switch/Int. pres. aceite		<b>12500</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.7 D CC</b>		<b>1989-91</b>
17 DR		42 57
Stop light switch/Int. luz stop		<b>24310</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	<b>38235</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.7 D, Estate, Belmont</b>		<b>1989-91</b>
17 D		42 57
Stop light switch/Int. luz stop		<b>24310</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	<b>38235</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.8 Belmont</b>		<b>1986-90</b>
18 SE		82 111
Oil press. switch/Int. pres. aceite		<b>12430</b>
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes		<b>14560</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.8 GTE CC</b>		<b>1984-91</b>
18 SE/18 E		82 112
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes		<b>14560</b>
Stop light switch/Int. luz stop		<b>24310</b>
<b>Astra Mk II 1.8 i Belmont</b>		<b>1985-91</b>
18 SE/18 E		85 115
Oil press. switch/Int. pres. aceite		<b>12430</b>
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes		<b>14560</b>
Stop light switch/Int. luz stop		<b>24310</b>
Rev. light switch/Int. luz marcha atrás		<b>40510</b>
<b>Astra Mk II 1.8 i Estate</b>		<b>1990-91</b>
18 E		83 112
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes		<b>14560</b>
Stop light switch/Int. luz stop		<b>24310</b>



**VAUXHALL Cont.**

<b>Astra Mk II 2.0 GTE 16V CC</b>	1988-91
20 XE	115 156
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk II 2.0 GTE CC</b>	1986-91
20 SEH	95 129
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk II 2.0 i Cabrio</b>	1987-91
20 NE	85 115
Stop light switch/Int. luz stop	24310
<b>Astra Mk II 2.0 i Kat Cabrio</b>	1991-93
C 20 NE	85 115
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.4 i 16V, CC, Cabrio, Estate</b>	1996-98
X 14 XE	66 90
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.4 i, CC, Cabrio, Estate</b>	1992-98
C 14 SE	60 82
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.4 i, CC, Estate, Van</b>	1991-98
C 14 NZ	44 60
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i</b>	1992-98
C 16 NZ/X 16 SZR	55 75
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i 16V, CC, Estate</b>	1994-98
X 16 XEL	74 101
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i Cabrio</b>	1996-01
X 16 SZR	55 75
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i Van</b>	1991-98
C 16 NZ	55 75
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i, CC, Estate</b>	1991-98
C 16 NZ/E 16 NZ	55 75
Oil press. switch/Int. pres. aceite	12430
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i, CC, Estate</b>	1992-98
C 16 SE	74 100
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 i, CC, Estate, Van</b>	1993-98
X 16 SZ	52 71
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.6 Si Estate</b>	1991-94
C 16 SE	74 100
Stop light switch/Int. luz stop	24310
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.7 D, CC, Estate</b>	1991-98
17 D	42 57
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.7 D, CC, Estate, Van</b>	1992-98
17 DR	44 60
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.7 TD, CC, Estate</b>	1991-98
17 DT (TC4EE1)	60 82
Stop light switch/Int. luz stop	24310
Temp. s. warning lamp/Termocont. temp.	35790
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.7 TD, CC, Estate, Van</b>	1994-98
X 17 DTL	50 68
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk III 1.8 16V Cabrio</b>	1994-01
X 18 XE/C 18 XEL	85 116
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	40510

**VAUXHALL Cont.**

<b>Astra Mk III 1.8 i 16V, CC, Estate</b>	1993-98
C 18 XE	92 125
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk III 1.8 i 16V, CC, Estate</b>	1994-98
C 18 XEL	85 115
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk III 1.8 i, CC, Estate</b>	1991-98
C 18 NZ	66 90
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk III 2.0 i 16V CC</b>	1991-98
C 20 XE	110 150
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk III 2.0 i 16V, CC, Estate</b>	1995-98
X 20 XEV	100 136
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk III 2.0 i, CC, Estate</b>	1991-98
C 20 NE	85 115
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.2 16V, CC, Estate</b>	1998-00
X 12 XE	48 65
Oil press. switch/Int. pres. aceite	12439
<b>Astra Mk IV 1.2 16V, CC, Estate</b>	2000 ->
Z 12 XE	55 75
Oil press. switch/Int. pres. aceite	12439
<b>Astra Mk IV 1.4 16V, CC, Estate</b>	1998 ->
X 14 XE/Z 14 XE	66 90
Oil press. switch/Int. pres. aceite	12439
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.6 16V, CC, Estate</b>	1998 ->
Z 16 XE/X 16 XEL	74 101
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.6 Dualfuel, CC, Estate</b>	2001 ->
Z 16 XE	63 101
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.6, CC, Estate, Van</b>	1998-00
X 16 SZR	55 75
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.6, CC, Estate, Van</b>	2000 ->
Z 16 SE	62 84
Rev. light switch/Int. luz marcha atrás	40510
<b>Astra Mk IV 1.7 CDTI 16V, CC, Estate</b>	2003 ->
Z 17 DTL	59 80
Rev. light switch/Int. luz marcha atrás	40830
<b>Astra Mk IV 1.7 CDTI, Van</b>	2004 ->
Z 17 DTL	59 80
Rev. light switch/Int. luz marcha atrás	40505
<b>Astra Mk IV 1.7 DTI 16V, CC, Estate</b>	2000 ->
Y 17 DT	55 75
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.7 TD, CC, Estate, Van</b>	1998-00
X 17 DTL	50 68
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.8 16V Dualfuel</b>	2002 ->
Z 18 XE	87 118
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.8 16V, CC, Coupe, Estate</b>	2000 ->
Z 18 XE	92 125
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 1.8 16V, CC, Coupe, Estate</b>	1998-00
X 18 XE1	85 116
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 2.0 16V Turbo Coupe</b>	2000 ->
Z 20 LET	140 190
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235
<b>Astra Mk IV 2.0 16V, CC, Estate</b>	1998 ->
X 20 XEV	100 136
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.
Rev. light switch/Int. luz marcha atrás	38235

**VAUXHALL Cont.**

<b>Astra Mk IV 2.0 DI Van</b>		1998 ->
X 20 DTL		60 82
Stop light switch/Int. luz stop		24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Astra Mk IV 2.0 DI, CC, Estate</b>		1998 ->
X 20 DTL/Y 20 DTL		60 82
Stop light switch/Int. luz stop		24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Astra Mk IV 2.0 DTI 16V, CC, Estate</b>		1999 ->
Y 20 DTH/X 20 DTH		74 101
Stop light switch/Int. luz stop		24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Astra Mk IV 2.0 DTI Van</b>		2004 ->
Y 20 DTH		74 100
Stop light switch/Int. luz stop		24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Astra Mk IV 2.0 SRI Turbo CC</b>		2002 ->
Z 20 LET		141 192
Stop light switch/Int. luz stop		24310
Rev. light switch/Int. luz marcha atrás		40510
<b>Astra Mk IV 2.2 16V, CC, Coupe, Estate</b>		2000 ->
Z 22 SE		108 147
Stop light switch/Int. luz stop		24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Astra MK V 1.3 CDTI, CC, Estate, Sport Hatch</b>		2005-09
Z 13 DTH		66 90
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F17/F23/F40/M32	40830
<b>Astra MK V 1.4 i 16V, Estate, Sport Hatch</b>		2004-09
Z 14 XEP		66 90
Oil press. switch/Int. pres. aceite		12439
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.4, CC, Estate</b>		2004-09
Z 14 XEP		66 90
Oil press. switch/Int. pres. aceite		12439
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.6 CC</b>		2006-09
Z 16 XER		85 115
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.6 i 16V, Estate, Sport Hatch</b>		2006-09
Z 16 XER		85 115
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.6, CC, Estate</b>		2004-09
Z 16 XEP		77 105
Oil press. switch/Int. pres. aceite	0.30 bar	12437
Oil press. switch/Int. pres. aceite		12439
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40510
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.6, Estate, Sport Hatch</b>		2004-09
Z 16 LET		132 179
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.7 CDTi 16V Estate</b>		2004-09
Z 17 DTJ/A 17 DTJ		81 110
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.7 CDTi 16V Sport Hatch</b>		2007 ->
A 17 DTJ		81 110
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.7 CDTi CC</b>		2004-09
Z 17 DTJ/A 17 DTJ		81 110
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.7 CDTi, CC</b>		2004-09
Z 17 DTL		59 80
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.7 CDTi, CC, Estate</b>		2004-09
Z 17 DTH		74 100
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.7 TD, CC, Estate</b>		2004-09
		79 108
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.8 CC</b>		2004-09
Z 18 XER/A 18 XER		103 140
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.8 CC</b>		2004-09
		101 138
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.8 i 16V, Estate</b>		2004-09
Z 18 XER/A 18 XER		103 140
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 1.8, CC, Estate</b>		2004-09
Z 18 XE		92 125
Oil press. switch/Int. pres. aceite		12640
Stop light switch/Int. luz stop		24310
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40510
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.9 CDTi 16V CC</b>		2004-09
Z 19 DTJ		88 120
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.9 CDTi, CC, Estate, Sport Hatch</b>		2004 ->
Z 19 DTH		110 150
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830

**VAUXHALL Cont.**

<b>Astra MK V 1.9 CDTi, CC, Estate, Sport Hatch</b>		2004 ->
Z 19 DT		88 120
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 1.9 CDTi, Estate</b>		2005 ->
Z 19 DTL		74 101
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 2.0 i 16V Turbo Sport Hatch</b>		2009 ->
Z 20 LEH		176 240
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
<b>Astra MK V 2.0 Turbo CC</b>		2004-09
Z 20 LEH		177 240
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 2.0 Turbo, CC, Estate</b>		2004-09
Z 20 LER		147 200
Stop light switch/Int. luz stop		24310
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Astra MK V 2.0 Turbo, CC, Estate, Sport Hatch</b>		2004-09
Z 20 LEL		125 170
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505
Rev. light switch/Int. luz marcha atrás		40830
<b>Calibra 2.0 i 16V, 4x4</b>		1990-97
X 20 XEV		100 136
Stop light switch/Int. luz stop		24500
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Calibra 2.0 i 16V, 4x4</b>		1990-94
C 20 XE		110 150
Stop light switch/Int. luz stop		24500
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Calibra 2.0 i Turbo 4x4</b>		1992-97
C 20 LET		150 204
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Calibra 2.0 i, 4x4</b>		1990-97
C 20 NE		85 115
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24500
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510
<b>Calibra 2.5 i V6</b>		1993-97
X 25 XE/C 25 XE		125 170
Stop light switch/Int. luz stop		24500
Fan switch/Termocontacto ventilador	Climat	38225
Rev. light switch/Int. luz marcha atrás		40510
<b>Carlton Mk III 1.8 i, Estate</b>		1986-94
18 SEH		85 115
Oil press. switch/Int. pres. aceite		12430
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 1.8 S, Estate</b>		1986-94
18 SV		66 90
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.0</b>		1990-94
C 20 NEJ		73 99
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.0 i, Estate</b>		1986-94
20 SE		90 122
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.0, Estate</b>		1990-94
C 20 NEF		74 100
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.0, Estate</b>		1986-94
C 20 NE		85 115
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.3 D, Estate</b>		1986-94
23 YD		54 73
Oil press. switch/Int. pres. aceite		12480
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes		14560
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.3 TD Inter., Estate</b>		1988-94
23 DTR		74 100
Oil press. switch/Int. pres. aceite		12480
Oil press. transmitter/Transm. pres. aceite		14010
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes		14560
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 2.6 i, Estate</b>		1990-94
C 26 NE		110 150
Oil press. transmitter/Transm. pres. aceite		14010
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 3.0 24V Estate</b>		1989-94
C 30 SEJ		147 200
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 3.0 3000 24V</b>		1989-94
C 30 SE		150 204
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 3.0, Kat, Estate</b>		1987-94
C 30 NE		130 177
Rev. light switch/Int. luz marcha atrás		41170
<b>Carlton Mk III 3.6 24V Lotus</b>		1990-92
C 36 GET		277 377
Oil press. transmitter/Transm. pres. aceite		14010
<b>Cavalier Mk III 1.4 S, CC</b>		1988-95
14 NV		55 75
Oil press. switch/Int. pres. aceite		12430
Stop light switch/Int. luz stop		24500
Rev. light switch/Int. luz marcha atrás		40510
<b>Cavalier Mk III 1.6 i, CC</b>		1993-95
X 16 SZ		52 71
Oil press. switch/Int. pres. aceite		12500
Stop light switch/Int. luz stop		24500
Fan switch/Termocontacto ventilador	Climat	38225
Fan switch/Termocontacto ventilador	WQ, With/con A.A.	38235
Rev. light switch/Int. luz marcha atrás		40510

**VAUXHALL Cont.**

<b>Cavalier Mk III 1.6 i, CC</b>	<b>1988-95</b>
E 16 NZ	55 75
Oil press. switch/Int. pres. aceite	<b>12500</b>
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes	<b>14560</b>
Stop light switch/Int. luz stop	<b>24500</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 1.6, CC</b>	<b>1988-93</b>
16 SV	60 82
Oil press. switch/Int. pres. aceite	<b>12500</b>
Stop light switch/Int. luz stop	<b>24500</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 1.7 D, CC</b>	<b>1988-92</b>
17 D	42 57
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>38070</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 1.7 D, CC</b>	<b>1992-95</b>
17 DR	44 60
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc. <b>38070</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 1.7 TD, CC</b>	<b>1988-95</b>
17 DT (TC4EE1)	60 82
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 1.8 i Kat, CC</b>	<b>1990-95</b>
C 18 NZ	66 90
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 1.8, CC</b>	<b>1988-92</b>
C 18 NZ/18 SV	66 90
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 i 16V, CC, 4x4</b>	<b>1988-95</b>
C 20 XE	110 150
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 i 4x4, CC</b>	<b>1988-92</b>
20 SEH	95 129
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes	<b>14560</b>
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 i Kat, CC</b>	<b>1990-95</b>
C 20 NE	85 115
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 i Turbo 4x4</b>	<b>1992-94</b>
C 20 LET	150 204
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 i, CC, 4x4</b>	<b>1988-90</b>
20 NE	85 115
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes	<b>14560</b>
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 SRI 16V, CC</b>	<b>1993-95</b>
X 20 XEV	100 136
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.0 SRI, CC</b>	<b>1988-92</b>
20 SEH	95 129
Oil press. transmitter/Transm. pres. aceite 2 terminals/bornes	<b>14560</b>
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Cavalier Mk III 2.5 V6, CC</b>	<b>1993-95</b>
C 25 XE	125 170
Stop light switch/Int. luz stop	<b>24500</b>
Fan switch/Termocontacto ventilador	Climat <b>38225</b>
Fan switch/Termocontacto ventilador	WQ, With/con A.A. <b>38235</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Combo 1.4</b>	<b>1994-01</b>
C 14 NZ	44 60
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Combo 1.4</b>	<b>1994-01</b>
C 14 SE	60 82
Oil press. switch/Int. pres. aceite	<b>12430</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Combo Mk I 1.7 D</b>	<b>1994-01</b>
17 D (4EE1)/X 17 D (4EE1)	44 60
Temp. s. warning lamp/Termocont. temp.	<b>35790</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Combo Mk II 1.7 DI 16V</b>	<b>2001 -&gt;</b>
Y 17 DTL	48 65
Rev. light switch/Int. luz marcha atrás	<b>40510</b>

**VAUXHALL Cont.**

<b>Combo Mk II 1.7 DTI 16V</b>	<b>2001 -&gt;</b>
Y 17 DT	55 75
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.0 i 12V</b>	<b>1996-00</b>
X 10 XE	40 54
Oil press. switch/Int. pres. aceite	<b>12439</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.2 i</b>	<b>1993-00</b>
C 12 NZ/X 12 SZ	33 45
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.2 i 16V</b>	<b>1998-00</b>
X 12 XE	48 65
Oil press. switch/Int. pres. aceite	<b>12439</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.4 i</b>	<b>1993-00</b>
C 14 NZ/X 14 SZ	44 60
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.4 i 16V, Cabrio</b>	<b>1994-00</b>
X 14 XE	66 90
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.4 i S</b>	<b>1993-00</b>
C 14 SE	60 82
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.4 i Van</b>	<b>1994-00</b>
C 14 NZ	44 60
Oil press. switch/Int. pres. aceite	<b>12430</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.6 GSI 16V</b>	<b>1993-00</b>
C 16 XE	80 109
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa 1.6 i 16V</b>	<b>1994-00</b>
X 16 XE	78 106
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.0 12V</b>	<b>2000-03</b>
Z 10 XE	43 58
Oil press. switch/Int. pres. aceite	<b>12439</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.0 12V</b>	<b>2003 -&gt;</b>
Z 10 XEP	44 60
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>Corsa Mk II 1.2 16V, Dualfuel, Van</b>	<b>2000 -&gt;</b>
Z 12 XE	55 75
Oil press. switch/Int. pres. aceite	<b>12439</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.4 16V</b>	<b>2000 -&gt;</b>
Z 14 XE	66 90
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.5 D</b>	<b>1993-00</b>
15 D	37 50
Temp. s. warning lamp/Termocont. temp.	<b>35790</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.5 TD</b>	<b>1993-96</b>
X 15 DT (T4EC1)/15 DT (T4EC1)	49 67
Temp. s. warning lamp/Termocont. temp.	<b>35790</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.7 D, Van</b>	<b>1996-00</b>
17 D (4EE1)/X 17 D (4EE1)	44 60
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk II 1.8 16V</b>	<b>2000-06</b>
Z 18 XE	92 125
Oil press. switch/Int. pres. aceite	<b>12430</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk III 1.0</b>	<b>2006 -&gt;</b>
Z 10 XEP/A 10 XEP	44 60
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>Corsa Mk III 1.0 i 12V</b>	<b>2010 -&gt;</b>
A 10 XEP	48 65
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.2</b>	<b>2006 -&gt;</b>
Z 12 XEP	59 80
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>Corsa Mk III 1.2 i 16V</b>	<b>2010 -&gt;</b>
A 12 XER	63 86
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.3 CDTI 16V</b>	<b>2010 -&gt;</b>
Z 13 DTE/A 13 DTE	70 95
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.3 CDTI 16V, Van</b>	<b>2000-06</b>
Z 13 DT	52 70
Oil press. switch/Int. pres. aceite	<b>12430</b>
Rev. light switch/Int. luz marcha atrás	<b>40510</b>
<b>Corsa Mk III 1.4</b>	<b>2006 -&gt;</b>
Z 14 XEP	66 90
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
Rev. light switch/Int. luz marcha atrás	<b>40830</b>
<b>Corsa Mk III 1.4 i 16V</b>	<b>2010 -&gt;</b>
A 14 XER	74 101
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.6 16V Turbo</b>	<b>2007 -&gt;</b>
A 16 LER/Z 16 LER	141 192
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.6 SRI</b>	<b>2007 -&gt;</b>
A 16 LEL	110 150
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.7 CDTI</b>	<b>2006 -&gt;</b>
A 17 DTR	92 125
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.7 CDTI 16V</b>	<b>2010 -&gt;</b>
A 17 DTS	96 131
Rev. light switch/Int. luz marcha atrás	<b>40505</b>
<b>Corsa Mk III 1.7 DI 16V, Van</b>	<b>2000-06</b>
Y 17 DTL	48 65
Rev. light switch/Int. luz marcha atrás	<b>40510</b>

**VAUXHALL Cont.**

<b>Corsa Mk III 1.7 DTI 16V, Van</b>	2000-06
Y 17 DT	55 75
Rev. light switch/Int. luz marcha atrás	40510
<b>Corsa Mk IV 1.3 CDTI</b>	2006 ->
A 13 DTG/Z 13 DTJ	55 75
Rev. light switch/Int. luz marcha atrás	40505
<b>Corsa Mk IV 1.3 CDTI</b>	2006 ->
Z 13 DTH	66 90
Rev. light switch/Int. luz marcha atrás	40505
<b>Frontera 2.0 i Sport</b>	1992-98
C 20 NE/X 20 SE	85 115
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	40510
<b>Frontera 2.2 i</b>	1995-98
X 22 XE	100 136
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
<b>Frontera 2.4 i</b>	1992-98
C 24 NE	92 125
Stop light switch/Int. luz stop	24310
<b>Frontera Mk I 2.3 TD</b>	1992-98
23 DTR	74 100
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
<b>Frontera Mk I 2.5 TDS, Sport</b>	1996-98
25TDS (VM41B)	85 115
Stop light switch/Int. luz stop	24310
<b>Frontera Mk I 2.8 TD, Sport</b>	1995-98
28 TDI (4JB1T)	83 113
Stop light switch/Int. luz stop	24310
<b>Frontera Mk II 2.2 DTI</b>	1998-04
X 22 DTH/Y 22 DTH	85 116
Oil press. switch/Int. pres. aceite	12430
<b>Meriva 1.4 16V Twinport</b>	2003-09
Z 14 XEP	66 90
Oil press. switch/Int. pres. aceite	12439
<b>Meriva 1.6 i 16V Twinport</b>	2003-09
Z 16 XEP	77 105
Oil press. switch/Int. pres. aceite	12439
Rev. light switch/Int. luz marcha atrás	40510
<b>Meriva 1.6 Turbo</b>	2006 ->
Z 16 LET	132 180
Oil press. switch/Int. pres. aceite	12439
<b>Midi II 2.0</b>	1988 ->
20PET	62 84
Oil press. switch/Int. pres. aceite	12540
<b>Movano 1.9 DTI</b>	2001 ->
F9Q 774	60 82
Oil press. switch/Int. pres. aceite	12630
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	Manual, 2 terminals/bornes
Stop light switch/Int. luz stop	24891
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel. Cruise control/Control
<b>Movano 2.8 DTI</b>	24895
S9W 702	40600
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control
Stop light switch/Int. luz stop	24890
Thermistor-Thermocont./Doble función	4 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	24895
Fan switch/Termocontacto ventilador	38110
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.
<b>Movano 3.0 DTI</b>	40600
ZD3 200	2003 ->
Stop light switch/Int. luz stop	100 136
On clutch pedal/Int. pedal embrague	24890
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel. Cruise control/Control
<b>Movano 3.0 DTi, Cab, Van</b>	24891
ZD3 202	40600
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control
Stop light switch/Int. luz stop	24890
Rev. light switch/Int. luz marcha atrás	4 terminals/bornes
<b>Movano Mk I 2.2 DTI</b>	24895
G9T 722/G9T 720/G9T 750	2000 ->
Stop light switch/Int. luz stop	66 90
On clutch pedal/Int. pedal embrague	Manual, 2 terminals/bornes
Stop light switch/Int. luz stop	Manual 5 speed/vel. Cruise control/Control
Rev. light switch/Int. luz marcha atrás	24891
<b>Movano Mk I 2.5 CDTI</b>	24895
G9U 632	2006 ->
Stop light switch/Int. luz stop	107 146
<b>Movano Mk I 2.5 CDTI</b>	24895
G9U 650/G9U 632	2006 ->
Stop light switch/Int. luz stop	88 120
<b>Movano Mk I 2.5 CDTI Combi</b>	24895
G9U 630	2003-09
Stop light switch/Int. luz stop	88 120
<b>Movano Mk I 2.5 CDTI Van</b>	24895
G9U 650/G9U 632	2006 ->
Stop light switch/Int. luz stop	88 120
<b>Movano Mk I 2.5 D</b>	24895
S8U 770	1998-00
Stop light switch/Int. luz stop	59 80
On clutch pedal/Int. pedal embrague	Manual, 2 terminals/bornes
Stop light switch/Int. luz stop	24890
Thermistor-Thermocont./Doble función	Manual 5 speed/vel. Cruise control/Control
Rev. light switch/Int. luz marcha atrás	24891
<b>Movano Mk I 2.5 DTI</b>	24895
G9U 754	2001-09
Stop light switch/Int. luz stop	74 101
	24895

**VAUXHALL Cont.**

<b>Movano Mk I 2.5 DTI, Combi</b>	2001 ->
G9U 750/G9U 754/G9U 720	84 115
Stop light switch/Int. luz stop	24890
On clutch pedal/Int. pedal embrague	Manual, 2 terminals/bornes
Stop light switch/Int. luz stop	Manual 5 speed/vel. Cruise control/Control
Rev. light switch/Int. luz marcha atrás	4 terminals/bornes
<b>Movano Mk I 2.5 DTI, Van</b>	24895
G9U 750/G9U 754/G9U 724/G9U 720	2001 ->
Stop light switch/Int. luz stop	84 115
On clutch pedal/Int. pedal embrague	Manual, 2 terminals/bornes
Stop light switch/Int. luz stop	Manual 5 speed/vel. Cruise control/Control
Rev. light switch/Int. luz marcha atrás	4 terminals/bornes
<b>Nova 1.0 CC</b>	1983-93
10 S	33 45
Oil press. transmitter/Transm. pres. aceite	14690
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.2 i CC</b>	1985-89
E 12 GV/12 NC	33 45
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.2 i Kat CC</b>	1989-93
C 12 NZ	33 45
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.2 N CC</b>	1990-93
12 NV	38 52
Oil press. transmitter/Transm. pres. aceite	14690
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.2 S CC</b>	1983-90
12 ST	40 55
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.2 Van</b>	1990-94
12 NV	38 52
Oil press. switch/Int. pres. aceite	12430
Oil press. transmitter/Transm. pres. aceite	14690
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.3 i CC</b>	1985-89
13 NB	44 60
Oil press. switch/Int. pres. aceite	12500
<b>Nova 1.3 i Kat CC</b>	1989-93
C 13 N	44 60
Oil press. switch/Int. pres. aceite	12500
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.3 S CC</b>	1983-89
13 SB	51 70
Oil press. switch/Int. pres. aceite	12500
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.4 i CC</b>	1990-93
C 14 NZ	44 60
Oil press. switch/Int. pres. aceite	12500
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.4 i S CC</b>	1991-93
C 14 SE	60 82
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.4 S, CC</b>	1990-93
14 NV	55 75
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.5 D, CC, Van</b>	1987-94
15 D	37 50
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.5 TD, CC</b>	1990-93
15 DT (T4EC1)	49 67
Rev. light switch/Int. luz marcha atrás	40510
<b>Nova 1.6 GSI CC</b>	1988-92
E 16 SE	74 100
Oil press. switch/Int. pres. aceite	12500
<b>Nova 1.6 GSI CC</b>	1989-93
C 16 SEI	72 98
Oil press. switch/Int. pres. aceite	12500
<b>Nova 1.6 GSI Kat CC</b>	1992-93
C 16 SE	74 101
Oil press. switch/Int. pres. aceite	12500
Rev. light switch/Int. luz marcha atrás	40510
<b>Omega 2.0</b>	1995-96
20 SE	85 115
Oil press. switch/Int. pres. aceite	12430
<b>Omega 2.0 16V, Estate</b>	1994-01
X 20 XEV	100 136
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.0 DTI 16V, Estate</b>	1998-00
X 20 DTH	74 101
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.0, Estate</b>	1994-99
X 20 SE	85 116
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.2 16V, Estate</b>	1994-03
Y 22 XE/Z 22 XE	106 144
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.2 DTI 16V, Estate</b>	2000-04
Y 22 DTH	88 120
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.5 TD, Estate</b>	1994-01
25 DT/X 25 DT	96 131
Oil press. switch/Int. pres. aceite	12410
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.5 V6, Estate</b>	1994-00
X 25 XE	125 170
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 2.6 V6, Estate</b>	2000-04
Y 26 SE	132 180
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 3.0 V6, Estate</b>	1994-00
X 30 XE	155 211
Rev. light switch/Int. luz marcha atrás	41170
<b>Omega 3.2 V6, Estate</b>	2001-04
Y 32 SE	160 218
Rev. light switch/Int. luz marcha atrás	41170

**VAUXHALL Cont.**

<b>Senator Mk II 2.5 i</b>	1987-90
25 E	103 140
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	41170
<b>Senator Mk II 2.6 i</b>	1990-93
C 26 NE	110 150
Rev. light switch/Int. luz marcha atrás	41170
<b>Senator Mk II 3.0</b>	1988-90
30 NE	130 177
Rev. light switch/Int. luz marcha atrás	41170
<b>Senator Mk II 3.0 24V</b>	1989-93
C 30 SE	150 204
Rev. light switch/Int. luz marcha atrás	41170
<b>Senator Mk II 3.0 i Kat</b>	1988-93
C 30 NE	130 177
Rev. light switch/Int. luz marcha atrás	41170
<b>Signum 1.8</b>	2005 ->
Z 18 XER	103 140
Rev. light switch/Int. luz marcha atrás	40505
<b>Signum 1.8</b>	2003-05
Z 18 XE	90 122
Rev. light switch/Int. luz marcha atrás	40505
<b>Signum 1.9 CDTI</b>	2004-05
Z 19 DT	88 120
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 1.9 CDTI 16V</b>	2004-05
Z 19 DTH	110 150
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 2.0 DTI</b>	2003 ->
Y 20 DTH	74 100
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 2.0 i Turbo</b>	2002-08
Z 20 NET	129 175
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 2.2 DTI</b>	2003 ->
Y 22 DTR	92 125
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 2.2 i</b>	2003 ->
Z 22 YH	114 155
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 2.8 V6 Turbo</b>	2002-08
Z 28 NEL	169 230
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 3.0 CDTI</b>	2003 ->
Y 30 DT	130 177
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 3.0 V6 CDTI</b>	2002-08
Z 30 DT	135 184
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Signum 3.2 V6</b>	2003 ->
Z 32 SE	155 211
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Sintra 2.2 DTI</b>	1997-99
X 22 DTH	85 116
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	40510
<b>Sintra 2.2 i 16V</b>	1996-99
X 22 XE	104 141
Rev. light switch/Int. luz marcha atrás	40510
<b>Sintra 3.0 i 24V</b>	1996-99
X 30 XE	148 201
Rev. light switch/Int. luz marcha atrás	40510
<b>Tigra 1.3 CDTI TwinTop</b>	2004 ->
Z 13 DT	51 69
Oil press. switch/Int. pres. aceite	12430
<b>Tigra 1.4 16V</b>	1994-00
X 14 XE	66 90
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	40510
<b>Tigra 1.4 TwinTop</b>	2004 ->
Z 14 XEP	66 90
Oil press. switch/Int. pres. aceite	12439
<b>Tigra 1.6 16V</b>	1994-00
X 16 XE	78 106
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 1.6 i 16V, CC, Estate</b>	1995-01
Z 16 XE/X 16 XEL/Y 16 XE	74 100
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 1.6 i, CC, Estate</b>	1995-00
X 16 SZR	55 75
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 1.7 TD, CC</b>	1995-96
X 17 DT (TC4EE1)	60 82
Stop light switch/Int. luz stop	24310
Rev. light switch/Int. luz marcha atrás	40510

**VAUXHALL Cont.**

<b>Vectra 1.8 i 16V, CC, Estate</b>	1995-00
X 18 XE/X 18 XE1	85 116
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 1.8 i 16V, CC, Estate</b>	2000 ->
Z 18 XE	92 125
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra 2.0 DI 16V, CC, Estate</b>	1996-00
X 20 DTL	60 82
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	Without/sin A.A. 38350
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 2.0 DTI 16V, CC, Estate</b>	1995-01
Y 20 DTH/X 20 DTH	74 101
Stop light switch/Int. luz stop	24310
Rev. light switch/Int. luz marcha atrás	40510
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra 2.0 i 16V, CC, Estate</b>	1995-01
X 20 XEV	100 136
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 2.2 DTI 16V, CC, Estate</b>	1995-01
Y 22 DTR	92 125
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 2.2 i 16V, CC, Estate</b>	2000 ->
Z 22 SE	108 147
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra 2.5 i GSi, CC, Estate</b>	1998-00
X 25 XE	143 194
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	Without/sin A.A. 38350
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 2.5 i V6, CC, Estate</b>	1995-00
X 25 XE	125 170
Stop light switch/Int. luz stop	24310
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	Without/sin A.A. 38350
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra 2.6 i V6, CC, Estate</b>	2000 ->
Y 26 SE	125 170
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	Without/sin A.A. 38350
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra Mk II 1.6 16V, Estate, GTS</b>	2004-08
Z 16 XE	74 100
Oil press. switch/Int. pres. aceite	12430
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	40505
Rev. light switch/Int. luz marcha atrás	40510
<b>Vectra Mk II 1.6, GTS</b>	2006-08
Z 16 XEP	77 105
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra Mk II 1.8</b>	2002-08
Z 18 XEL	81 110
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
<b>Vectra Mk II 1.8 16V, Dualfuel, Estate, GTS</b>	2002-08
Z 18 XE	90 122
Fan switch/Termocontacto ventilador	Climat 38330
Fan switch/Termocontacto ventilador	3 terminals/bornes 38360
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40510
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra Mk II 1.8, Estate, GTS</b>	2006-08
Z 18 XER	103 140
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra Mk II 1.9 CDTI 16V, Estate, GTS</b>	2004-05
Z 19 DTH	110 150
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra Mk II 1.9 CDTI, Estate, GTS</b>	2004-05
Z 19 DT	88 120
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra Mk II 1.9 CDTI, Estate, GTS</b>	2005-08
Z 19 DTL	74 100
Oil press. switch/Int. pres. aceite	12430
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40830
<b>Vectra Mk II 2.0 16V Turbo, Estate, GTS</b>	2000-08
Z 20 NET	129 175
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel. 40505
Rev. light switch/Int. luz marcha atrás	40830

**VAUXHALL Cont.**

<b>Vectra Mk II 2.0 DTI 16V, Estate, GTS</b>		2002 ->	
Y 20 DTH		74 101	
Stop light switch/Int. luz stop		24310	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40510	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 2.2 16V, GTS</b>		2002-08	
Z 22 SE		108 147	
Fan switch/Termocontacto ventilador	3 terminals/bornes	38360	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40510	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 2.2 direct, Estate, GTS</b>		2002-08	
Z 22 YH		114 155	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 2.2 DTI 16V, Estate, GTS</b>		2002 ->	
Y 22 DTR		92 125	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Vectra Mk II 2.8 V6 Turbo, Estate, GTS</b>		2005-08	
Z 28 NEL		169 230	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 2.8 V6 Turbo, Estate, GTS</b>		2005-08	
Z 28 NET		188 255	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 2.8 V6 Turbo, GTS</b>		2006-08	
Z 28 NET		184 250	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 3.0 CDTi, Estate, GTS</b>		2005-08	
Z 30 DT		135 184	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 3.0 V6 CDTi, Estate, GTS</b>		2003-05	
Y 30 DT		130 177	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Vectra Mk II 3.2 V6, Estate, GTS</b>		2002-08	
Z 32 SE		155 211	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
<b>Vivaro 1.9 DI</b>		2001 ->	
		59 80	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Vivaro 1.9 DTI</b>		2001 ->	
F9Q 760		74 101	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Vivaro 2.0 16V</b>		2001 ->	
F4R 720		88 120	
Oil press. switch/Int. pres. aceite		12630	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Vivaro 2.0 CDTi</b>		2006 ->	
M9R 782		66 90	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
<b>Vivaro 2.0 CDTi 16V</b>		2006 ->	
M9R 780		84 114	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
<b>Vivaro 2.5 CDTi</b>		2006 ->	
G9U 730		107 146	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
<b>Vivaro 2.5 CDTi</b>		2006 ->	
G9U 630		107 146	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
<b>Vivaro 2.5 DTI</b>		2004 ->	
G9U 730		99 135	
Stop light switch/Int. luz stop	Manual, 2 terminals/bornes	24890	
On clutch pedal/Int. pedal embrague	Manual 5 speed/vel. Cruise control/Control	24891	
Stop light switch/Int. luz stop	4 terminals/bornes	24895	
Rev. light switch/Int. luz marcha atrás		40600	
<b>Zafira 1.6 16V</b>		1999 ->	
Z 16 XE/X 16 XEL		74 101	
Oil press. switch/Int. pres. aceite		12430	
Stop light switch/Int. luz stop		24310	
Fan switch/Termocontacto ventilador	Climat	38330	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Zafira 1.8 16V</b>		1999-00	
X 18 XE1		85 116	
Stop light switch/Int. luz stop		24310	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Zafira 1.8 16V</b>		2000-05	
Z 18 XE		92 125	
Fan switch/Termocontacto ventilador	Climat	38330	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Zafira 2.0 DI 16V</b>		1999 ->	
X 20 DTL		60 82	
Fan switch/Termocontacto ventilador	Climat	38330	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Zafira 2.0 DTI 16V</b>		1999-05	
Y 20 DTH		74 101	
Rev. light switch/Int. luz marcha atrás		40510	

**VAUXHALL Cont.**

<b>Zafira 2.0 GSI Turbo</b>		2001-05	
Z 20 LET		141 192	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Zafira 2.2 16V</b>		2000-05	
Z 22 SE		108 147	
Rev. light switch/Int. luz marcha atrás		40510	
<b>Zafira Mk II 1.6</b>		2005 ->	
Z 16 XEP		77 105	
Oil press. switch/Int. pres. aceite		12439	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Zafira Mk II 1.6 i 16V</b>		2007 ->	
A 16 XER/Z 16 XER		85 115	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
<b>Zafira Mk II 1.7 CDTI 16V</b>		2009 ->	
Z 17 DTJ		81 110	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
<b>Zafira Mk II 1.8</b>		2005 ->	
Z 18 XEP/Z 18 XER/A 18 XER		103 140	
Oil press. switch/Int. pres. aceite		12439	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
<b>Zafira Mk II 1.9 CDTI</b>		2005 ->	
Z 19 DT		88 120	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Zafira Mk II 1.9 CDTI</b>		2005 ->	
Z 19 DTH		110 150	
Oil press. switch/Int. pres. aceite		12430	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Zafira Mk II 2.0</b>		2005 ->	
Z 20 LER		147 200	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Zafira Mk II 2.0</b>		2006 ->	
Z 20 LEH		176 240	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	
<b>Zafira Mk II 2.2</b>		2005 ->	
Z 22 YH		110 150	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio F35, Manual 5 speed/vel.	40505	
Rev. light switch/Int. luz marcha atrás		40830	

**VOLKSWAGEN**

<b>Bora 1.4 16V</b>		2000-05	
AHW/AXP/BCA/APE/AKQ		55 75	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop	2 terminals/bornes	24420	
Stop light switch/Int. luz stop	BCA, 4 terminals/bornes	24760	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás		40660	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Bora 1.4 16V Kombi</b>		2001-05	
AHW/AXP/BCA		55 75	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop	2 terminals/bornes	24420	
Stop light switch/Int. luz stop	4 terminals/bornes	24760	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás		40660	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Bora 1.6</b>		2000-05	
AVU/BFQ/BJH		75 102	
Oil press. switch/Int. pres. aceite		11690	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop	2 terminals/bornes	24420	
Stop light switch/Int. luz stop	4 terminals/bornes	24760	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Temp. s. warning lamp/Termocont. temp.		35350	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás		40660	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Bora 1.6</b>		2002-04	
AWB		78 107	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
<b>Bora 1.6 16V, Kombi</b>		2000-05	
AUS/ATN/BCB/AZD		77 105	
Oil press. switch/Int. pres. aceite	AZD, -> 04.2001	12880	
Oil press. switch/Int. pres. aceite	05.2001 ->	12881	
Stop light switch/Int. luz stop	4 terminals/bornes	24760	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Bora 1.6 FSI, Kombi</b>		2002-05	
BAD		81 110	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop	4 terminals/bornes	24760	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36720	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Bora 1.6 Kombi</b>		2000-05	
AVU/BFQ		75 102	
Oil press. switch/Int. pres. aceite		11690	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop	2 terminals/bornes	24420	
Stop light switch/Int. luz stop	4 terminals/bornes	24760	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Temp. s. warning lamp/Termocont. temp.		35350	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás		40660	
Rev. light switch/Int. luz marcha atrás		40675	







**VOLKSWAGEN Cont.**

<b>Caddy III 1.4 16V</b>		2006 ->
BUD		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24761
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 1.6</b>		2004 ->
BGU/BSF/BSE		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24761
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 1.9 TDI</b>		2004 ->
BJB/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 1.9 TDI</b>		2005 ->
BSU		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop		24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 1.9 TDI Kombi 4motion</b>		2008 ->
BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 2.0 EcoFuel</b>		2006 ->
BSX		80 109
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop		24761
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 2.0 SDI</b>		2004 ->
BST/BDJ		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Caddy III 2.0 TDI</b>		2007 ->
BMM		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop		24761
Rev. light switch/Int. luz marcha atrás		40675
<b>Corrado 1.8 16V</b>		1989-92
KR		100 136
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Oil press. transmitter/Transm. pres. aceite		14740
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.		35630
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Corrado 1.8 G60</b>		1988-93
PG		118 160
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Oil press. switch/Int. pres. aceite		12560
Temp. s. warning lamp/Termocont. temp.		35345
<b>Corrado 2.0 i</b>		1993-95
ADY/2E		85 115
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite		12560
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.		35640
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Corrado 2.0 i 16V</b>		1991-95
9A		100 136
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Oil press. transmitter/Transm. pres. aceite		14740
Stop light switch/Int. luz stop	2 terminals/bornes	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.		35630
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40665

**VOLKSWAGEN Cont.**

<b>Corrado 2.9 VR6</b>		1991-95
ABV		140 190
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Thermistor-Thermocont./Doble función		34322
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580
Temp. s. warning lamp/Termocont. temp.	Climat	35650
<b>Crafter 30-35 2.5 TDI</b>		2006 ->
BJJ/CEBA		65 88
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-35 2.5 TDI</b>		2006 ->
BJK/CEBB		80 109
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-35 2.5 TDI</b>		2006 ->
BJL/CECA		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-35 2.5 TDI</b>		2006 ->
BJM/CECB		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJJ/CEBA		65 88
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJK/CEBB		80 109
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJL/CECA		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJM/CECB		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJJ/CEBA		65 88
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJK/CEBB		80 109
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJL/CECA		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Crafter 30-50 2.5 TDI</b>		2006 ->
BJM/CECB		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
<b>Eos 1.4 TSI</b>		2008 ->
CAXA		90 122
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 1.4 TSI</b>		2008 ->
CAVD		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 1.6 FSI</b>		2006-08
BLF		85 115
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 2.0 FSI</b>		2006-08
BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite		12850
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 2.0 TDI</b>		2006-08
BMM		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 2.0 TDI 16V</b>		2008 ->
CFFB/CBAB		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 2.0 TFSI</b>		2006 ->
BWA/BPY/CBFA/CCZA/CAWB/CCTA		147 200
Oil press. switch/Int. pres. aceite	BPY, BWA	12850
Oil press. switch/Int. pres. aceite	CCTA, CAWB	12880
Rev. light switch/Int. luz marcha atrás		40675
<b>Eos 3.2 V6</b>		2006 ->
CBRA/BUB		184 250
Rev. light switch/Int. luz marcha atrás		40675
<b>Fox 1.2</b>		2005 ->
BMD/CHFB		40 55
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	Ch. 5Z-74048510 ->	24763
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Fox 1.4</b>		2005 ->
BKR		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	12881
Stop light switch/Int. luz stop		24761
Stop light switch/Int. luz stop	Ch. 5Z-74048510 ->	24763
Rev. light switch/Int. luz marcha atrás		40675
<b>Fox 1.4 TDI</b>		2005 ->
BNM		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	12890
Stop light switch/Int. luz stop	-> Ch. 5Z-74048509	24761
Stop light switch/Int. luz stop	Ch. 5Z-74048510 ->	24763
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185
Rev. light switch/Int. luz marcha atrás		40675
<b>Golf I 1.6 Cabrio</b>		1986-90
RE		53 72
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Stop light switch/Int. luz stop		21210
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710
Rev. light switch/Int. luz marcha atrás		40970







**VOLKSWAGEN Cont.**

<b>Golf IV 1.4 16V</b>		<b>1997-05</b>
AHW/AXP/BCA/APE/AKQ		55 75
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.		<b>35350</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060000 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.4 16V, Variant</b>		<b>1999-06</b>
AHW/AXP/BCA/APE/AKQ		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.6</b>		<b>2000-05</b>
AVU/BFQ/BJH		75 102
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. s. warning lamp/Termocont. temp.		<b>35350</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->, AVU, BFQ	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	AVU, -> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.6</b>		<b>2003-05</b>
AWB		78 107
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Golf IV 1.6</b>		<b>2001-01</b>
BAH		74 101
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Golf IV 1.6</b>		<b>1998-02</b>
		68 92
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Golf IV 1.6 16V, Variant</b>		<b>2000-05</b>
AUS/ATN/BCB/AZD		77 105
Oil press. switch/Int. pres. aceite	AZD	<b>12880</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.6 Cabrio</b>		<b>1998-02</b>
AFT/AKS		74 100
Oil press. switch/Int. pres. aceite	-> Ch. 1E-X-015000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 1E-X-015001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Oil press. switch/Int. pres. aceite	Ch. 1E-X-015001 ->, 1.80 bar	<b>12883</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.		<b>35350</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.6 D</b>		<b>1997-98</b>
		40 54
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Golf IV 1.6 FSI, Variant</b>		<b>2002-05</b>
BAD		81 110
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf IV 1.6 Variant</b>		<b>2000-06</b>
AVU		75 102
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Temp. s. warning lamp/Termocont. temp.		<b>35350</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>

**VOLKSWAGEN Cont.**

<b>Golf IV 1.6, Variant</b>		<b>1997-00</b>
AKL/APF/AEH		74 100
Oil press. switch/Int. pres. aceite		<b>12880</b>
Stop light switch/Int. luz stop	Open/Conecta	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24762</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.8</b>		<b>1997-05</b>
AGN/BAF		92 125
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.8</b>		<b>1998-02</b>
		77 105
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Golf IV 1.8 4motion, Variant</b>		<b>1998-05</b>
AGN		92 125
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.8 Cabrio</b>		<b>1998-02</b>
ANN/AAM		55 75
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	Ch. 1E-X008686 ->	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1E-X-008001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1E-X-008000	<b>41270</b>
<b>Golf IV 1.8 Cabrio</b>		<b>1998-02</b>
ADZ/ANP		66 90
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	Ch. 1E-X-008686 ->	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1E-X-008001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1E-X-008000	<b>41270</b>
<b>Golf IV 1.8 T</b>		<b>1997-05</b>
ARZ/AQA/AGU/AUM/AWD		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.8 T GTI</b>		<b>2001-05</b>
AUQ		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf IV 1.8 T, Variant</b>		<b>2000-06</b>
ARZ/AQA/AGU/AUM/AWD		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.9 SDI, Variant</b>		<b>1997-06</b>
AGP/AQM		50 68
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
Rev. light switch/Int. luz marcha atrás	Ch. 1J-X-060001 ->	<b>40675</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1J-X-060000	<b>41270</b>
<b>Golf IV 1.9 TDI 4motion, Variant</b>		<b>2000-05</b>
ATD		74 101
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>



**VOLKSWAGEN Cont.**

<b>Golf Plus 1.4 TSI</b>		<b>2006-08</b>
BLG		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	-> Ch. 1K-6-565081	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.4 TSI</b>		<b>2007 -&gt;</b>
CAXA		90 122
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.4 TSI</b>		<b>2008 -&gt;</b>
CAVD/CNWA		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.6</b>		<b>2005 -&gt;</b>
CCSA/BSF/CMXA/BSE		75 102
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.6 FSI</b>		<b>2005-08</b>
BLF		85 115
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.6 MultiFuel</b>		<b>2007 -&gt;</b>
CCSA/CHGA		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.6 TDI</b>		<b>2009 -&gt;</b>
CAYC		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Golf Plus 1.9 TDI</b>		<b>2005-09</b>
BXE/BKC/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 1.9 TDI</b>		<b>2005-08</b>
BXF/BXJ/BRU		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 2.0 FSI</b>		<b>2005-08</b>
BLY/BLR/BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 2.0 TDI</b>		<b>2005 -&gt;</b>
AZV/CBDA/CFHB		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 2.0 TDI</b>		<b>2005-09</b>
BMM		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf Plus 2.0 TDI</b>		<b>2009 -&gt;</b>
CBDC/CLCA		81 110
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
<b>Golf Plus 2.0 TDI 16V, Variant</b>		<b>2005 -&gt;</b>
CBDB/CFHC/BKD		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.4 16V</b>		<b>2003 -&gt;</b>
BCA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.4 16V, Variant</b>		<b>2006 -&gt;</b>
BUD		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.4 FSI</b>		<b>2003 -&gt;</b>
BKG/BLN		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.4 TSI Variant</b>		<b>2008 -&gt;</b>
CAVD		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**VOLKSWAGEN Cont.**

<b>Golf V 1.4 TSI, Variant</b>		<b>2005 -&gt;</b>
BLG		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.4 TSI, Variant</b>		<b>2006 -&gt;</b>
BMV		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.4 TSI, Variant</b>		<b>2007 -&gt;</b>
CAXA		90 122
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.6</b>		<b>2004 -&gt;</b>
BGU/BSF/BSE		75 102
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.6 FSI</b>		<b>2003 -&gt;</b>
BLF/BLP/BAG		85 115
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.6 Variant</b>		<b>2007 -&gt;</b>
CCSA/BSF/BSE		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.9 TDI</b>		<b>2004 -&gt;</b>
BXF/BXJ/BRU		66 90
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	BRU, BXF	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.9 TDI Variant 4motion</b>		<b>2008 -&gt;</b>
BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 1.9 TDI, 4motion, Variant</b>		<b>2003 -&gt;</b>
BXE/BKC/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0</b>		<b>2006 -&gt;</b>
BHY		85 116
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
<b>Golf V 2.0 FSI</b>		<b>2004 -&gt;</b>
BVX/BLX/BLR/AXW/BVZ/BVY		110 150
Oil press. switch/Int. pres. aceite		<b>12850</b>
Oil press. switch/Int. pres. aceite	AXW, Black/Negro	<b>12895</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop	BLY, BVY, BLR, BLX	<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0 FSI 4motion</b>		<b>2004 -&gt;</b>
BVX/BLX		110 150
Oil press. switch/Int. pres. aceite	BLX, BVX	<b>12850</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12895</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0 GTI</b>		<b>2004 -&gt;</b>
BWA/BPY/AXX/CBFA/CAWB/CCTA		147 200
Oil press. switch/Int. pres. aceite	BPY, BWA, AXX	<b>12850</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Oil press. switch/Int. pres. aceite	AXX	<b>12895</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0 GTI</b>		<b>2006 -&gt;</b>
BYD		169 230
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
<b>Golf V 2.0 SDI</b>		<b>2004 -&gt;</b>
BDK		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0 TDI</b>		<b>2005 -&gt;</b>
BMN		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0 TDI</b>		<b>2003 -&gt;</b>
AZV/CBDA		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Golf V 2.0 TDI 16V, 4motion</b>		<b>2003 -&gt;</b>
BKD		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**VOLKSWAGEN Cont.**

<b>Golf V 2.0 TDI 16V, Variant</b>		2007 ->	
CBDB/BKD		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf V 2.0 TDI Variant</b>		2007 ->	
BMM		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf V 2.0 TDI Variant, 4motion</b>		2007 ->	
AZV		100 136	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf V 2.0 TDI, Variant, 4motion</b>		2004 ->	
BMM		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24761	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf V 2.0 Variant</b>		2007 ->	
BWA/CAWB/CCTA		147 200	
Oil press. switch/Int. pres. aceite	BWA	12850	
Oil press. switch/Int. pres. aceite	CAWB	12880	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf V 3.2 R32 4motion</b>		2005 ->	
CBR/CBRA/BUB		184 250	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop	BUB	24763	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.4</b>		2008 ->	
CGGA		59 80	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.4 TSI, Variant</b>		2008 ->	
CAXA		90 122	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.4 TSI, Variant</b>		2008 ->	
CAVD		118 160	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.4 Variant</b>		2009 ->	
BUD/CGGA		59 80	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.6</b>		2008 ->	
CCSA/BSF/CMXA/BSE		75 102	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.6 BiFuel</b>		2009 ->	
CHGA		75 102	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 1.6 TDI, Variant</b>		2009 ->	
CAYB		66 90	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
<b>Golf VI 1.6 TDI, Variant, 4motion</b>		2009 ->	
CAYC		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
<b>Golf VI 1.6 Variant</b>		2009 ->	
CCSA/BSF/CMXA/BSE		75 102	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 2.0 TDI</b>		2008 ->	
CFFB/CJAA/CBAB		103 140	
Oil press. switch/Int. pres. aceite	CFFB	12881	
Oil press. switch/Int. pres. aceite	CBAB, CJAA	12890	
<b>Golf VI 2.0 TDI</b>		2008 ->	
CBDC/CLCA		81 110	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 2.0 TDI</b>		2009 ->	
CFGB/CBBB		125 170	
Oil press. switch/Int. pres. aceite	CFGB	12881	
Oil press. switch/Int. pres. aceite	CBBB	12890	
<b>Golf VI 2.0 TDI 16V Variant</b>		2009 ->	
CBDB/CFHC		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Golf VI 2.0 TDI 4motion</b>		2009 ->	
CFFB/CBAB		103 140	
Oil press. switch/Int. pres. aceite	CFFB	12881	
Oil press. switch/Int. pres. aceite	CBAB	12890	
<b>Golf VI 2.0 TSI</b>		2009 ->	
CCZB		155 210	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
<b>Jetta II 1.3 Kat</b>		1987-91	
NZ/2G/MH		40 55	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	35340	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.6</b>		1986-91	
PN		51 70	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	Carb.	35300	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	

**VOLKSWAGEN Cont.**

<b>Jetta II 1.6</b>		1986-91	
RF		53 72	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	Automatic Choke/Arranque autom.	35420	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Temp. s. warning lamp/Termocont. temp.		35660	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.6</b>		1984-92	
HM/ABN/EZ		55 75	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	Automatic Choke/Arranque autom.	35420	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Temp. s. warning lamp/Termocont. temp.		35660	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.6 D</b>		1984-91	
ME/JP		40 54	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. s. warning lamp/Termocont. temp.	Carb.	35300	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.6 TD</b>		1984-91	
JR/MF		51 70	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.6 TD</b>		1989-91	
RA/SB		59 80	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.6 TD</b>		1990-91	
1V		44 60	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.8</b>		1986-90	
RH		62 84	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.	Automatic Choke/Arranque autom.	35420	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Temp. s. warning lamp/Termocont. temp.		35660	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.8</b>		1984-91	
EV/GZ/PB		82 112	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	35340	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.8</b>		1986-91	
GX/GU/HV		66 90	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Oil press. switch/Int. pres. aceite	Automatic	12920	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	35340	
Temp. s. warning lamp/Termocont. temp.	Automatic Choke/Arranque autom.	35420	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Temp. s. warning lamp/Termocont. temp.		35660	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.8 16V</b>		1986-91	
PL		95 129	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	35340	
Temp. s. warning lamp/Termocont. temp.	K-Jetronic	35430	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	
<b>Jetta II 1.8 16V</b>		1987-89	
KR		102 140	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		24430	
Temp. sending unit/Termo-Resistencia		32110	
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	35340	
Temp. s. warning lamp/Termocont. temp.	Carb.	35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35620	
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	40710	



**VOLKSWAGEN Cont.**

<b>Jetta II 1.8 Kat</b>		<b>1987-91</b>
GX/RP		66 90
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. sending unit/Termo-Resistencia		<b>32110</b>
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	<b>35340</b>
Temp. s. warning lamp/Termocont. temp.	Carb.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Jetta II 1.8 Kat</b>		<b>1987-91</b>
PF		79 107
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. sending unit/Termo-Resistencia		<b>32110</b>
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	<b>35340</b>
Temp. s. warning lamp/Termocont. temp.	Carb.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Jetta II 1.8 Syncro</b>		<b>1988-91</b>
1P		72 98
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	Carb.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
<b>Jetta III 1.4 TSI</b>		<b>2006 -&gt;</b>
BMJ		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 1.4 TSI</b>		<b>2006 -&gt;</b>
BLG		125 170
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 1.4 TSI</b>		<b>2007 -&gt;</b>
CAXA		90 122
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 1.4 TSI</b>		<b>2008 -&gt;</b>
CAVD		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 1.6</b>		<b>2005 -&gt;</b>
CCSA/BSF/BSE		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 1.6 FSI</b>		<b>2005 -&gt;</b>
BLF		85 115
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 1.9 TDI</b>		<b>2005 -&gt;</b>
BXE/BKC/BLS		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 2.0 FSI</b>		<b>2005 -&gt;</b>
BLY/BLR/BVZ/BYU		110 150
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 2.0 TDI</b>		<b>2005 -&gt;</b>
AZV/CBDA		100 136
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 2.0 TDI</b>		<b>2005 -&gt;</b>
BMM		103 140
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 2.0 TDI</b>		<b>2006 -&gt;</b>
CEGA/BMN		125 170
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 1K-6-741206	<b>40675</b>
<b>Jetta III 2.0 TDI 16V</b>		<b>2005 -&gt;</b>
CJAA/CBDB/BKD		103 140
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 2.0 TFSI</b>		<b>2005 -&gt;</b>
BWA/BPY/CBFA/CCZA/CAWB/CCTA		147 200
Oil press. switch/Int. pres. aceite	BPY, BWA	<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Jetta III 2.5 FSI</b>		<b>2006 -&gt;</b>
BTK/BGP		110 150
Oil press. switch/Int. pres. aceite		<b>12850</b>
Stop light switch/Int. luz stop		<b>24761</b>
Stop light switch/Int. luz stop		<b>24763</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Kafer 1600</b>		<b>1973-92</b>
AF		34 46
Oil press. switch/Int. pres. aceite		<b>11060</b>

**VOLKSWAGEN Cont.**

<b>LT 28-35 I 2.4</b>		<b>1982-92</b>
DL		66 90
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 28-35 I 2.4 D</b>		<b>1978-92</b>
DW/CP		55 75
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 28-35 I 2.4 D</b>		<b>1989-96</b>
1S/ACT		51 69
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 28-35 I 2.4 I</b>		<b>1989-96</b>
1E		69 94
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 28-35 I 2.4 Syncro</b>		<b>1992-94</b>
1E		70 95
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
<b>LT 28-35 I 2.4 TD</b>		<b>1992-96</b>
ACL		70 95
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 28-35 I 2.4 TD</b>		<b>1988-92</b>
1G		68 92
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 28-35 I 2.4 TD</b>		<b>1986-92</b>
DV		75 102
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
<b>LT 28-35 II 2.3</b>		<b>1996-06</b>
AGL		105 143
Temp. sending unit/Termo-Resistencia		<b>32220</b>
<b>LT 28-35 II 2.5 SDI</b>		<b>1996-06</b>
AGX		55 75
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
<b>LT 28-35 II 2.5 TDI</b>		<b>1996-99</b>
AHD		75 102
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-35 II 2.5 TDI</b>		<b>1999-06</b>
APA		66 90
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
<b>LT 28-35 II 2.5 TDI</b>		<b>1999-06</b>
AVR/ANJ		80 109
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-35 II 2.5 TDI</b>		<b>2001-06</b>
BBE		61 83
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-35 II 2.5 TDI</b>		<b>2001-06</b>
BBF		70 95
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-46 II 2.3</b>		<b>1996-06</b>
AGL		105 143
Temp. sending unit/Termo-Resistencia		<b>32220</b>
<b>LT 28-46 II 2.5 SDI</b>		<b>1996-06</b>
AGX		55 75
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
<b>LT 28-46 II 2.5 TDI</b>		<b>1996-99</b>
AHD		75 102
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-46 II 2.5 TDI</b>		<b>1999-06</b>
APA		66 90
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
<b>LT 28-46 II 2.5 TDI</b>		<b>1999-06</b>
AVR/ANJ		80 109
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>

**VOLKSWAGEN Cont.**

<b>LT 28-46 II 2.5 TDI</b>		<b>2001-06</b>
BBE		61 83
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-46 II 2.5 TDI</b>		<b>2001-06</b>
BBF		70 95
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	<b>35590</b>
<b>LT 28-46 II 2.8 TDI</b>		<b>1997-98</b>
AGK		92 125
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. s. warning lamp/Termocont. temp.		<b>35585</b>
<b>LT 28-46 II 2.8 TDI</b>		<b>1999-06</b>
ATA		96 130
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
Temp. s. warning lamp/Termocont. temp.		<b>35585</b>
<b>LT 28-46 II 2.8 TDI</b>		<b>2002-06</b>
BCQ/AUH		116 158
Oil press. switch/Int. pres. aceite	0.35 bar	<b>11410</b>
<b>LT 40-55 I 2.4</b>		<b>1988-89</b>
1E		70 95
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
<b>LT 40-55 I 2.4 D</b>		<b>1979-92</b>
DW/CP		55 75
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 40-55 I 2.4 D</b>		<b>1990-96</b>
1S/ACT		51 69
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. switch/Int. pres. aceite	-> Ch. 2D-X-013469	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 2D-X-013470 ->	<b>12870</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 40-55 I 2.4 I</b>		<b>1993-96</b>
1E		69 94
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 40-55 I 2.4 TD</b>		<b>1988-92</b>
1G		68 92
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 40-55 I 2.4 TD</b>		<b>1992-96</b>
ACL		70 95
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
<b>LT 40-55 I 2.4 TD</b>		<b>1986-92</b>
DV		75 102
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás		<b>40661</b>
<b>LT 40-55 I 2.4 TD</b>		<b>1988-91</b>
1G		68 92
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
<b>LT 40-55 I 2.4 TD 4WD</b>		<b>1978-92</b>
DV		75 102
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.		<b>35820</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>LT 40-55 I 2.4, 4WD</b>		<b>1982-92</b>
DL		66 90
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Rev. light switch/Int. luz marcha atrás	Without/Sin connector	<b>40970</b>
<b>Lupo 1.0</b>		<b>1998-05</b>
AER/ALD/ANV/ALL/AUC		37 50
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.0</b>		<b>1998-00</b>
AHT		37 50
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 6X-X-150000	<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.2 TDI 3L</b>		<b>1999-05</b>
AYZ/ANY		45 61
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**VOLKSWAGEN Cont.**

<b>Lupo 1.4</b>		<b>2000-05</b>
AUD		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Temp. s. warning lamp/Termocont. temp.	-> Ch. 6X-X-150000	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.4 16V</b>		<b>1998-05</b>
AHW/APE/BBY/AKQ/AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Temp. s. warning lamp/Termocont. temp.	-> Ch. 6X-X-150000	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.4 16V</b>		<b>1999-05</b>
AFK/AUB/AQQ		74 100
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12970</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	-> Ch. 6X-X-150000	<b>35650</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.4 FSI</b>		<b>2001-05</b>
ARR		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.4 TDI</b>		<b>1999-05</b>
AMF		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.6</b>		<b>2003 -&gt;</b>
		73 99
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Lupo 1.6 Alcohol</b>		<b>2003 -&gt;</b>
		76 103
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
<b>Lupo 1.6 GTI</b>		<b>2000-05</b>
AVY		92 125
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Lupo 1.7 SDI</b>		<b>1998-05</b>
AKU		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24761</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24772</b>
Stop light switch/Int. luz stop		<b>24773</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Multivan V 1.9 TDI</b>		<b>2003-09</b>
AXB		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Multivan V 1.9 TDI</b>		<b>2006-09</b>
BRS		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Multivan V 1.9 TDI</b>		<b>2006-09</b>
BRR		62 84
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**VOLKSWAGEN Cont.**

<b>Multivan V 2.0</b>		<b>2003 -&gt;</b>	
AXA		85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Multivan V 2.0 BiTDI, 4motion</b>		<b>2009 -&gt;</b>	
CFCA		132 180	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
<b>Multivan V 2.0 TDI, 4motion</b>		<b>2009 -&gt;</b>	
CAAA		62 84	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
<b>Multivan V 2.0 TDI, 4motion</b>		<b>2009 -&gt;</b>	
CAAB		75 102	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
<b>Multivan V 2.0 TDI, 4motion</b>		<b>2009 -&gt;</b>	
CAAC/CCHA		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
<b>Multivan V 2.5 TDI, 4motion</b>		<b>2003-09</b>	
AXD/BNZ		96 130	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Multivan V 2.5 TDI, 4motion</b>		<b>2003-09</b>	
AXE/BPC		128 174	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Multivan V 2.5 TDI, 4motion</b>		<b>2003-09</b>	
BLJ		120 163	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Multivan V 3.2 V6</b>		<b>2004-04</b>	
BDL		170 231	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Multivan V 3.2 V6, 4motion</b>		<b>2004-09</b>	
BKK/CFLA		173 235	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.4 Cabrio</b>		<b>2001 -&gt;</b>	
BCA		55 75	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.6</b>		<b>1999-00</b>	
AWH		74 100	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Oil press. switch/Int. pres. aceite	0.50 bar	<b>12881</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.6</b>		<b>2000 -&gt;</b>	
AYD/BFS		75 102	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Oil press. switch/Int. pres. aceite	AYD	<b>12881</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.6 Cabrio</b>		<b>2003 -&gt;</b>	
BFS		75 102	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.8 T</b>		<b>1999 -&gt;</b>	
AWW/APH/AVC/AGU/AWU/BKF		110 150	
Oil press. switch/Int. pres. aceite	AVC, AWU, AWW, APH, BKF	<b>12880</b>	
Oil press. switch/Int. pres. aceite	APH, AWW, AWU, AVC	<b>12881</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35640</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.8 T</b>		<b>2001-05</b>	
AWP/BNU		132 180	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.8 T Cabrio</b>		<b>2003 -&gt;</b>	
AWW/AWU/BKF		110 150	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Oil press. switch/Int. pres. aceite	AWW	<b>12881</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.		<b>35640</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	

**VOLKSWAGEN Cont.**

<b>New Beetle 1.9 TDI</b>			<b>1998-04</b>
ALH			66 90
Oil press. switch/Int. pres. aceite		<b>11690</b>	
Oil press. switch/Int. pres. aceite	Ch. 9C-X-919701 ->	<b>12890</b>	
Oil press. switch/Int. pres. aceite	Ch. 1C-X-430801 ->	<b>12890</b>	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12930</b>	
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>	
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	<b>31610</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>	
Temp. s. warning lamp/Termocont. temp.	Automatic	<b>35580</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>	
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>	
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>	
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>	
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.9 TDI</b>		<b>2001 -&gt;</b>	
BEW/ATD		74 101	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 1.9 TDI, Cabrio</b>		<b>2003 -&gt;</b>	
AXR		74 100	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
<b>New Beetle 1.9 TDI, Cabrio</b>		<b>2005 -&gt;</b>	
BSW		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 2.0</b>		<b>1998 -&gt;</b>	
APK/AZJ/AVH/AQY/AEG/BEV/BHP/BER/AZG/CBPA/BEJ		85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Oil press. switch/Int. pres. aceite	AEG, AZG, AQY, APK	<b>12881</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24771</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 2.0 Cabrio</b>		<b>2002 -&gt;</b>	
AZJ/BEV/BDC/BGD		85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 2.3 V5</b>		<b>2000 -&gt;</b>	
AQN		125 170	
Oil press. switch/Int. pres. aceite	0.25 bar	<b>12870</b>	
Oil press. switch/Int. pres. aceite	1.40 bar	<b>12880</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>New Beetle 2.5, Cabrio</b>		<b>2005 -&gt;</b>	
BPS/BPR		110 150	
Oil press. switch/Int. pres. aceite		<b>12850</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>	
<b>New Beetle RSI 3.2</b>		<b>2000-01</b>	
AXJ		165 224	
Oil press. switch/Int. pres. aceite		<b>12870</b>	
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>	
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>	
Temp. s. warning lamp/Termocont. temp.	-> Ch. 9C-X-999000	<b>35650</b>	
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Passat 1.4 TSI EcoFuel</b>		<b>2009 -&gt;</b>	
CDGA		110 150	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Passat 1.4 TSI EcoFuel Variant</b>		<b>2009 -&gt;</b>	
CDGA		110 150	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
<b>Passat 1.4 TSI, Variant</b>		<b>2007 -&gt;</b>	
CAXA		90 122	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Passat 1.6 FSI, Variant</b>		<b>2005 -&gt;</b>	
BLF		85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	
Rev. light switch/Int. luz marcha atrás		<b>40675</b>	
<b>Passat 1.6 TD, Variant</b>		<b>1988-93</b>	
RA/SB		59 80	
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>	
Stop light switch/Int. luz stop		<b>24430</b>	
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>	
<b>Passat 1.6 TDI, Variant</b>		<b>2009 -&gt;</b>	
CAYC		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>	

**VOLKSWAGEN Cont.**

<b>Passat 1.6, Variant</b>		<b>1988-91</b>
EZ /1F		53 72
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Stop light switch/Int. luz stop		24430
Temp. sending unit/Termo-Resistencia		32110
Thermistor-Thermocont./Doble función	Black/Negro	34320
Temp. s. warning lamp/Termocont. temp.		35440
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Temp. s. warning lamp/Termocont. temp.		35660
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
<b>Passat 1.6, Variant</b>		<b>1994-96</b>
AEK/AFT		74 101
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.80 bar	12910
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop		24430
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35350
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Passat 1.6, Variant</b>		<b>1996-00</b>
AHL/ADP/ARM/ANA		74 101
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Ch. 3B-Y-000001 ->	12880
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
Rev. light switch/Int. luz marcha atrás		40715
<b>Passat 1.6, Variant</b>		<b>2000-05</b>
ALZ		75 102
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	4 terminals/bornes	24565
Stop light switch/Int. luz stop	05.2002 ->	24761
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391
Rev. light switch/Int. luz marcha atrás		40660
Rev. light switch/Int. luz marcha atrás		40675
Rev. light switch/Int. luz marcha atrás		40715
<b>Passat 1.6, Variant</b>		<b>2005 -&gt;</b>
BSF/BSE		75 102
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Rev. light switch/Int. luz marcha atrás		40675
<b>Passat 1.8 16V, Variant</b>		<b>1988-89</b>
KR		100 136
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Oil press. transmitter/Transm. pres. aceite		14740
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop		24430
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35440
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Passat 1.8 G60 Syncro, Variant</b>		<b>1988-97</b>
PG		118 160
Oil press. switch/Int. pres. aceite	0.40 bar	11070
Stop light switch/Int. luz stop		24430
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35440
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
<b>Passat 1.8 T 20V</b>		<b>2000-05</b>
AWT/AWL		110 150
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	4 terminals/bornes	24565
Stop light switch/Int. luz stop	AWT, 05.2002 ->	24761
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás	With/Con cable	40715
<b>Passat 1.8 T 20V Variant</b>		<b>2000-05</b>
AWT		110 150
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Stop light switch/Int. luz stop	4 terminals/bornes	24565
Stop light switch/Int. luz stop	05.2002 ->	24761
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Fan switch/Termocontacto ventilador	With/Con A.A.	38180
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391
Rev. light switch/Int. luz marcha atrás		40665
Rev. light switch/Int. luz marcha atrás	With/Con cable	40715

**VOLKSWAGEN Cont.**

<b>Passat 1.8 T, Variant</b>		<b>1996-00</b>
AEB/ANB/APU		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	12880
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391
Rev. light switch/Int. luz marcha atrás		40715
<b>Passat 1.8 TSi, CC, Variant</b>		<b>2008 -&gt;</b>
BZB/CDAA		118 160
Oil press. switch/Int. pres. aceite	BZB	12880
Oil press. switch/Int. pres. aceite	CDAA	12890
Rev. light switch/Int. luz marcha atrás		40675
<b>Passat 1.8, Syncro, Variant</b>		<b>1996-00</b>
ADR/APT/ARG		92 125
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Ch. 3B-Y-000001 ->	12880
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38391
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
Rev. light switch/Int. luz marcha atrás		40715
<b>Passat 1.8, Variant</b>		<b>1988-93</b>
PF		79 107
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop		24430
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35440
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.		35640
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Passat 1.8, Variant</b>		<b>1988-92</b>
PB		82 112
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	Open/Conecta, 1.80 bar	12910
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop		24430
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.		35350
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35440
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.		35640
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670
<b>Passat 1.8, Variant</b>		<b>1990-97</b>
AAM		55 75
Oil press. switch/Int. pres. aceite		11690
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar	12900
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.80 bar	12910
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	24280
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	24420
Stop light switch/Int. luz stop		24430
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	31610
Temp. s. warning lamp/Termocont. temp.	Climat	35310
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	35320
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35350
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35440
Temp. s. warning lamp/Termocont. temp.	Automatic	35580
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	35640
Temp. s. warning lamp/Termocont. temp.	Climat	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes	37210
Fan switch/Termocontacto ventilador	3 terminals/bornes	37820
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	38170
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	40660
Rev. light switch/Int. luz marcha atrás	With/Con cable	40665
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	40670





**VOLKSWAGEN Cont.**

<b>Passat 2.3 VR5, Syncro/4motion, Variant</b>		<b>1996-00</b>
AGZ		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35630</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>Passat 2.5 TDI 4motion, Variant</b>		<b>2003-05</b>
BAU/BDH		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 3B-1450000	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3B-1-450001 ->	<b>41303</b>
<b>Passat 2.5 TDI, 4motion, Variant</b>		<b>2000-05</b>
AKN/AFB		110 150
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 3B-1450000	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3B-1-450001 ->	<b>41303</b>
<b>Passat 2.5 TDI, Syncro/4motion, Variant</b>		<b>1998-00</b>
AKN/AFB		110 150
Oil press. switch/Int. pres. aceite	-> 10.2000, Ch. 3B-Y-000001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	AKN, 11.2000 ->	<b>12882</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 3B-1450000	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3B-1-450001 ->	<b>41303</b>
<b>Passat 2.5 TDI, Variant</b>		<b>2003-05</b>
BDG		120 163
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12882</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	-> Ch. 3B-1450000	<b>40570</b>
Rev. light switch/Int. luz marcha atrás	Ch. 3B-1-450001 ->	<b>41303</b>
<b>Passat 2.8 V6 Syncro/4motion, Variant</b>		<b>1996-00</b>
APR/ACK/ALG/AQD		142 193
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>Passat 2.8 V6, Variant</b>		<b>1996-00</b>
APR/ACK/AQD		142 193
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38391</b>
Rev. light switch/Int. luz marcha atrás		<b>40715</b>
<b>Passat 2.8 VR6, Variant</b>		<b>1991-97</b>
AAA		128 174
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Thermistor-Thermocont./Doble función		<b>34322</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
<b>Passat 2.8, 4motion, Variant</b>		<b>2000-05</b>
ATQ/AMX		142 193
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador	05.2002 ->	<b>38391</b>
Rev. light switch/Int. luz marcha atrás	2 fans or speeds/Ventil. o veloc.	<b>40715</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	
<b>Passat 2.9 VR6 Syncro Variant</b>		<b>1994-97</b>
ABV		135 184
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	<b>34322</b>
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	<b>34330</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	<b>40665</b>
<b>Passat 3.6 4motion CC</b>		<b>2008 -&gt;</b>
BWS		220 300
Oil press. switch/Int. pres. aceite		<b>12884</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Passat 3.6 R36 4motion, Variant</b>		<b>2007 -&gt;</b>
BWS		220 300
Oil press. switch/Int. pres. aceite		<b>12884</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Passat 4.0 W8 4motion, Variant</b>		<b>2001-05</b>
BDP/BDN		202 275
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24565</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	05.2002 ->	<b>40715</b>
Rev. light switch/Int. luz marcha atrás	With/Con cable	
<b>Phaeton 3.0 V6 TDI 4motion</b>		<b>2004 -&gt;</b>
BMK		165 224
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Oil press. switch/Int. pres. aceite	0.90 bar	<b>12882</b>
Stop light switch/Int. luz stop	-> Ch. 3D-8-007000	<b>24761</b>
<b>Phaeton 3.0 V6 TDI 4motion</b>		<b>2008 -&gt;</b>
CARB/CEXA		176 240
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Oil press. switch/Int. pres. aceite	CEXA	<b>12882</b>
<b>Phaeton 3.0 V6 TDI 4motion</b>		<b>2007 -&gt;</b>
CARA		171 233
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Oil press. switch/Int. pres. aceite	0.90 bar	<b>12882</b>
<b>Phaeton 3.2 V6</b>		<b>2002 -&gt;</b>
AYT/BKL		177 241
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	-> Ch. 3D-8-007000	<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>Phaeton 3.2 V6 4motion</b>		<b>2004 -&gt;</b>
BRK/BKL		177 241
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Rev. light switch/Int. luz marcha atrás	Ch. 8-E-200001 ->	<b>41303</b>
<b>Phaeton 4.2 V8 4motion</b>		<b>2003 -&gt;</b>
BGJ/BGH		246 335
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>

**VOLKSWAGEN Cont.**

<b>Phaeton 5.0 V10 TDI 4motion</b>		<b>2002 -&gt;</b>
AJS		230 313
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop	-> Ch. 3D-8-007000	<b>24761</b>
<b>Phaeton 6.0 W12 4motion</b>		<b>2002 -&gt;</b>
BAN		309 420
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Stop light switch/Int. luz stop		<b>24761</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
<b>Polo 1.0</b>		<b>1999-01</b>
ALD/AUC		37 50
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24763</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.0 Classic</b>		<b>1985-94</b>
AAU/HZ/AAK		33 45
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
<b>Polo 1.0 Furgón</b>		<b>1992-99</b>
AAU		33 45
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes	<b>35580</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40665</b>
<b>Polo 1.0 Kat, Coupe</b>		<b>1989-94</b>
AAU/AAK/ACM		33 45
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
<b>Polo 1.0, Coupe</b>		<b>1985-92</b>
HZ		33 45
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35450</b>
<b>Polo 1.1, Coupe</b>		<b>1975-89</b>
HB		37 50
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.	Blue/Azul	<b>35300</b>
Temp. s. warning lamp/Termocont. temp.	White/Blanco	<b>35450</b>
<b>Polo 1.2</b>		<b>2002-07</b>
AWY/BMD		40 54
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.2</b>		<b>2007 -&gt;</b>
BBM		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.2</b>		<b>2009 -&gt;</b>
CGPB		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Polo 1.2</b>		<b>2009 -&gt;</b>
CGPA		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Polo 1.2 12V</b>		<b>2001-07</b>
AZQ/BME		47 64
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.2 12V</b>		<b>2007 -&gt;</b>
BZG		51 69
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.2 TDI</b>		<b>2009 -&gt;</b>
CFWA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Polo 1.2 TSI</b>		<b>2009 -&gt;</b>
CBZB		77 105
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Polo 1.3 Coupe</b>		<b>1991-94</b>
3F		57 78
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
<b>Polo 1.3 D, Classic, Coupe</b>		<b>1986-90</b>
MN		33 45
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35450</b>
<b>Polo 1.3 Furgón</b>		<b>1992-94</b>
AAV		40 54
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>

**VOLKSWAGEN Cont.**

<b>Polo 1.3 G40 Coupe</b>		<b>1987-90</b>
PY		85 115
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
<b>Polo 1.3 G40 Coupe</b>		<b>1990-94</b>
PY		83 113
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
<b>Polo 1.3 Kat Classic</b>		<b>1987-94</b>
NZ/MH		40 55
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
<b>Polo 1.3 Kat, Coupe</b>		<b>1987-94</b>
NZ/2G/MH/AAV		40 55
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35450</b>
<b>Polo 1.3 Kat, Coupe</b>		<b>1989-94</b>
3F		55 75
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
<b>Polo 1.3, Coupe</b>		<b>1982-89</b>
GK		55 75
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35440</b>
Temp. s. warning lamp/Termocont. temp.		<b>35450</b>
<b>Polo 1.4</b>		<b>1999-01</b>
AKK/AUD		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24763</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4</b>		<b>2009 -&gt;</b>
CGGB		63 85
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Polo 1.4 16V</b>		<b>1999-01</b>
AHW/APE/AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24763</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 16V</b>		<b>1999-01</b>
AFK/AUB/AQQ		74 101
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24763</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 16V</b>		<b>2001-08</b>
BBY/BKY/AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000, 4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 16V</b>		<b>2001-08</b>
BBZ/AUB		74 101
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190000 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 16V</b>		<b>2006 -&gt;</b>
BUD		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop		<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 16V Classic 75</b>		<b>1999-01</b>
APE/AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 16V Variant</b>		<b>1999-01</b>
APE/AUA		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>

**VOLKSWAGEN Cont.**

<b>Polo 1.4 Classic 60</b>		<b>1995-01</b>
AEX/AKV/ANW/AKK/APQ/AUD		44 60
Oil press. switch/Int. pres. aceite	AEX, APQ, AKV, -> Ch. 6K-X-520000, Ch.	<b>11690</b>
Oil press. switch/Int. pres. aceite	AEX, APQ, AKV, Ch. 6K-X-520001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	ANW, AKK, AUD	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 1.4 D, Classic, Coupe, Furgón</b>		<b>1990-94</b>
1W		35 48
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Stop light switch/Int. luz stop		<b>24430</b>
<b>Polo 1.4 FSI</b>		<b>2002-06</b>
AXU		63 86
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 Furgón</b>		<b>1998-99</b>
AEX/APQ		44 60
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 1.4 GTI</b>		<b>2010 -&gt;</b>
CAVE		132 180
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
<b>Polo 1.4 Sedan</b>		<b>2003 -&gt;</b>
BBY/BKY		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000, 4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 Sedan</b>		<b>2003 -&gt;</b>
BBZ		74 101
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000, 4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	<b>38185</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 TDI</b>		<b>1999-01</b>
AMF		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop		<b>24763</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 TDI</b>		<b>2001-05</b>
AMF/BAY		55 75
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190000 ->	<b>24763</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 TDI</b>		<b>2005 -&gt;</b>
BMS/BNV		59 80
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	Ch. 9N-3-190000 ->	<b>24763</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	Without/Sin A.A.	<b>36720</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 1.4 TDI</b>		<b>2005 -&gt;</b>
BNM/BWB		51 70
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24760</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>



**VOLKSWAGEN Cont.**

<b>Polo 1.4 TDI Sedan</b>	<b>2003 -&gt;</b>
BAY	55 75
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000, 4 terminals/bornes
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Polo 1.4 Variant</b>	<b>1997-01</b>
AEX/AKV/ANW/AKK/APQ/AUD	44 60
Oil press. switch/Int. pres. aceite	AKV, APQ, AEX, -> Ch. 6K-X-520000
Oil press. switch/Int. pres. aceite	APQ, AEX, Ch. 6K-X-520001 ->
Oil press. switch/Int. pres. aceite	ANW, AUD, AKK
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Polo 1.4, Variant</b>	<b>1999-01</b>
AKP	40 54
Oil press. switch/Int. pres. aceite	11690
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Polo 1.6 16V</b>	<b>2006 -&gt;</b>
BTS	77 105
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	Without/Sin A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	38185
Rev. light switch/Int. luz marcha atrás	40675
<b>Polo 1.6 16V GTI</b>	<b>1999-01</b>
AVY/ARC	92 125
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
Fan switch/Termocontacto ventilador	24763
Fan switch/Termocontacto ventilador	With/Con A.A.
<b>Polo 1.6 Classic 100</b>	<b>1995-01</b>
AKL/APF/AEH/AUR/AFT	74 100
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-520000
Oil press. switch/Int. pres. aceite	Ch. 6K-X-520001 ->
Oil press. switch/Int. pres. aceite	AUR, AKL, AEH, APF
Oil press. switch/Int. pres. aceite	AFT, Ch. 6K-X-520001 ->, 1.80 bar
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar
Oil press. switch/Int. pres. aceite	-> 05.1996, -> Ch. 6K-X-520000
Oil press. transmitter/Transm. pres. aceite	12910
Stop light switch/Int. luz stop	14740
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Fan switch/Termocontacto ventilador	3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Polo 1.6 Classic 75</b>	<b>1995-01</b>
ALM/AEE	55 75
Oil press. switch/Int. pres. aceite	11690
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.80 bar
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Polo 1.6 Classic 75</b>	<b>1995-97</b>
1F	55 75
Oil press. switch/Int. pres. aceite	11690
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.80 bar
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.

**VOLKSWAGEN Cont.**

<b>Polo 1.6 TDI</b>	<b>2009 -&gt;</b>
CAVA	55 75
Oil press. switch/Int. pres. aceite	Open/Conecta
<b>Polo 1.6 TDI</b>	<b>2009 -&gt;</b>
CAYB	66 90
Oil press. switch/Int. pres. aceite	Open/Conecta
<b>Polo 1.6 TDI</b>	<b>2009 -&gt;</b>
CAYC	77 105
Oil press. switch/Int. pres. aceite	Open/Conecta
<b>Polo 1.6 Variant</b>	<b>1997-01</b>
ALM/AEE	55 75
Oil press. switch/Int. pres. aceite	11690
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Polo 1.6 Variant</b>	<b>1997-01</b>
AKL/APF/AEH/AUR/AFT	74 101
Oil press. switch/Int. pres. aceite	-> Ch. 6K-X-520000
Oil press. switch/Int. pres. aceite	Ch. 6K-X-520001 ->
Oil press. switch/Int. pres. aceite	AUR, APF, AKL, AEH
Oil press. switch/Int. pres. aceite	AFT, Ch. 6K-X-520001 ->, 1.80 bar
Oil press. transmitter/Transm. pres. aceite	14740
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Polo 1.7 SDI</b>	<b>1997-99</b>
AHG	42 57
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	4 terminals/bornes
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24772
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40655
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Polo 1.7 SDI Classic 57</b>	<b>1997-01</b>
AKW	42 57
Oil press. switch/Int. pres. aceite	Ch. 6K-X-520001 ->, 0.25 bar
Oil press. switch/Int. pres. aceite	Ch. 6K-X-520001 ->
Oil press. switch/Int. pres. aceite	0.70 bar
Stop light switch/Int. luz stop	2 terminals/bornes
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24772
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40655
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Polo 1.7 SDI Variant</b>	<b>1997-01</b>
AKW	42 57
Oil press. switch/Int. pres. aceite	0.25 bar
Oil press. switch/Int. pres. aceite	0.70 bar
Stop light switch/Int. luz stop	2 terminals/bornes
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24772
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40655
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Polo 1.7 SDI, Furgón</b>	<b>1997-01</b>
AKU	44 60
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	2 terminals/bornes
Stop light switch/Int. luz stop	-> Ch. 9N-3-190000, 4 terminals/bornes
Stop light switch/Int. luz stop	Ch. 9N-3-190001 ->
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.
Stop light switch/Int. luz stop	24772
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40655
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Polo 1.8 GTI</b>	<b>2005 -&gt;</b>
BJX	110 150
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24763
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.
Rev. light switch/Int. luz marcha atrás	38185
Rev. light switch/Int. luz marcha atrás	40675



**VOLKSWAGEN Cont.**

<b>Polo 50 1.0</b>		<b>1996-99</b>
AER/ALL		37 50
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes	<b>35580</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40665</b>
<b>Polo 55 1.4</b>		<b>1995-99</b>
AEX		40 55
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.		<b>35350</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 60 1.4</b>		<b>1995-99</b>
AEX/AKV/APQ		44 60
Oil press. switch/Int. pres. aceite		<b>11690</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.		<b>35350</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 60 1.7 SDI</b>		<b>1997-99</b>
AKU		44 60
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Stop light switch/Int. luz stop	2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24763</b>
On clutch pedal/Int. pedal embrague	Cruise control/Control veloc.	<b>24772</b>
Stop light switch/Int. luz stop		<b>24773</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>36270</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40655</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Polo 64 1.9 D</b>		<b>1994-99</b>
AEF		47 64
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12930</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	Automatic	<b>35580</b>
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	<b>35640</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 64 1.9 SDI</b>		<b>1996-99</b>
AGD		47 64
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 6N-X-090001 ->	<b>12890</b>
Oil press. switch/Int. pres. aceite	Ch. 6N-W-000001 -> Ch. 6N-X-090000	<b>12930</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Stop light switch/Int. luz stop	4 terminals/bornes	<b>24763</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	Automatic	<b>35580</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 75 1.6</b>		<b>1994-99</b>
AEA/AEE/AHS		55 75
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar	<b>12900</b>
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.80 bar	<b>12910</b>
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078	<b>24280</b>
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals	<b>24420</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. Aceite	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	-> 05.1996	<b>35350</b>
Fan switch/Termocontacto ventilador	2 terminals/bornes	<b>37210</b>
Fan switch/Termocontacto ventilador	3 terminals/bornes	<b>37820</b>
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.	<b>40670</b>
<b>Polo 90 1.8 Classic</b>		<b>1997-01</b>
ADD		66 90
Temp. s. warning lamp/Termocont. temp.	Climat	<b>35650</b>
<b>Santana 1.8</b>		<b>1995 -&gt;</b>
		63 86
Oil press. switch/Int. pres. aceite	Automatic	<b>12920</b>

**VOLKSWAGEN Cont.**

<b>Scirocco 1.4 TSI</b>		<b>2008 -&gt;</b>
CAVD		118 160
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Scirocco 1.4 TSI</b>		<b>2008 -&gt;</b>
CAXA		90 122
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12881</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Scirocco 1.6</b>		<b>1983-89</b>
EW		55 75
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite		<b>14610</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.	Automatic Choke/Arranque autom.	<b>35420</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Temp. s. warning lamp/Termocont. temp.		<b>35660</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 1.6</b>		<b>1986-90</b>
RE		53 72
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite		<b>14610</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 1.8</b>		<b>1983-92</b>
EX		66 90
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite	Automatic	<b>12920</b>
Oil press. transmitter/Transm. pres. aceite		<b>14610</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
Temp. s. warning lamp/Termocont. temp.	Automatic Choke/Arranque autom.	<b>35420</b>
Temp. s. warning lamp/Termocont. temp.		<b>35440</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 1.8</b>		<b>1985-92</b>
JH		70 95
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Stop light switch/Int. luz stop		<b>24430</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	<b>35340</b>
Temp. s. warning lamp/Termocont. temp.		<b>35430</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 1.8</b>		<b>1982-89</b>
EV/JJ/PB/DX		82 112
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite		<b>14610</b>
Stop light switch/Int. luz stop		<b>24430</b>
Stop light switch/Int. luz stop		<b>24541</b>
Temp. s. warning lamp/Termocont. temp.		<b>35300</b>
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	<b>35340</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Temp. s. warning lamp/Termocont. temp.		<b>35660</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 1.8 16V</b>		<b>1985-89</b>
KR		102 139
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite		<b>14740</b>
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	<b>35340</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 1.8 16V</b>		<b>1986-92</b>
PL		95 129
Oil press. switch/Int. pres. aceite		<b>11060</b>
Oil press. switch/Int. pres. aceite	0.40 bar	<b>11070</b>
Oil press. transmitter/Transm. pres. aceite		<b>14610</b>
Temp. sending unit/Termo-Resistencia		<b>32110</b>
Temp. s. warning lamp/Termocont. temp.	1 terminals/bornes, Blue/Azul	<b>35340</b>
Temp. s. warning lamp/Termocont. temp.		<b>35430</b>
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	<b>35620</b>
Rev. light switch/Int. luz marcha atrás	Onboard computer/Ordenador a bordo	<b>40710</b>
<b>Scirocco 2.0 TDI</b>		<b>2008 -&gt;</b>
CBDB/CFHC		103 140
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12890</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Scirocco 2.0 TSI</b>		<b>2008 -&gt;</b>
CAWB		147 200
Oil press. switch/Int. pres. aceite	Open/Conecta	<b>12880</b>
Rev. light switch/Int. luz marcha atrás		<b>40675</b>
<b>Sharan 1.8 T 20V</b>		<b>1997 -&gt;</b>
AWC/AJH		110 150
Oil press. switch/Int. pres. aceite		<b>11690</b>
Oil press. switch/Int. pres. aceite	-> 08.2000, -> Ch. 7M-X-070000	<b>11690</b>
Oil press. switch/Int. pres. aceite	Ch. 7M-X-070001 ->	<b>12870</b>
Oil press. switch/Int. pres. aceite	08.2000 ->, Ch. 7M-X-070001 ->	<b>12880</b>
Oil press. switch/Int. pres. aceite	-> 08.2000, 1.80 bar	<b>12910</b>
Stop light switch/Int. luz stop	-> 08.2000, 2 terminals/bornes	<b>24420</b>
Stop light switch/Int. luz stop	08.2000 ->, 4 terminals/bornes	<b>24760</b>
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	<b>24762</b>
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite. -> 08.2000	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	-> 08.2000	<b>35350</b>
Temp. s. warning lamp/Termocont. temp.	-> 08.2000, 4 terminals/bornes	<b>35590</b>
Fan switch/Termocontacto ventilador	With/Con A.A.	<b>38180</b>
Rev. light switch/Int. luz marcha atrás		<b>40660</b>
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.	<b>40675</b>

**VOLKSWAGEN Cont.**

<b>Sharan 1.9 TDI</b>	1995 ->
ANU/1Z/AHU	66 90
Oil press. switch/Int. pres. aceite	AHU, 1Z, 0.25 bar
Oil press. switch/Int. pres. aceite	11690
Oil press. switch/Int. pres. aceite	12870
Oil press. switch/Int. pres. aceite	12882
Oil press. switch/Int. pres. aceite	12890
Oil press. switch/Int. pres. aceite	12930
Stop light switch/Int. luz stop	24420
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	35310
Temp. s. warning lamp/Termocont. temp.	35320
Temp. s. warning lamp/Termocont. temp.	35580
Temp. s. warning lamp/Termocont. temp.	35590
Temp. s. warning lamp/Termocont. temp.	35640
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Sharan 1.9 TDI</b>	1996-00
AVG/AFN	81 110
Oil press. switch/Int. pres. aceite	11690
Oil press. switch/Int. pres. aceite	12930
Stop light switch/Int. luz stop	24420
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	35310
Temp. s. warning lamp/Termocont. temp.	35320
Temp. s. warning lamp/Termocont. temp.	35580
Temp. s. warning lamp/Termocont. temp.	35650
Temp. s. warning lamp/Termocont. temp.	Climat
Fan switch/Termocontacto ventilador	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	40660
<b>Sharan 1.9 TDI</b>	2002 ->
ASZ	96 130
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Fan switch/Termocontacto ventilador	4 terminals/bornes, Green/Verde
Rev. light switch/Int. luz marcha atrás	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	38180
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Sharan 1.9 TDI</b>	2005 ->
BTB	110 150
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Fan switch/Termocontacto ventilador	4 terminals/bornes, Green/Verde
Rev. light switch/Int. luz marcha atrás	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	38180
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Sharan 1.9 TDI, 4motion</b>	2000 ->
BVK/AUY	85 115
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Fan switch/Termocontacto ventilador	4 terminals/bornes, Green/Verde
Rev. light switch/Int. luz marcha atrás	With/Con A.A.
Rev. light switch/Int. luz marcha atrás	38180
Rev. light switch/Int. luz marcha atrás	40660
Rev. light switch/Int. luz marcha atrás	40675
<b>Sharan 2.0</b>	1995 ->
ATM/ADY	85 115
Oil press. switch/Int. pres. aceite	-> Ch. 7M-X-020014
Oil press. switch/Int. pres. aceite	Ch. 7M-X-020015 ->
Oil press. switch/Int. pres. aceite	Open/Conecta
Oil press. switch/Int. pres. aceite	ADY, Ch. 7M-X-020015 ->
Oil press. switch/Int. pres. aceite	-> 05.1996, 1.40 bar
Oil press. switch/Int. pres. aceite	-> 05.1996, -> Ch. 7M-X-020014
Stop light switch/Int. luz stop	-> Ch. 6KZR643267, ZR114078
Stop light switch/Int. luz stop	Ch. 6KZR643268, ZR114079 ->, 2 terminals
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Stop light switch/Int. luz stop	24762
Temp. sending unit/Termo-Resistencia	4 terminals/bornes, Green/Verde
Temp. s. warning lamp/Termocont. temp.	Oil Temp./Temp. aceite
Temp. s. warning lamp/Termocont. temp.	Climat
Temp. s. warning lamp/Termocont. temp.	2 terminals/bornes
Temp. s. warning lamp/Termocont. temp.	35320
Temp. s. warning lamp/Termocont. temp.	35350
Temp. s. warning lamp/Termocont. temp.	80 °C
Temp. s. warning lamp/Termocont. temp.	35525
Temp. s. warning lamp/Termocont. temp.	35580
Temp. s. warning lamp/Termocont. temp.	-> 05.1996
Temp. s. warning lamp/Termocont. temp.	35640
Temp. s. warning lamp/Termocont. temp.	35650
Fan switch/Termocontacto ventilador	2 terminals/bornes
Fan switch/Termocontacto ventilador	3 terminals/bornes
Fan switch/Termocontacto ventilador	Climat, 3 terminals/bornes
Rev. light switch/Int. luz marcha atrás	Manual 5 speed/vel.
Rev. light switch/Int. luz marcha atrás	Manual 4 speed/vel.
<b>Sharan 2.0</b>	1995-00
ABF	110 150
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde
<b>Sharan 2.0 LPG</b>	24762
ATM	2008 ->
Rev. light switch/Int. luz marcha atrás	85 115
<b>Sharan 2.0 TDI</b>	40675
BRT	2005 ->
Oil press. switch/Int. pres. aceite	103 140
Stop light switch/Int. luz stop	Open/Conecta
Rev. light switch/Int. luz marcha atrás	4 terminals/bornes, Green/Verde
<b>Sharan 2.8 V6 24V, 4motion</b>	12890
AYL	24762
Oil press. switch/Int. pres. aceite	4 terminals/bornes
Stop light switch/Int. luz stop	24760
Stop light switch/Int. luz stop	24762
Rev. light switch/Int. luz marcha atrás	4 terminals/bornes, Green/Verde
<b>Sharan 2.8 VR6, Syncro</b>	40675
AAA/AMY	1995-00
Oil press. switch/Int. pres. aceite	128 174
Oil press. switch/Int. pres. aceite	Ch. 7M-X-020015 ->
Stop light switch/Int. luz stop	Ch. 7M-X-020015 ->, 1.40 bar
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	24760
Thermistor-Thermocont./Doble función	4 terminals/bornes, Green/Verde
	24762
	34322

**VOLKSWAGEN Cont.**

<b>Taro 1.8</b>	1989-94
2Y	61 83
Oil press. switch/Int. pres. aceite	-> Ch. 7A-N9505000
Oil press. switch/Int. pres. aceite	Ch. 7A-N9505001 ->
Stop light switch/Int. luz stop	11610
Rev. light switch/Int. luz marcha atrás	12550
<b>Taro 2.2</b>	24720
4Y	40846
Oil press. switch/Int. pres. aceite	1989-94
Oil press. switch/Int. pres. aceite	69 94
Stop light switch/Int. luz stop	11610
Stop light switch/Int. luz stop	Ch. 7A-N9505001 ->
Rev. light switch/Int. luz marcha atrás	12550
<b>Taro 2.4 D, 4x4</b>	24720
2L	40846
Stop light switch/Int. luz stop	1989-97
Rev. light switch/Int. luz marcha atrás	61 83
<b>Taro 2.4 D, 4x4</b>	24720
2L	40846
Stop light switch/Int. luz stop	1989-97
Rev. light switch/Int. luz marcha atrás	61 83
<b>Taro 2.4 i 4x4</b>	24720
22R	40846
Oil press. switch/Int. pres. aceite	1989-97
Oil press. switch/Int. pres. aceite	84 114
Stop light switch/Int. luz stop	11610
Rev. light switch/Int. luz marcha atrás	Ch. 7A-N9505001 ->
<b>Tiguan 1.4 TSI, 4motion</b>	12550
BWK/CAVA	24720
Oil press. switch/Int. pres. aceite	40846
Rev. light switch/Int. luz marcha atrás	2007 ->
<b>Tiguan 2.0 TDI</b>	110 150
CFFD	12881
Oil press. switch/Int. pres. aceite	Open/Conecta
<b>Tiguan 2.0 TDI 4motion</b>	40675
CFGB/CBBB	2010 ->
Oil press. switch/Int. pres. aceite	81 110
Rev. light switch/Int. luz marcha atrás	12881
<b>Tiguan 2.0 TDI 4motion</b>	2007 ->
CBAA/CFFA	125 170
Oil press. switch/Int. pres. aceite	12890
Rev. light switch/Int. luz marcha atrás	40675
<b>Tiguan 2.0 TFSI 4motion</b>	2007 ->
CCZA/CAWB/CCTA	100 136
Oil press. switch/Int. pres. aceite	Open/Conecta
Rev. light switch/Int. luz marcha atrás	12890
<b>Tiguan 2.0 TFSI 4motion</b>	2007 ->
CAWA/CCZC	103 140
Oil press. switch/Int. pres. aceite	Open/Conecta
Rev. light switch/Int. luz marcha atrás	12890
<b>Touareg 2.5 R5 TDI</b>	40675
BPE/BAC	2007 ->
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	4 terminals/bornes
Stop light switch/Int. luz stop	12890
Stop light switch/Int. luz stop	24760
<b>Touareg 3.0 V6 TDI</b>	24761
CATA/BKS	2004-10
Oil press. switch/Int. pres. aceite	165 225
Stop light switch/Int. luz stop	12880
<b>Touareg 3.0 V6 TDI</b>	24761
CASA/CASC	2007-10
Oil press. switch/Int. pres. aceite	176 240
Stop light switch/Int. luz stop	12882
<b>Touareg 3.2 V6</b>	24761
AZZ/BMW/BKJ/BAA/BMX/BRJ	2002-06
Oil press. switch/Int. pres. aceite	162 220
Stop light switch/Int. luz stop	12880
Stop light switch/Int. luz stop	24760
<b>Touareg 3.2 V6</b>	24761
BMX	2004-06
Oil press. switch/Int. pres. aceite	177 241
Stop light switch/Int. luz stop	12880
<b>Touareg 3.6 V6 FSI</b>	24761
BHL/BHK	2006-10
Oil press. switch/Int. pres. aceite	206 280
Oil press. switch/Int. pres. aceite	12880
Stop light switch/Int. luz stop	12885
<b>Touareg 4.2 V8</b>	24761
AXQ/BHX	2002-06
Oil press. switch/Int. pres. aceite	228 310
Stop light switch/Int. luz stop	12880
Stop light switch/Int. luz stop	24760
Fan switch/Termocontacto ventilador	AXQ
<b>Touareg 4.2 V8 FSI</b>	24761
BAR	38185
Oil press. switch/Int. pres. aceite	2006-10
Stop light switch/Int. luz stop	257 350
<b>Touareg 5.0 R50 TDI</b>	12880
CBWA	24761
Oil press. switch/Int. pres. aceite	Open/Conecta
Stop light switch/Int. luz stop	12880
<b>Touareg 5.0 V10 TDI</b>	24761
AH/BL/BWF	2002-10
Oil press. switch/Int. pres. aceite	230 313
Stop light switch/Int. luz stop	12880
Stop light switch/Int. luz stop	24760
<b>Touareg 6.0 W12</b>	24761
CFRA/BJN	2005-10
Oil press. switch/Int. pres. aceite	331 450
Stop light switch/Int. luz stop	12880
	24761

**VOLKSWAGEN Cont.**

<b>Touran 1.4 FSI</b>		2006 ->	
BLG/CAVB		125 170	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
<b>Touran 1.4 TSI</b>		2006 ->	
BMV/CAVC		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 1.4 TSI EcoFuel</b>		2009 ->	
CDGA		110 150	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
<b>Touran 1.6</b>		2003-10	
BGU/BSF/BSE		75 102	
Oil press. switch/Int. pres. aceite		11690	
Oil press. switch/Int. pres. aceite	BSF, BSE	12880	
Oil press. switch/Int. pres. aceite	BGU	12890	
Stop light switch/Int. luz stop	-> Ch. 1T-6-077656	24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	With/Con A.A.	38180	
Rev. light switch/Int. luz marcha atrás		40660	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 1.6 FSI</b>		2003-07	
BLF/BLP/BAG		85 115	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 1.6 TDI</b>		2010 ->	
CAYC		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12881	
<b>Touran 1.9 TDI</b>		2003 ->	
AVQ		74 100	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 1.9 TDI</b>		2003 ->	
BXE/BKC/BLS		77 105	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop	-> Ch. 1T-6-077656	24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 1.9 TDI</b>		2004 ->	
BXF/BXJ/BRU		66 90	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 2.0 EcoFuel</b>		2006-09	
BSX		80 109	
Oil press. switch/Int. pres. aceite	Open/Conecta	12880	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 2.0 FSI</b>		2003 ->	
BLX/BLY/BLR/AXW/BVZ/BVY		110 150	
Oil press. switch/Int. pres. aceite	Ch. 1T-5-120001 ->	12850	
Oil press. switch/Int. pres. aceite	BLR, BLX, BLY	12850	
Oil press. switch/Int. pres. aceite	AXW, BLX, BLY, -> Ch. 1T-5-120000	12895	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 2.0 TDI</b>		2003 ->	
AZV		100 136	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop	-> Ch. 1T-6-077656	24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 2.0 TDI</b>		2005 ->	
BMN/CFJA		125 170	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop		24761	
Stop light switch/Int. luz stop		24763	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 2.0 TDI</b>		2005 ->	
BMM		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop	-> Ch. 1T-6-077656	24761	
Stop light switch/Int. luz stop		24763	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Touran 2.0 TDI 16V</b>		2003 ->	
CFHC/BKD		103 140	
Oil press. switch/Int. pres. aceite	Open/Conecta	12890	
Stop light switch/Int. luz stop	-> Ch. 1T-6-077656	24761	
Stop light switch/Int. luz stop		24763	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38185	
Rev. light switch/Int. luz marcha atrás		40675	
<b>Transporter III 1.6 TD, Syncro</b>		1984-92	
JX		51 70	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.		35820	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38150	

**VOLKSWAGEN Cont.**

<b>Transporter III 1.6 TD, Syncro</b>		1984-92	
JX		51 69	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.		35820	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38150	
<b>Transporter III 1.7 D</b>		1986-92	
KY		42 57	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.		35820	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38150	
<b>Transporter III 1.9</b>		1982-92	
DF		44 60	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.		35440	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm. Carb.	35440	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
<b>Transporter III 1.9</b>		1983-89	
GW		66 90	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Temp. s. warning lamp/Termocont. temp.		35300	
<b>Transporter III 1.9</b>		1984-89	
DH		61 83	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Temp. s. warning lamp/Termocont. temp.		35300	
<b>Transporter III 1.9, Syncro</b>		1982-92	
DG		57 78	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
Temp. s. warning lamp/Termocont. temp.	Intake manifold preh./Prec. tubo adm.	35440	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38150	
<b>Transporter III 2.1 i</b>		1989-92	
SS		68 92	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
<b>Transporter III 2.1, Kat, Syncro</b>		1985-92	
MV		70 95	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38150	
<b>Transporter III 2.1, Syncro</b>		1985-92	
DJ		82 112	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
<b>Transporter III 2.1, Syncro</b>		1986-92	
SR		64 87	
Oil press. switch/Int. pres. aceite		11060	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Stop light switch/Int. luz stop		21210	
Temp. s. warning lamp/Termocont. temp.		35300	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38150	
<b>Transporter IV 1.8</b>		1990-92	
PD		49 67	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Thermistor-Thermocont./Doble función		34322	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	35590	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38160	
Rev. light switch/Int. luz marcha atrás		40660	
<b>Transporter IV 1.9 D</b>		1990-03	
1X		45 61	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Oil press. switch/Int. pres. aceite	Blue/Azul	11690	
Thermistor-Thermocont./Doble función		34322	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	35590	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38160	
Rev. light switch/Int. luz marcha atrás		40660	
<b>Transporter IV 1.9 TD</b>		1992-03	
ABL		50 68	
Oil press. switch/Int. pres. aceite	0.40 bar	11070	
Oil press. switch/Int. pres. aceite	Blue/Azul	11690	
Oil press. switch/Int. pres. aceite	Ch. 70-X-053925 ->	12890	
Stop light switch/Int. luz stop	4 terminals/bornes, Green/Verde	24762	
Thermistor-Thermocont./Doble función	4 terminals/bornes, Black/Negro	34322	
Thermistor-Thermocont./Doble función	4 terminals/bornes, Blue/Azul	34330	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Brown/Marrón	35580	
Temp. s. warning lamp/Termocont. temp.	4 terminals/bornes, Green/Verde	35590	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	37950	
Fan switch/Termocontacto ventilador	2 fans or speeds/Ventil. o veloc.	38160	
Rev. light switch/Int. luz marcha atrás		40660	





**VOLKSWAGEN Cont.**

<b>Vento 1.9 TDI</b>	<b>1996-98</b>
AFN	81 110
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	<b>12930</b>
Stop light switch/Int. luz stop	<b>24280</b>
Stop light switch/Int. luz stop	<b>24420</b>
Temp. sending unit/Termo-Resistencia	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	<b>35580</b>
Temp. s. warning lamp/Termocont. temp.	<b>35640</b>
Temp. s. warning lamp/Termocont. temp.	<b>35650</b>
Fan switch/Termocontacto ventilador	<b>37210</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Fan switch/Termocontacto ventilador	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	<b>40670</b>
<b>Vento 2.0</b>	<b>1991-98</b>
ADY/AKR/2E/AGG	85 115
Oil press. switch/Int. pres. aceite	<b>11690</b>
Oil press. switch/Int. pres. aceite	<b>12560</b>
Oil press. switch/Int. pres. aceite	<b>12900</b>
Oil press. switch/Int. pres. aceite	<b>12910</b>
Stop light switch/Int. luz stop	<b>24280</b>
Stop light switch/Int. luz stop	<b>24420</b>
Temp. sending unit/Termo-Resistencia	<b>31610</b>
Temp. s. warning lamp/Termocont. temp.	<b>35310</b>
Temp. s. warning lamp/Termocont. temp.	<b>35320</b>
Temp. s. warning lamp/Termocont. temp.	<b>35345</b>
Temp. s. warning lamp/Termocont. temp.	<b>35350</b>
Temp. s. warning lamp/Termocont. temp.	<b>35580</b>
Temp. s. warning lamp/Termocont. temp.	<b>35640</b>
Temp. s. warning lamp/Termocont. temp.	<b>35650</b>
Fan switch/Termocontacto ventilador	<b>37210</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Fan switch/Termocontacto ventilador	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	<b>40660</b>
Rev. light switch/Int. luz marcha atrás	<b>40670</b>
<b>Vento 2.8 VR6</b>	<b>1992-98</b>
AAA	128 174
Thermistor-Thermocont./Doble función	<b>34322</b>
Thermistor-Thermocont./Doble función	<b>34330</b>
Temp. s. warning lamp/Termocont. temp.	<b>35650</b>
Fan switch/Termocontacto ventilador	<b>38170</b>
Rev. light switch/Int. luz marcha atrás	<b>40665</b>

**VOLVO**

<b>240 2.0, Kombi</b>	<b>1983-93</b>
B 200 E	89 117
Oil press. switch/Int. pres. aceite	<b>11070</b>
0.40 bar	
<b>240 2.0, Kombi</b>	<b>1988-93</b>
B 200 F	82 111
Oil press. switch/Int. pres. aceite	<b>12390</b>
<b>240 2.3 i Kat, Kombi</b>	<b>1986-93</b>
B 230 F	85 115
Oil press. switch/Int. pres. aceite	<b>12390</b>
Stop light switch/Int. luz stop	<b>24150</b>
Temp. sending unit/Termo-Resistencia	<b>31360</b>
Rev. light switch/Int. luz marcha atrás	<b>40990</b>
<b>240 2.3 Kat Kombi</b>	<b>1991-92</b>
B 230 F	100 136
Oil press. switch/Int. pres. aceite	<b>11070</b>
Temp. sending unit/Termo-Resistencia	<b>31360</b>
Rev. light switch/Int. luz marcha atrás	<b>40990</b>
<b>240 2.3, Kombi</b>	<b>1984-89</b>
B 23 E	98 133
Oil press. switch/Int. pres. aceite	<b>12390</b>
Stop light switch/Int. luz stop	<b>24150</b>
Temp. sending unit/Termo-Resistencia	<b>31360</b>
Rev. light switch/Int. luz marcha atrás	<b>40990</b>
<b>240 2.4 D, Kombi</b>	<b>1979-93</b>
D 24	60 82
Oil press. switch/Int. pres. aceite	<b>11070</b>
Stop light switch/Int. luz stop	<b>24150</b>
Temp. sending unit/Termo-Resistencia	<b>32100</b>
Temp. sending unit/Termo-Resistencia	<b>32180</b>
Rev. light switch/Int. luz marcha atrás	<b>40990</b>
<b>240 2.4 D, Kombi</b>	<b>1987-93</b>
D 24	58 79
Oil press. switch/Int. pres. aceite	<b>11070</b>
Stop light switch/Int. luz stop	<b>24150</b>
Temp. sending unit/Termo-Resistencia	<b>32100</b>
Temp. sending unit/Termo-Resistencia	<b>32180</b>
Rev. light switch/Int. luz marcha atrás	<b>40990</b>
<b>340-360 1.6 D, Sedan</b>	<b>1984-91</b>
D 16	40 54
Oil press. switch/Int. pres. aceite	<b>11620</b>
Stop light switch/Int. luz stop	<b>24130</b>
Fan switch/Termocontacto ventilador	<b>36050</b>
<b>340-360 1.7, Sedan</b>	<b>1985-91</b>
B 17 2 K	59 80
Oil press. switch/Int. pres. aceite	<b>11620</b>
Stop light switch/Int. luz stop	<b>24130</b>
Temp. sending unit/Termo-Resistencia	<b>31470</b>
Fan switch/Termocontacto ventilador	<b>36050</b>
-> Ch. 241000	
<b>340-360 2.0</b>	<b>1988-89</b>
B 200 F	80 109
Oil press. switch/Int. pres. aceite	<b>12390</b>
Stop light switch/Int. luz stop	<b>24130</b>
Temp. sending unit/Termo-Resistencia	<b>31360</b>
<b>340-360 2.0 Sedan</b>	<b>1984-90</b>
B 200 K	75 102
Oil press. switch/Int. pres. aceite	<b>12390</b>

**VOLVO Cont.**

<b>440 K 1.6</b>	<b>1988-96</b>
B 16 F	61 83
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.7</b>	<b>1988-96</b>
B 18 EP	78 106
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Temp. s. warning lamp/Termocont. temp.	<b>35900</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.7</b>	<b>1988-96</b>
B 18 KP	64 87
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Temp. s. warning lamp/Termocont. temp.	<b>35900</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.7</b>	<b>1989-96</b>
B 18 FP	75 102
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Temp. s. warning lamp/Termocont. temp.	<b>35900</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.7</b>	<b>1988-92</b>
B 18 KD	58 78
Rev. light switch/Int. luz marcha atrás	<b>40600</b>
<b>440 K 1.7</b>	<b>1988-89</b>
B 18 KP/B 18 K	60 81
Rev. light switch/Int. luz marcha atrás	<b>40600</b>
<b>440 K 1.7 Turbo</b>	<b>1988-96</b>
B 18 FT	88 120
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. s. warning lamp/Termocont. temp.	<b>35810</b>
Temp. s. warning lamp/Termocont. temp.	<b>35900</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Fan switch/Termocontacto ventilador	<b>38240</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.7 Turbo</b>	<b>1991-96</b>
B 18 FT	90 122
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Temp. s. warning lamp/Termocont. temp.	<b>35900</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Fan switch/Termocontacto ventilador	<b>38240</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.8</b>	<b>1991-96</b>
B 18 U	66 90
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>
<b>440 K 1.9 TD</b>	<b>1994-96</b>
D 19 T	66 90
Oil press. switch/Int. pres. aceite	<b>12370</b>
Oil press. switch/Int. pres. aceite	<b>12380</b>
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>
Oil press. transmitter/Transm. pres. aceite	<b>14870</b>
Stop light switch/Int. luz stop	<b>24210</b>
Temp. sending unit/Termo-Resistencia	<b>31730</b>
Thermistor-Thermocont./Doble función	<b>34420</b>
Fan switch/Termocontacto ventilador	<b>37820</b>
Rev. light switch/Int. luz marcha atrás	<b>41090</b>





**VOLVO Cont.**

<b>480 E 2.0</b>	<b>1992-95</b>	
B 20 F	81 110	
Oil press. switch/Int. pres. aceite	<b>12370</b>	
Oil press. switch/Int. pres. aceite	<b>12380</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14080</b>	
Oil press. transmitter/Transm. pres. aceite -> Ch. 451515	<b>14870</b>	
Stop light switch/Int. luz stop	<b>24210</b>	
Temp. sending unit/Termo-Resistencia Ch. 532138 ->	<b>31470</b>	
Temp. s. warning lamp/Termocont. temp. -> Ch. 532137	<b>35810</b>	
Fan switch/Termocontacto ventilador	<b>37260</b>	
Rev. light switch/Int. luz marcha atrás	<b>41090</b>	
<b>740 2.0</b>	<b>1985-92</b>	
B 200 G	89 121	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32400</b>	
Temp. sending unit/Termo-Resistencia	<b>32430</b>	
Fan switch/Termocontacto ventilador	<b>36060</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.0</b>	<b>1986-90</b>	
B 200 ET	118 160	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.0 Kombi</b>	<b>1989-91</b>	
B 200 F	82 112	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.0 Kombi</b>	<b>1985-92</b>	
B 200 G/B 200 E	89 121	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.0, Sedan</b>	<b>1988-90</b>	
B 200 K	76 103	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Fan switch/Termocontacto ventilador	<b>36060</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3</b>	<b>1984-90</b>	
B 23 A/B 230 F	84 114	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Fan switch/Termocontacto ventilador	<b>36060</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3 Turbo Kombi</b>	<b>1989-90</b>	
B 230 GT/B 230 FT	121 165	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3 Turbo, Kombi</b>	<b>1986-89</b>	
B 230 FT	115 156	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32400</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3 Turbo, Kombi</b>	<b>1989-90</b>	
B 230 FT	121 165	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3 Turbo, Kombi</b>	<b>1989-90</b>	
B 230 FT	140 190	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3, Kombi</b>	<b>1985-89</b>	
B 230 F	83 113	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3, Kombi</b>	<b>1988-91</b>	
B 234 F	114 156	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3, Kombi</b>	<b>1987-92</b>	
B 230 F	85 115	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia Black/Negro	<b>32400</b>	
Temp. sending unit/Termo-Resistencia	<b>32410</b>	
Fan switch/Termocontacto ventilador	<b>36060</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3, Kombi</b>	<b>1985-90</b>	
B 230 K	84 114	
Oil press. switch/Int. pres. aceite -> 12.1985	<b>11420</b>	
Oil press. switch/Int. pres. aceite 01.1986 ->	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia Black/Negro	<b>32400</b>	
Temp. sending unit/Termo-Resistencia	<b>32410</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3, Kombi</b>	<b>1988-90</b>	
B 230 FB	100 136	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.3, Kombi</b>	<b>1987-89</b>	
B 234 F	117 159	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	

**VOLVO Cont.**

<b>740 2.3, Kombi</b>	<b>1988-92</b>	
B 234 F	111 151	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia Black/Negro	<b>32400</b>	
Temp. sending unit/Termo-Resistencia -> N° B234F	<b>32410</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.4 D, Kombi</b>	<b>1984-92</b>	
D 24	60 82	
Oil press. switch/Int. pres. aceite 0.40 bar	<b>11070</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia 01.1987 ->	<b>32110</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.4 TD</b>	<b>1984-90</b>	
D 24 T	83 113	
Oil press. switch/Int. pres. aceite 0.40 bar	<b>11070</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia 01.1987 ->	<b>32110</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>740 2.4 TD Kombi</b>	<b>1985-92</b>	
D 24 T	80 109	
Oil press. switch/Int. pres. aceite 0.40 bar	<b>11070</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia 01.1987 ->	<b>32110</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>760 2.3</b>	<b>1988-92</b>	
B 230 FT	119 162	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Temp. sending unit/Termo-Resistencia	<b>31360</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>760 2.3 Turbo, Kombi</b>	<b>1984-90</b>	
B 230 ET	134 182	
Oil press. switch/Int. pres. aceite -> N° 14417	<b>11420</b>	
Oil press. switch/Int. pres. aceite N° 14418 ->	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32400</b>	
Fan switch/Termocontacto ventilador Climat	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>760 2.4 D, Kombi</b>	<b>1982-92</b>	
D 24	60 82	
Oil press. switch/Int. pres. aceite 0.40 bar	<b>11070</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32110</b>	
Fan switch/Termocontacto ventilador	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>760 2.4 TD, Kombi Interc.</b>	<b>1987-92</b>	
D 24 TIC	80 109	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>760 2.8, Kombi</b>	<b>1986-91</b>	
B 280 F	105 143	
Oil press. switch/Int. pres. aceite N° 14418 ->	<b>11620</b>	
Oil press. switch/Int. pres. aceite -> N° 14417	<b>12260</b>	
Stop light switch/Int. luz stop	<b>24020</b>	
Stop light switch/Int. luz stop -> Ch. 14418	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32390</b>	
Fan switch/Termocontacto ventilador	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>760 2.8, Kombi</b>	<b>1986-90</b>	
B 280 E/B 28 E	115 156	
Oil press. switch/Int. pres. aceite N° 14418 ->	<b>11620</b>	
Oil press. switch/Int. pres. aceite -> N° 14417	<b>12260</b>	
Stop light switch/Int. luz stop -> N° 14417	<b>24020</b>	
Stop light switch/Int. luz stop N° 14418 ->	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32390</b>	
Fan switch/Termocontacto ventilador	<b>36070</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>780 2.9</b>	<b>1987-90</b>	
B 280 F	108 147	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>850 2.0 Turbo, Kombi</b>	<b>1993-96</b>	
B 5204 T/B 5204 FT	155 210	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32370</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>850 2.0, Kombi</b>	<b>1991-96</b>	
B 5204 F	105 143	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>850 2.0, Kombi</b>	<b>1994-96</b>	
B 5202 S	93 126	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>850 2.3 T5, Kombi</b>	<b>1993-96</b>	
B 5234 FT	166 226	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32370</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	
<b>850 2.3 T5-R, Kombi</b>	<b>1995-96</b>	
B 5234 T4	184 250	
Oil press. switch/Int. pres. aceite	<b>12390</b>	
Stop light switch/Int. luz stop	<b>24150</b>	
Temp. sending unit/Termo-Resistencia	<b>32370</b>	
Rev. light switch/Int. luz marcha atrás	<b>40990</b>	

**VOLVO Cont.**

<b>850 2.5 AWD Kombi</b>	1996-96
B 5254 T	142 193
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>850 2.5 TDI, Kombi</b>	1995-96
D 5252 T	103 140
Oil press. switch/Int. pres. aceite	11690
Rev. light switch/Int. luz marcha atrás	40990
<b>850 2.5, Kombi</b>	1991-94
B 5252	103 140
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>850 2.5, Kombi</b>	1991-96
B 5254 S	125 170
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>850 2.5, Kombi</b>	1994-96
B 5252 S	106 144
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 2.0 Turbo, Kombi</b>	1990-95
B 200 FT	114 155
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12430
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Temp. sending unit/Termo-Resistencia	32430
Rev. light switch/Int. luz marcha atrás	40990
-> 12.1994	
<b>940 2.0, Kombi</b>	1992-94
B 200 F	82 112
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>940 2.3</b>	1990-94
B 230 G/B 230 FB	96 131
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 2.3</b>	1990-91
B 234 F /B 234 G	114 156
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 2.3 Kombi</b>	1990-94
B 230 FB	96 131
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 2.3 Kombi</b>	1990-91
B 234 F	114 155
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>940 2.3 Turbo, Kombi</b>	1990-94
B 230 FT	121 165
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>940 2.3 Turbo, Kombi</b>	1991-93
B 230 FT+	140 190
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>940 2.3, Kombi</b>	1992-94
B 230 FD	85 116
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>940 2.4 D, Kombi</b>	1990-94
D 24	60 82
Oil press. switch/Int. pres. aceite	11070
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32110
Rev. light switch/Int. luz marcha atrás	40990
0.40 bar	
<b>940 2.4 TD</b>	1990-94
D 24 T	80 109
Oil press. switch/Int. pres. aceite	11070
Stop light switch/Int. luz stop	24150
Rev. light switch/Int. luz marcha atrás	40990
0.40 bar	
<b>940 2.4 TD Intercooler Kombi</b>	1990-94
D 24 TIC	90 122
Oil press. switch/Int. pres. aceite	11070
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32110
Rev. light switch/Int. luz marcha atrás	40990
0.40 bar	
<b>940 2.4 TD, Kombi</b>	1990-94
D 24 T	80 109
Oil press. switch/Int. pres. aceite	11070
Stop light switch/Int. luz stop	24150
Rev. light switch/Int. luz marcha atrás	40990
0.40 bar	
<b>940 II 2.0 Turbo, Kombi</b>	1996-98
B 200 FT	114 155
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990

**VOLVO Cont.**

<b>940 II 2.3 Turbo Kombi</b>	1995-98
B 230 FT	126 171
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 II 2.3 Turbo, Kombi</b>	1994-98
B 230 FT	121 165
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 II 2.3, Kombi</b>	1994-95
B 230 FD	85 116
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>940 II 2.4 TD Interc., Kombi</b>	1994-98
D 24 TIC	90 122
Rev. light switch/Int. luz marcha atrás	40990
<b>940 II 2.4 TD Interc., Kombi</b>	1994-98
D 24 TIC	90 122
Rev. light switch/Int. luz marcha atrás	40990
<b>960 2.0, Kombi</b>	1990-93
B 204 FT	140 190
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>960 2.0, Kombi</b>	1990-93
B 204 E	103 140
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32400
Fan switch/Termocontacto ventilador	36070
Rev. light switch/Int. luz marcha atrás	40990
Climat	
<b>960 2.4 TD Interc., Kombi</b>	1991-94
D 24 TIC	85 115
Oil press. switch/Int. pres. aceite	11070
Stop light switch/Int. luz stop	24150
Temp. sending unit/Termo-Resistencia	32110
Rev. light switch/Int. luz marcha atrás	40990
0.40 bar	
<b>960 2.9</b>	1990-94
B 6304 F	150 204
Oil press. switch/Int. pres. aceite	12390
<b>960 2.9 Kombi</b>	1990-94
B 6304 F/B 6304 S	150 204
Oil press. switch/Int. pres. aceite	12390
<b>960 II 2.5, Kombi</b>	1994-96
B 6254 S	125 170
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>960 II 2.9, Kombi</b>	1994-96
B 6304 S	150 204
Oil press. switch/Int. pres. aceite	12390
<b>C30 1.6</b>	2006 ->
B 4164 S3	74 100
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40730
<b>C30 1.6 D</b>	2006 ->
D 4164 T	80 109
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40595
<b>C30 1.8</b>	2006 ->
B 4184 S11	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
<b>C30 1.8 Flexfuel</b>	2007 ->
B 4184 S8	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
<b>C30 2.0</b>	2006 ->
B 4204 S3	107 145
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
<b>C30 2.0 D</b>	2006 ->
D 4204 T	100 136
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40596
Gear box/Cambio MMT6, Manual 6 speed/vel.	
<b>C30 2.4 i</b>	2006 ->
B 5244 S4	125 170
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40592
Manual 6 speed/vel.	
<b>C30 D5</b>	2006 ->
D 5244 T8/D 5244 T13	132 180
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40592
Manual 6 speed/vel.	
<b>C30 D5</b>	2006 ->
D 5244 T9	120 163
Oil press. switch/Int. pres. aceite	12640
<b>C30 T5</b>	2006 ->
B 5254 T3	162 220
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40592
Manual 6 speed/vel.	
<b>C30 T5</b>	2007 ->
B 5254 T7	169 230
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40592
Manual 6 speed/vel.	
<b>C70 I 2.0 T, Cabrio, Coupe</b>	2000-02
B 5204 T4	120 163
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	32425
Rev. light switch/Int. luz marcha atrás	40592
Manual 6 speed/vel.	
<b>C70 I 2.0, Cabrio, Coupe</b>	1997-05
B 5204 T2	132 180
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	32425
Rev. light switch/Int. luz marcha atrás	40990

**VOLVO Cont.**

<b>C70 I 2.0, Cabrio, Coupe</b>	1997-05
B 5204 T3	166 226
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	03.1998 ->
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40592
	40990
<b>C70 I 2.3 T5 Cabrio</b>	2002-05
B 5234 T9	180 245
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	32425
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40593
<b>C70 I 2.3 T-5, Cabrio, Coupe</b>	1997-05
B 5234 T3	176 239
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	32425
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40990
<b>C70 I 2.4 T Cabrio</b>	2002-05
B 5244 T7	147 200
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40592
Rev. light switch/Int. luz marcha atrás	40593
<b>C70 I 2.5 Coupe</b>	1999-02
B 5244 S/B 5254 S	125 170
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	40990
<b>C70 I 2.5 T, Cabrio, Coupe</b>	1997-05
B 5254 T/B 5244 T	142 193
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	32425
Rev. light switch/Int. luz marcha atrás	40990
<b>C70 I 2.5, Cabrio, Coupe</b>	1998-05
B 5254 S	125 170
Temp. sending unit/Termo-Resistencia	32425
<b>C70 I 2.5, Cabrio, Coupe</b>	1999-02
B 5254 S	121 165
Oil press. switch/Int. pres. aceite	12390
Temp. sending unit/Termo-Resistencia	32425
Rev. light switch/Int. luz marcha atrás	40990
<b>C70 II 2.0 D Cabrio</b>	2008 ->
D 4204 T	100 136
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.
	40596
<b>C70 II 2.4 Cabrio</b>	2006 ->
B 5244 S5	103 140
Oil press. switch/Int. pres. aceite	12390
<b>C70 II 2.4 i Cabrio</b>	2006 ->
B 5244 S4	125 170
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
	40592
<b>C70 II D5 Cabrio</b>	2006 ->
D 5244 T8/D 5244 T13	132 180
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
	40592
<b>C70 II T5 Cabrio</b>	2006 ->
B 5254 T3	162 220
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
	40592
<b>C70 II T5 Cabrio</b>	2007 ->
B 5254 T7	169 230
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
	40592
<b>S40 I 1.6</b>	1995-99
B 4164 S	77 105
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40600
<b>S40 I 1.6</b>	1999-03
B 4164 S2	80 109
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40600
<b>S40 I 1.8</b>	1995-99
B 4184 S3/B 4184 S	85 115
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32370
Temp. sending unit/Termo-Resistencia	09.1999 ->
Thermistor-Thermocont./Doble función	B4184S
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40600
Rev. light switch/Int. luz marcha atrás	40990
<b>S40 I 1.8</b>	1999-03
B 4184 S2/B 4184 S9	90 122
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	-> 07.1999
Temp. sending unit/Termo-Resistencia	09.1999 ->
Thermistor-Thermocont./Doble función	B4184S2
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40600
<b>S40 I 1.8 i</b>	1998-03
B 4184 SM	92 125
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	-> 07.1999
Temp. sending unit/Termo-Resistencia	09.1999 ->
Thermistor-Thermocont./Doble función	34390
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	41240

**VOLVO Cont.**

<b>S40 I 1.8 i</b>	2001-03
B 4184 SJ	90 122
Oil press. switch/Int. pres. aceite	12550
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	32425
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	41240
<b>S40 I 1.9 DI</b>	1999-00
D 4192 T2	70 95
Fan switch/Termocontacto ventilador	36185
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	36185
	40600
<b>S40 I 1.9 DI</b>	2000-03
D 4192 T4	75 102
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	36185
	36185
	40990
<b>S40 I 1.9 DI</b>	2000-03
D 4192 T3	85 115
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	36185
	36185
	40990
<b>S40 I 1.9 T4</b>	1997-00
B 4194 T/B 4194 T2	147 200
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Temp. sending unit/Termo-Resistencia	32425
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40990
<b>S40 I 1.9 TD</b>	1995-99
D 4192 T	66 90
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	36185
	36185
	40600
<b>S40 I 2.0</b>	1995-03
B 4204 S2/B 4204 S	100 136
Oil press. switch/Int. pres. aceite	12390
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	-> 07.1999
Temp. sending unit/Termo-Resistencia	08.1999 ->
Temp. sending unit/Termo-Resistencia	32425
Thermistor-Thermocont./Doble función	Oil temp./Temp. aceite
Thermistor-Thermocont./Doble función	32490
Rev. light switch/Int. luz marcha atrás	34390
Rev. light switch/Int. luz marcha atrás	40600
Rev. light switch/Int. luz marcha atrás	40990
<b>S40 I 2.0</b>	1995-99
B 4204 S	103 140
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Stop light switch/Int. luz stop	24220
Temp. sending unit/Termo-Resistencia	-> 07.1999
Temp. sending unit/Termo-Resistencia	08.1999 ->
Thermistor-Thermocont./Doble función	32425
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40600
<b>S40 I 2.0 T</b>	1997-00
B 4204 T	118 160
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40990
<b>S40 I 2.0 T</b>	2001-03
B 4204 T3	120 163
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40990
<b>S40 I 2.0 T4</b>	2000-03
B 4204 T5	147 200
Oil press. switch/Int. pres. aceite	12390
Oil press. switch/Int. pres. aceite	12636
Thermistor-Thermocont./Doble función	34390
Rev. light switch/Int. luz marcha atrás	40990
<b>S40 II 1.6</b>	2005 ->
B 4164 S3	74 101
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40730
<b>S40 II 1.6 D</b>	2005 ->
D 4164 T	81 110
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	40595
<b>S40 II 1.8</b>	2004 ->
B 4184 S11	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
<b>S40 II 1.8 Flexfuel</b>	2006 ->
B 4184 S8	92 125
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
<b>S40 II 2.0</b>	2006 ->
B 4204 S3	107 146
Oil press. switch/Int. pres. aceite	12613
Rev. light switch/Int. luz marcha atrás	40595
<b>S40 II 2.0 D</b>	2004 ->
D 4204 T	100 136
Oil press. switch/Int. pres. aceite	12640
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.
	40592
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M56
	40593
Rev. light switch/Int. luz marcha atrás	Ch. 252750 ->, Gear box/Cambio MMT6,
	40596
<b>S40 II 2.0 D4</b>	2005 ->
D 4204 T2	96 131
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.
	40592
<b>S40 II 2.4</b>	2004 ->
B 5244 S5	103 140
Oil press. switch/Int. pres. aceite	12390
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.
	40592
Rev. light switch/Int. luz marcha atrás	40593

**VOLVO Cont.**

<b>S40 II 2.4</b>		2004 ->	
B 5244 S		125 170	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>S40 II 2.4 AWD</b>		2006 ->	
B 5244 S4		125 170	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>S40 II 2.4 D5</b>		2006 ->	
D 5244 T8		132 179	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
<b>S40 II T5, AWD</b>		2004 ->	
B 5254 T3		162 220	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S40 II T5, AWD</b>		2007 ->	
B 5254 T7		169 230	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.0 T</b>		2001 ->	
B 5204 T5		132 180	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4</b>		2000 ->	
B 5244 S2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4</b>		2000 ->	
B 5244 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 Bifuel</b>		2002 ->	
B 5244 SG2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 D</b>		2001 ->	
D 5244 T2		96 130	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 D</b>		2005 ->	
D 5244 T7		93 126	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 D</b>		2007 ->	
D 5244 T5		120 163	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 D5</b>		2001 ->	
D 5244 T		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 D5</b>		2005 ->	
D 5244 T4		136 185	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 T, AWD</b>		2000 ->	
B 5244 T3		147 200	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.4 T5</b>		2004 ->	
B 5244 T5		191 260	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 2.5 T, AWD</b>		2004 ->	
B 5254 T2		154 210	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 R 2.5 T AWD</b>		2003 ->	
B 5254 T4		221 300	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S60 T5</b>		2000 ->	
B 5234 T3		184 250	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S70 2.0</b>		1997-00	
B 5202 S		93 126	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.0</b>		1997-00	
B 5204 T2		132 180	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.0</b>		1997-00	
B 5204 T4		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.0 Turbo</b>		1997-00	
B 5204 T		155 210	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
<b>S70 2.0 Turbo</b>		1997-00	
B 5204 T3		166 226	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.3 T-5</b>		1997-00	
B 5234 T3		176 239	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	

**VOLVO Cont.**

<b>S70 2.3 Turbo</b>		1997-00	
B 5234 FT+		184 250	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.4</b>		1997-00	
B 5244 S/B 5254 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.4 AWD</b>		1999-00	
B 5244 S2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
<b>S70 2.4 AWD</b>		1996-99	
B 5252 FS		106 144	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.4 AWD</b>		1999-00	
B 5244 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.4 T5 AWD</b>		1996-99	
B 5254 T		142 193	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.4 Turbo</b>		1997-00	
B 5254 T/B 5244 T		142 193	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.4, Blu-Fuel</b>		1999-00	
B 5244 SG/B 5244 S2		103 140	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.5</b>		1997-00	
B 5252 S		106 144	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S70 2.5</b>		1998-00	
B 5254 S		121 165	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
<b>S70 2.5 Bifuel</b>		1998-00	
GB 5252 S		106 144	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
<b>S70 2.5 Bifuel</b>		1999-00	
B 5244 SG		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
<b>S70 2.5 TDI, AWD</b>		1997-00	
D 5252 T		103 140	
Oil press. switch/Int. pres. aceite		<b>11690</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>S80 2.0</b>		1998-06	
B 5204 T4		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.0 T</b>		1998-06	
B 5204 T3		166 226	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.0 T</b>		1999-06	
B 5204 T5		132 180	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.3 R</b>		2000-05	
B 5234 T7		195 265	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>S80 2.4</b>		1999-06	
B 5244 S2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.4</b>		1999-06	
B 5244 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.4 Bifuel</b>		2001-06	
B 5244 SG2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.4 D</b>		2001-06	
D 5244 T2		96 131	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.4 D5</b>		2001-06	
D 5244 T		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>S80 2.4 LTP</b>		2004-06	
B 5244 T4		132 179	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>S80 2.4 T</b>		2000-06	
B 5244 T3		147 200	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Temp. sending unit/Termo-Resistencia		<b>32425</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	

**VOLVO Cont.**

<b>S80 2.4 T5 AWD</b>	2000-03	
B 5244 T3	147 200	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 2.5 T, AWD</b>	2003-06	
B 5254 T2	154 210	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40593	
<b>S80 2.5 TDI</b>	1999-06	
D 5252 T	103 140	
Oil press. switch/Int. pres. aceite	11690	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40593	
<b>S80 2.8 T6</b>	1998-06	
B 6284 T	200 272	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 2.9</b>	1998-06	
B 6304 S3	150 204	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40593	
<b>S80 2.9</b>	1999-06	
B 6294 S	147 200	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
Rev. light switch/Int. luz marcha atrás	40593	
<b>S80 3.0</b>	2001-06	
B 6294 S2	144 196	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 3.0 T6</b>	2001-06	
B 6294 T	200 272	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II 2.0 FlexFuel</b>	2008 ->	
B 4204 S4	107 146	
Oil press. switch/Int. pres. aceite	12613	
Rev. light switch/Int. luz marcha atrás	40595	
<b>S80 II 2.4 D</b>	2006 ->	
D 5244 T/D 5244 T5	120 163	
Oil press. switch/Int. pres. aceite	12640	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II 2.5 T</b>	2006 ->	
B 5254 T6	147 200	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II 2.5 T</b>	2010 ->	
B 5254 T10	170 231	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II 2.5 T FlexFuel</b>	2008 ->	
B 5254 T8	147 200	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II 2.5 T FlexFuel</b>	2010 ->	
B 5254 T11	170 231	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II 3.2, AWD</b>	2006 ->	
B 6324 S	175 238	
Oil press. switch/Int. pres. aceite	12390	
<b>S80 II 4.4 V8 AWD</b>	2006 ->	
B 8444 S	232 316	
Oil press. switch/Int. pres. aceite	12550	
<b>S80 II D5, AWD</b>	2006 ->	
D 5244 T4	136 185	
Oil press. switch/Int. pres. aceite	12640	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II D5, AWD</b>	2010 ->	
D 5244 T10	151 205	
Rev. light switch/Int. luz marcha atrás	40592	Manual 6 speed/vel.
<b>S80 II T6 AWD</b>	2007 ->	
B 6304 T2	210 286	
Oil press. switch/Int. pres. aceite	12390	
<b>S90 2.9</b>	1997-98	
B 6304 S2	132 180	
Oil press. switch/Int. pres. aceite	12390	
Rev. light switch/Int. luz marcha atrás	40990	
<b>S90 2.9</b>	1997-98	
B 6304 G	150 204	
Oil press. switch/Int. pres. aceite	12390	
<b>V40 1.6 Kombi</b>	1995-99	
B 4164 S	77 105	
Oil press. switch/Int. pres. aceite	12390	
Oil press. switch/Int. pres. aceite	12636	
Temp. sending unit/Termo-Resistencia	32425	03.1999 ->
Thermistor-Thermocont./Doble función	34390	
Rev. light switch/Int. luz marcha atrás	40600	
<b>V40 1.6 Kombi</b>	1999-04	
B 4164 S2	80 109	
Oil press. switch/Int. pres. aceite	12390	
Oil press. switch/Int. pres. aceite	12636	
Temp. sending unit/Termo-Resistencia	32425	
Thermistor-Thermocont./Doble función	34390	
Rev. light switch/Int. luz marcha atrás	40600	
<b>V40 1.8 i Kombi</b>	1998-04	
B 4184 SM	92 125	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41240	
<b>V40 1.8 i Kombi</b>	2001-04	
B 4184 SJ	90 122	
Oil press. switch/Int. pres. aceite	12550	
Rev. light switch/Int. luz marcha atrás	41240	

**VOLVO Cont.**

<b>V40 1.8 Kombi</b>	1995-99	
B 4184 S3/B 4184 S	85 115	
Oil press. switch/Int. pres. aceite	12390	
Oil press. switch/Int. pres. aceite	12636	
Stop light switch/Int. luz stop	24220	
Temp. sending unit/Termo-Resistencia	-> 07.1999	
Temp. sending unit/Termo-Resistencia	08.1999 ->	32370
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	32425
Thermistor-Thermocont./Doble función	B4184S	34390
Rev. light switch/Int. luz marcha atrás		34390
Rev. light switch/Int. luz marcha atrás		40600
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 1.8 Kombi</b>	1999-04	
B 4184 S2/B 4184 S9	90 122	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Stop light switch/Int. luz stop		24220
Temp. sending unit/Termo-Resistencia	-> 07.1999	32370
Temp. sending unit/Termo-Resistencia	08.1999 ->	32425
Temp. sending unit/Termo-Resistencia	B4184S2	34390
Thermistor-Thermocont./Doble función	Gear box/Cambio M56, Manual	40593
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M5P, Manual	40600
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 1.9 DI Kombi</b>	1999-00	
D 4192 T2	70 95	
Fan switch/Termocontacto ventilador		36185
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36185
Rev. light switch/Int. luz marcha atrás		40600
<b>V40 1.9 DI Kombi</b>	2000-04	
D 4192 T4	75 102	
Fan switch/Termocontacto ventilador		36185
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36185
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 1.9 DI Kombi</b>	2000-04	
D 4192 T3	85 115	
Fan switch/Termocontacto ventilador		36185
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36185
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 1.9 T4 Kombi</b>	1997-00	
B 4194 T	147 200	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Temp. sending unit/Termo-Resistencia		32425
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 1.9 TD Kombi</b>	1995-99	
D 4192 T	66 90	
Fan switch/Termocontacto ventilador		36185
Fan switch/Termocontacto ventilador	Without/Sin A.A.	36185
Rev. light switch/Int. luz marcha atrás		40600
<b>V40 2.0 Kombi</b>	1995-04	
B 4204 S	100 136	
Stop light switch/Int. luz stop		24220
Temp. sending unit/Termo-Resistencia		32370
Temp. sending unit/Termo-Resistencia	Oil temp./Temp. aceite	32490
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40600
<b>V40 2.0 Kombi</b>	1995-99	
B 4204 S	103 140	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Stop light switch/Int. luz stop		24220
Temp. sending unit/Termo-Resistencia		32370
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40600
<b>V40 2.0 T Kombi</b>	1997-00	
B 4204 T	118 160	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 2.0 T Kombi</b>	1999-01	
B 4204 T2	121 165	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 2.0 T Kombi</b>	2001-04	
B 4204 T3	120 163	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40990
<b>V40 2.0 T4 Kombi</b>	2000-04	
B 4204 T5	147 200	
Oil press. switch/Int. pres. aceite		12390
Oil press. switch/Int. pres. aceite		12636
Thermistor-Thermocont./Doble función		34390
Rev. light switch/Int. luz marcha atrás		40990
<b>V50 1.6</b>	2005 ->	
B 4164 S3	74 101	
Oil press. switch/Int. pres. aceite		12613
Rev. light switch/Int. luz marcha atrás		40730
<b>V50 1.6 D</b>	2005 ->	
D 4164 T	81 110	
Oil press. switch/Int. pres. aceite		12640
Rev. light switch/Int. luz marcha atrás		40595
<b>V50 1.8</b>	2004 ->	
B 4184 S11	92 125	
Oil press. switch/Int. pres. aceite		12613
Rev. light switch/Int. luz marcha atrás		40595
<b>V50 1.8 FlexFuel</b>	2005 ->	
B 4184 S8	92 125	
Oil press. switch/Int. pres. aceite		12613
<b>V50 2.0</b>	2006 ->	
B 4204 S3	107 146	
Oil press. switch/Int. pres. aceite		12613
Rev. light switch/Int. luz marcha atrás		40595

**VOLVO Cont.**

<b>V50 2.0 D</b>		2004 ->	
D 4204 T		100 136	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M66, Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio M56	<b>40593</b>	
Rev. light switch/Int. luz marcha atrás	Ch. 272655 ->, Gear box/Cambio MMT6,	<b>40596</b>	
<b>V50 2.4</b>		2004 ->	
B 5244 S5		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V50 2.4</b>		2004 ->	
B 5244 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V50 2.4 D5</b>		2006 ->	
D 5244 T8/D 5244 T13		132 179	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V50 2.4 Tdi</b>		2007 ->	
D 5244 T9		120 163	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
<b>V50 T5, AWD</b>		2004 ->	
B 5254 T3		162 220	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V50 T5, AWD</b>		2007 ->	
B 5254 T7		169 230	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 I 2.0 Kombi</b>		1997-00	
B 5202 S		93 126	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.0 Kombi</b>		1997-00	
B 5204 T2		132 180	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.0 Kombi</b>		1997-00	
B 5204 T4		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.0 Turbo Kombi, AWD</b>		1997-00	
B 5204 T3		166 226	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.3 Kombi T-5, AWD</b>		1997-00	
B 5234 T3		176 239	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.3 T Kombi, AWD</b>		1997-00	
B 5234 FT+		184 250	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.4 Bifuel Kombi</b>		1999-00	
B 5244 SG		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
<b>V70 I 2.4 Kombi</b>		1997-00	
B 5254 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.4 Kombi</b>		1999-00	
B 5244 SG2/B 5244 S2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
<b>V70 I 2.4 Turbo Kombi</b>		1997-00	
B 5254 T/B 5244 T		142 193	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.5 Bifuel Kombi</b>		1998-99	
GB 5252 S		106 144	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
<b>V70 I 2.5 Kombi</b>		1997-00	
B 5252 S		106 144	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.5 Kombi AWD</b>		1999-00	
		195 265	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
<b>V70 I 2.5 TDI Kombi, AWD</b>		1996-00	
D 5252 T		103 140	
Oil press. switch/Int. pres. aceite		<b>11690</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 I 2.5 Turbo Kombi AWD</b>		1997-00	
B 5254 T/B 5244 T		142 193	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás		<b>40990</b>	
<b>V70 II 2.0 T Kombi</b>		2001 ->	
B 5204 T5		132 180	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.3 Kombi</b>		2000-04	
B 5234 T7		195 265	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.3 Kombi AWD</b>		2000-04	
B 5234 T7/B 5234 T8		195 265	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.3 T5 Kombi</b>		2000 ->	
B 5234 T3/B 5234 T4		184 250	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	

**VOLVO Cont.**

<b>V70 II 2.4 Bifuel Kombi</b>		2001 ->	
B 5244 SG		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 D Kombi</b>		2001 ->	
D 5244 T2		96 131	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 D Kombi</b>		2005 ->	
		93 126	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.4 D5 AWD Kombi</b>		2003 ->	
D 5244 T2		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 D5 Kombi</b>		2001 ->	
D 5244 T		120 163	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 D5 Kombi, AWD</b>		2005 ->	
D 5244 T4		136 185	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.4 Kombi</b>		2000 ->	
B 5244 S2		103 140	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 Kombi</b>		2000 ->	
B 5244 S		125 170	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 Kombi, AWD</b>		2000-03	
		121 165	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.4 T Kombi, AWD</b>		2000 ->	
B 5244 T3		147 200	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.4 T5 Kombi</b>		2004 ->	
B 5244 T5		191 260	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.5 R Sport Kombi</b>		2002 ->	
B 5254 T4		221 300	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.5 T Kombi</b>		2007 ->	
B 5254 T6		147 200	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 2.5 T Kombi, AWD</b>		2002 ->	
B 5254 T2		154 209	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 2.5 TDI Kombi</b>		2000 ->	
D 5252 T		103 140	
Oil press. switch/Int. pres. aceite		<b>11690</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 II 3.0 T Kombi AWD</b>		2007 ->	
B 6304 T2		210 286	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II 3.2 Kombi</b>		2007 ->	
B 6324 S		175 238	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 II R 2.5 T Kombi AWD</b>		2003 ->	
B 5254 T4		221 300	
Oil press. switch/Int. pres. aceite		<b>12390</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
Rev. light switch/Int. luz marcha atrás		<b>40593</b>	
<b>V70 III 2.0 D Kombi</b>		2007 ->	
D 4204 T		100 136	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
Rev. light switch/Int. luz marcha atrás	Gear box/Cambio MMT6, Manual 6 speed/vel.	<b>40596</b>	
<b>V70 III 2.0 FlexiFuel Kombi</b>		2008 ->	
B 4204 S4		107 146	
Oil press. switch/Int. pres. aceite		<b>12613</b>	
Rev. light switch/Int. luz marcha atrás		<b>40595</b>	
<b>V70 III 2.0 Kombi</b>		2007 ->	
B 4204 S3		107 145	
Oil press. switch/Int. pres. aceite		<b>12613</b>	
Rev. light switch/Int. luz marcha atrás		<b>40595</b>	
<b>V70 III 2.4 D Kombi</b>		2007 ->	
D 5244 T5		120 163	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 III 2.4 D Kombi</b>		2009 ->	
D 5244 T14		129 175	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 III 2.4 D5 AWD Kombi</b>		2007 ->	
D 5244 T4		136 185	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
<b>V70 III 2.4 D5 Kombi AWD</b>		2009 ->	
D 5244 T10		151 205	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	
<b>V70 III 2.4 D5 Kombi, AWD</b>		2007 ->	
D 5244 T4		136 185	
Oil press. switch/Int. pres. aceite		<b>12640</b>	
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	<b>40592</b>	


**VOLVO Cont.**

<b>V70 III 2.5 T FlexiFuel Kombi</b>		2008 ->
B 5254 T8		147 200
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>V70 III 2.5 T FlexiFuel, Kombi</b>		2009 ->
B 5254 T11		170 231
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>V70 III 2.5 T Kombi</b>		2007 ->
B 5254 T6		147 200
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>V70 III 2.5 T Kombi</b>		2010 ->
B 5254 T10		170 231
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>V70 III 3.0 T6 Kombi AWD</b>		2007 ->
B 6304 T2		210 286
Oil press. switch/Int. pres. aceite		12390
<b>V70 III 3.2 Kombi, AWD</b>		2007 ->
B 6324 S		175 238
Oil press. switch/Int. pres. aceite		12390
<b>V90 2.9 Kombi</b>		1997-98
B 6304 S2		132 180
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás		40990
<b>V90 2.9 Kombi</b>		1997-98
B 6304 G		150 204
Oil press. switch/Int. pres. aceite		12390
<b>XC70 2.4 Cross Country AWD</b>		2000-03
		121 165
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC70 2.4 D5 Cross Country AWD</b>		2005 ->
D 5244 T4		136 185
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC70 2.4 D5 XC AWD Cross Country</b>		2002 ->
D 5244 T		120 163
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás		40593
<b>XC70 2.4 T XC Cross Country AWD</b>		2000-02
B 5244 T3		147 200
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás		40593
Rev. light switch/Int. luz marcha atrás		40990
<b>XC70 2.4 T XC Cross Country AWD</b>		1997-02
		142 193
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC70 2.5 T XC Cross Country AWD</b>		2002 ->
B 5254 T2		154 209
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás		40593
<b>XC70 II 2.4 D</b>		2010 ->
D 5244 T14		129 175
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC70 II 2.4 D AWD</b>		2007 ->
D 5244 T16/D 5244 T5		120 163
Oil press. switch/Int. pres. aceite		12640
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC70 II 2.4 D5 AWD</b>		2007 ->
D 5244 T4		136 185
Oil press. switch/Int. pres. aceite		12640
<b>XC70 II 2.4 D5 AWD</b>		2009 ->
D 5244 T10		151 205
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC70 II 3.2 AWD</b>		2007 ->
B 6324 S		175 238
Oil press. switch/Int. pres. aceite		12390
<b>XC90 2.5 T</b>		2002 ->
B 5254 T2		154 209
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás		40593
<b>XC90 D5</b>		2002 ->
D 5244 T		120 163
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
Rev. light switch/Int. luz marcha atrás		40593
<b>XC90 D5</b>		2006 ->
D 5244 T4		136 185
Oil press. switch/Int. pres. aceite		12390
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC90 D5</b>		2009 ->
D 5244 T5		120 163
Rev. light switch/Int. luz marcha atrás	Manual 6 speed/vel.	40592
<b>XC90 T6</b>		2002 ->
B 6294 T		200 272
Oil press. switch/Int. pres. aceite		12390
<b>XC90 V8</b>		2005 ->
B 8444 S		232 315
Oil press. switch/Int. pres. aceite		12550

**YUGO - ZASTAVA**

<b>101 1.1</b>		1975-93
128 A.064		41 56
Oil press. switch/Int. pres. aceite		11200
<b>101 1.1</b>		1973-90
128 A.000		40 55
Oil press. switch/Int. pres. aceite		11200
<b>101 1.3</b>		1981-93
128 AR 000		48 65
Oil press. switch/Int. pres. aceite		11200



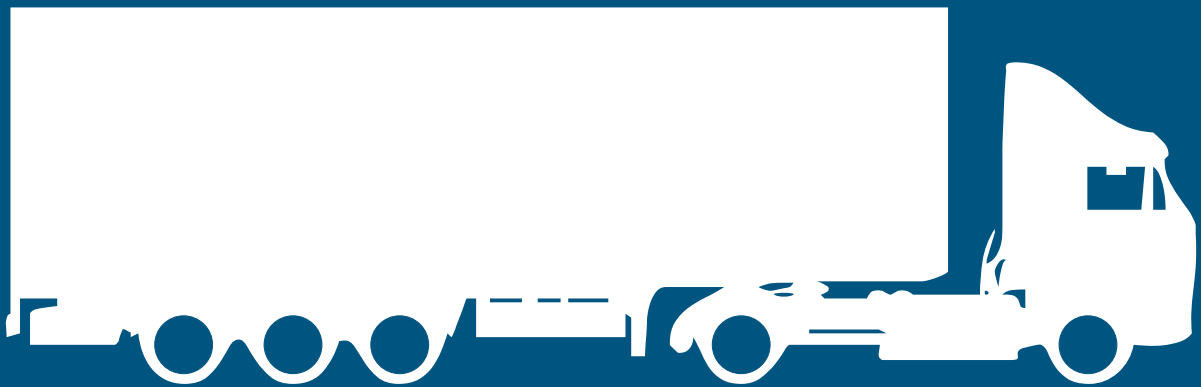

**INDUSTRIAL VEHICLES  
VEHÍCULOS INDUSTRIALES  
LES VÉHICULES INDUSTRIELS**



DAF	
33. 44. 46	1975 ->
Oil press. switch/Int. pres. aceite	11420
<b>615. 825</b>	
Oil press. switch/Int. pres. aceite	10060
Oil press. transmitter/Transm. pres. aceite	14880
Pneumatic stop switch/Int. stop neumático	28050
<b>B 1600 DF, DT</b>	1972 ->
Pneumatic stop switch/Int. stop neumático	27010
<b>F 2100</b>	1978-86
Pneumatic stop switch/Int. stop neumático	28050
<b>F 2100</b>	1986-91
DHTD 825	151-156 205-212
Pneumatic stop switch/Int. stop neumático	28050
<b>F 2300</b>	1978-91
Pneumatic stop switch/Int. stop neumático	28050
<b>F 2300</b>	1990-93
HT 825	168 228
Pneumatic stop switch/Int. stop neumático	28050
<b>F 2800</b>	1974-91
Pneumatic stop switch/Int. stop neumático	28050
<b>Motores / Engines / Moteurs 1160</b>	
Oil press. switch/Int. pres. aceite	10060
Oil press. transmitter/Transm. pres. aceite	14880
Pneumatic stop switch/Int. stop neumático	28050
<b>Series F, FA, FGG, FT</b>	-> 1991
Pneumatic stop switch/Int. stop neumático	27010

IVECO	
<b>Camiones / Trucks / Camions</b>	
Oil press. switch/Int. pres. aceite	11400
Oil press. transmitter/Transm. pres. aceite	14790
Oil press. transmitter/Transm. pres. aceite	14860
Rev. light switch/Int. luz marcha atrás	40450
<b>Daily I 30-10</b>	1997 ->
8140.23.	76 103
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	37220
Fan switch/Termocontacto ventilador	37225
Rev. light switch/Int. luz marcha atrás	40680
<b>Daily I 30-10 C</b>	1997 ->
8140.23.	76 103
Oil press. switch/Int. pres. aceite	11410
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
<b>Daily I 30-8</b>	1989-98
8140.07.2712/8140.07.2700	55 75
Oil press. switch/Int. pres. aceite	11410
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 30-8</b>	1978-89
8140.61.200	53 72
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 30-8</b>	1998 ->
8140.63.	62 84
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 30-8</b>	1989-98
8140.67F.	60 82
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 30-8 V</b>	1998 ->
8140.63.	62 84
Oil press. switch/Int. pres. aceite	11410
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-10</b>	1985-89
8140.21.200	68 92
Oil press. switch/Int. pres. aceite	11410
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-10</b>	1996 ->
8140.23.	76 103
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-10</b>	1989-98
8140.47R	80 109
Oil press. switch/Int. pres. aceite	11410
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF

IVECO Cont.	
<b>Daily I 35-10</b>	1989-98
8140.47R.2790	76 103
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37220
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-10 K</b>	1989-96
8140.97.2781	68 92
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Rev. light switch/Int. luz marcha atrás	37220
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-10 K</b>	1997 ->
8140.23.	76 103
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-12</b>	1996 ->
8140.43.	90 122
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
<b>Daily I 35-12 K</b>	1990-96
8140.47.2700	85 116
Oil press. switch/Int. pres. aceite	11410
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
<b>Daily I 35-12 K</b>	1996-98
8140.43.	90 122
Oil press. switch/Int. pres. aceite	11410
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
<b>Daily I 35-8</b>	1989-98
8140.07.2712/8140.07.2700	55 75
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-8</b>	1978-89
8140.61.200	53 72
Oil press. switch/Int. pres. aceite	11410
Rev. light switch/Int. luz marcha atrás	40680
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-8</b>	1998 ->
8140.63.	62 84
Oil press. switch/Int. pres. aceite	12570
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 35-8 K</b>	1989-98
8140.67F.	60 82
Oil press. switch/Int. pres. aceite	11410
Temp. s. warning lamp/Termocont. temp.	35860
Fan switch/Termocontacto ventilador	Without/Sin A.A.
Fan switch/Termocontacto ventilador	85-75 °C
Rev. light switch/Int. luz marcha atrás	37225
Rev. light switch/Int. luz marcha atrás	ZF Gear box/Caja ZF
<b>Daily I 40-10 W</b>	1997 ->
8140.23.	76 103
Temp. s. warning lamp/Termocont. temp.	35860
<b>Daily I 40-10 WV,40-10 WC</b>	1996 ->
8140.23.	76 103
Temp. s. warning lamp/Termocont. temp.	35860
<b>Daily I 49-10</b>	1996 ->
8140.23.	76 103
Temp. s. warning lamp/Termocont. temp.	35860
<b>Daily I 49-12</b>	1996 ->
8140.43.	90 122
Temp. s. warning lamp/Termocont. temp.	35860
<b>Daily I 59-12</b>	1996 ->
8140.43.	90 122
Temp. s. warning lamp/Termocont. temp.	35860
<b>Daily II 29 L 10</b>	2002 ->
F1AE0481A	70 95
Oil press. switch/Int. pres. aceite	12570
Brake light switch/Int. Stop	24410
On clutch pedal/Int. Pedal embrague	Cruise control/Control veloc.
<b>Daily II 29 L 10 V</b>	2002 ->
F1AE0481A	70 95
Oil press. switch/Int. pres. aceite	12570
<b>Daily II 29 L 12</b>	2002 ->
F1AE0481B	85 116
Oil press. switch/Int. pres. aceite	12570
Brake light switch/Int. Stop	24410
<b>Daily II 29 L 12 V</b>	2002 ->
F1AE0481B	85 116
Oil press. switch/Int. pres. aceite	12570
On clutch pedal/Int. Pedal embrague	Cruise control/Control veloc.

**IVECO Cont.**

<b>Daily II 35 C 10 V , 35 S 10 V</b>		2002 ->
F1AE0481A	70	95
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 C 12 , 35 S 12</b>		2002 ->
F1AE0481B	85	116
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 C 12 V, 35 S 12 V</b>		2002 ->
F1AE0481B	85	116
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 C 15</b>		1999 ->
8140.43N	78	106
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 C 15</b>		2001 ->
8140.43N	107	146
Oil press. switch/Int. pres. aceite		12570
Brake light switch/Int. Stop		24410
On clutch pedal/Int. Pedal embrague	Cruise control/Control veloc.	24665
<b>Daily II 35 S 10</b>		2002 ->
F1AE0481A	70	95
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 S 11,35 C 11</b>		1999 ->
8140.43C	78	106
Oil press. switch/Int. pres. aceite		12570
Brake light switch/Int. Stop		24410
On clutch pedal/Int. Pedal embrague	Cruise control/Control veloc.	24665
Temp. s. warning lamp/Termocont. temp.		35860
<b>Daily II 35 S 13 V,35 C 13 V</b>		1999 ->
8140.43S	92	125
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 S 13,35 C 13</b>		1999 ->
8140.43S	92	125
Oil press. switch/Int. pres. aceite		12570
Brake light switch/Int. Stop		24410
On clutch pedal/Int. Pedal embrague	Cruise control/Control veloc.	24665
<b>Daily II 35 S 15 V, 35 C 15 V</b>		2002 ->
8140.43N	107	146
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 S 9 V,35 C 9 V</b>		1999 ->
8140.63.	62	84
Oil press. switch/Int. pres. aceite		12570
<b>Daily II 35 S 9,35 C 9</b>		1999 ->
8140.63.	62	84
Oil press. switch/Int. pres. aceite		12570
Brake light switch/Int. Stop		24410
On clutch pedal/Int. Pedal embrague	Cruise control/Control veloc.	24665
<b>EuroCargo 100 E 21</b>		1991 ->
	152	207
Oil press. switch/Int. pres. aceite		12430
Oil press. switch/Int. pres. aceite	0.80 bar	12570
<b>EuroStar</b>		1993-02
8210.42L., 8210.42L(TCA)	309	420
Oil press. switch/Int. pres. aceite		12430
Oil press. switch/Int. pres. aceite	0.80 bar	12570
Rev. light switch/Int. luz marcha atrás		41120
<b>M 175-24, T</b>		1986-92
8460.21.002, 010	176-178	239-242
Oil press. switch/Int. pres. aceite		12590
<b>Tractores / Tractors / Tracteurs</b>		
Oil press. transmitter/Transm. pres. aceite		14790
Oil press. transmitter/Transm. pres. aceite		14850
<b>TurboStar 190-42</b>		1984-90
8280.22.201, 205	309	420
Oil press. switch/Int. pres. aceite	0.60 bar	12590
Oil press. switch/Int. pres. aceite	1.0 bar	12600
Oil press. transmitter/Transm. pres. aceite		14850
<b>TurboStar 190-48</b>		1989-93
8280.42.001, 050	350	476
Oil press. transmitter/Transm. pres. aceite		14850
<b>TurboTech 190</b>		1990-92
8460.21.102	191	260
Oil press. transmitter/Transm. pres. aceite		14850
<b>TurboTech 190-32</b>		1990-92
8460.41.102	234	318
Oil press. switch/Int. pres. aceite		12590
Oil press. transmitter/Transm. pres. aceite		14850
<b>TurboTech 190-36</b>		1990-92
	277	377
Oil press. transmitter/Transm. pres. aceite		14850

**JOHN DEERE**

<b>515. 517</b>		1967 ->
Oil press. switch/Int. pres. aceite		10290
Temp. Sending unit/Termo-Resistencia		31080
<b>Tractores/Tractors/Tracteurs</b>		1969 ->
Oil press. switch/Int. pres. aceite		11420
Temp. Sending unit/Termo-Resistencia		31080

**MAGIRUS DEUTZ**

<b>Camiones / Trucks / Camions</b>		
Oil press. transmitter/Transm. pres. aceite		14920
Pneumatic stop switch/Int. stop neumático		27010

**MAN**

<b>Camiones / Trucks / Camions</b>		
Oil press. switch/Int. pres. aceite		10060
Oil press. transmitter/Transm. pres. aceite		14920
Brake light switch/Int. Stop		25140
Pneumatic stop switch/Int. stop neumático		27010
Rev. light switch/Int. luz marcha atrás		40420
Rev. light switch/Int. luz marcha atrás		40450
Rev. light switch/Int. luz marcha atrás		41120

**MAN Cont.**

<b>EL</b>			1993-97
			214-230
Thermistor-Thermocont./Doble función	100 °C, 1 unit	157-169	34375
<b>EL</b>			1998 ->
D 2866 LUH 22		191	260
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>EM 192</b>			1993-97
D 0826 LOH 06		140	190
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>F 2000</b>			1994 ->
		213	290
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>F 90</b>			1986-96
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>L 2000</b>			1993-96
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>L 2000</b>			1996 ->
D 0824 LFL 04		81	110
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>Lion S Comfort</b>			1996 ->
		228	310
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>Lion S Comfort</b>			1997 ->
D 2866 LUH 21		257	350
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>M 2000 L</b>			1995 ->
		162	220
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>M 2000 M</b>			1995-05
		162	220
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>M 90</b>			1988-96
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NG</b>			1992-98
		191-198	260-269
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NG</b>			1995 ->
D 2866 LUH26		228	310
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NL 220</b>			1992 ->
		157-162	214-220
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NL 260</b>			1997 ->
		191	260
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NL 310</b>			1995 ->
		228	310
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NM 152</b>			1992-97
D 0824 LOH 01		114	155
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NÚ 263</b>			1996 ->
		191	260
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NÚ 313</b>			1998 ->
D 2866 LUH26		228	310
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>NÚ 353 15M</b>			1998 ->
D 2866 LUH 21		257	350
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>SG</b>			1994-97
		228-235	310-320
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>SÚ 272</b>			1993-95
D 2865 LUH02		198	270
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>SÚ 322</b>			1995-97
D 2865 LUH08		235	320
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>ÚL 272</b>			1993 ->
		198	270
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>ÚL 312,ÚL 322</b>			1992-96
		228-235	310-320
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>ÚL 313</b>			1996 ->
		228	310
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375
<b>ÚL 353</b>			1997 ->
D 2866 LUH 21		257	350
Thermistor-Thermocont./Doble función	100 °C, 1 unit		34375

**MASSEY FERGUSON**

<b>Tractor Series 200</b>		
Oil press. switch/Int. pres. aceite		11420
Temp. Sending unit/Termo-Resistencia		31560
<b>Tractor Series 600</b>		
Oil press. switch/Int. pres. aceite		11420
Temp. Sending unit/Termo-Resistencia		31560
<b>Tractores / Tractors / Tracteurs</b>		
Brake light switch/Int. Stop		24060
Temp. Sending unit/Termo-Resistencia		31150

**MERCEDES BENZ**

<b>207 D 65 cv.</b>		
OM616.934		
Oil press. transmitter/Transm. pres. aceite		14570
Temp. Sending unit/Termo-Resistencia		30130
<b>307 D 65 cv.</b>		
OM616.934		
Temp. Sending unit/Termo-Resistencia		30130

**MERCEDES BENZ Cont.**

DKW 12V. (Masa)			
Oil press. transmitter/Transm. pres. aceite	14630		
Temp. Sending unit/Termo-Resistencia	31080		
DKW F 1000 D, L	1976 ->		
Hidraulic stop switch/Int. stop hidráulico	21080		
DKW F 1000 N	1976 ->		
Rev. light switch/Int. luz marcha atrás	41060		
DKW F 1300 N	1976 ->		
Hidraulic stop switch/Int. stop hidráulico	21080		
Rev. light switch/Int. luz marcha atrás	41060		
L-406 D	1970-78		
OM616			
Oil press. transmitter/Transm. pres. aceite	14570		
Brake light switch/Int. Stop	25120		
Temp. Sending unit/Termo-Resistencia	30130		
Rev. light switch/Int. luz marcha atrás	41060		
L-407 D, DG	1980 ->		
OM616			
Oil press. transmitter/Transm. pres. aceite	14570		
Brake light switch/Int. Stop	25120		
LK/LN2	1984-98		
Oil press. transmitter/Transm. pres. aceite	14570		
Temp. s. warning lamp/Termocont. temp.	35030		
MB 100. 120. 130. 150	1980-87		
Oil press. transmitter/Transm. pres. aceite	14630		
MB 100. 120. 140. 160. 180	1987-95		
OM615/616			
Oil press. transmitter/Transm. pres. aceite	14630		
Brake light switch/Int. Stop	25120		
Rev. light switch/Int. luz marcha atrás	41060		
MK	1987-96		
Oil press. transmitter/Transm. pres. aceite	14570		
Oil press. transmitter/Transm. pres. aceite	14660	R.H.D.	
NG	1973-96		
Oil press. transmitter/Transm. pres. aceite	14570		
Oil press. transmitter/Transm. pres. aceite	14660	R.H.D.	
Rev. light switch/Int. luz marcha atrás	41130		
O 100 City	1994 ->		
OM 602.940	72	98	
Oil press. switch/Int. pres. aceite	10200		
O 301	1986-87		
OM 366.917	100	136	
Oil press. transmitter/Transm. pres. aceite	14570		
O 301	1986-87		
OM 366.965	125	170	
Oil press. transmitter/Transm. pres. aceite	14870		
O 303	1974-92		
Oil press. transmitter/Transm. pres. aceite	14570		
Oil press. transmitter/Transm. pres. aceite	14660	R.H.D.	
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
Pneumatic stop switch/Int. stop neumático	28040		
O 305 ST	1973-87		
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 305 ST, G	1976-87		
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 307	1973-77		
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 309 B	1968-89		
M 102.943	70	95	
Oil press. switch/Int. pres. aceite	10200		
O 309 D	1977-89		
	96	130	
Oil press. transmitter/Transm. pres. aceite	14570		
O 317	1966-76		
OM 346.918	132	180	
Oil press. transmitter/Transm. pres. aceite	14570		
O 340 Turismo	1992-95		
	280	381	
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 402	1986-91		
OM 366.917	100	136	
Oil press. transmitter/Transm. pres. aceite	14570		
O 402	1986-91		
OM 366.965	125	170	
Oil press. transmitter/Transm. pres. aceite	14870		
O 404	1991-99		
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 405	1984 ->		
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 407	1987-01		
	177-184	241-250	
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O 408	1991-98		
	184	250	
Oil press. transmitter/Transm. pres. aceite	14990	2 terminals/bornes	
O-309 D	1980 ->		
OM616			
Oil press. transmitter/Transm. pres. aceite	14570		
Brake light switch/Int. Stop	25120		
Rev. light switch/Int. luz marcha atrás	41060		
O-317	1966-78		
Pneumatic stop switch/Int. stop neumático	27030		
SK	1987-96		
Oil press. transmitter/Transm. pres. aceite	14570		
Oil press. transmitter/Transm. pres. aceite	14660	R.H.D.	

**MERCEDES BENZ Cont.**

SK			1988-94
OM 443.940		340	462
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes		14990
SK 2024		180	1993-96
			245
Oil press. transmitter/Transm. pres. aceite			14570
Oil press. transmitter/Transm. pres. aceite	R.H.D.		14660
SK 2027 AK		200	1993-96
			272
Oil press. transmitter/Transm. pres. aceite			14570
Oil press. transmitter/Transm. pres. aceite	R.H.D.		14660
SK 2429		210-218	1987-96
			285-290
Oil press. transmitter/Transm. pres. aceite			14570
Oil press. transmitter/Transm. pres. aceite	R.H.D.		14660
SK 2635		210	1988-94
			286
Oil press. transmitter/Transm. pres. aceite			14570
Oil press. transmitter/Transm. pres. aceite	R.H.D.		14660
T2/L L 613 D			1977-88
OM 353.963, 966		96	130
Oil press. transmitter/Transm. pres. aceite			14570
T2/LN1			1986-94
			14570
Oil press. transmitter/Transm. pres. aceite			1994-94
T2/LN1 714 D			140
OM 354.923		103	140
Oil press. transmitter/Transm. pres. aceite			14570
T2/LN1 814		100-103	1987-94
			136-140
Oil press. transmitter/Transm. pres. aceite			14570
T2/LN1 O 609 D			1987-92
OM 364.913		66	90
Oil press. transmitter/Transm. pres. aceite			14570
T2/LN1 O 614 D			1987-92
OM 364.980, 981		100	136
Oil press. transmitter/Transm. pres. aceite			14570
Tourismo O 350			1995 ->
Oil press. transmitter/Transm. pres. aceite	2 terminals/bornes		14990
Trucks / Camiones / Camions			
Pneumatic switch/Int. neumático	Pressure switch/Presostato		18105
Unimog U		81	1977 ->
			110
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		92-96	1977-88
			125-31
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		115	1988 ->
			156
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		150-157	1988 ->
			204-214
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		100	1988 ->
			136
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		155-157	1989 ->
			211-214
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		177	1993 ->
			241
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U		170-172	2000 ->
OM 906.935			231-234
Rev. light switch/Int. luz marcha atrás			41301
Unimog U 100, U 110T, U 1100T		74-81	1977-88
OM 353			100-110
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 1000		75	1988 ->
			102
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 1000		70	1977-88
OM 353.962			95
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 110, U 110L		75-77	1992 ->
OM 364			102-105
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 130, U 140		98-103	1992 ->
OM 364			133-140
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 140L		100-103	1992 ->
OM 364.985			136-140
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 140T		98	1992 ->
OM 364.982			133
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 1500		110	1977-88
OM 353.958			150
Oil press. transmitter/Transm. pres. aceite			14570
Unimog U 1550L			1992 ->
			14570
Oil press. transmitter/Transm. pres. aceite			1988 ->
Unimog U 1700		122-125	166-170
OM 353.959			14570
Oil press. transmitter/Transm. pres. aceite			1978-88
Unimog U 1750, U 1750L		124	169
			14570
Oil press. transmitter/Transm. pres. aceite			1988 ->
Unimog U 1800		122-127	166-173
OM 356.998			14570
Oil press. transmitter/Transm. pres. aceite			1992 ->
Unimog U 300		132	180
OM 904.927			14570
Rev. light switch/Int. luz marcha atrás		110	2000 ->
			150
			41301

**MERCEDES BENZ Cont.**

<b>Unimog U 500, UGN NA</b>		2000 ->
OM 906	205-209	279-284
Rev. light switch/Int. luz marcha atrás		<b>41301</b>
<b>Unimog U 54</b>		<b>1966-72</b>
OM 314.916	40	54
Oil press. transmitter/Transm. pres. aceite		<b>14570</b>
<b>Unimog U 66, U 72</b>		<b>1969-88</b>
OM 314.917	55	75
Oil press. transmitter/Transm. pres. aceite		<b>14570</b>
<b>Unimog U 72, U 80</b>		<b>1969-77</b>
OM 314.917	48-55	65-75
Oil press. transmitter/Transm. pres. aceite		<b>14570</b>
<b>Unimog U 80, U 84, U 90</b>		<b>1969-88</b>
	62-66	84-90
Oil press. transmitter/Transm. pres. aceite		<b>14570</b>
<b>Unimog U 800</b>		<b>1977-90</b>
OM 314.917	53-55	72-75
Oil press. transmitter/Transm. pres. aceite		<b>14570</b>
<b>Unimog U 900</b>		<b>1977 -&gt;</b>
OM 353.902	62	84
Oil press. transmitter/Transm. pres. aceite		<b>14570</b>

**MERCEDES BENZ COMM. ( E )****Diversos modelos/Various models/Divers modèles**

Hidraulic stop switch/Int. stop hidráulico		<b>21210</b>
Brake light switch/Int. Stop		<b>25140</b>
Pneumatic stop switch/Int. stop neumático		<b>27010</b>
Pneumatic stop switch/Int. stop neumático		<b>28030</b>
Temp. Sending unit/Termo-Resistencia		<b>30130</b>
Rev. light switch/Int. luz marcha atrás		<b>40420</b>
Rev. light switch/Int. luz marcha atrás		<b>40430</b>
Rev. light switch/Int. luz marcha atrás		<b>40450</b>
Rev. light switch/Int. luz marcha atrás		<b>41120</b>

**NEOPLAN**

<b>Centroliner</b>		<b>1999 -&gt;</b>
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Cityliner</b>		<b>1990 -&gt;</b>
	309	420
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Cityliner</b>		<b>1990 -&gt;</b>
D 2866 TOH	229	311
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Jetliner</b>		<b>1990 -&gt;</b>
	309	420
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Jetliner</b>		<b>1992 -&gt;</b>
D 0826 LOH 02	140	190
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Jetliner</b>		<b>1990-92</b>
D 2866 TOH	229	311
Thermistor-Thermocont./Doble función		<b>34370</b>
<b>Megaliner</b>		<b>1993 -&gt;</b>
OM 442.998	370	503
Oil press. transmitter/Transm. pres. aceite		<b>14660</b>
<b>Skyliner</b>		<b>1990 -&gt;</b>
	309	420
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Skyliner</b>		<b>1990-92</b>
D 2866 TOH	229	311
Thermistor-Thermocont./Doble función		<b>34370</b>
<b>Spaceliner</b>		<b>1990 -&gt;</b>
	309	420
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>
<b>Transliner</b>		<b>1990-93</b>
		<b>34370</b>
Thermistor-Thermocont./Doble función	100 °C, 1 unit	<b>34375</b>

**NISSAN - MOTOR IBERICA****Autobuses / Buses**

Pneumatic switch/Int. neumático		<b>18030</b>
Temp. Sending unit/Termo-Resistencia		<b>31560</b>
Rev. light switch/Int. luz marcha atrás		<b>40460</b>
<b>Autocar 100/8D. 120/8D</b>		<b>1989 -&gt;</b>
Oil press. switch/Int. pres. aceite		<b>11290</b>
<b>Autocar 100/8D. 120/8D</b>		<b>1989 -&gt;</b>
B6-60T		
Pneumatic switch/Int. neumático		<b>18030</b>
Temp. Sending unit/Termo-Resistencia		<b>31560</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>Autocar 60/6D. 70/6D</b>		<b>1989 -&gt;</b>
B4-40		
Pneumatic switch/Int. neumático		<b>18030</b>
Temp. Sending unit/Termo-Resistencia		<b>31080</b>
Rev. light switch/Int. luz marcha atrás		<b>40460</b>
<b>L-35.08. L-45.08</b>		<b>1988-93</b>
A4 28 II		
Oil press. switch/Int. pres. aceite		<b>11290</b>
Oil press. transmitter/Transm. pres. aceite		<b>14700</b>
Oil press. transmitter/Transm. pres. aceite		<b>14940</b>
Temp. Sending unit/Termo-Resistencia		<b>31380</b>
Rev. light switch/Int. luz marcha atrás		<b>40350</b>
<b>L-35.09. L-50.09</b>		<b>1992 -&gt;</b>
B4-40, II		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Temp. Sending unit/Termo-Resistencia		<b>31080</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40460</b>
<b>L-45.08</b>		<b>1993 -&gt;</b>
BD-30		
Oil press. transmitter/Transm. pres. aceite		<b>14940</b>
Rev. light switch/Int. luz marcha atrás		<b>40350</b>

**NISSAN - MOTOR IBERICA Cont.**

<b>L-60.09. L-70.09</b>		<b>1992 -&gt;</b>
B4-40, II		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Pneumatic switch/Int. neumático		<b>18030</b>
Brake light switch/Int. Stop		<b>24250</b>
Temp. Sending unit/Termo-Resistencia		<b>31080</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40460</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>L-80.09</b>		<b>1991-93</b>
B4-40		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Pneumatic switch/Int. neumático		<b>18030</b>
Temp. Sending unit/Termo-Resistencia		<b>31080</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40460</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>L-80.095. L-75.095</b>		<b>1993 -&gt;</b>
B4-40 II		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24250</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>L80.14. L-75.14</b>		<b>1988-93</b>
B6-60		
Pneumatic switch/Int. neumático		<b>18010</b>
Pneumatic switch/Int. neumático		<b>18030</b>
Brake light switch/Int. Stop		<b>24240</b>
Brake light switch/Int. Stop		<b>24250</b>
Temp. Sending unit/Termo-Resistencia		<b>31560</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>M-110.14. M-125.14</b>		<b>1988-93</b>
B6-60		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24240</b>
Brake light switch/Int. Stop		<b>24250</b>
Temp. Sending unit/Termo-Resistencia		<b>31560</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>M-110.15</b>		<b>1993 -&gt;</b>
B6-60 T II		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24250</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>M-115.17</b>		<b>1993 -&gt;</b>
FE6-B		
Oil press. transmitter/Transm. pres. aceite		<b>14940</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24240</b>
Brake light switch/Int. Stop		<b>24250</b>
Rev. light switch/Int. luz marcha atrás		<b>41120</b>
<b>M-125.17</b>		<b>1993 -&gt;</b>
B6-60 T		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24250</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>41120</b>
<b>M-130.17</b>		<b>1987 -&gt;</b>
FE6-B		
Oil press. transmitter/Transm. pres. aceite		<b>14940</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24240</b>
Brake light switch/Int. Stop		<b>24250</b>
Rev. light switch/Int. luz marcha atrás		<b>41120</b>
<b>M-140.17</b>		<b>1990 -&gt;</b>
FE6-B		
Oil press. transmitter/Transm. pres. aceite		<b>14940</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Pneumatic switch/Int. neumático		<b>18030</b>
Brake light switch/Int. Stop		<b>24240</b>
Rev. light switch/Int. luz marcha atrás		<b>41120</b>
<b>M-90.15. M-75.15</b>		<b>1993 -&gt;</b>
B6-60 T II		
Oil press. transmitter/Transm. pres. aceite		<b>14930</b>
Pneumatic switch/Int. neumático		<b>18010</b>
Brake light switch/Int. Stop		<b>24240</b>
Brake light switch/Int. Stop		<b>24250</b>
Thermistor-Thermocont./Doble función		<b>34210</b>
Rev. light switch/Int. luz marcha atrás		<b>40690</b>
<b>Patrol 4 cil. Diesel 2710 cc.</b>		<b>1983-85</b>
MD 27		
Rev. light switch/Int. luz marcha atrás		<b>40350</b>
<b>Patrol 4 cil. Diesel 2820 cc.</b>		<b>1983 -&gt;</b>
A4 28		
Oil press. switch/Int. pres. aceite		<b>11290</b>
Oil press. transmitter/Transm. pres. aceite		<b>14700</b>
Temp. Sending unit/Termo-Resistencia		<b>31380</b>
Temp. Sending unit/Termo-Resistencia		<b>31400</b>
Rev. light switch/Int. luz marcha atrás		<b>40350</b>
<b>Patrol 4 cil. Turbo Diesel. 2820 cc.</b>		<b>1983 -&gt;</b>
A4 28T		
Oil press. switch/Int. pres. aceite		<b>11290</b>
Oil press. transmitter/Transm. pres. aceite		<b>14700</b>
Temp. Sending unit/Termo-Resistencia		<b>31380</b>
Temp. Sending unit/Termo-Resistencia		<b>31400</b>
Rev. light switch/Int. luz marcha atrás		<b>40350</b>
<b>Patrol 6 cil.</b>		<b>1989 -&gt;</b>
RB-30S		
Oil press. transmitter/Transm. pres. aceite		<b>14710</b>

**NISSAN - MOTOR IBERICA Cont.**

Patrol 6 cil. 2753 cc. L 28	1985-89
Oil press. transmitter/Transm. pres. aceite	14710
Temp. Sending unit/Termo-Resistencia	31380
<b>Patrol 6 cil. Diesel</b>	<b>1989-93</b>
RD-28	
Oil press. transmitter/Transm. pres. aceite	14810
<b>Patrol 6 cil. Diesel</b>	<b>-&gt; 1985</b>
SD 23	
Oil press. transmitter/Transm. pres. aceite	14710
<b>Patrol 6 cil. Diesel 3246 cc.</b>	<b>1985-89</b>
SD 33	
Oil press. transmitter/Transm. pres. aceite	14710
Temp. Sending unit/Termo-Resistencia	31380
Temp. Sending unit/Termo-Resistencia	31400
<b>Patrol 6 cil. Turbo D</b>	<b>1989-93</b>
RD-28T	
Oil press. transmitter/Transm. pres. aceite	14810
<b>Patrol 6 cil. Turbo Diesel. 3246 cc.</b>	<b>1985-89</b>
SD 33T	
Oil press. transmitter/Transm. pres. aceite	14710
Temp. Sending unit/Termo-Resistencia	31380
Temp. Sending unit/Termo-Resistencia	31400
<b>Trade 2.0 Diesel</b>	<b>1986 -&gt;</b>
LD 20E-II	
Temp. Sending unit/Termo-Resistencia	31380
<b>Trade 2.8 Diesel</b>	<b>1986 -&gt;</b>
A4 28N, II	
Oil press. switch/Int. pres. aceite	11290
Oil press. transmitter/Transm. pres. aceite	14700
Temp. Sending unit/Termo-Resistencia	31080
Temp. Sending unit/Termo-Resistencia	31380
Rev. light switch/Int. luz marcha atrás	40350
<b>Vanette 1.5</b>	<b>1985 -&gt;</b>
A15	
Temp. Sending unit/Termo-Resistencia	31400
Rev. light switch/Int. luz marcha atrás	40350
<b>Vanette 2.0 Diesel</b>	<b>1987 -&gt;</b>
LD 20 II, L	
Temp. Sending unit/Termo-Resistencia	31380
Temp. Sending unit/Termo-Resistencia	31380

**PEGASO**

<b>1214 T1. 1216 T1</b>	<b>1983 -&gt;</b>
Oil press. switch/Int. pres. aceite	11370
Oil press. transmitter/Transm. pres. aceite	14600
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	41120
<b>1214 T2. 1216 T2</b>	<b>1986 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Rev. light switch/Int. luz marcha atrás	41120
<b>1217 T1</b>	<b>1983 -&gt;</b>
Oil press. switch/Int. pres. aceite	11370
Oil press. transmitter/Transm. pres. aceite	14600
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. Sending unit/Termo-Resistencia	30130
Rev. light switch/Int. luz marcha atrás	40430
Rev. light switch/Int. luz marcha atrás	41120
<b>1217 T2. 1223 T2</b>	<b>1986 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. Sending unit/Termo-Resistencia	30130
Rev. light switch/Int. luz marcha atrás	40430
Rev. light switch/Int. luz marcha atrás	41120
<b>1231 T1</b>	<b>1983 -&gt;</b>
Oil press. switch/Int. pres. aceite	11370
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. Sending unit/Termo-Resistencia	30130
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	40450
Rev. light switch/Int. luz marcha atrás	41120
<b>1231 T2. 2331 T2</b>	<b>1986 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	40450
Rev. light switch/Int. luz marcha atrás	41120
<b>1234 T2. 1236 T2. 1431 T2</b>	<b>1986 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	41120
<b>1331 T2. 2431 T2</b>	<b>1987 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	41120

**PEGASO Cont.**

2030. 6003. 6041. 9020	1963 ->
Pneumatic switch/Int. neumático	16030
<b>2082/60. 2089/60</b>	<b>1973 -&gt;</b>
Brake light switch/Int. Stop	24020
Pneumatic stop switch/Int. stop neumático	26060
<b>2181/60</b>	
Oil press. transmitter/Transm. pres. aceite	14600
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Pneumatic stop switch/Int. stop neumático	27020
Temp. Sending unit/Termo-Resistencia	30130
Temp. s. warning lamp/Termocont. temp.	35030
<b>2217 FA</b>	
Oil press. switch/Int. pres. aceite	11370
Oil press. transmitter/Transm. pres. aceite	14600
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40430
Rev. light switch/Int. luz marcha atrás	41120
<b>2323 K T2</b>	<b>1986 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27010
Temp. Sending unit/Termo-Resistencia	30130
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	40450
<b>3040. 5062</b>	<b>1967-75</b>
Pneumatic stop switch/Int. stop neumático	26060
<b>3076-D Turbo. 3088</b>	
Pneumatic stop switch/Int. stop neumático	26060
Rev. light switch/Int. luz marcha atrás	41010
<b>5020 A, CL, CLN. 6030 N</b>	<b>1963-74</b>
Oil press. switch/Int. pres. aceite	11370
Pneumatic switch/Int. neumático	16030
Brake light switch/Int. Stop	24020
Pneumatic stop switch/Int. stop neumático	26060
Temp. Sending unit/Termo-Resistencia	30130
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40070
<b>5022, C, CLN</b>	<b>1963-70</b>
Pneumatic switch/Int. neumático	16030
Pneumatic stop switch/Int. stop neumático	26060
Temp. Sending unit/Termo-Resistencia	30130
<b>5040. 5041. 5042 C</b>	<b>1962 -&gt;</b>
Pneumatic switch/Int. neumático	16030
<b>5051 L. 5061</b>	<b>1963-75</b>
Pneumatic switch/Int. neumático	16030
Pneumatic stop switch/Int. stop neumático	26060
Temp. Sending unit/Termo-Resistencia	30130
<b>6020. 6040</b>	<b>1960 -&gt;</b>
Pneumatic switch/Int. neumático	16030
<b>Autobús 5036</b>	
Oil press. transmitter/Transm. pres. aceite	14600
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	26060
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Fan switch/Termocontacto ventilador	37480
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	40430
Rev. light switch/Int. luz marcha atrás	41120
<b>Autobús 5317</b>	<b>1986 -&gt;</b>
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	16020
Pneumatic switch/Int. neumático	18070
Pneumatic stop switch/Int. stop neumático	26060
Pneumatic stop switch/Int. stop neumático	27010
Temp. s. warning lamp/Termocont. temp.	35030
Fan switch/Termocontacto ventilador	37480
Rev. light switch/Int. luz marcha atrás	41120
<b>Autobús 5720.20</b>	
Oil press. transmitter/Transm. pres. aceite	14510
Pneumatic switch/Int. neumático	16030
Brake light switch/Int. Stop	24020
Temp. Sending unit/Termo-Resistencia	30130
Temp. s. warning lamp/Termocont. temp.	35030
<b>Autobús 6420</b>	
Oil press. transmitter/Transm. pres. aceite	14750
Pneumatic switch/Int. neumático	18070
Pneumatic stop switch/Int. stop neumático	28010
Temp. s. warning lamp/Termocont. temp.	35030
<b>Autobús Articulado/Articulated Bus</b>	<b>1967 -&gt;</b>
Pneumatic switch/Int. neumático	16030
Brake light switch/Int. Stop	24020
Pneumatic stop switch/Int. stop neumático	26060
Temp. Sending unit/Termo-Resistencia	30130
Temp. s. warning lamp/Termocont. temp.	35030
Rev. light switch/Int. luz marcha atrás	40070
<b>Cabinas 7150, 7160</b>	
Oil press. transmitter/Transm. pres. aceite	14600
Temp. Sending unit/Termo-Resistencia	30130

**PEGASO Cont.**

<b>Cabinas SK</b>	
Oil press. transmitter/Transm. pres. aceite	14630
<b>Diversos modelos/Various models/Divers modèles</b>	
Oil press. transmitter/Transm. pres. aceite	14510
Pneumatic stop switch/Int. stop neumático	27010
Fan switch/Termocontacto ventilador	37480
<b>Nuevas Series/New Series</b>	
Pneumatic switch/Int. neumático	16020
Pneumatic stop switch/Int. stop neumático	27020
<b>PEGASO 165 CV.</b>	
Oil press. switch/Int. pres. aceite	11370
<b>PEGASO 170 CV.</b>	
Temp. Sending unit/Termo-Resistencia	30130
<b>PEGASO 200 CV.</b>	
Rev. light switch/Int. luz marcha atrás	41010
<b>PEGASO con Caja Fuller</b>	
Rev. light switch/Int. luz marcha atrás	40450
<b>PEGASO con Caja Wilson</b>	
Oil press. switch/Int. pres. aceite	11340
<b>PEGASO con Caja ZF</b>	
Rev. light switch/Int. luz marcha atrás	40070
Rev. light switch/Int. luz marcha atrás	41120
<b>TRONER 1232.38T, 38R. 1236.38T, 38R</b>	1987 ->
Oil press. transmitter/Transm. pres. aceite	14750
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	41120

**PERKINS**

<b>Motores / Engines / Moteurs</b>	
Hidraulic stop switch/Int. stop hidráulico	23060
Temp. Sending unit/Termo-Resistencia	31110
Rev. light switch/Int. luz marcha atrás	40350
<b>Motores / Engines / Moteurs</b>	
Oil press. switch/Int. pres. aceite	10290
Oil press. switch/Int. pres. aceite	13350

**RVI - RENAULT TRUCKS**

<b>Cabina CP 82</b>	
Oil press. transmitter/Transm. pres. aceite	14640
<b>Camiones / Trucks / Camions</b>	
Oil press. transmitter/Transm. pres. aceite	14650
Pneumatic stop switch/Int. stop neumático	27030
Thermistor-Thermocont./Doble función	34190
<b>D 38. D 38 T</b>	1986 ->
Oil press. transmitter/Transm. pres. aceite	14640
<b>Serie 200 Cabina Abatible. Modelos C, D, 14, 16, 17, 20</b>	
Oil press. transmitter/Transm. pres. aceite	14540
<b>Tractores / Tractors / Tracteurs</b>	
Oil press. switch/Int. pres. aceite	10290
Temp. Sending unit/Termo-Resistencia	31080

**SAVIEM**

<b>Camiones / Trucks / Camions</b>	
Pneumatic stop switch/Int. stop neumático	27010
Thermistor-Thermocont./Doble función	34190

**SCANIA**

<b>2 - series 112 H/280</b>	
DS 11.14	206 280
Rev. light switch/Int. luz marcha atrás	41120
<b>2 - series 112 H/305</b>	
DS 11.15	224 305
Rev. light switch/Int. luz marcha atrás	41120
<b>2 - series 112 M/305</b>	
DS 11.15	224-232 305-316
Rev. light switch/Int. luz marcha atrás	41120
<b>2 - series 82</b>	
Rev. light switch/Int. luz marcha atrás	41120
<b>2 - series 82 M/190</b>	
DS 8.06	140 190
Rev. light switch/Int. luz marcha atrás	41120
<b>2 - series 92</b>	
DSC 9.01	202 275
Oil press. transmitter/Transm. pres. aceite	14980
Rev. light switch/Int. luz marcha atrás	41120
<b>2 - series R 142 H</b>	
DSC 14.01, 14.02	301-309 409-420
Oil press. transmitter/Transm. pres. aceite	14980
<b>2 - series R 142 H2 - series R 142 H</b>	
DSC 14.01	301-309 409-420
Oil press. transmitter/Transm. pres. aceite	14980
<b>3 - series 113</b>	
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140

**SCANIA Cont.**

<b>3 - series 113 H/310</b>	
228-229	1990-91 310-311
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140
<b>3 - series 113 M/400</b>	
DTC 11.01, .02	295 401
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140
<b>3 - series 143</b>	
<b>1988-96</b>	
Oil press. transmitter/Transm. pres. aceite	14040
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140
<b>3 - series 143 H/400</b>	
DSC 14.06	297 404
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140
<b>3 - series 93</b>	
<b>1990-96</b>	
Rev. light switch/Int. luz marcha atrás	41120
<b>3 - series 93 M/210</b>	
<b>1988-91</b>	
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140
<b>3 - series bus K 113 CLB</b>	
DSC 11.81	305 415
Oil press. transmitter/Transm. pres. aceite	14980
<b>3 - series T 113</b>	
266-267	1990-96 362-363
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 114</b>	
250	1996 -> 340
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 124</b>	
<b>1996 -&gt;</b>	
Oil press. transmitter/Transm. pres. aceite	14040
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 124 L/420</b>	
308-309	1997 -> 420-420
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 124 L/440</b>	
DT 12.08	324 440
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 144</b>	
<b>1996 -&gt;</b>	
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 164</b>	
DC 16.01, .02	2000 ->
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series 94</b>	
<b>1996 -&gt;</b>	
Rev. light switch/Int. luz marcha atrás	41120
<b>4 - series T 94 G/310</b>	
DC 9.03, .13, .15	221-228 300-310
Rev. light switch/Int. luz marcha atrás	41120
<b>G 420, P 420, R 420</b>	
309	2004 -> 420
Rev. light switch/Int. luz marcha atrás	41120
<b>P 230, R 230</b>	
169	2004 -> 230
Rev. light switch/Int. luz marcha atrás	41120
<b>P 270</b>	
DC 9.12	198-199 270-271
Rev. light switch/Int. luz marcha atrás	41120
<b>P 310, R 310</b>	
DC 9.11, .18	228 310
Rev. light switch/Int. luz marcha atrás	41120
<b>P 340, R 340</b>	
DC 11.08	250 340
Rev. light switch/Int. luz marcha atrás	41120
<b>P 380, R 380</b>	
DC 11.09	279 380
Rev. light switch/Int. luz marcha atrás	41120
<b>P 470, R 470</b>	
DT 12.03, .06	345 470
Rev. light switch/Int. luz marcha atrás	41120
<b>R 500</b>	
DC 16.04, .19	368 500
Rev. light switch/Int. luz marcha atrás	41120
<b>R 580</b>	
DC 16.03	426 580
Rev. light switch/Int. luz marcha atrás	41120
<b>142</b>	
Oil press. transmitter/Transm. pres. aceite	14980
Rev. light switch/Int. luz marcha atrás	40410
Rev. light switch/Int. luz marcha atrás	41140
<b>143</b>	
Oil press. transmitter/Transm. pres. aceite	14050
<b>BR145</b>	
<b>1971 -&gt;</b>	
Pneumatic stop switch/Int. stop neumático	27010
Pneumatic stop switch/Int. stop neumático	27030
<b>CR 145 L/T/TX</b>	
<b>1971 -&gt;</b>	
Pneumatic stop switch/Int. stop neumático	27010
Pneumatic stop switch/Int. stop neumático	27030
<b>Diversos modelos/Various models/Divers modèles</b>	
Oil press. transmitter/Transm. pres. aceite	14050
Oil press. transmitter/Transm. pres. aceite	14980
Pneumatic stop switch/Int. stop neumático	27010
Rev. light switch/Int. luz marcha atrás	40410
Rev. light switch/Int. luz marcha atrás	40420
Rev. light switch/Int. luz marcha atrás	41120
Rev. light switch/Int. luz marcha atrás	41140

**SCANIA Cont.**

<b>L 111, Super</b>	<b>1975-80</b>
Pneumatic stop switch/Int. stop neumático	<b>27010</b>
Pneumatic stop switch/Int. stop neumático	<b>27030</b>
Rev. light switch/Int. luz marcha atrás	<b>40410</b>
<b>R 112</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14980</b>
Rev. light switch/Int. luz marcha atrás	<b>41140</b>
<b>R 113</b>	
Oil press. transmitter/Transm. pres. aceite	<b>14050</b>
Rev. light switch/Int. luz marcha atrás	<b>40420</b>
Rev. light switch/Int. luz marcha atrás	<b>41120</b>

**STEYR****Camiones / Trucks / Camions**

Brake light switch/Int. Stop	<b>25140</b>
Rev. light switch/Int. luz marcha atrás	<b>41120</b>

**VOLVO**

<b>B 12</b>		<b>1992 -&gt;</b>
D12A420	309	420
Pneumatic switch/Int. neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic switch/Int. neumático	Brake switch/Int. Luz freno	<b>18115</b>
Pneumatic switch/Int. neumático	Brake switch/Int. Luz freno	<b>18123</b>
Pneumatic switch/Int. neumático	Brake switch/Int. Luz freno	<b>18125</b>
<b>B 12</b>		<b>1992 -&gt;</b>
TD 122 FH, FL, TD 123	262	356
Pneumatic switch/Int. neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic switch/Int. neumático	Brake switch/Int. Luz freno	<b>18115</b>
Pneumatic switch/Int. neumático	Brake switch/Int. Luz freno	<b>18123</b>
<b>Camiones / Trucks / Camions</b>		
Oil press. switch/Int. pres. aceite		<b>12450</b>
Pneumatic switch/Int. neumático		<b>18110</b>
Pneumatic switch/Int. neumático		<b>18113</b>
Pneumatic switch/Int. neumático		<b>18116</b>
Pneumatic switch/Int. neumático		<b>18118</b>
Pneumatic switch/Int. neumático	Axle load control/Regulación pres. eje	<b>18121</b>
Pneumatic switch/Int. neumático		<b>18122</b>
Pneumatic switch/Int. neumático	Compressed-air system/Aire comprimido	<b>18124</b>
Pneumatic switch/Int. neumático	Brake switch/Int. Luz freno	<b>18127</b>
Rev. light switch/Int. luz marcha atrás		<b>40720</b>
<b>Diversos Modelos/Varios Modells/Divers modèles</b>		
Oil press. switch/Int. pres. aceite		<b>12450</b>
Rev. light switch/Int. luz marcha atrás		<b>40720</b>
<b>F 10/260</b>		<b>1983-85</b>
	192-200	261-272
Oil press. switch/Int. pres. aceite		<b>11420</b>
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
<b>F 10/280</b>		<b>1977-82</b>
TD 100 B	206-207	280-282
Oil press. switch/Int. pres. aceite		<b>11420</b>
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
<b>F 10/300</b>		<b>1983-87</b>
TD 101 F, FA	215-220	292-299
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 10/320</b>		<b>1987-94</b>
TD 102, TD 103	228-235	310-320
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 12/320</b>		<b>1987-87</b>
TD 121 G	235	320
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 12/320, F 12/330</b>		<b>1977-86</b>
TD 120 G, 121 G, GD	235-243	320-330
Oil press. switch/Int. pres. aceite		<b>11420</b>
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
<b>F 12/360</b>		<b>1988-94</b>
TD 122 F, HF	262	356
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 12/370</b>		<b>1977-87</b>
TD 121 F	272	370
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
<b>F 12/400</b>		<b>1988-94</b>
TD 122 FL, FS	291	396
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
Pneumatic stop switch/Int. stop neumático	Axle load limitation/Limitación pres. eje	<b>18119</b>
<b>F 12/400, F 12/410</b>		<b>1988-94</b>
	291-298	396-405
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 16/470</b>		<b>1988-89</b>
	342	465
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 16/485</b>		<b>1990-92</b>
	357	486
Pneumatic stop switch/Int. stop neumático	Axle load control/Regulación pres. eje	<b>18112</b>
Pneumatic stop switch/Int. stop neumático	Compressed-air system/Aire comprimido	<b>18114</b>
Pneumatic stop switch/Int. stop neumático	Brake switch/Int. Luz freno	<b>18115</b>
<b>F 16/500</b>		<b>1992-94</b>

**VOLVO Cont.**

TD 163 ES	368	500
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18114</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>F 7</b>		<b>1978-85</b>
	162	220
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>F 7 F 7</b>		<b>1978-85</b>
Oil press. switch/Int. pres. aceite		<b>11420</b>
Pneumatic stop switch/Int. stop neumático		<b>27010</b>
<b>FH 12</b>		<b>1993 -&gt;</b>
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
Pneumatic stop switch/Int. stop neumático		<b>18117</b>
<b>FH 12</b>		<b>1998 -&gt;</b>
D12D460	338	460
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>FH 12</b>		<b>2001 -&gt;</b>
D12D500	368	500
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>FH 16</b>		<b>1993 -&gt;</b>
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>FL 10</b>		<b>1995-98</b>
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18114</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>FL 12</b>		<b>1985-90</b>
TD 101 G	202-209	275-284
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18114</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
Pneumatic stop switch/Int. stop neumático		<b>18119</b>
<b>FL 12</b>		<b>1995-98</b>
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
Pneumatic stop switch/Int. stop neumático		<b>18119</b>
<b>FL 6</b>		<b>1985-00</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>FL 7</b>		<b>1985-98</b>
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18114</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>N 10</b>		<b>1982 -&gt;</b>
Oil press. switch/Int. pres. aceite		<b>11420</b>
Pneumatic stop switch/Int. stop neumático		<b>27010</b>
<b>N 10/270</b>		<b>1973-89</b>
TD 100 G, TD 101 G	202	270
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18114</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>N 10/300</b>		<b>1973-89</b>
TD 100 B, TD 101 F	220	299
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18114</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
<b>N 12</b>		<b>1982 -&gt;</b>
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>Neon</b>		
Oil press. switch/Int. pres. aceite		<b>11420</b>
<b>NH 12/380</b>		<b>1999 -&gt;</b>
D12C380	279	379
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>
Pneumatic stop switch/Int. stop neumático		<b>18119</b>
<b>NH 12/420</b>		<b>1999 -&gt;</b>
D12C420	309	420
Pneumatic stop switch/Int. stop neumático		<b>18112</b>
Pneumatic stop switch/Int. stop neumático		<b>18115</b>